


Figure 2

Keyboard Removal

- a. Remove screw and press at point 2 to un-snap the center cover module.
- b. Remove the center cover module.
- c. Remove the screws.
- d. Carefully lift the keyboard up and disconnect the ribbon cables from its locking collar.
- e. Remove the keyboard.

Removing the Keyboard

1. Turn off the computer, turn it over, remove the battery (page 2 - 5).
2. Remove screw 1 and carefully press at point 2, from the bottom of the computer to un-snap the center cover module (use the eject pin tool to do this - Figure 2a)
3. Turn the computer over, remove the unsnap center cover module 3 from the computer (Figure 2b).
4. Remove screws 4 - 8 from the keyboard (Figure 2c).
5. Lift the keyboard up, being careful not to bend the keyboard ribbon cable 9, the keyboard LED cable 10 and the keyboard locking collar 11 from its locking collar 12 (Figure 2d).
6. Carefully lift the keyboard 13 off the computer (Figure 2e).

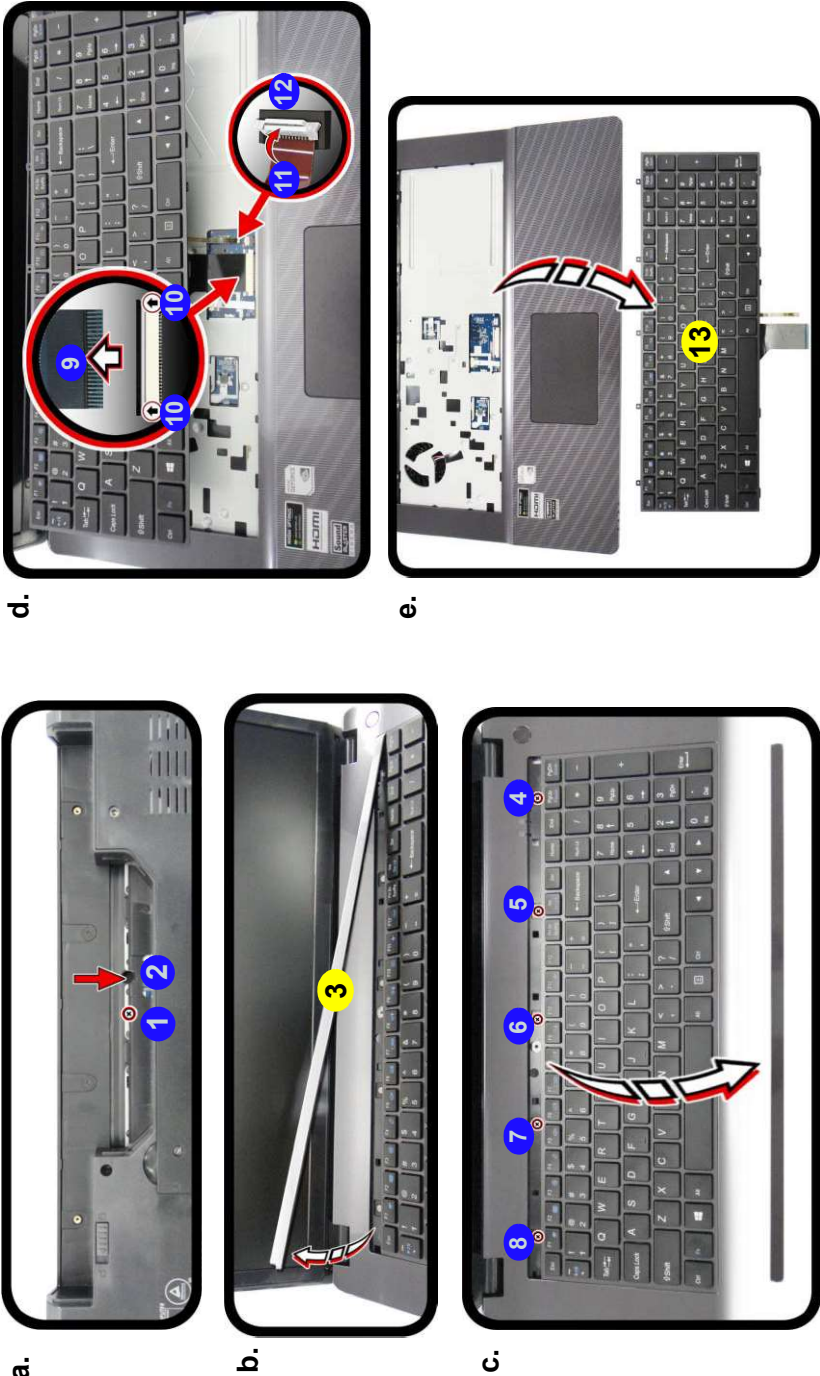

- 3. Center Cover Module
- 13. Keyboard
- 6 Screws