

USER'S MANUAL

notebook



Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

©March 2016

Trademarks

Intel and **Intel Core** are trademarks/registered trademarks of Intel Corporation.



Preface

R&TTE Directive

This device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC.

This device will be sold in the following EEA countries: Austria, Italy, Belgium, Liechtenstein, Denmark, Luxembourg, Finland, Netherlands, France, Norway, Germany, Portugal, Greece, Spain, Iceland, Sweden, Ireland, United Kingdom, Cyprus, Czech Republic, Estonia, Hungary, Latvia, Lithuania, Malta, Slovakia, Poland, Slovenia.

ErP Off Mode Power Consumption Statement:

The figures below note the power consumption of this computer in compliance with European Commission (EC) regulations on power consumption in off mode:

- Off Mode < 0.5W

CE Marking

This device has been tested to and conforms to the regulatory requirements of the European Union and has attained CE Marking. The CE Mark is a conformity marking consisting of the letters “CE”. The CE Mark applies to products regulated by certain European health, safety and environmental protection legislation. The CE Mark is obligatory for products it applies to: the manufacturer affixes the marking in order to be allowed to sell his product in the European market.

This product conforms to the essential requirements of the R&TTE directive 1999/5/EC in order to attain CE Marking. A notified body has determined that this device has properly demonstrated that the requirements of the directive have been met and has issued a favorable certificate of expert opinion. As such the device will bear the notified body number 0560 after the CE mark.

The CE Marking is not a quality mark. Foremost, it refers to the safety rather than to the quality of a product. Secondly, CE Marking is mandatory for the product it applies to, whereas most quality markings are voluntary.

FCC Statement (Federal Communications Commission)

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the service representative or an experienced radio/TV technician for help.

Operation is subject to the following two conditions:

1. This device may not cause interference.
And
2. This device must accept any interference, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.



Warning

Use only shielded cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the manufacturer for compliance with the above standards could void your authority to operate the equipment.

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock, and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using this equipment with a telephone line (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit:
 - Full Range AC/DC Adapter – AC in 100 - 240V, 50 - 60Hz DC Output 19.5V, 11.8A (**230 Watts**) minimum
 - Full Range AC/DC Adapter – AC in 100 - 240V, 50 - 60Hz DC Output 19.5V, 16.9A (**330 Watts**) for some **Model B** and **Model C** Types


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.





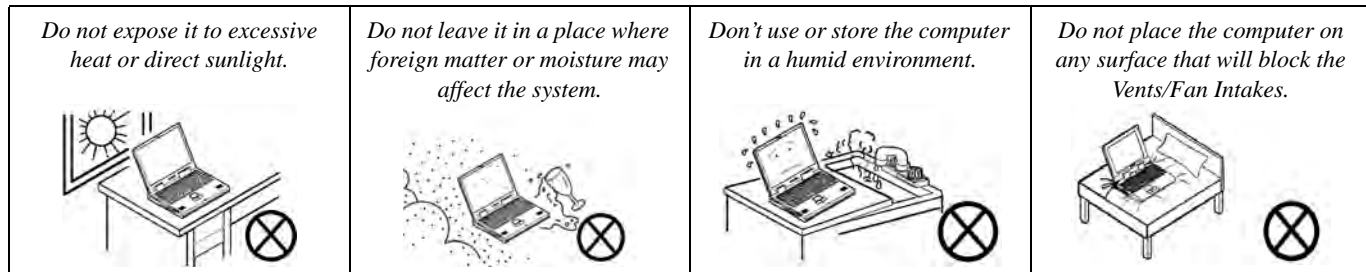

2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.





Preface

- Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
- Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

<p><i>Do not turn off the power until you properly shut down all programs.</i></p> 	<p><i>Do not turn off any peripheral devices when the computer is on.</i></p> 	<p><i>Do not disassemble the computer by yourself.</i></p> 	<p><i>Perform routine maintenance on your computer.</i></p> 
--	---	---	---

- Take care when using peripheral devices.**

<p><i>Use only approved brands of peripherals.</i></p> 	<p><i>Unplug the power cord before attaching peripheral devices.</i></p> 
--	---

Servicing

Do not attempt to service the computer yourself. Doing so may violate your warranty and may expose you and the computer to electric shock. Refer all servicing to authorized service personnel. Unplug the computer from the power supply. Then refer servicing to qualified service personnel under any of the following conditions:

- When the power cord or AC/DC adapter is damaged or frayed.
- If the computer has been exposed to rain or other liquids.
- If the computer does not work normally when you follow the operating instructions.
- If the computer has been dropped or damaged (do not touch the poisonous liquid if the LCD panel breaks).
- If there is an unusual odor, heat or smoke coming from your computer.



Bottom Cover Removal Warning

Users should not remove any cover(s) and /or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty. If you need to replace/remove the hard disk/RAM/optical device etc., for any reason, please contact your distributor/supplier for further information.

Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before restoring power to the system.

Also note the following when the cover is removed:

- Hazardous moving parts.
- Keep away from moving fan blades.

Power Safety

The computer has specific power requirements:



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord).


You must also remove your battery in order to prevent accidentally turning the machine on. **Before removing the battery disconnect the AC/DC adapter from the computer.**

- Only use a power adapter approved for use with this computer.
- Your AC/DC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies (i.e. AC/DC adapter or car adapter).


Do not plug in the power cord if you are wet.



Do not use the power cord if it is broken.

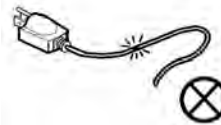

Do not place heavy objects on the power cord.

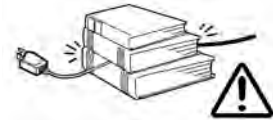

Polymer Battery Precautions

Note the following information which is specific to polymer batteries only, and where applicable, this overrides the general battery precaution information overleaf.

- Polymer batteries may experience a slight expansion or swelling, however this is part of the battery's safety mechanism and is not a cause for concern.
- Use proper handling procedures when using polymer batteries. Do not use polymer batteries in high ambient temperature environments, and do not store unused batteries for extended periods.

See also the general battery precautionary information overleaf for further information.

General Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not remove any batteries from the computer while it is powered on.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.



Battery Disposal & Caution

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Cleaning

Do not apply cleaner directly to the computer; use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.

Travel Considerations

As you get ready for your trip, run through this list to make sure the system is ready to go:

1. Check that the battery pack and any spares are fully charged.
2. Power off the computer and peripherals.
3. Close the display panel and make sure it's latched.
4. Disconnect the AC/DC adapter and cables. Stow them in the carrying bag.
5. The AC/DC adapter uses voltages from 100 to 240 volts so you won't need a second voltage adapter. However, check with your travel agent to see if you need any socket adapters.
6. Put the notebook in its carrying bag and secure it with the bag's straps.
7. If you're taking any peripherals (e.g. a printer, mouse or digital camera), pack them and those devices' adapters and/or cables.
8. Anticipate customs - Some jurisdictions may have import restrictions or require proof of ownership for both hardware and software. Make sure your "papers" are handy.



Power Off Before Traveling

Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the Vents/Fan Intakes to be blocked. To prevent your computer from overheating make sure nothing blocks the Vent/Fan Intakes while the computer is in use.

Packing

As you get ready for your trip, run through this list to make sure the system is ready to go:

1. Check that the battery pack and any spares are fully charged.
2. Power off the computer and peripherals.
3. Close the display panel and make sure it's latched.
4. Disconnect the AC/DC adapter and cables. Stow them in the carrying bag.
5. The AC/DC adapter uses voltages from 100 to 240 volts so you won't need a second voltage adapter. However, check with your travel agent to see if you need any socket adapters.
6. Put the notebook in its carrying bag and secure it with the bag's straps.
7. If you're taking any peripherals (e.g. a printer, mouse or digital camera), pack them and those devices' adapters and/or cables.
8. Anticipate customs - Some jurisdictions may have import restrictions or require proof of ownership for both hardware and software. Make sure your documents are prepared.



Power Off Before Traveling

Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the vent(s)/fan intake(s)/outlet(s) to be blocked. To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s)/outlet(s) while the computer is in use.

On the Road

In addition to the general safety and maintenance suggestions in this preface, and Chapter 8: Troubleshooting, keep these points in mind:

Hand-carry the notebook - For security, don't let it out of your sight. In some areas, computer theft is very common. Don't check it with "normal" luggage. Baggage handlers may not be sufficiently careful. Avoid knocking the computer against hard objects.

Beware of Electromagnetic fields - Devices such as metal detectors & X-ray machines can damage the computer, hard disk, floppy disks, and other media. They may also destroy any stored data - Pass your computer and disks around the devices. Ask security officials to hand-inspect them (you may be asked to turn it on). **Note:** Some airports also scan luggage with these devices.

Fly safely - Most airlines have regulations about the use of computers and other electronic devices in flight. These restrictions are for your safety, follow them. If you stow the notebook in an overhead compartment, make sure it's secure. Contents may shift and/or fall out when the compartment is opened.

Get power where you can - If an electrical outlet is available, use the AC/DC adapter and keep your battery(ies) charged.

Keep it dry - If you move quickly from a cold to a warm location, water vapor can condense inside the computer. Wait a few minutes before turning it on so that any moisture can evaporate.

Developing Good Work Habits

Developing good work habits is important if you need to work in front of the computer for long periods of time. Improper work habits can result in discomfort or serious injury from repetitive strain to your hands, wrists or other joints. The following are some tips to reduce the strain:



- Adjust the height of the chair and/or desk so that the keyboard is at or slightly below the level of your elbow. Keep your forearms, wrists, and hands in a relaxed position.
- Your knees should be slightly higher than your hips. Place your feet flat on the floor or on a footrest if necessary.
- Use a chair with a back and adjust it to support your lower back comfortably.
- Sit straight so that your knees, hips and elbows form approximately 90-degree angles when you are working.
- Take periodic breaks if you are using the computer for long periods of time.



Remember to:

- Alter your posture frequently.
- Stretch and exercise your body several times a day.
- Take periodic breaks when you work at the computer for long periods of time. Frequent and short breaks are better than fewer and longer breaks.

Lighting

Proper lighting and a comfortable viewing angle can reduce eye strain and shoulder and neck muscle fatigue.

- Position the display to avoid glare or reflections from overhead lighting or outside sources of light.
- Keep the display screen clean and set the brightness and contrast to levels that allow you to see the screen clearly.
- Position the display directly in front of you at a comfortable viewing distance.
- Adjust the display-viewing angle to find the best position.

LCD Screen Care

To prevent **image persistence** on LCD monitors (caused by the continuous display of graphics on the screen for an extended period of time) take the following precautions:

- Set the *Windows* **Power Plans** to turn the screen off after a few minutes of screen idle time.
- Use a rotating, moving or blank screen saver (this prevents an image from being displayed too long).
- Rotate desktop background images every few days.
- Turn the monitor off when the system is not in use.

LCD Electro-Plated Logos

Note that in computers featuring a raised LCD electro-plated logo, the logo is covered by a protective adhesive. Due to general wear and tear, this adhesive may deteriorate over time and the exposed logo may develop sharp edges. Be careful when handling the computer in this case, and avoid touching the raised LCD electro-plated logo. Avoid placing any other items in the carrying bag which may rub against the top of the computer during transport. If any such wear and tear develops contact your distributor/supplier.

Contents

Notice	I
ErP Off Mode Power Consumption Statement:	II
FCC Statement	IV
FCC RF Radiation Exposure Statement:	V
Instructions for Care and Operation	VII
Servicing	IX
Power Safety	X
Polymer Battery Precautions	XI
General Battery Precautions	XII
Cleaning	XIII
Travel Considerations	XIII

Quick Start Guide

Overview	1-1
Advanced Users	1-2
Beginners and Not-So-Advanced Users	1-2
Warning Boxes	1-2
Not Included	1-3
System Software	1-4
System Startup	1-5
LCD Panel Open - Model A	1-6

Preface

LCD Panel Open - Model B	1-7
LCD Panel Open - Model C	1-8
LED Indicators	1-9
Illuminated LED Keyboard	1-10
Control Center	1-11
Keyboard Backlight LED	1-12
Flexikey® Application	1-18
Flexikey® Application Features:	1-19
Function Keys & Visual Indicators	1-20
Front & Rear Views	1-21
Right View	1-23
Left View	1-24
Bottom View - Model A	1-26
Bottom View - Model B	1-27
Bottom View - Model C	1-28
Battery Removal & 3G/4G SIM Card Insertion	1-29
Windows 10 Start Menu	1-31
Right-Clicking the Windows Logo In Start Menu	1-32
Start Menu Apps & Tiles	1-33
Windows 10 Control Panel	1-35
Settings	1-36
Windows 10 Taskbar	1-37

Video Features1-38
 Power Options1-42

Storage Devices, Mouse, & Audio

Overview2-1
 Hard Disk Drive/Solid State Drive2-2
 Multi-in-1 Card Reader2-3
 Audio Features2-4
 Setup for 5.1 or 7.1 Surround Sound2-5
 Setup for Audio Recording2-7
 Touchpad and Buttons/Mouse2-8
 Touchpad Sensitivity2-8
 Touchpad Configuration2-9
 Gestures and Device Settings2-10

Power Management

Overview3-1
 The Power Sources3-2
 AC/DC Adapter3-2
 Battery3-2
 Turning On the Computer3-3
 Shutting the Computer Down3-4
 Power Plans3-5

Preface

Power-Saving States	3-7
Sleep	3-7
Hibernate	3-8
Shut down	3-8
Configuring the Power Buttons	3-9
Resuming Operation	3-11
Power Conservation Modes	3-12
Settings Menu Power Controls	3-14
Battery Information	3-17
Battery Power	3-17
Conserving Battery Power	3-18
Battery Life	3-19
New Battery	3-19
Recharging the Battery with the AC/DC Adapter	3-19
Proper handling of the Battery Pack	3-20
Battery FAQ	3-21

Drivers & Utilities

What to Install	4-1
Module Driver Installation	4-1
Driver Installation	4-2
Updating/Reinstalling Individual Drivers	4-5

User Account Control4-6

Windows Security Message4-6

New Hardware Found4-6

Driver Installation Procedure4-7

Chipset4-7

NVIDIA Video (VGA)4-7

LAN4-7

Card Reader4-7

Touchpad4-8

Airplane4-8

Control Center4-8

MEI Driver4-8

Thunderbolt4-8

Audio4-8

Optional Drivers4-10

BIOS Utilities

Overview5-1

The Power-On Self Test (POST)5-2

Failing the POST5-3

Fatal Errors5-3

Non-Fatal Errors5-3

Preface

The Setup Utility	5-4
Entering Setup	5-4
Setup Screens	5-5
Main Menu	5-6
System Time & Date (Main Menu)	5-6
SATA Port # (Main Menu)	5-7
OffBoard SATA Controller Configuration (Main Menu)	5-7
System/Extended Memory (Main Menu)	5-7
MB Series / BIOS Revision / KBC/EC firmware Revision/Mac Address (Main Menu)	5-7
Advanced Menu	5-8
Advanced Chipset Control (Advanced Menu)	5-8
GPU Performance Scaling (Advanced Menu > Advanced Chipset Control)	5-9
FlexiCharger (Advanced Menu > Advanced Chipset Control)	5-9
DDI Control (Advanced Menu > Advanced Chipset Control)	5-9
Intel(R) Thunderbolt Technology (Advanced Menu > Intel(R) Thunderbolt)	5-10
Security Level (Advanced Menu > Intel(R) Thunderbolt)	5-11
(Advanced Menu > Intel(R) Thunderbolt)	5-11
SATA Mode (Advanced Menu)	5-12
Boot Logo (Advanced Menu)	5-13
Power On Boot Beep (Advanced Menu)	5-13

Battery Low Alarm Beep (Advanced Menu)5-13

Security Menu5-14

Set Supervisor Password (Security Menu)5-14

Set User Password (Security Menu)5-15

Password on boot: (Security Menu)5-15

Secure Boot Control (Security Menu)5-16

TPM Configuration (Security Menu)5-17

Boot Menu5-18

Boot Option Priorities (Boot Menu)5-19

UEFI Boot (Boot Menu)5-19

Exit Menu5-20

Modules

Overview6-1

Setting Up SATA RAID or AHCI Mode6-2

AHCI Mode6-2

RAID6-2

Intel® Rapid Storage Technology Application6-2

SATA RAID Setup Procedure6-4

SATA RAID Setup - UEFI Enabled6-5

SATA RAID Setup (2 * PCIE SSDs) - UEFI Enabled6-10

SATA RAID Setup - UEFI Disabled6-16

Preface

Deleting a RAID (Windows 10)	6-20
Wireless LAN Module	6-21
3rd Party 802.11b/g/n Driver Installation	6-22
Intel® WLAN Driver Installation	6-22
WLAN Configuration in Windows 10	6-23
Killer Network Manager	6-26
Network	6-27
Killer DoubleShot Pro	6-28
Applications	6-29
Performance	6-31
WiFi Manager	6-32
Killer Ethernet	6-33
Killer Wireless	6-34
Fingerprint Reader Module	6-35
Fingerprint Reader Driver Installation	6-36
Fingerprint Module Configuration	6-37
Bluetooth & WLAN Combo Module	6-39
3rd Party Bluetooth (V4.0) Combo Driver Installation	6-40
Intel Bluetooth Combo Driver Installation	6-40
Qualcomm Atheros Bluetooth Combo Driver Installation	6-41
Bluetooth Configuration in Windows	6-42
To Make your Computer Discoverable to Bluetooth Devices	6-44

Intel® Rapid Storage Technology6-45

IRST Driver Installation6-45

Intel® Rapid Storage Technology for RAID Systems6-46

RAID Volume Data Verification and Repair6-48

Replacing and Reverting Recovery and Master Volumes6-48

Intel® Smart Response Technology6-51

Enabling Intel Smart Response Technology6-52

Sound Blaster Audio6-55

Sound Blaster X-Fi MB-5 Audio AP Installation6-55

PC Camera6-65

Camera App6-66

Taking Pictures/Capturing Video6-68

Trusted Platform Module6-70

Enabling & Managing TPM6-71

TPM Management in Windows6-72

TPM Actions6-74

3G/4G Module6-76

3G/4G SIM Card Insertion6-77

Troubleshooting

Overview7-1

Basic Hints and Tips7-2

Preface

Backup and General Maintenance	7-3
Viruses	7-4
Upgrading and Adding New Hardware/Software	7-5
Problems and Possible Solutions	7-7
Thunderbolt Support	7-15

Interface (Ports & Jacks)

Overview	A-1
Ports and Jacks	A-2
Card Reader	A-2
DC-In Jack	A-2
DisplayPort 1.2	A-2
e-SATA / Powered USB 3.0 Combo Port	A-3
HDMI-Out Port	A-3
Headphone-Out Jack	A-3
Line-In Jack	A-3
Microphone-In Jack	A-4
RJ-45 LAN Jack	A-4
S/PDIF-Out Jack	A-4
Security Lock Slot	A-4
Thunderbolt™ 3 Port/USB 3.1 Type C Port	A-5
USB 3.0 Port	A-6

Control Center & Flexikey®

Overview	B-1
Control Center	B-1
Flexikey®	B-1
Power Modes	B-3
Control Center Menus	B-4
Power Status (System Program)	B-5
Brightness (System Program)	B-5
Volume (System Program)	B-5
Fan Speed (System Program)	B-5
This system supports Power Saving power	B-6
Sleep Button (System Program)	B-6
Desktop Background (System Program)	B-6
Display Switch (System Program)	B-6
Time Zone (System Program)	B-7
TouchPad/Camera (Device)	B-7
Caps Lock/Scroll Lock/ Number Lock/Airplane Mode	B-7
Left Windows Key (Gaming)	B-7
Headphone (Gaming)	B-7
Flexikey® (Gaming)	B-7
Display Utility (System Program for High Definition displays only)	B-8
CPU Overclocking Support	B-11

Preface

GPU Overclocking	B-15
Flexikey® Application	B-17
Language Interface	B-18
Keyboard Settings - Express Key	B-22
Enabling Time Record	B-24
Keyboard Settings - Launch App	B-26
Keyboard Settings - Express Text	B-28
Keyboard Settings - Disable	B-30
Mouse Settings - Express Key	B-31
Enabling Time Record for Mouse Settings	B-32
Mouse Settings - Launch App	B-33
Mouse Settings - Express Text	B-35
Mouse Settings - Disable	B-37
Statistics	B-38

NVIDIA Video Driver Controls

NVIDIA Video Driver Installation	C-1
NVIDIA Control Panel	C-2
Change Resolution	C-5
Display Devices	C-6
Configuring an External Display (NVIDIA)	C-7
Multiple Display Connections to HDMI-Out Port/DisplayPorts/Thunderbolt Port	C-11

Configure Other Displays Using Project C-12

You can configure attached displays from Project. C-12

Configuring an External Display In Windows C-13

Manage 3D Settings C-16

HDCP Status C-17

Adjust Video Settings C-18

G-SYNC C-19

NVIDIA GeForce Experience C-21

NVIDIA GeForce Experience - BatteryBoost C-23

NVIDIA GeForce Experience - ShadowPlay C-24

HDMI Audio Configuration C-25

Wireless Display C-29

Wireless Display Configuration C-30

Specifications

Processor D-2

Core Logic D-2

Display D-2

Memory D-2

Video Adapter Options D-2

Storage D-3

BIOS D-3

Preface

Audio	D-3
Keyboard & Pointing Device	D-4
Indicators	D-4
Interface	D-4
Card Reader	D-4
Slots	D-4
Communication	D-4
Operating System	D-5
Features (By Model Type)	D-5
Security	D-5
Power Management	D-5
Power	D-5
Environmental Spec	D-5
Physical Dimensions & Weight	D-5


Chapter 1: Quick Start Guide

Overview

This Quick Start Guide is a brief introduction to the basic features of your computer, to navigating around the computer and to getting your system started. The remainder of the manual covers the following:

- **Chapter 2** A guide to using some of the main features of the computer e.g. the **storage devices (hard disk and card reader), TouchPad & Mouse and Audio Features.**
- **Chapter 3** The computer's **power** management options.
- **Chapter 4** The installation of the **drivers** and utilities essential to the operation or improvement of some of the computer's subsystems.
- **Chapter 5** An outline of the computer's built-in software or **BIOS** (Basic Input Output System).
- **Chapter 6** A quick guide to the computer's **PC Camera, Wireless LAN, Fingerprint, Bluetooth & WLAN Combo, Sound Blaster Audio** and **Intel** modules (some of which may be **optional** depending on your purchase configuration).
- **Chapter 7** A **troubleshooting** guide.
- **Appendix A** Definitions of the **interface, ports/jacks** which allow your computer to communicate with external devices.
- **Appendix B** Information on the **Control Center**. and **Flexikey® Application.**
- **Appendix C** Information on the **Video** driver controls.
- **Appendix D** The computer's **specification.**

Advanced Users


If you are an advanced user you may skip over most of this Quick Start Guide. However you may find it useful to refer to *“Drivers & Utilities” on page 4 - 1* and *“BIOS Utilities” on page 5 - 1* in the User’s Manual. You may also find the notes marked with a  of interest to you.




Notes

Check the light colored boxes with the mark above to find detailed information about the computer’s features.

Beginners and Not-So-Advanced Users

If you are new to computers (or do not have an advanced knowledge of them) then the information contained in this Quick Start Guide should be enough to get you up and running. Eventually you should try to look through all the documentation (more detailed descriptions of the functions, setup and system controls are covered in the remainder of the User’s Manual), but do not worry if you do not understand everything the first time. Keep this manual nearby and refer to it to learn as you go. You may find it useful to refer to the notes marked with a  as indicated in the margin. For a more detailed description of any of the interface ports and jacks see *“Interface (Ports & Jacks)” on page A - 1*.

Warning Boxes

No matter what your level please pay careful attention to the warning and safety information indicated by the  symbol. Also please note the safety and handling instructions as indicated in the *Preface*.

Not Included

Operating Systems (e.g. *Windows 10*) and applications (e.g. word processing, spreadsheet and database programs) have their own manuals, so please consult the appropriate manuals.



Drivers

If you are installing new system software, or are re-configuring your computer for a different system, you will need to install the appropriate drivers. Drivers are programs which act as an interface between the computer and a hardware component e.g. a wireless network module. It is very important that you install the drivers in the order listed in [Table 4 - 1, on page 4 - 4](#). You will be unable to use most advanced controls until the necessary drivers and utilities are properly installed. If your system hasn't been properly configured (your service representative may have already done that for you), refer to [“Drivers & Utilities” on page 4 - 1](#) for installation instructions.

Ports and Jacks

See [“Ports and Jacks” on page A - 2](#) for a description of the interface (ports & jacks) which allow your computer to communicate with external devices, connect to the internet etc.

System Software

Your computer may already come with system software pre-installed. Where this is not the case, or where you are re-configuring your computer for a different system, you will find the **Windows 10 (64-bit)** operating system is supported.



Windows OS

Note that the information included on the following pages is for **Windows 10 only**.

In order to run **Windows 10 (64-bit)** your computer requires a minimum **2GB** of system memory (RAM).

System Startup

1. Remove all packing materials, and place the computer on a stable surface, and securely attach any peripherals you want to use with the notebook (e.g. keyboard and mouse) to their ports.
2. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter (**make sure you use the adapter when first setting up the computer**, as to safeguard the computer during shipping, the battery will be locked to not power the system until first connected to the AC/DC adapter).
3. Use one hand to raise the lid/LCD to a comfortable viewing angle (it is preferable not to exceed 135 degrees); use the other hand to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
4. Press the power button on the top of the computer **for about 2 - 3 seconds** to turn the computer “on” (note that the **power LED** on the front of the computer **will turn from orange to green** when the computer powers on).



Shutdown

Note that you should always shut your computer down by choosing the **Shut Down** command in **Windows** (see page [1 - 39](#)). This will help prevent hard disk or system problems.

Figure 1 - 1 - Computer with AC/DC Adapter Plugged-In/Opening the Lid/LCD

Quick Start Guide

Figure 1 - 2
LCD Panel Open -
Model A

1. Built-In PC Camera
2. PC Camera LED
3. Built-In Array Microphone
4. LCD
5. Speakers
6. Power Button
7. LED Indicators
8. Illuminated LED Keyboard
9. TouchPad & Buttons
10. Fingerprint Reader Sensor (Optional)



Note that the Touchpad/Clickpad and Buttons has a valid operational area indicated within the dotted lines on the right.


LCD Panel Open - Model A



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices (e.g. WLAN, Bluetooth or 3G/4G) aboard aircraft is usually prohibited. Make sure any wireless modules are OFF (i.e. the system is in **Airplane Mode**) if you are using the computer aboard aircraft.

Use **Fn + F11 Airplane Mode** key combination to toggle Airplane Mode On/Off, and check the LED indicator for the power status.

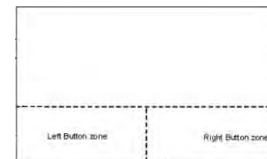

LCD Panel Open - Model B



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices (e.g. WLAN, Bluetooth or 3G/4G) aboard aircraft is usually prohibited. Make sure any wireless modules are OFF (i.e. the system is in **Airplane Mode**) if you are using the computer aboard aircraft.

Use **Fn + F11 Airplane Mode** key combination to toggle Airplane Mode On/Off, and check the LED indicator for the power status.

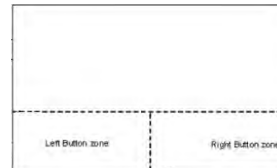


Figure 1 - 3
LCD Panel Open -
Model B

1. Built-In PC Camera
2. PC Camera LED
3. Built-In Array Microphone
4. LCD
5. Speakers
6. Power Button
7. LED Indicators
8. Illuminated LED Keyboard
9. TouchPad & Buttons
10. Fingerprint Reader Sensor (Optional)



Note that the Touchpad/Clickpad & Buttons has a valid operational area indicated within the dotted lines on the left.

Quick Start Guide

Figure 1 - 4
LCD Panel Open -
Model C

1. Built-In PC Camera
2. PC Camera LED
3. Built-In Array Microphone
4. LCD
5. Speakers
6. Power Button
7. LED Indicators
8. Illuminated LED Keyboard
9. TouchPad & Buttons
10. Fingerprint Reader Sensor (Optional)

Note that the Touchpad/Clickpad & Buttons has a valid operational area indicated within the dotted lines on the left.


LCD Panel Open - Model C



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices (e.g. WLAN, Bluetooth or 3G/4G) aboard aircraft is usually prohibited. Make sure any wireless modules are OFF (i.e. the system is in **Airplane Mode**) if you are using the computer aboard aircraft.

Use **Fn + F11 Airplane Mode** key combination to toggle Airplane Mode On/Off, and check the LED indicator for the power status.

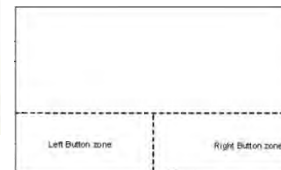

LED Indicators

The LED indicators on the top case, and at the front of the computer, display helpful information about the current status of the system.

 











Top Case LEDs			Front Case LEDs		
Icon	Color	Description	Icon	Color	Description
					
	Green	Number Lock is Activated 		Orange	The Battery is Charging
	Green	Caps Lock is Activated 		Blinking Orange	The Battery has Reached Critically Low Power Status
	Green	Scroll Lock is Activated 		Green	The Battery is Fully Charged
	Green	Hard Disk Activity		Orange	AC/DC Power is Plugged In
	Green	Airplane Mode is ON (the WLAN, Bluetooth & 3G/4G Modules are OFF)		Blinking Orange*	The Powered USB Port is On (see <i>“Powered USB 3.0 Port (including eSATA Port)”</i> on page 1 - 24)
				Green	The Computer is On
				Blinking Green	The Computer is in Sleep Mode

 Table 1 - 1 - LED Indicators



Other Keyboards

If your keyboard is damaged or you just want to make a change, you can use any standard USB keyboard. The system will detect and enable it automatically. However special functions/hot-keys unique to the system's regular keyboard may not work.

Scr Lk

Hold down the **Fn Key** and **Scr Lk** to enable scroll lock/number lock, and check the LED indicator for status.

Illuminated LED Keyboard

The illuminated keyboard has an embedded numerical keypad for easy numeric data input, and features function keys to allow you to change operational features instantly. See [Table 1 - 4, on page 1 - 20](#) for full function key combination details.



Figure 1 - 5 - Illuminated LED Keyboard



Special Characters

Some software applications allow the number-keys to be used with **Alt** to produce special characters. These special characters can only be produced by using the numeric keypad. Regular number keys (in the upper row of the keyboard) will not work. Make sure that **NumLk** is on.

Control Center




When in the **Windows Desktop application** (not in the **Start** screen) press the **Fn + Esc** key combination, or **double-click the icon**  in the **notification area of the taskbar** to toggle the **Control Center** on/off. The **Control Center** gives quick access to frequently used controls and enables you to quickly turn the camera/Touch Pad on/off (see [Appendix B](#) for full details).




Figure 1 - 6 - Control Center



Control Center Access

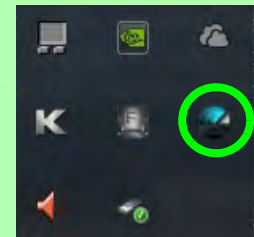







To run the Control Center press the **Fn + Esc** key combination, or double-click the icon  in the notification area of the taskbar.



Close the Control Center by clicking the  close icon in the top right of the panel (move the cursor onto the top right corner of the panel to highlight it).

Keyboard Backlight LED

Press **Fn** plus the  **2** key to toggle the keyboard LED on/off. The keyboard LED may be configured using the **Fn + key combination** outlined in the table below. In addition press **Fn** plus the  **1** key to launch the keyboard backlight application to configure the settings (see overleaf).

Main Keyboard LED Function key Combinations	
Fn + 	1 Launch the Keyboard Backlight Application
Fn + 	2 Toggle the Keyboard Backlight LED On/Off  
Fn + 	3 Keyboard Backlight LED Low 
Fn + 	4 Keyboard Backlight LED High 

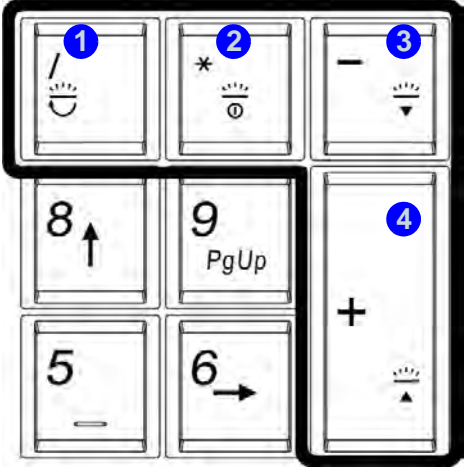


Table 1 - 2 - Main Keyboard LEDs

Keyboard Backlight Application (for Illuminated Keyboards)

The **Keyboard Backlight application** can be accessed by pressing the **Fn** plus  key (or by clicking the **Flexikey** button in the **Gaming** section of the Control Center, and then clicking the **Backlight** tab).



Figure 1 - 7 - Keyboard Backlight Application


Quick Start Guide

Brightness

Click on any of the numbers (0 - 3) on the brightness bar to set the brightness level of the keyboard backlight.

Color Swatch

The color swatch in the top right of the screen allows you to select a range of colors for your keyboard backlight by clicking on the color required. You can choose to display the swatch either in **Full Color** or as a **256 Color Scheme**. Click the **Custom** mode button to select any colors from the swatch and to apply your chosen colors to parts of the keyboard (and **Lightbar** if applicable).

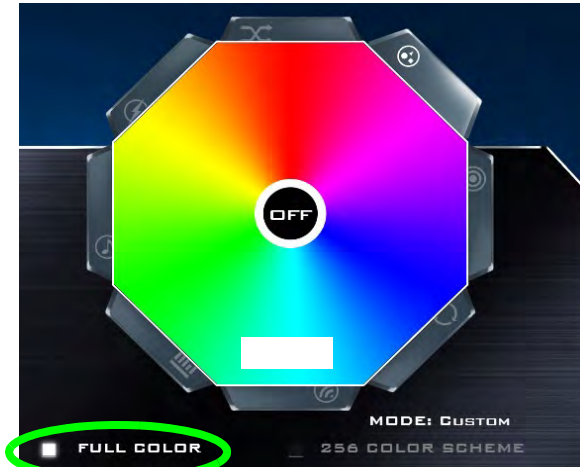

Full Color Swatch












256 Color Scheme Swatch

Figure 1 - 8 - Keyboard Backlight Color Swatches

Modes

The buttons surrounding the swatch allow you to alter the effects of the keyboard backlight. Click on any of the buttons to view the effects on the keyboard. Click **Save** when exiting the application to retain the setting.

Mode Buttons			
	Random Color		Wave Up/Down
	Custom - Display & Configure Keyboard Sections & Colors		Dancing Effect
	Breathe (All Colors)		Tempo Beat
	Cycle Colors		Flashing



Illumination Keys

Note that the keyboard illumination (increase/decrease) keys may be used to configure the keyboard LED in **Custom Mode** only.

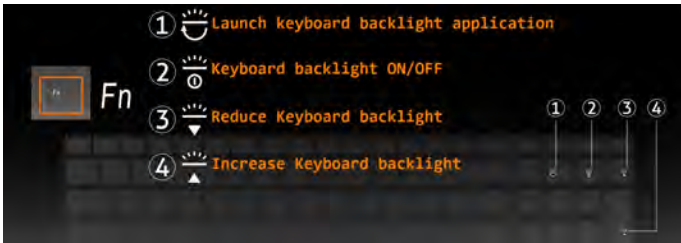


Diagram showing the Fn key and four function keys with their corresponding actions:

- 1. Launch keyboard backlight application
- 2. Keyboard backlight ON/OFF
- 3. Reduce Keyboard backlight
- 4. Increase Keyboard backlight

Table 1 - 3 - Mode Buttons

Quick Start Guide

Preview

The bottom left section of the application allows you to preview setting changes made to colors on the keyboard and Lightbar.

Keyboard and Lightbar Sections

The bottom right section of the application allows you to select partial areas, or all, of the keyboard (and lightbar) on which to apply the color changes and effects.

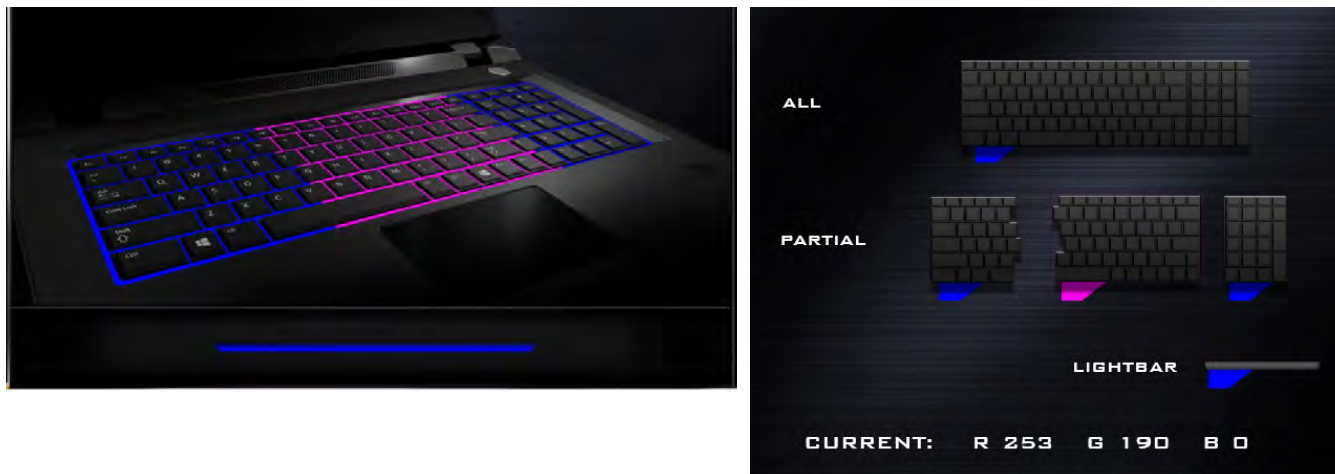


Figure 1 - 9 - Preview & Keyboard & Lightbar Sections

Sets

The application allows you to save up to 3 sets of color and effect combinations. Click **Save** when exiting the application to retain the settings.



Figure 1 - 10 - Sets



Save & Exit


Click **Exit** to quit the application without saving, or **Save** to exit and retain the settings.



Figure 1 - 11 - Save & Exit

Flexikey® Application

The **Flexikey®** application is a quick hotkey configuration application, which allows you to **assign a single key to launch multiple key combinations**, or to **launch programs and applications**, to **create text macros** and to **disable** certain keys. The application can also be used to **configure the mouse buttons** to create hotkeys for gaming etc. All the configuration settings are retained under (up to 12) **profiles** to which the settings are applied. Click **Flexikey®** in the **Gaming** section of the Control Center, or the **click the icon**   in the notification area of the taskbar, to launch the application (see [Appendix B](#) for full details).

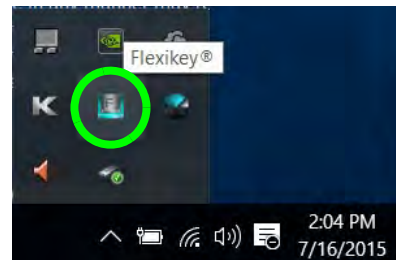

Flexikey® Enabled



Flexikey® Disabled

Figure 1 - 12 - Flexikey® Hotkey Application

Flexikey® Application Features:

For full details see *“Flexikey® Application” on page B - 17.*

- **EXPRESS KEY** - This feature allows you to configure a single key (or mouse click) to send multiple key combinations, or to create more useful shortcut keys. This is useful in gaming or when using applications which have a complex set of keyboard shortcuts.
- **LAUNCH APP** - This simply assigns single keys (or mouse clicks) to launch any program's or application's executable file.
- **EXPRESS TEXT** - With this you can assign single keys (or mouse clicks) to send commonly used strings of text.
- **DISABLE** - Use this function to disable any keyboard keys or mouse buttons.
- **STATISTICS** - Use this to quickly record keys in use in any application, and to disable unused keys.

Quick Start Guide

Function Keys & Visual Indicators

The **function keys** (F1 - F12 etc.) will act as **hot keys** when pressed while the **Fn** key is held down.


 
















Keys	Function/Visual Indicators	Keys	Function/Visual Indicators
Fn + 	Fan Control Toggle Automatic / Full Power 	Fn + 	Control Center Toggle (see over)
Fn + 	Play/Pause (in Audio/Video Programs)	Fn + 	Display Toggle
Fn + 	Touchpad Toggle 	Fn +  	Brightness Decrease/Increase
Fn + 	Turn LCD Backlight Off (Press a key to or use Touchpad to turn on)	Fn + 	PC Camera Power Toggle 
Fn + 	Mute Toggle	Fn + 	Airplane Mode Toggle 
Fn +  	Volume Decrease/Increase	Fn + 	Sleep Toggle
Fn + Power Button	Powered USB 3.0 Port Power Toggle	Fn + Backspace	Flexikey® Enable/Disable

Table 1 - 4 - Function Keys & Visual Indicators

Front & Rear Views

 

Figure 1 - 13
Front & Rear Views

- 1. LED Power Indicators
- 2. Lightbar
- 3. Vent/Fan Intake
- 4. HDMI-Out Port
- 5. DisplayPort 1
- 6. DisplayPort 2
- 7. DC-In Jack

Quick Start Guide



HDMI Port / Display Ports

Note that the HDMI Port and Display Ports support video and audio signals to attached external displays.

Note that **Sound Blaster X-Fi MB5** audio will be disabled when you are connecting to an external display through an HDMI or Display Port connection.



Overheating

To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s) while the computer is in use.

DisplayPort

When a display only connection for the Thunderbolt port is enabled (in the BIOS) then DisplayPort 2 (6) will be turned off (see page 1 - 25).

Right View

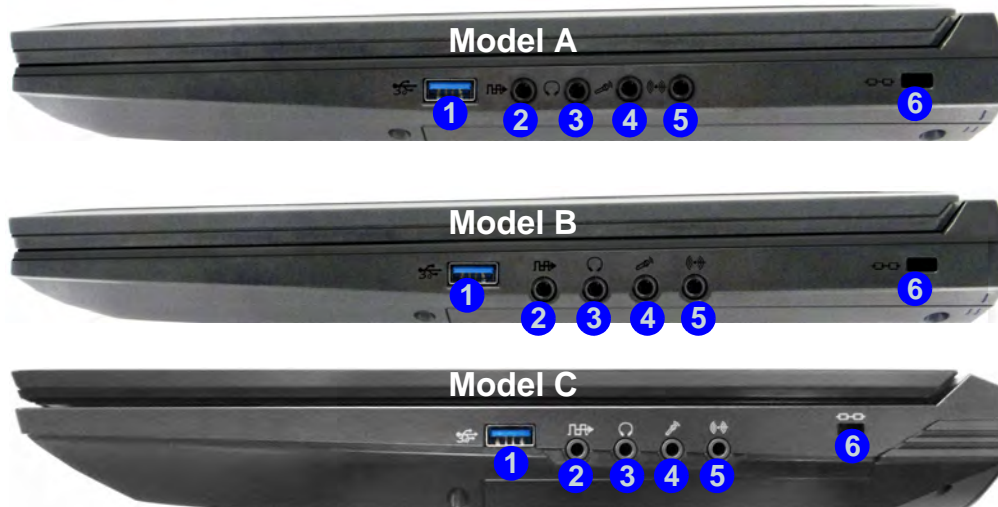


Figure 1 - 14
Right View

1. 1 * USB 3.0 Port
2. S/PDIF-Out Jack
3. Headphone Jack
4. Microphone Jack
5. Line-In Jack
6. Security Lock Slot



USB Ports


Note that the connections to the USB ports only fit one way, do not force them.

Quick Start Guide

Figure 1 - 15
Left View

1. RJ-45 LAN Jack
2. 2 * USB 3.0 Ports
3. USB 3.1 (Type C) Thunderbolt™ 3 Port
4. Multi-In-1 Card Reader
5. Combined eSATA/ Powered USB 3.0 Port

Left View

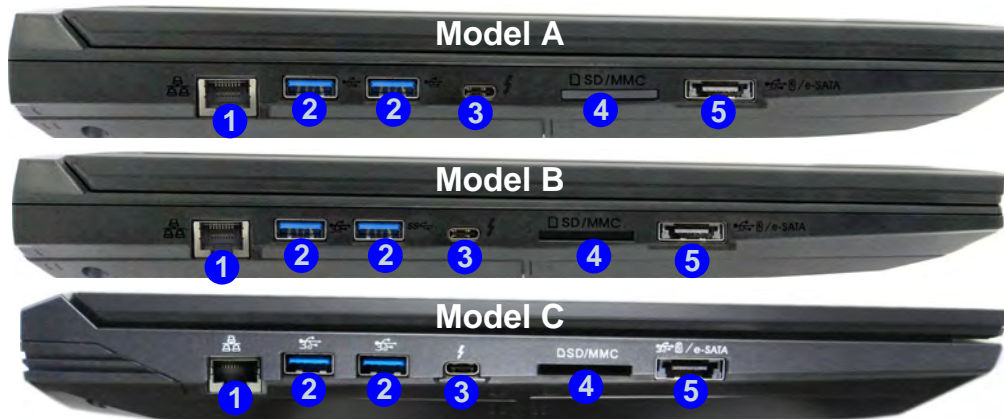

Thunderbolt™ Port

Note that the Thunderbolt port requires activating in the BIOS.

See overleaf for instructions on disconnecting Thunderbolt devices safely.

Powered USB 3.0 Port (including eSATA Port)

USB 3.0 ports are denoted by their blue color. Note that the USB 3.0 port is not operational under DOS and does not support wake on USB. The **powered USB 3.0** (5 in Figure 1 - 15) port can supply power (**for charging devices only, not for operating devices**) when the system is off but still powered by the AC/DC adapter plugged into a working outlet, or powered by the battery with a capacity level above 20% (this may not work with certain devices - see page 7 - 12). Toggle power to this port by using **Fn + power button**.



Multi-in-1 Card Reader

The card reader allows you to use the most popular digital storage card formats:

MMC (MultiMedia Card) / RSMMC
SD (Secure Digital) / Mini SD / SDHC / SDXC (Up to UHS-II)



Thunderbolt Support

You will need to enable Thunderbolt support in the BIOS "*Intel(R) Thunderbolt Technology (Advanced Menu > Intel(R) Thunderbolt)*" on page 5 - 10. You can also set the level of security for the Thunderbolt port in the BIOS. If you want to use the Thunderbolt port to support display devices then you will need to set the security level to support display devices only (see "*Security Level (Advanced Menu > Intel(R) Thunderbolt)*" on page 5 - 11). When the Thunderbolt port is set to be used for display only, then DisplayPort 2 (6 in Figure 1 - 13 on page 1 - 21) will be disabled.

Ejecting Thunderbolt Devices


In order to prevent system problems make sure you **do not simply pull the cable out from the Thunderbolt port**. The hardware must be ejected safely:

1. Go to the notification area of the taskbar in the Desktop App and click on the **Safely Remove Hardware and Eject Media** icon.
2. Click on Eject "*Thunderbolt Device Name*".
3. When you see the "**Safe to Remove Hardware**" message you can remove the cable.

Figure 1 - 16
Bottom View
Model A

1. Fan Outlet/Intake
2. Component Bay Cover
3. Battery
4. Hard Disk Bay Cover

Bottom View - Model A

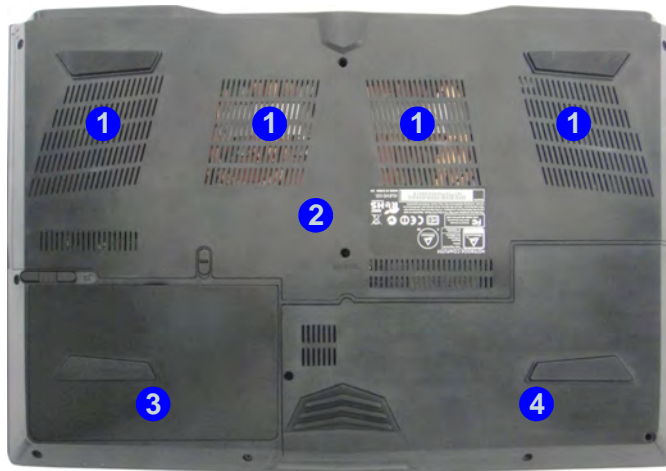

Battery Information

Always completely discharge, then fully charge, a new battery before using it. Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges. See [“Battery Information” on page 3 - 17](#) for full instructions.



Overheating


To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s) while the computer is in use.

Bottom Cover Removal Warning

Do not remove any cover(s) and /or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.

If you need to replace/remove the hard disk/RAM/optical device etc., for any reason, please contact your distributor/supplier for further information.

Bottom View - Model B

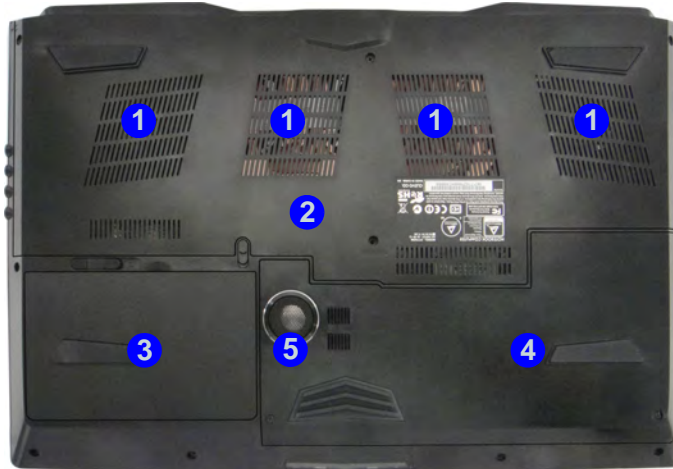

Battery Information

Always completely discharge, then fully charge, a new battery before using it. Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges. See ***"Battery Information" on page 3 - 17*** for full instructions.



Overheating

To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s) while the computer is in use.

Bottom Cover Removal Warning

Do not remove any cover(s) and /or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.

If you need to replace/remove the hard disk/RAM/optical device etc., for any reason, please contact your distributor/supplier for further information.


Figure 1 - 17
Bottom View
Model B

1. Fan Outlet/Intake
2. Component Bay Cover
3. Battery
4. Hard Disk Bay Cover
5. Built-in Subwoofer Speaker

Figure 1 - 18
Bottom View
Model C

1. Fan Outlet/Intake
2. Component Bay Cover
3. Battery
4. Hard Disk Bay Cover
5. Built-in Subwoofer Speaker

Bottom View - Model C

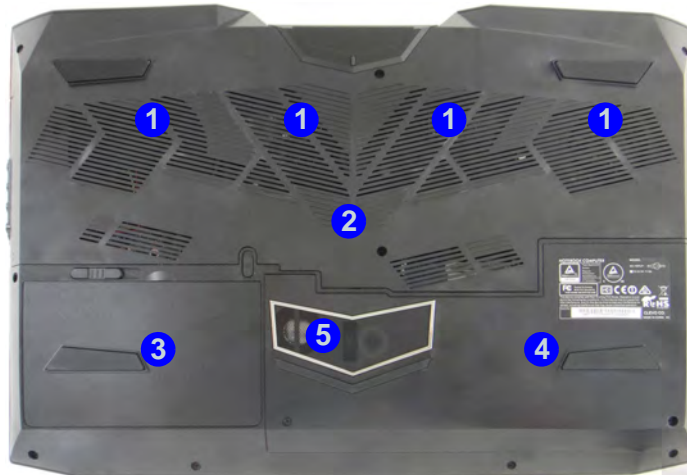

Battery Information

Always completely discharge, then fully charge, a new battery before using it. Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges. See ***"Battery Information" on page 3 - 17*** for full instructions.



Overheating

To prevent your computer from overheating make sure nothing blocks the vent(s)/fan intake(s) while the computer is in use.

Bottom Cover Removal Warning


Do not remove any cover(s) and/or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.

If you need to replace/remove the hard disk/RAM/optical device etc., for any reason, please contact your distributor/supplier for further information.

Battery Removal & 3G/4G SIM Card Insertion

If you do need to remove the battery for any reason (e.g. long term storage) see below. In addition you will need to remove the battery in order to insert the USIM card.

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow.
3. Slide the latch **2** in the direction of the arrow and the battery will pop up to be released.
4. Lift the battery up from the groove at point **3**.

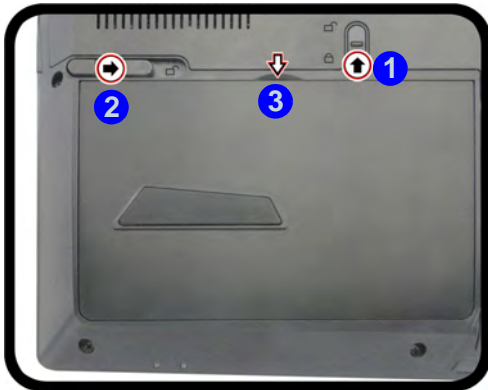

Warranty Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

Figure 1 - 19
Battery Removal

Quick Start Guide

5. Remove the battery from the bay **4**.
6. Insert the USIM card **5** as illustrated below (pay careful attention to the orientation of the card as the gold contact side of the card should face upwards) until it clicks fully into position.
7. To eject the card simply press it until it ejects, but do not attempt to eject the card while connected to a 3G/4G network (however your machine should be powered off when removing the battery in any case).
8. Reinsert the battery **6** as illustrated and slide the latches **7** & **8** into the lock position.



USIM Card Orientation

Note that the USIM card's readable side (with the gold-colored contacts) should face upwards as illustrated.

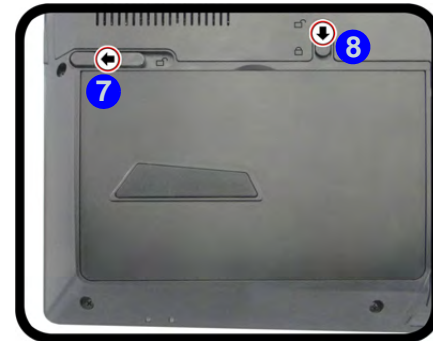
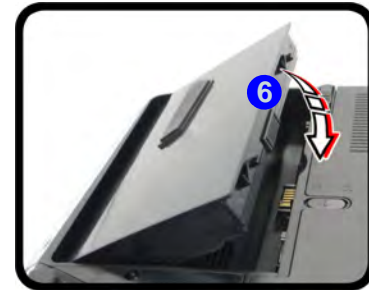
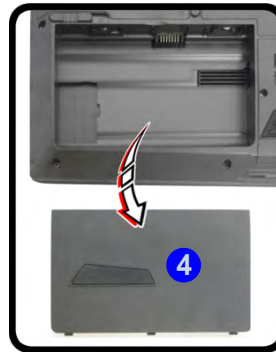




Figure 1 - 20
USIM Card & Battery
Insertion

Windows 10 Start Menu

Most of the apps, control panels, utilities and programs within *Windows 10* can be accessed from the **Start Menu** by clicking the icon  in the taskbar in the lower left corner of the screen (or by pressing the **Windows Logo Key**  on the keyboard).

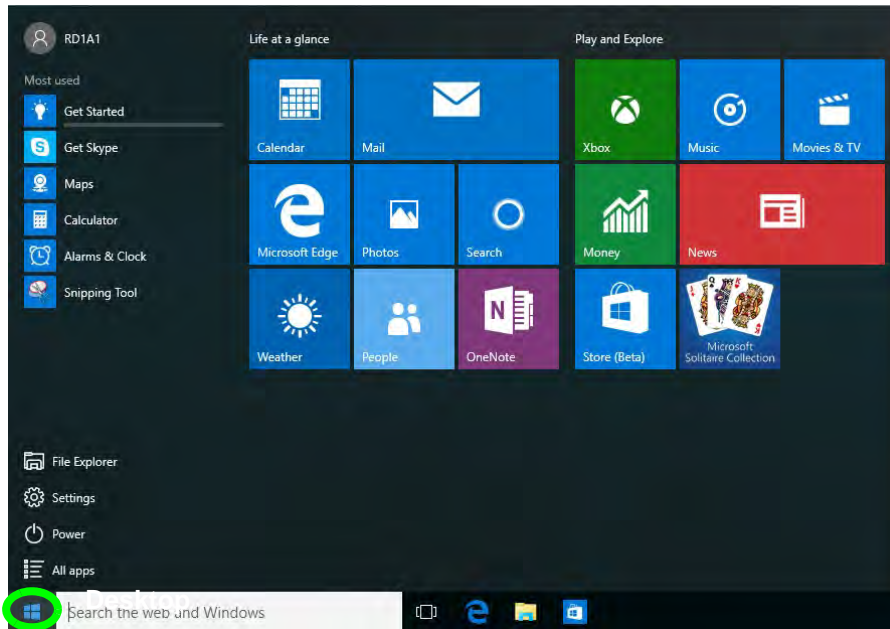


Figure 1 - 21 - Windows Start Menu

Right-Clicking the Windows Logo In Start Menu

Right-click the Start Menu  icon (or use the **Windows Logo Key**  + **X** key combination) to bring up an advanced **Context Menu** of useful features such as Control Panel, Programs and Features, Power Options, Task Manager, Search, File Explorer, Command Prompt, Device Manager and Network Connections etc.

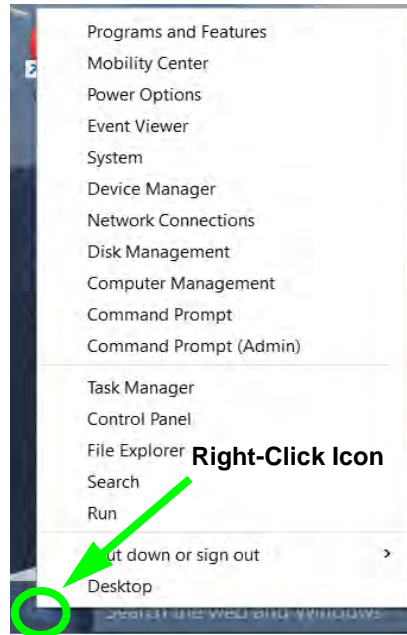


Figure 1 - 22 - Right-Click Windows Logo in Start Menu

Start Menu Apps & Tiles

The **Windows 10** Start Menu will contain a number of apps, and many more will be installed as you add more applications etc. Not all of these apps can fit on the screen so may need click and drag the handles at the edge of the screen to expand the menu in order to view all the apps (you can use the scroll bar to move up and down the screen).

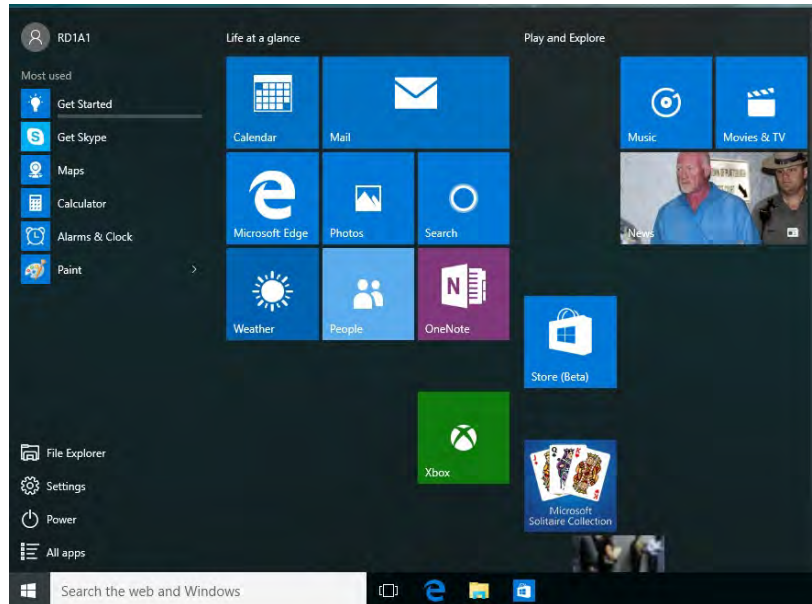


Figure 1 - 23 - Expanding the Start Menu

Quick Start Guide

Pining/Unpinning Apps & Programs to/from the Start Menu

To make things easy to find you can add and remove tiles for apps and programs to the Start Menu. Right-Click on a program's icon and select **Pin to Start** from the drop-down menu. To remove an app or program from the Start Menu right-click the icon and select **Unpin from Start**. You can use the same method to **pin apps/programs to/from the taskbar** (select pin to taskbar/unpin this program from the taskbar).

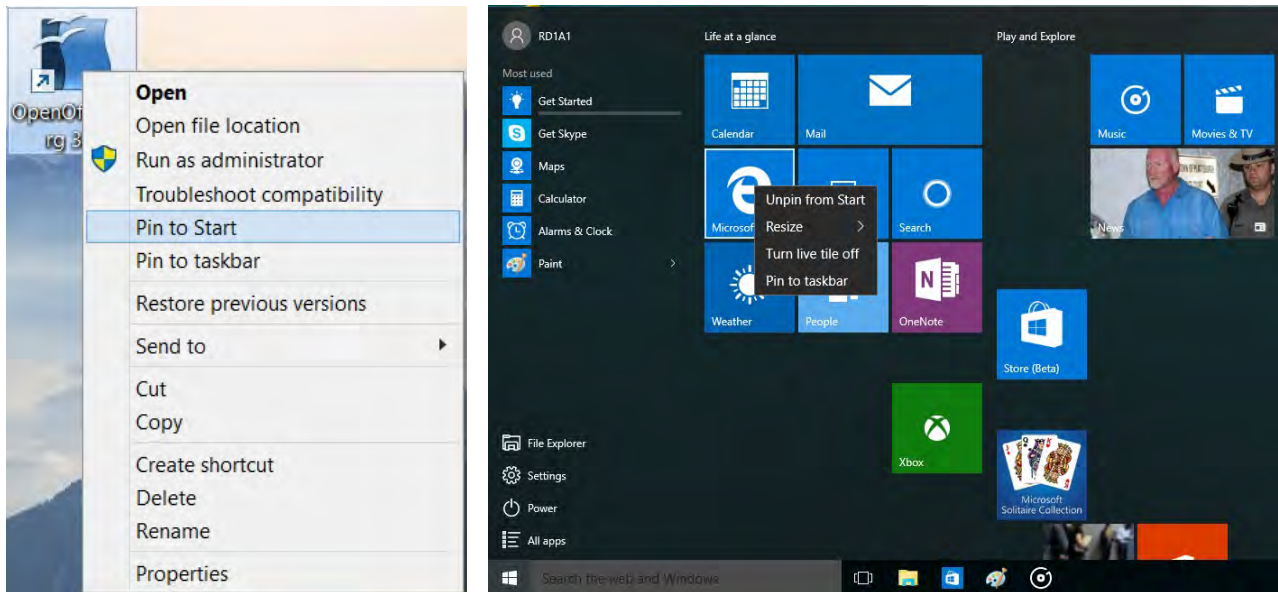




Figure 1 - 24 - Pin to Start/Unpin from Start

Windows 10 Control Panel

In many instances throughout this manual you will see an instruction to open the **Control Panel**. The Control Panel can be accessed in a number of ways in *Windows 10*.

- Right-click the Start Menu icon  in the taskbar in the lower left corner of the screen and select Control Panel from the menu.
- Press the Windows logo key  on your keyboard and **X** to bring up the context menu, and then press **P** to bring up the Control Panel.
- Type *Control Panel* into the Search box in the taskbar and click on the icon when it pops up.

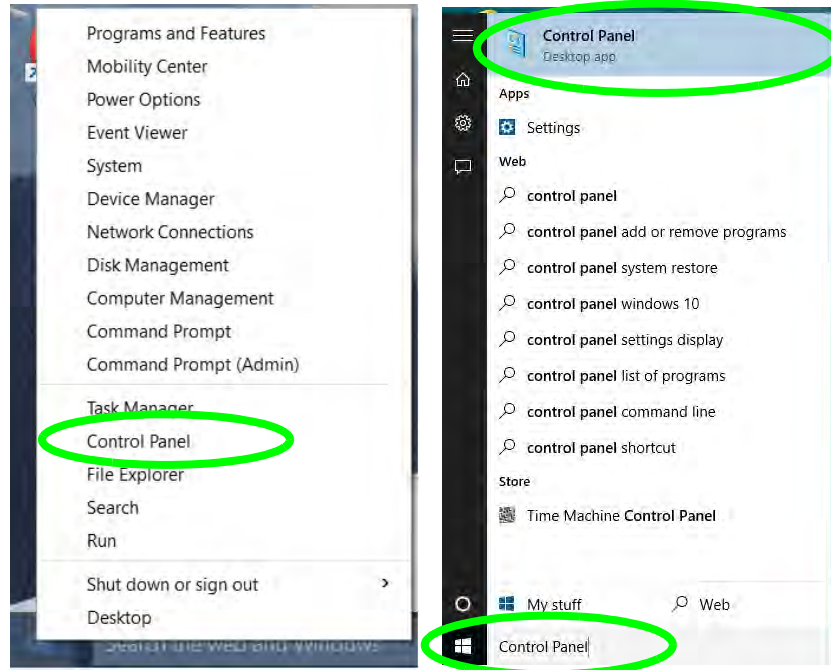


Figure 1 - 25 - Windows 10 Control Panel Access

Settings

The **Settings** item in the Start Menu (and also as an App) gives you quick access to a number of system settings control panels allowing you to adjust settings for System, Devices, Network & internet, Personalization, Accounts, Time & language, Ease of Access, Privacy and Update & security.

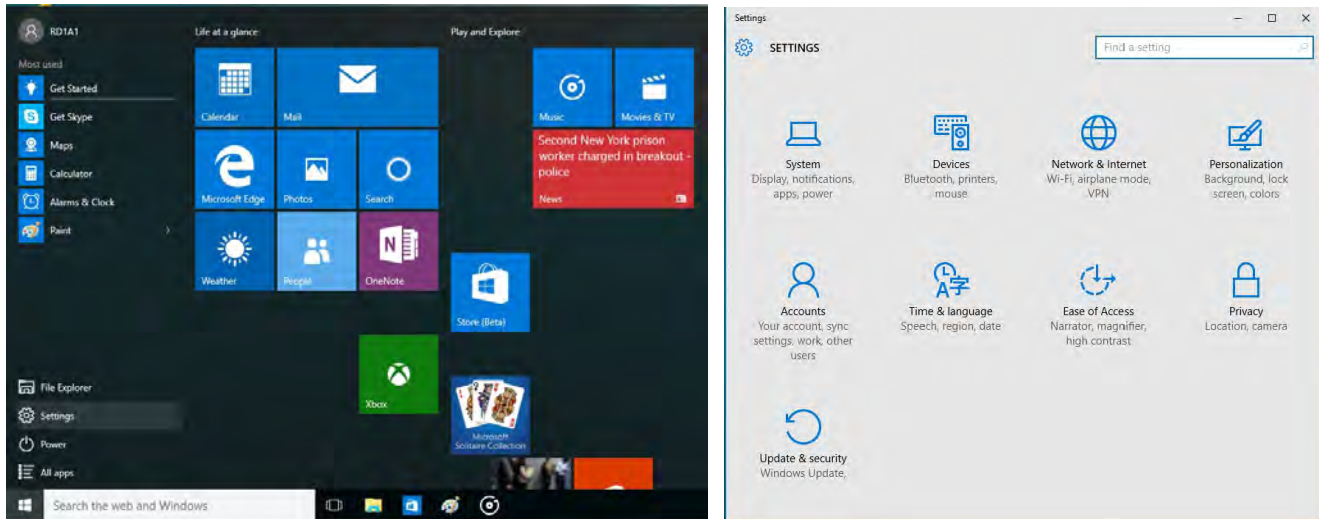


Figure 1 - 26 - Settings

Windows 10 Taskbar

In many instances throughout this manual you will see an instruction to access the **notification area of the taskbar**. The notification area of the taskbar is in the bottom right of the screen. Some of the Control Panels and applications referred to throughout the course of this manual can be accessed from here.



Taskbar



Taskbar - Pinned Programs and Apps




Notification Area


Figure 1 - 27 - Taskbar

You can pin/unpin apps to/from the taskbar in much the same way as you can to the Start screen (see *[“Pining/Unpinning Apps & Programs to/from the Start Menu”](#)* on page 1 - 34).

Video Features

You can switch display devices, and configure display options, from the **Display** control panel (in **Appearance and Personalization**). Click **Adjust resolution** to make changes to the appearance of the display and to detect and configure any attached displays. In *Windows 10* it is possible to quickly configure external displays from the **Project** menu (press the Windows logo key  on your keyboard and the **P** key).

To Configure Displays using Project

1. Attach your display to the appropriate port, and turn it on.
2. Press the  + **P** key combination.
3. Click on any one of the options from the menu to select **PC screen only**, **Duplicate**, **Extend** or **Second screen only**.
4. You can also click **Connect to a wireless display** at the bottom of the **Project** screen and follow the steps to connect to any wireless enabled display.

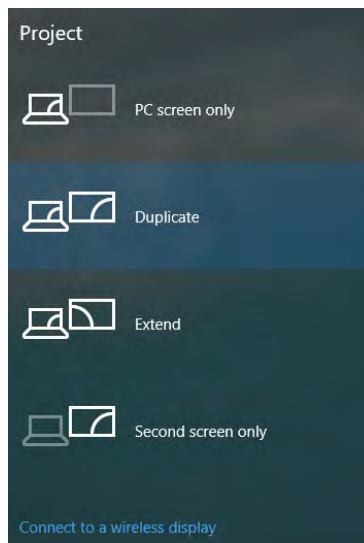



Figure 1 - 28 - Project (Devices)



NVIDIA Video Driver Controls

More detailed video controls are provided by the **NVIDIA Control Panel** (for more detailed information see [Appendix C](#)).

You can also access the control panel by right-clicking the desktop and selecting **NVIDIA Control Panel** ([Figure 1 - 31 on page 1 - 41](#)).

To access **Display (Control Panel) and Screen Resolution** in *Windows*:

1. Go to the **Control Panel**.
2. Click **Display** (icon) and **Adjust Resolution** - In the **Appearance and Personalization** category.
3. Make and changes required from the **Display, Resolution, Orientation** or **Multiple display** menus.
4. Click **Apply** to save the settings.

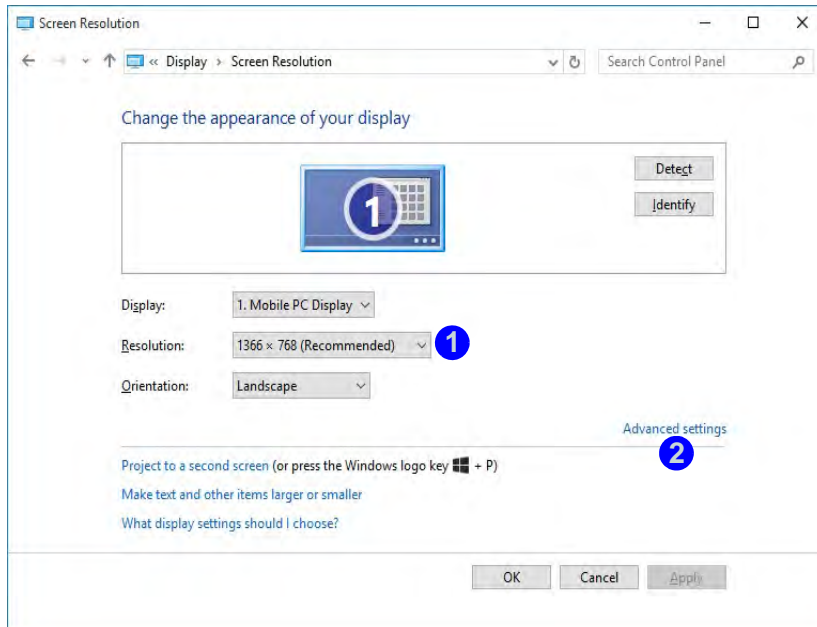


Figure 1 - 29 - Screen Resolution

Screen Resolution

1. Use the dropdown to select the screen **Resolution** **1** (*Figure 1 - 29*).
2. Click **Advanced settings** **2** (*Figure 1 - 29*) to bring up the **Advanced** properties tabs.
3. Click **Apply** to save any changes made.

Quick Start Guide

Display Settings:

1. You can quickly adjust the display by right-clicking the desktop and selecting **Display Settings** ① (*Figure 1 - 30*).
2. Adjust the settings using the sliders in the menu or click **Advanced display settings** ② (*Figure 1 - 30*) to change resolution.
3. Click **Apply** to save any changes made to resolution.

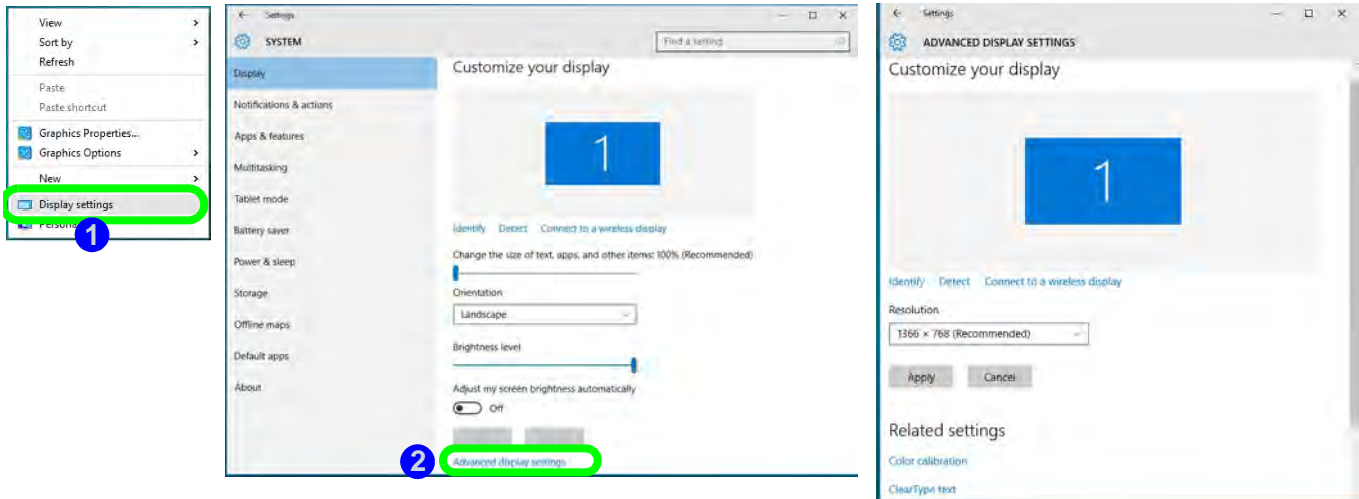


Figure 1 - 30 - Display Settings

To access the **NVIDIA Control Panel**:

1. Right-click the desktop and select **NVIDIA Control Panel** ① (Figure 1 - 31).
- OR**
2. Double-click the icon ② (Figure 1 - 31) in the **Windows** control panel.

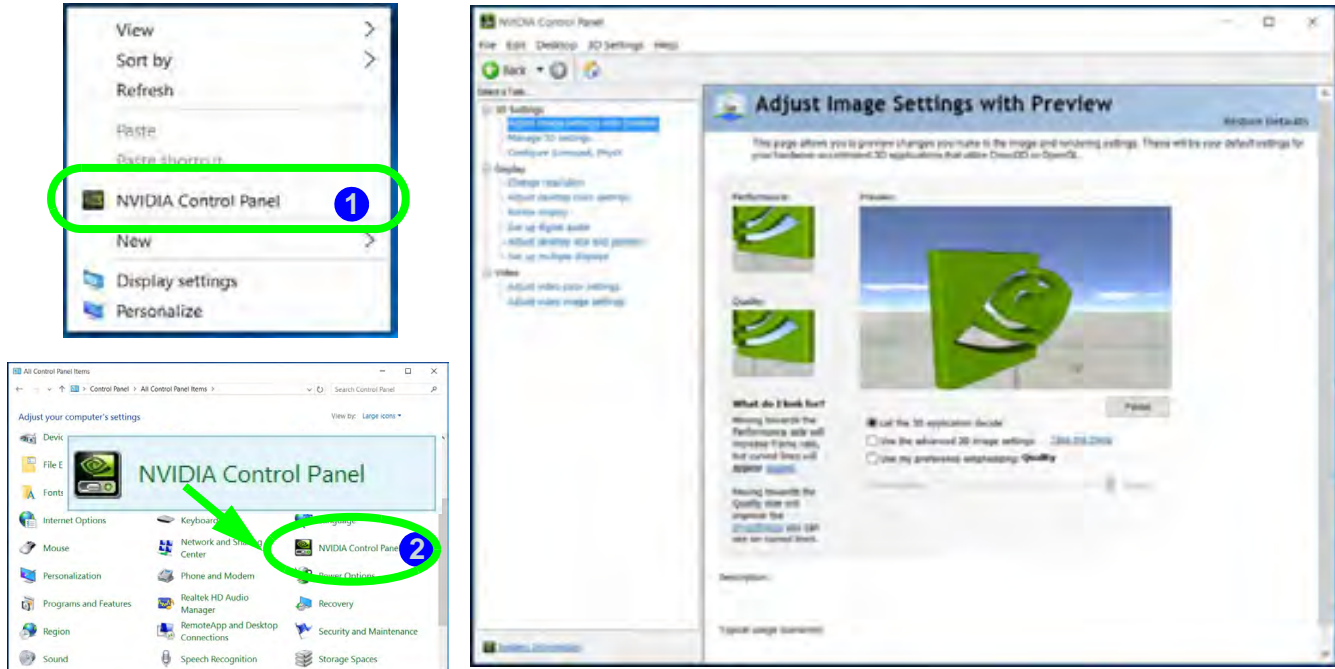



Figure 1 - 31 - NVIDIA Control Panel

Power Options

Power Options (Hardware and Sound) can be accessed from the Control Panel. The **Power** button item in **Start Menu** (or the context menu) may be used to **Shut down** or **Restart** (you can also add **Hibernate/Sleep** to the menu - see page *1 - 43*). To fully control all the power options (including Hibernate mode) go to the **Power Options** control panel and configure the power button, sleep button and lid to perform the function selected.

Using the Power Button

1. Go to the **Start Menu**.
2. Click the **Power button** .
3. Select the power state required from the menu.

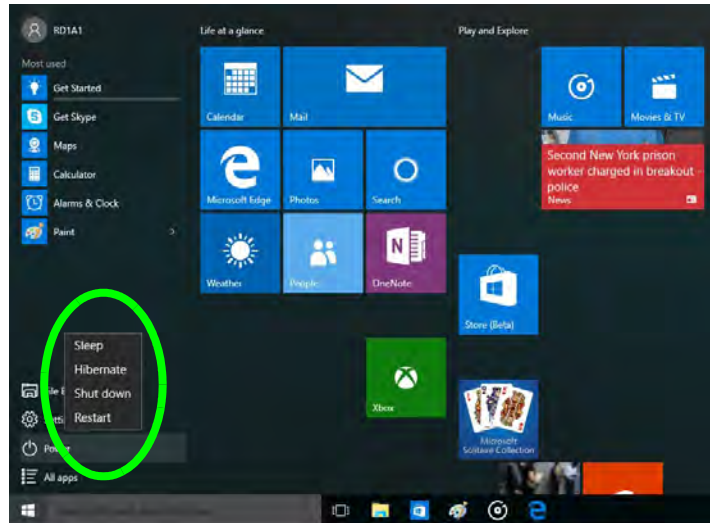


Figure 1 - 32 - Shut Down/Restart

You can also use the **context menu** (right-click the Start Menu  icon or press the Windows logo  + **X** key combination) to **Sign out, Sleep, Hibernate, Shut down, and Restart**.

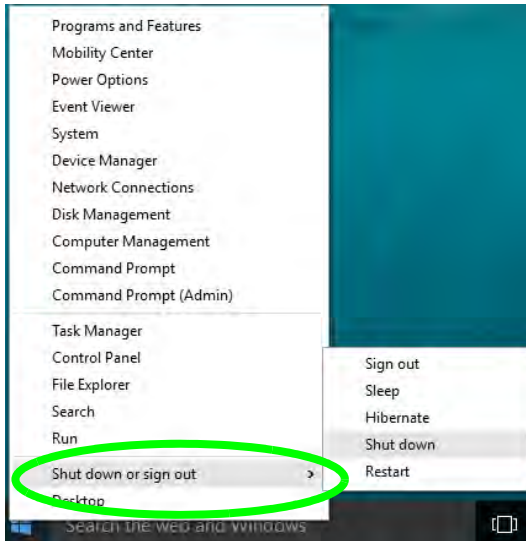



Figure 1 - 33 - Context Menu Shut Down or sign out

Ctrl + Alt + Delete Key Combination

You can use the **CTRL + ALT + DEL** key combination to bring up a full-screen displaying **Lock, Sign out, Change a password, Task Manager and Switch User**. If you click the **Power** icon in the lower right corner of the screen a power management option menu appears to display **Sleep, Hibernate, Shut down, and Restart**.

Adding Hibernate/Sleep to the Power Men

1. Go to the **Power Options (Hardware and Sound)** control panel.
2. Click **Choose what the power buttons do**.
3. Click "**Change settings that are currently unavailable**"  [Change settings that are currently unavailable](#) .
4. Click to put a check in the **Hibernate/Sleep** box under **Shutdown settings**.
5. Click **Save Changes** and close the control panel.

Quick Start Guide

Minimum Screen Resolution Settings

1. **Windows 10** has minimum screen resolution requirements.
2. Right-click a blank area of the Desktop and select **Screen Resolution** (or go to the **Display** control panel).
3. Adjust the **Resolution** to make sure that it is at least **1024 * 768**, although preferably **1366 * 768** or above.

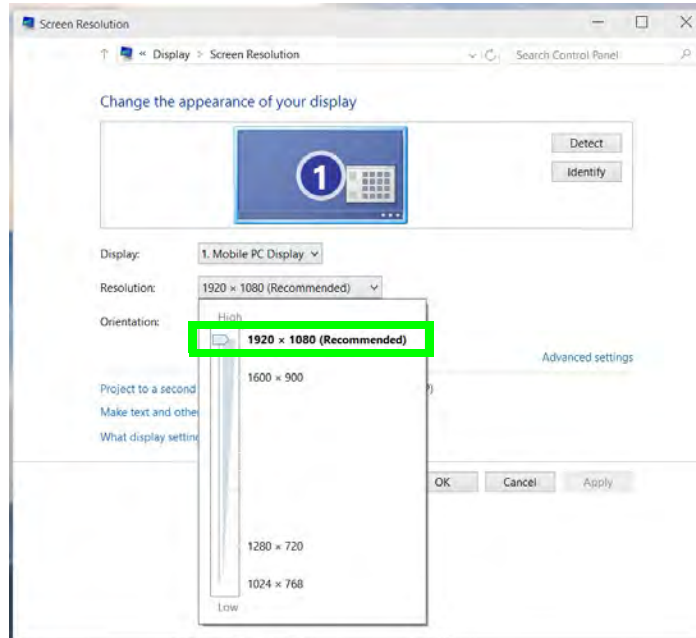


Figure 1 - 34 - Screen Resolution

Chapter 2: Storage Devices, Mouse, & Audio

Overview

Read this chapter to learn more about the following main features and components of the computer:

- Hard Disk Drive/Solid State Drive
- Multi-in-1 Card Reader
- Audio Features
- Touchpad and Buttons/Mouse



Bottom Cover Removal Warning

Do not remove any cover(s) and/or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.

If you need to replace/remove the hard disk for any reason, please contact your distributor/supplier for further information.

Hard Disk Drive/Solid State Drive


The hard disk drive (HDD) and/or solid state drive (SSD) is used to store your data in the computer. The hard disk can be taken out to accommodate other serial (SATA) hard disk drives (see *“Storage” on page D - 3* for specification information), however you will need to contact your distributor/supplier to do this in order to avoid violating the terms of your warranty.

Multi-in-1 Card Reader

The card reader allows you to use some of the latest digital storage cards. Push the card into the slot and it will appear as a removable device, and can be accessed in the same way as your hard disk (s). Make sure you install the Card Reader driver (see *“Card Reader” on page 4 - 7*).

- MMC (MultiMedia Card) / RSMMC
- SD (Secure Digital) / Mini SD / SDHC / SDXC (up to UHS-II)

Note: Some of these cards require PC adapters that are usually supplied with the cards.

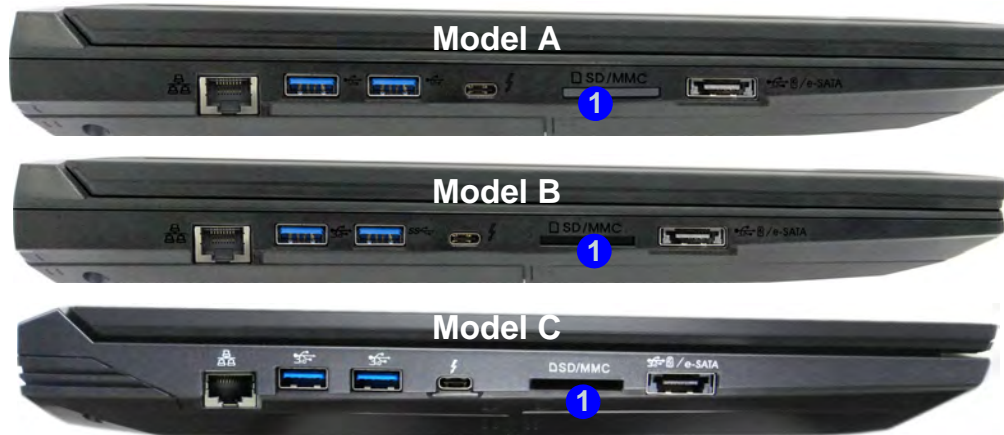

Push-Push Card Reader

 
The card reader features a push-in/push-out card insertion and ejection mechanism. Simply push the card to insert and eject it, however Ms Duo cards require an adapter.

Figure 2 - 1
Right View

1. Card Reader



Volume Adjustment

The sound volume level can be clicking using the volume control icon  in the **notification area of the taskbar**.

 



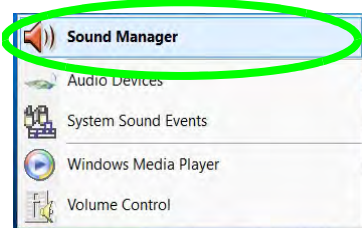



Figure 2 - 2
Realtek Audio Manager

Audio Features

You can configure the audio options on your computer from the **Sound**  control panel in *Windows*, or from the **Realtek HD Audio Manager**  icon in the notification area/control panel (right-click the notification area icon  to bring up an audio menu and select **Sound Manager**). The volume may also be adjusted by means of the **Fn + F5/F6** key combination (see *Table 1 - 4, on page 1 - 20*).



Right-click the icon  to access the menu above, and then select **Sound Manager**.




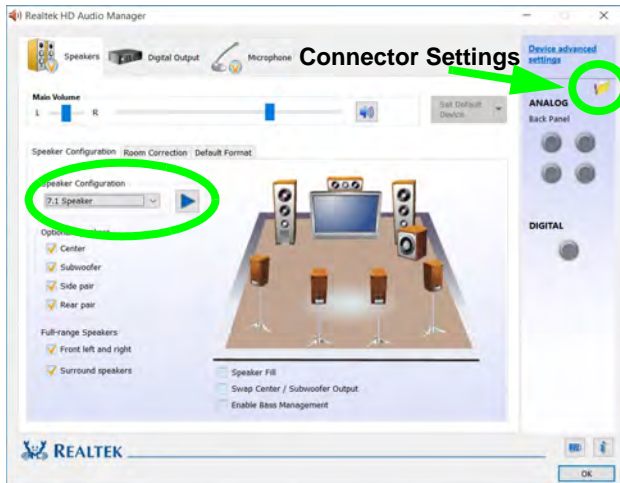
See *“HDMI Audio Configuration” on page C - 25* for a description of the audio configuration when connecting an HDMI supported display device.

See *“Sound Blaster Audio & HDMI/Display Port” on page 6 - 63* for more information on the THX TruStudio Pro Audio setup.


Setup for 5.1 or 7.1 Surround Sound

To setup your system for 5.1 or 7.1 surround sound you will need to connect the audio cables to the Headphone-Out, Line-In, Microphone-In jack and S/PDIF-Out jacks (*note: the S/PDIF jack is used for 7.1 surround sound only*).

1. Click **Start**, and click **Control Panel** (or point to **Settings** and click **Control Panel**) and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the notification area icon  and select **Sound Manager**).
3. Click **Speakers** (tab) and click **Speaker Configuration** (tab).
4. Select **5.1 or 7.1 Speaker** from the **Speaker Configuration** pull-down menu.



Auto Popup Dialog

You should enable the auto popup dialog to automatically detect when a device has been plugged-in. If disabled, double-click **connector settings**  and click the box to enable the auto popup detection of plugged-n devices.

Volume Adjustment

The sound volume level is set using the volume control within **Windows** (and the volume function keys on the computer). Click the volume icon in the notification area to check the setting.

Headphone Configuration


It is recommended that you set the **Speaker Configuration** to **Stereo** (not to 5.1 or 7.1 Speaker) when listening through headphones in order to maximize audio quality.

Figure 2 - 3
Realtek Audio Manager - Speakers

5. Plug the **front speaker** cables into the **Headphone-Out Jack**.
6. Plug in the other cables (you may require an adapter to connect each cable to the appropriate jack e.g a stereo mini to dual RCA adapter) from your speakers as follows:
 - Line-In Jack = Rear Speaker Out
 - Microphone-In Jack = Center/Subwoofer Speaker Out
 - S/PDIF-Out Jack = Side Speaker Out (**for 7.1 Surround Sound Only**)
7. As you plug in each cable a dialog box will pop up.
8. Click to put a check in the appropriate box according to the speaker plugged-in (e.g. Rear Speaker Out), and then click **OK** to save the setting.
9. Click **OK** to exit **Realtek HD Audio Manager**.

Setup for Audio Recording

To record audio sources on your computer at optimum quality follow the instructions below:

1. Click **Control Panel** and make sure you are in **Classic View**.
2. Click **Realtek HD Audio Manager** (or right-click the notification area icon  and select **Sound Manager**).
3. Click **Microphone Effects** (tab) in **Microphone** (tab), and then click to select **Noise Suppression** (button), or adjust the **Recording Volume** level to around **60**, to obtain the optimum recording quality.
4. Click **OK** to close the control panel and save the settings.

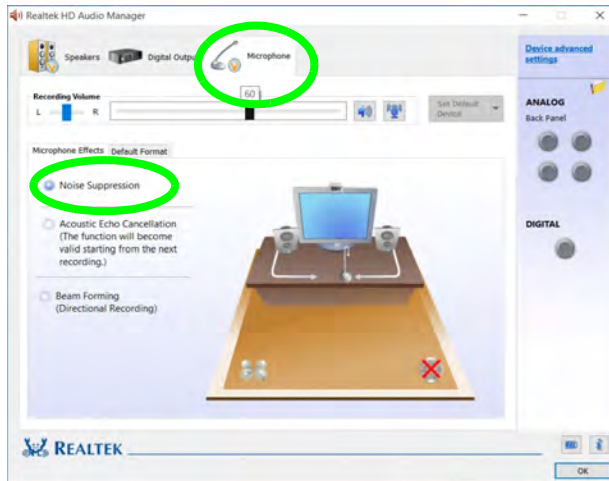


Figure 2 - 4
Realtek Audio
Manager -
Recording Setup



Touchpad Cleaning

In order to improve pad performance it is necessary to keep the surface clean and free of fingerprints and marks etc.

Use a soft dry cleaning cloth to keep the pad surface clean.

Disabling the Pad

Use the **Fn + F1** or Control Center button to disable the Touchpad.

Figure 2 - 5
Touchpad Sensitivity

Touchpad and Buttons/Mouse

The Touchpad is an alternative to the mouse; however, you can also add a mouse to your computer through one of the USB ports. The Touchpad buttons function in much the same way as a two-button mouse.


Touchpad Sensitivity

The **mouse button zones** at the bottom of the pad measure about **15mm from the bottom** of the pad, and the **left and right buttons** are divided roughly down the middle as illustrated below. Press the left button zone for a left click, and right button zone for a right click action.




Mouse Driver

If you are using an external mouse your operating system may be able to auto-configure your mouse during its installation or only enable its basic functions. Be sure to check the device's user documentation for details.

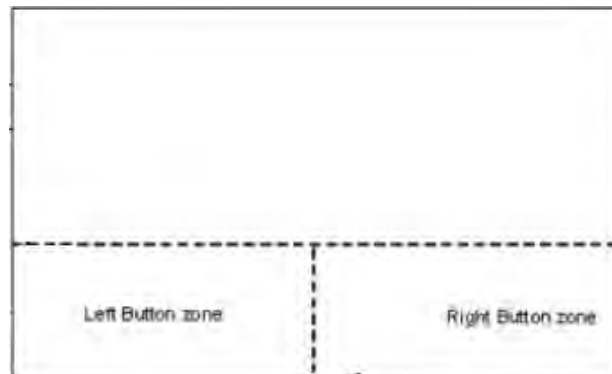

Touchpad Configuration

Once you have installed the TouchPad driver (see *“Touchpad” on page 4 - 8*) you can configure the functions from the Mouse control panel in *Windows*, or by double-clicking the TouchPad driver icon  in the notification area of the taskbar in the Desktop app. You may then configure the TouchPad tapping, buttons, scrolling, pointer motion and sensitivity options to your preferences. You will find further information at www.synaptics.com.



TouchPad Scrolling

This computer model series may feature different TouchPad versions.

These TouchPads may differ in their vertical scrolling function in most scrollable windows.

Some TouchPads require sliding the finger up and down on the right of the TouchPad to scroll the window. Other versions require tapping/holding down the finger at the top right or bottom right of the TouchPad to scroll the window.


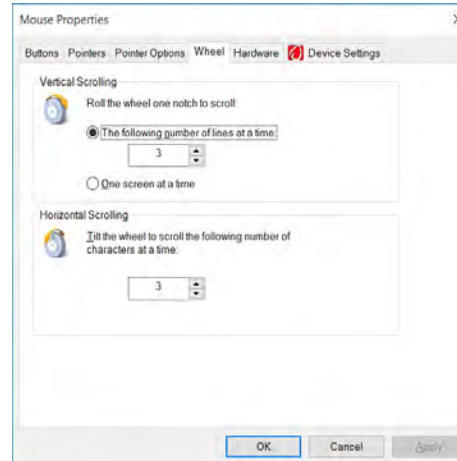


Figure 2 - 6
Mouse Properties

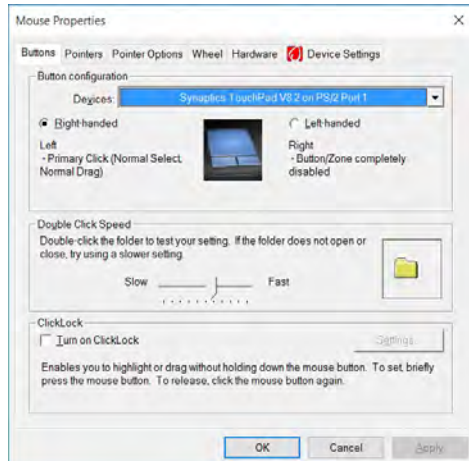

Show Video

You can get a clearer view of the gestures involved by clicking the **Show Video** option for each gesture item.

Select the gesture (**Pinch Zoom, Rotating, Three Fingers Down and Three Finger Flick**) in the **Device Settings > Settings** left tree menu and click the **Show Video** button to see the demonstration video.

For more details on any of the gestures see the **help** in the lower part of the right menu window.


Figure 2 - 7
Mouse Properties - Device Settings

Gestures and Device Settings

The Synaptics Gestures Suite application allows you to use a specific gesture (action) on the surface of the Touchpad to perform specific actions to manipulate documents, objects and applications.

You can configure the settings from the Device Settings tab in **Mouse Properties**:

1. Go to the **Control Panel**.
2. Click **Mouse (Hardware and Sound)**.
3. Click **Device Settings** (tab) and click **Settings**.
4. Use the menu tree on the left to access the user configurable settings.

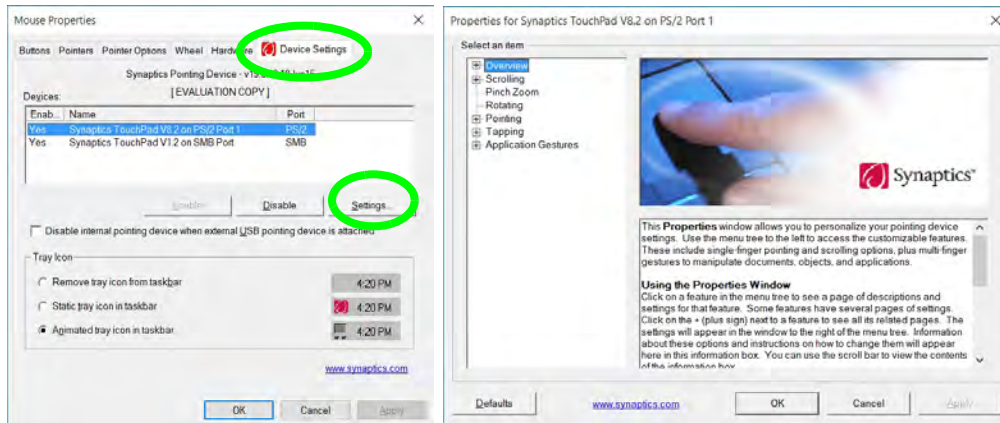

Disabling the Touchpad

If you need to disable the Touchpad for any reason (e.g. you may find that when using the computer's internal keyboard you accidentally trigger the Touchpad when resting your wrists or palms on it) you can do so by using **Fn + F1** key combination.

You can also set the system to automatically disable the internal Touchpad when an external USB point device (e.g a USB mouse) is attached.

1. Go to the **Mouse Properties** control panel.
2. Click to select **Device Settings** (tab).
3. Click to place a check in the "**Disable internal pointing device when external USB pointing device is attached**" check box.
4. Click **OK** to save the setting.

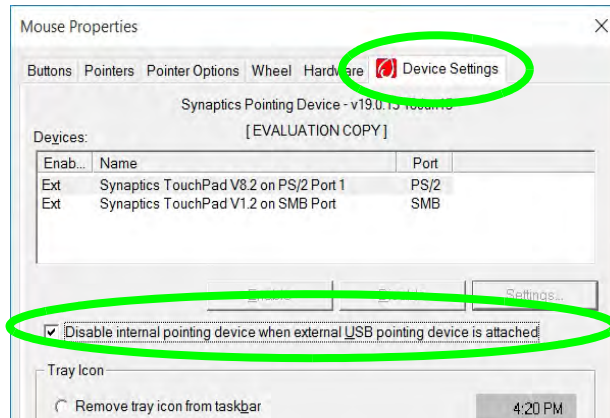


Figure 2 - 8
Mouse Properties
(Disable Touchpad)



PalmCheck™

In order to improve Clickpad/Touchpad scrolling responsiveness when using one-finger scrolling, you can adjust the PalmCheck™ slider towards “Minimum” as per your preference.

However bear in mind that adjusting the slider too far towards “Minimum” can turn off PalmCheck™ altogether.

PalmCheck™

The PalmCheck™ feature (**Device Settings > Settings > Pointing > Sensitivity**) helps prevent operating the Clickpad/Touchpad by accident, by recognizing when your palm is resting on it or brushing its surface while you are typing.

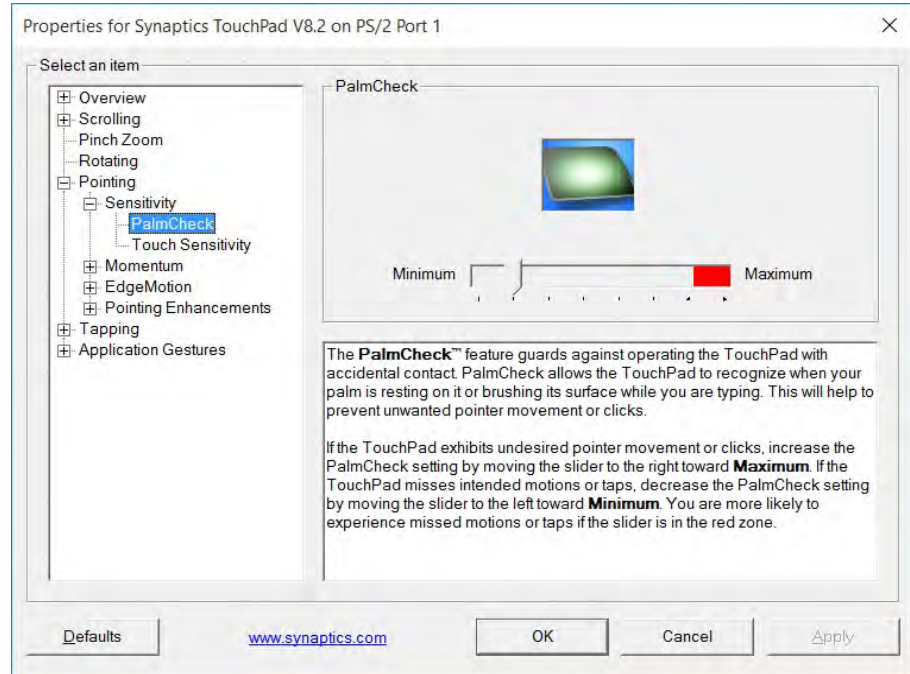


Figure 2 - 9

PalmCheck™ Slider

Scrolling

The Two-Finger scrolling feature works in most scrollable windows and allows you to scroll horizontally and vertically. Place two fingers, slightly separated, on the TouchPad surface and slide both fingers in the direction required (in a straight continuous motion).



Figure 2 - 10
Scrolling Gesture

Zooming

The Pinch Zoom gesture can be used to perform the same function as a scroll wheel in **Windows** applications that support CTRL + scroll wheel zoom functionality. Place two fingers on the TouchPad (for best results use the tips of the fingers) and slide them apart to zoom in, or closer together to zoom out.



Figure 2 - 11
Zooming Gesture

Rotating

Use the Pivot Rotate gesture to rotate objects (e.g. photos) in 90 degree increments. Place a finger down on the left “target” zone and keep it stationary. Place another finger near the middle of the TouchPad and slide it in a circular motion around the stationary finger (clockwise or counterclockwise) to rotate the object.


Figure 2 - 12
Rotating Gesture



Three Finger-Flick/Three Fingers Down (Press)

The Three Finger-Flick gesture may be used to enhance navigation with a variety of applications such as browsing the Internet or scrolling through a photo viewer. The Three Fingers Down gesture may be used to launch user-selectable applications.

Figure 2 - 13
Flick/Press
Gesture

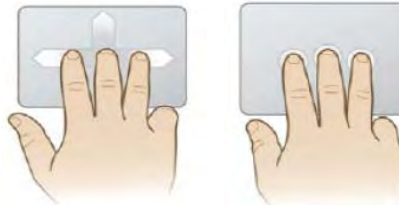

Chapter 3: Power Management

Overview

To conserve power, especially when using the battery, your computer power management conserves power by controlling individual components of the computer (the monitor and hard disk drive) or the whole system. This chapter covers:

- The Power Sources
- Turning On the Computer
- Power Plans
- Power-Saving States
- Configuring the Power Buttons
- Battery Information

The computer uses enhanced power saving techniques to give the operating system (OS) direct control over the power and thermal states of devices and processors. For example, this enables the OS to set devices into low-power states based on user settings and information from applications.



OS Note

Power management functions will vary slightly depending on your operating system. For more information it is best to refer to the user's manual of your operating system.



Forced Off

If the system “hangs”, and the **Ctrl + Alt + Del** key combination doesn’t work, press the power button for **4 seconds**, or longer, to force the system to turn itself off.

The Power Sources

The computer can be powered by either an AC/DC adapter or a battery pack.

AC/DC Adapter

Use only the AC/DC adapter that comes with your computer. The wrong type of AC/DC adapter will damage the computer and its components.

1. Attach the AC/DC adapter to the DC-in jack at the rear of the computer.
2. Plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter (**make sure you use the adapter when first setting up the computer**, as to safeguard the computer during shipping, the battery will be locked to not power the system until first connected to the AC/DC adapter).
3. Raise the lid/LCD to a comfortable viewing angle.
4. Press the power button to turn “On”.

Battery

The battery allows you to use your computer while you are on the road or when an electrical outlet is unavailable. Battery life varies depending on the applications and the configuration you're using. **To increase battery life, let the battery discharge completely before recharging** (see *“Battery FAQ” on page 3 - 21*).

We recommend that you do not remove the battery. For more information on the battery, please refer to *“Battery Information” on page 3 - 17*.

Turning On the Computer

Now you are ready to begin using your computer. To turn it on simply press the power button on the front panel.


When the computer is on, you can use the power button as a Stand by/Hibernate/Shutdown hot-key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will shut the computer down). Use **Power Options (Hardware and Sound)** in the *Windows* control panel to configure this feature.





Power Button as Stand by or Hibernate Button

You can use the OS's "Power Options" control panel to set the power button to send the system into Stand by or Hibernate mode (see your OS's documentation, or "[Configuring the Power Buttons](#)" on page 3 - 9 for details).


Shutting the Computer Down

Note that you should always shut your computer down by choosing the **Shut down** command as this will help prevent hard disk or system problems. Use the **Power**  item in the **Start Menu** and select **Shut down**.

You can also use the **context menu** (right-click the Start Menu  icon or press the Windows logo  + **X** key combination) to **Sign out**, **Sleep**, **Hibernate**, **Shut down**, and **Restart**.

If you want to add Hibernate/Sleep to the Power Menu see *“Adding Hibernate/Sleep to the Power Menu”* on page 3 - 10.

Figure 3 - 1
Shut Down/Restart

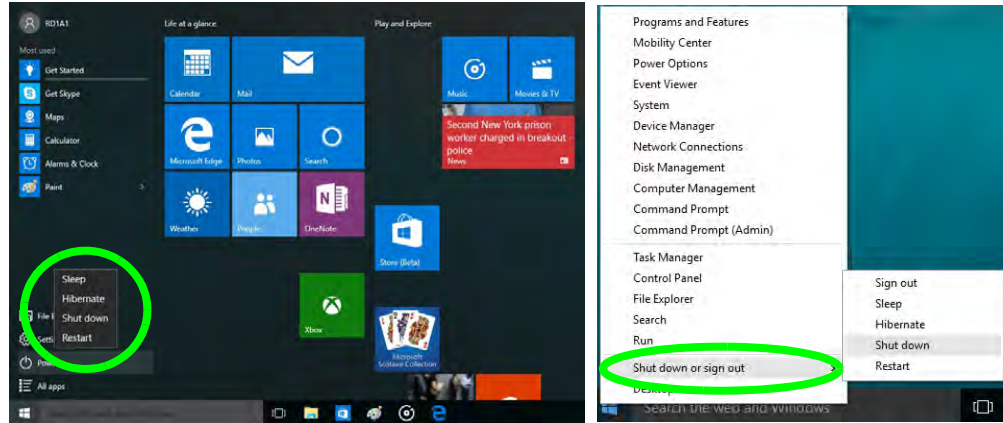



Power Plans

The computer can be configured to conserve power by means of **power plans (Control Panel > Power Options)**. You can use (or modify) an existing **power plan**, or create a new one.

The settings may be adjusted to set the **display** to turn off after a specified time, and to send the computer into **Sleep** after a period of inactivity.

Click **Change plan settings** and then click **Change advanced power settings** to access further configuration options in **Advanced Settings**.

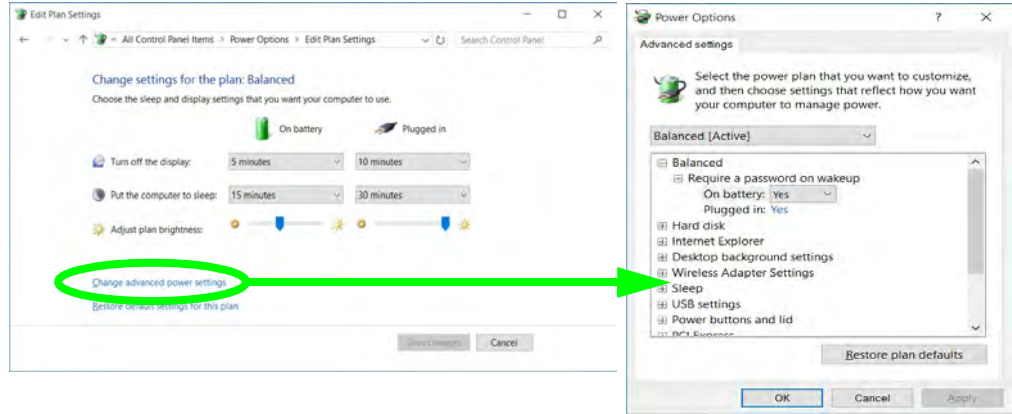



Resuming Operation

See [Table 3 - 1, on page 3 - 11](#) for information on how to resume from a power-saving state.

Password

It is recommended that you enable a password on system resume in order to protect your data.

Figure 3 - 2
Power Plan
Advanced Settings

Power Management


3

Each **Windows power plan** will also adjust the processor performance of your machine in order to save power. This is worth bearing in mind if you are experiencing any reduced performance (especially under DC/battery power).

Choose **High performance** (you may need to click **Show additional plans** to view the High performance plan) for maximum performance when the computer is powered from an AC power source. Choose the **Power saver** (bear in mind that this scheme may slow down the overall performance of the computer in order to save power) for maximum power saving when the computer is battery (DC power) powered.

Figure 3 - 3
Power Plans

Click to Show/Hide additional power plans

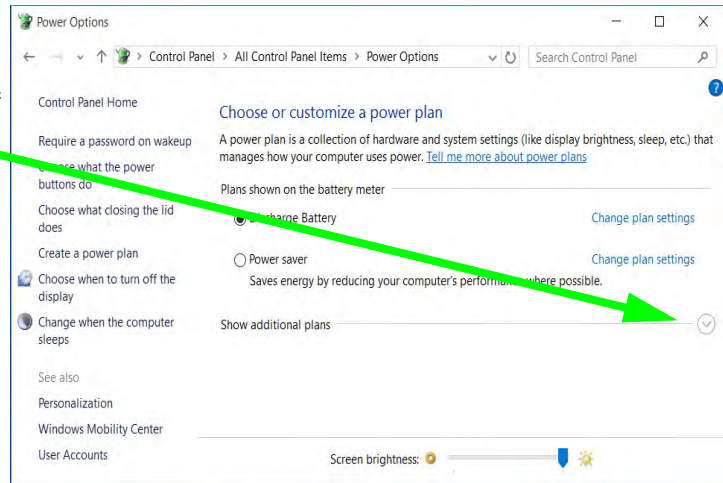

Power-Saving States

You can use power-saving states to stop the computer's operation and restart where you left off. *Windows 10* uses the **Sleep**, **Hibernate** and **Shut Down** power-saving states.

Sleep

In **Sleep** all of your work, settings and preferences are saved to memory before the system sleeps. When you are not using your computer for a certain length of time, which you specify in the operating system, it will enter **Sleep** to save power.

The PC wakes from **Sleep within seconds** and will return you to where you last left off (what was on your desktop) without reopening the application(s) and file(s) you last used.

If your mobile PC in **Sleep** is running on battery power the system will use only a minimum amount of power. After an extended period the system will save all the information to the hard disk and shut the computer down before the battery becomes depleted.

To add **Sleep** to the **Power Menu** see *“Adding Hibernate/Sleep to the Power Menu” on page 3 - 10.*



Wake On LAN Support

Wake-On-LAN is only supported from **Sleep** or **Hibernate** states in *Windows*.

If you require your computer to wake up from network activity in *Windows* then make sure that the computer is either in **Sleep** or **Hibernate**.

Wake-On-LAN is not supported from **Shut-down** states in *Windows*.

Hibernate

Hibernate uses the least amount of power of all the power-saving states and saves all of your information on a part of the hard disk before it turns the system off. If a power failure occurs the system can restore your work from the hard disk; if a power failure occurs when work is saved only to memory, then the work will be lost. **Hibernate** will also return you to where you last left off within seconds. You should put your mobile PC into **Hibernate** if you will not use the computer for a period of time, and will not have the chance to charge the battery. To add **Hibernate** to the **Power Menu** see *“Adding Hibernate/Sleep to the Power Menu” on page 3 - 10.*

Shut down


You should **Shut down** the computer if you plan to install new hardware, plan to be away from the computer for several days, or you do not need it to wake up and run a scheduled task. Returning to full operation from **Shut down** takes longer than from **Sleep** or **Hibernate**.




Figure 3 - 4
**Power Button &
Start Menu Power**

Configuring the Power Buttons

The power/sleep button (**Fn + F12** key combo) and closed lid may be set to send the computer in to a power-saving state. Click **Choose what the power buttons do** on the left menu in **Power Options** to bring up the menu.

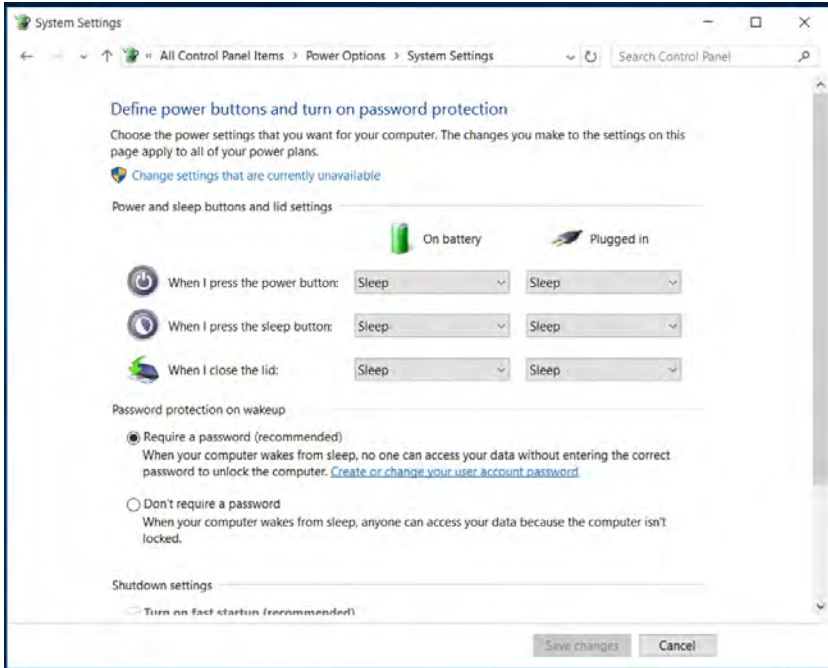



Password Protection


It is recommended that you enable a password on wake up in order to protect your data.


However you can disable this setting from the **Power Options** menu by clicking **Require a password on wakeup** in the left menu, and selecting the options (click **Change settings that are currently unavailable**).

Figure 3 - 5
Power Options
Define Power Buttons

Adding Hibernate/Sleep to the Power Menu

Add **Hibernate/Sleep** to the **Power Menu** as follows.

1. Go to the **Power Options (Hardware and Sound)** control panel (see page **1 - 39**).
2. Click **“Change settings that are currently unavailable”**  [Change settings that are currently unavailable](#).
3. Click **Choose what the power buttons do**.
4. Click to put a check in the **Hibernate/Sleep** box under **Shutdown settings**.
5. Click **Save Changes** and close the control panel.

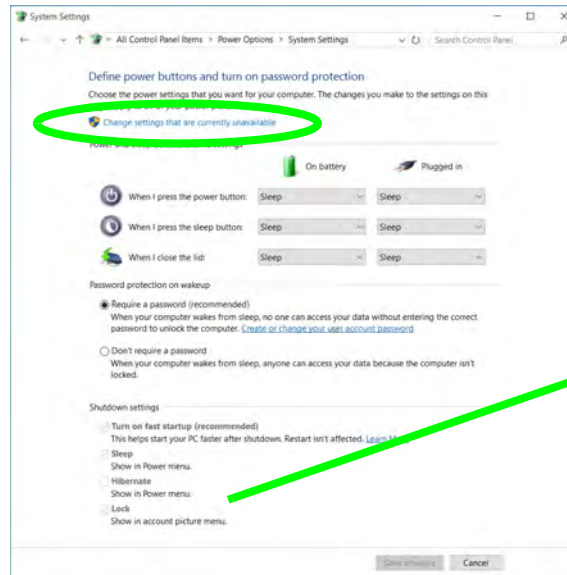

Shutdown settings

- Turn on fast startup (**
This helps start your PC
- Sleep**
Show in Power menu.
- Hibernate**
Show in Power menu.
- Lock**
Show in account picture

Figure 3 - 6
Power Options
Define Power
Buttons - Shutdown
Settings

Resuming Operation

You can resume operation from power-saving states by pressing the power button, or in some cases pressing the sleep button (**Fn + F12** key combo).




Power Status	Icon  Color	To Resume
Power Off	Off	Press the Power Button
Sleep	Blinking Green	Press the Power Button Press the Sleep Button (Fn + F12 Key Combo)
Hibernate	Off (battery) Orange (AC/DC adapter)	Press the Power Button
Display Turned Off	Green	Press a Key or Move the Mouse/Touchpad

Table 3 - 1 Resuming Operation



 Power Button

When the computer is on, you can use the power button as a Sleep/Hibernate/Shut Down hot key button when it is pressed for less than **4 seconds** (pressing and holding the power button for longer than this will force the computer to shut down).



Closing the Lid

If you have chosen to send the computer to **Sleep** when the lid is closed, raising the lid will wake the system up.



Power Conservation Modes

The **Power Saving** setting will result in maximum power saving, but with the possible loss of some performance.

Setting the mode to **Balance** will give power saving matched with performance.

Performance will give optimum computer performance but with less power conservation.

Note that the Energy Star setting will put the display into sleep after no more than 15 minutes of user inactivity.

Power Conservation Modes

This system supports **Power Saving** power management features that place computers (CPU, hard drive, etc.) into a low-power sleep modes after a designated period of inactivity. Adjust **Power Conservation Modes** from the **Control Center**:

1. Press the **Fn + Esc** key combination to toggle the **Control Center** on/off.
2. Click either the **Performance**, **Balanced** or **Power Saving** button.



Figure 3 - 7
Control Center

Ctrl + Alt + Delete Key Combination

You can use the **CTRL + ALT + DEL** key combination from almost any of the *Windows 10* interfaces/Apps to bring up a full-screen displaying **Lock**, **Switch User**, **Sign out**, **Change a password** and **Task Manager** options. If you click the **Power** icon in the lower right corner of the screen a power management option menu appears to display **Sleep**, **Shut down**, and **Restart**.

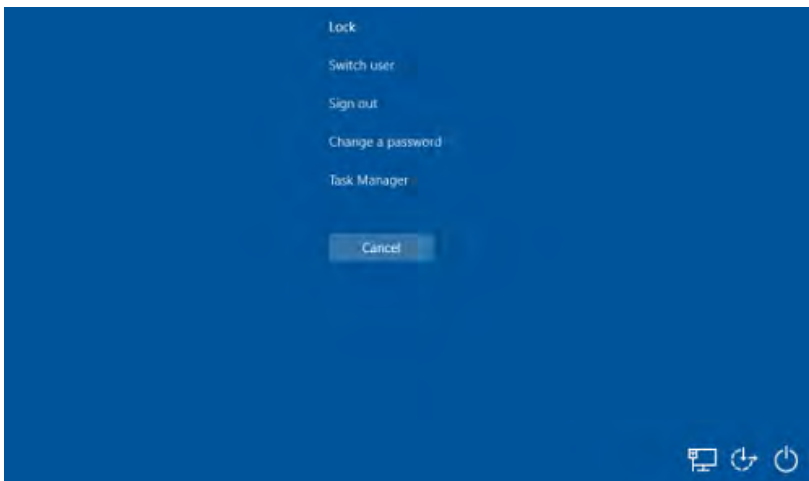


Figure 3 - 8
Ctrl + Alt + Delete
Menu

To fully control all the power options (including Hibernate mode) go to the **Power Options** control panel and configure the power button, sleep button and lid to perform the function selected.

Settings Menu Power Controls

The **Settings** item in the **Start Menu** (and also as an App) gives you access to a number of power settings control panels which enable you to quickly adjust power options. Click **System** to access the menu including the power option settings.

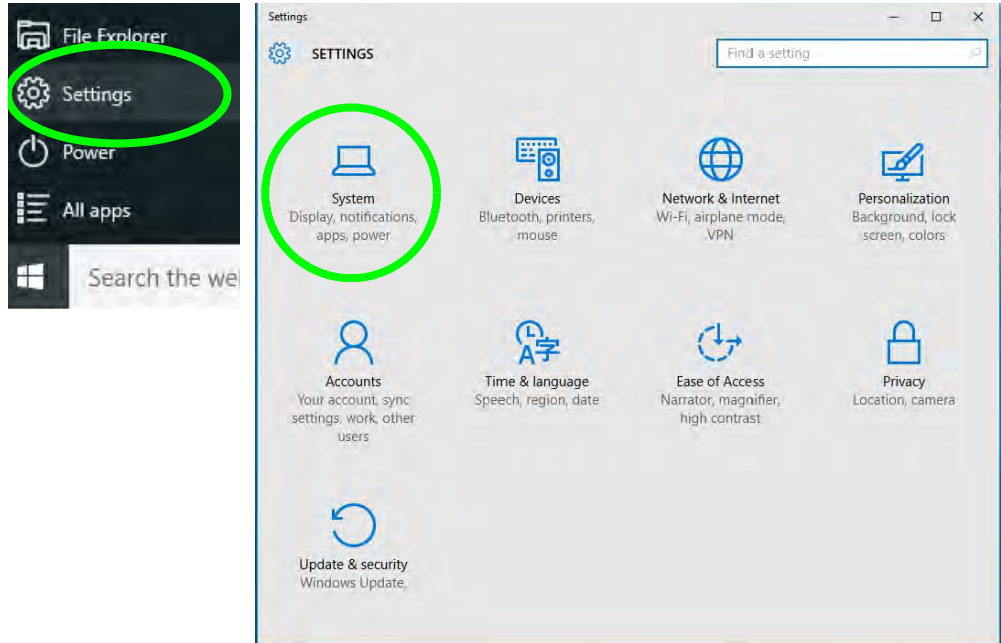


Figure 3 - 9
Settings

Battery Saver

Battery Saver will display the battery level, and by clicking **Battery Use** you can see the current state of battery usage by application etc. Click **Battery saver settings** to adjust the battery saver level.

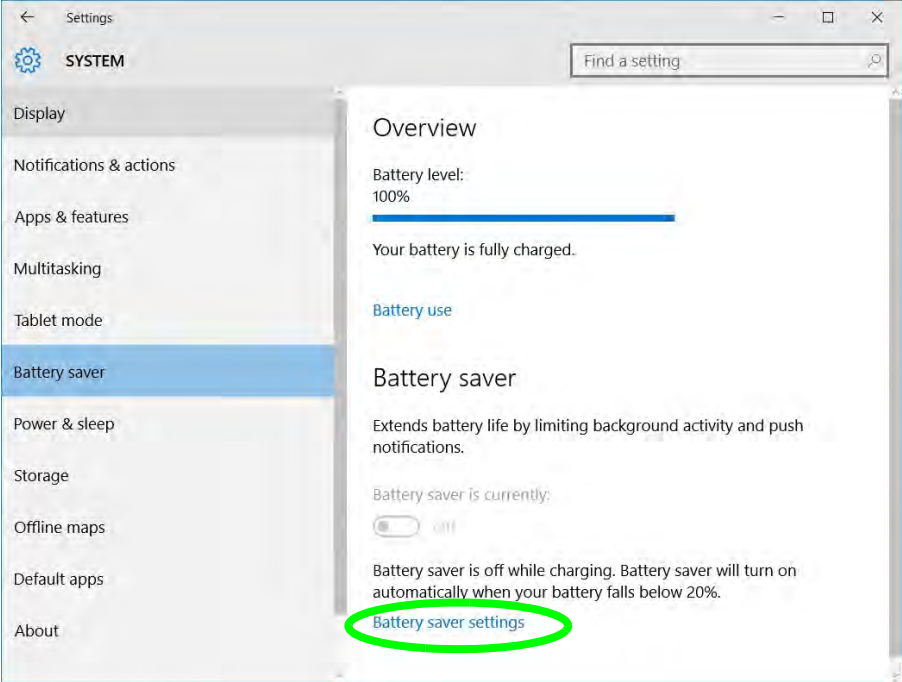


Figure 3 - 10
Settings > Battery
Saver

Power & Sleep

Power & sleep gives you quick access to **Screen** and **Sleep** settings. Click **Additional power settings** to go to the main power options control panel.

3

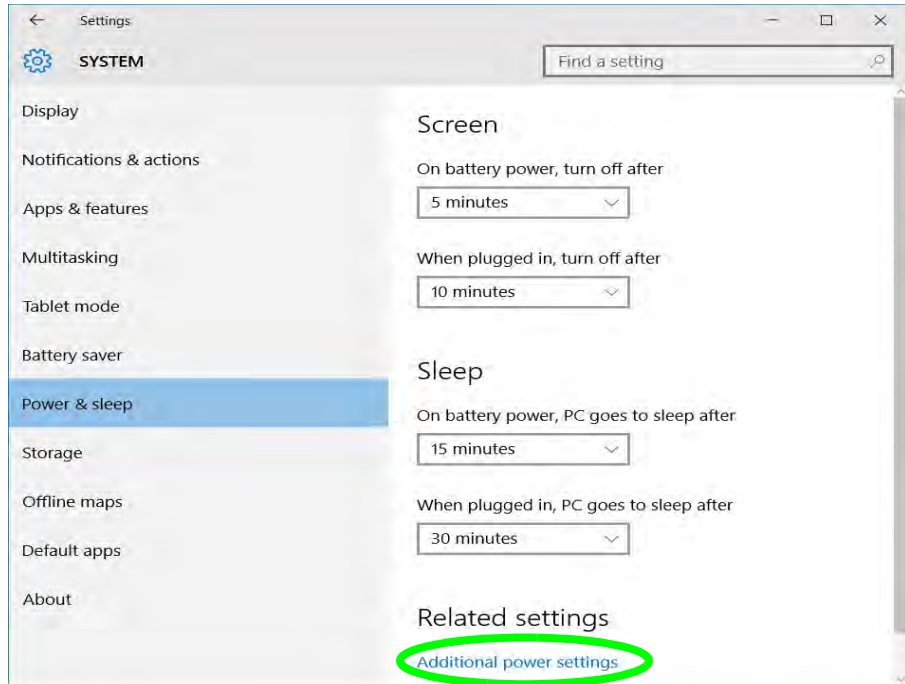



Figure 3 - 11
Settings > Power & Sleep


Battery Information

Follow these simple guidelines to get the best use out of your battery.

Battery Power

Your computer's battery power is dependent upon many factors, including the programs you are running, and peripheral devices attached. You can set actions to be taken (e.g. Shut down, Hibernate etc.), and set critical and low battery levels from power plan **Change plan settings > Change advanced power settings** (see *Figure 3 - 3 on page 3 - 6*).

Click the battery icon  in the notification area to see the current battery level and charge status (you can also click **Power & sleep settings** to access the **Settings** menu to quickly adjust power settings).


Low Battery Warning

When the battery is critically low, immediately connect the AC/DC adapter to the computer or save your work, otherwise, the unsaved data will be lost when the power is depleted.

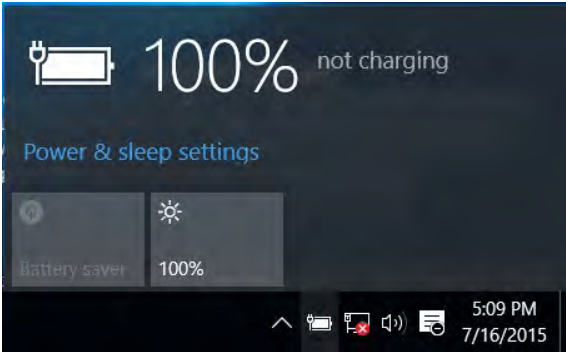


Figure 3 - 12
Battery Icon (Notification Area) & Battery Advanced Settings



Windows Mobility Center

The **Windows Mobility Center** control panel provides an easy point of access for information on battery status, power plans used and wireless device status etc.

Conserving Battery Power

- Use a **power plan** that conserves power (e.g **Power saver**), however note that this may have an affect on computer performance.
- Lower the brightness level of the LCD display. The system will decrease LCD brightness slightly to save power when it is not powered by the AC/DC adapter.
- Reduce the amount of time before the display is turned off.
- Close wireless, Bluetooth, modem or communication applications when they are not being used.
- Disconnect/remove any unnecessary external devices e.g. USB devices, ExpressCards etc.

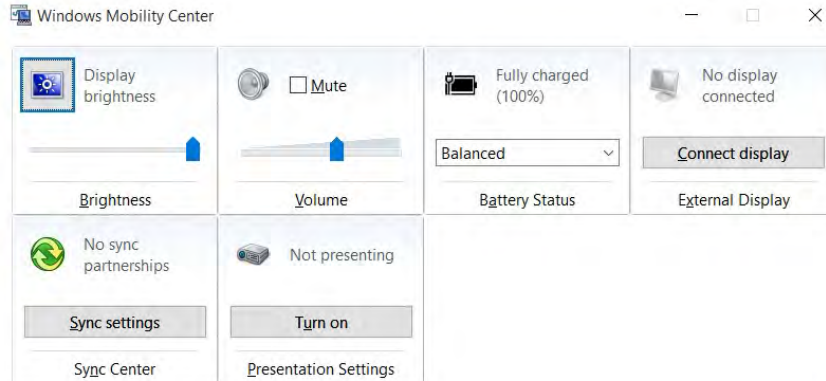


Figure 3 - 13
Windows Mobility Center (Control Panel)

Battery Life

Battery life may be shortened through improper maintenance. **To optimize the life and improve its performance, fully discharge and recharge the battery at least once every 30 days.**

We recommend that you do not remove the battery yourself. If you do need to remove the battery for any reason (e.g. long term storage) see *“Bottom View - Model C” on page 1 - 28.*

New Battery

Always completely discharge, then fully charge, a new battery (see *“Battery FAQ” on page 3 - 21* for instructions on how to do this).

Recharging the Battery with the AC/DC Adapter

The battery pack automatically recharges when the AC/DC adapter is attached and plugged into an electrical outlet. If the computer is powered on, and in use, it will take several hours to fully recharge the battery. When the computer is turned off but plugged into an electrical outlet, battery charge time is less. Refer to *“LED Indicators” on page 1 - 9* for information on the battery charge status, and to *“Battery FAQ” on page 3 - 21* for more information on how to maintain and properly recharge the battery pack.



Caution

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Proper handling of the Battery Pack

- DO NOT disassemble the battery pack under any circumstances
- DO NOT expose the battery to fire or high temperatures, it may explode
- DO NOT connect the metal terminals (+, -) to each other



Damaged Battery Warning

Should you notice any physical defects (e.g. the battery is bent out of shape after being dropped), or any unusual smells emanating from the notebook battery, shut your computer down immediately and contact your distributor/supplier. If the battery has been dropped we do not recommend using it any further, as even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire. It is recommended that you replace your computer battery every two years.

Battery FAQ

How do I completely discharge the battery?

Use the computer with battery power until it shuts down due to a low battery. Don't turn off the computer even if a message indicates the battery is critically low, just let the computer use up all of the battery power and shut down on its own.

- 1. Save and close all files and applications.
- 2. **Create a power plan** for discharging the battery and set all the options to **Never**.


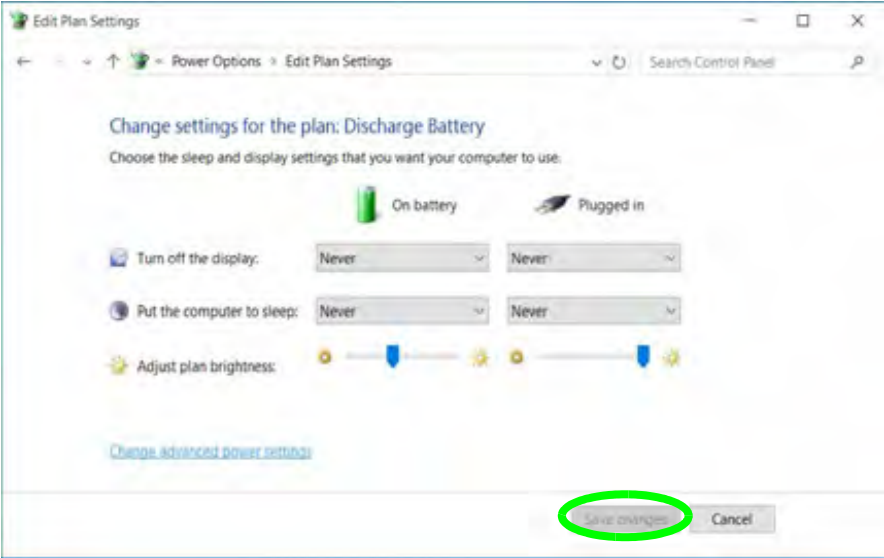


Figure 3 - 14
Power Plan Create

Power Management

3. Click **Change plan settings** (after creating it) and click **Change plan settings > Change advanced power settings**.

Figure 3 - 15
Change Plan Settings / Change Advanced Power Settings

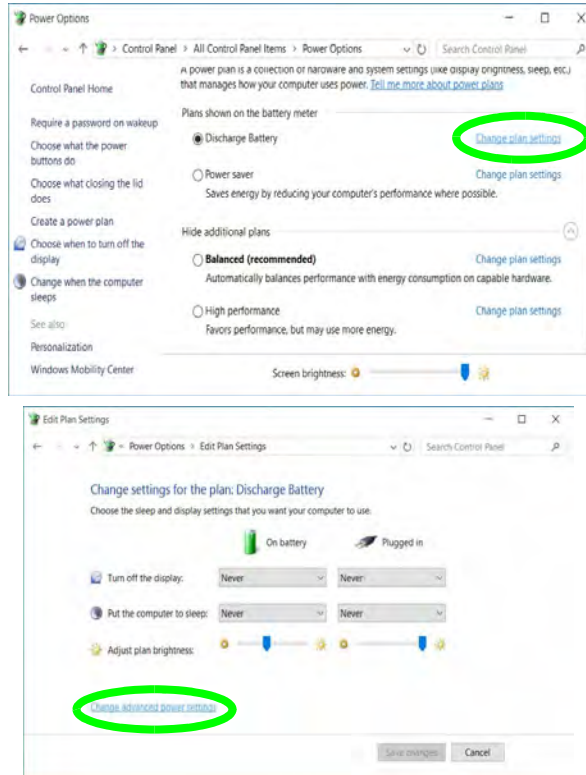

- 4. Scroll down to **Battery** and click **+** to expand the battery options.
- 5. Choose the options below (click **Yes** if a warning appears):

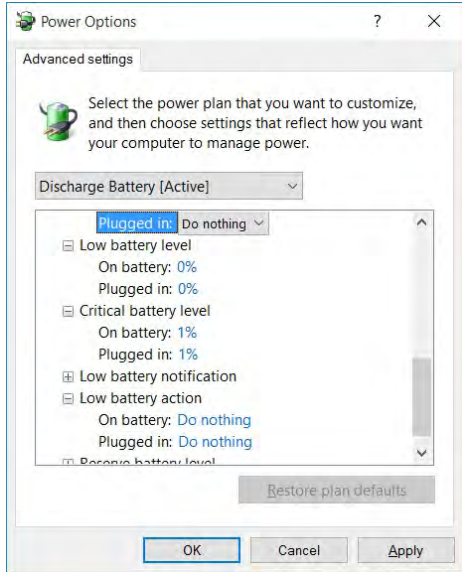


Figure 3 - 16
Power Options
Advanced Settings -
Battery

- Low battery levels = 0%
- Critical battery Levels = 1%
- Low battery action = Do Nothing
- Critical battery action (On battery) = Shut Down
- Critical battery action (Plugged in) = Do Nothing

How do I fully charge the battery?

When charging the battery, don't stop until the LED charging indicator light changes from orange to green.

How do I maintain the battery?

Completely discharge and charge the battery at least once every 30 days or after about 20 partial discharges.

Chapter 4: Drivers & Utilities

This chapter deals with installing the drivers and utilities essential to the operation or improvement of some of the computer's subsystems. The system takes advantage of some newer hardware components for which the latest versions of most available operating systems haven't built in drivers and utilities. Thus, some of the system components won't be auto-configured with an appropriate driver or utility during operating system installation. Instead, you need to manually install some system-required drivers and utilities.

What to Install

You will need to attach an external optical CD/DVD device drive to install the drivers from the *Device Drivers & Utilities + User's Manual* disc. The disc contains the drivers and utilities necessary for the proper operation of the computer. *Table 4 - 1, on page 4 - 4* lists what you need to install and **it is very important that the drivers are installed by the method outlined in this chapter, and in the order indicated.** Note that the information on the following pages is for *Windows 10 (64-bit) only*.

Module Driver Installation

The procedures for installing drivers for the **Wireless LAN, Bluetooth & WLAN Combo, Intel Technology, Sound Blaster Cinema** and **4G** modules are provided in "*Modules*" on page 6 - 1.



Driver Installation & Power

When installing drivers make sure your computer is powered by the AC/DC adapter connected to a working power source. Some drivers draw a significant amount of power during the installation procedure, and if the remaining battery capacity is not adequate this may cause the system to shut down and cause system problems (note that there is no safety issue involved here, and the battery will be rechargeable within 1 minute).

Driver Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click the message "**Tap to choose what happens with this disc.**"
3. Click **Run autorun.exe**.
4. Click **Install Drivers** (button), or **Option Drivers** (button) to access the **Optional** driver menu.



Figure 4 - 1 - Drivers Installer Screen 1

5. Check the driver installation order from **Table 4 - 1, on page 4 - 4** (the drivers must be installed in this order) which is the same as that listed in the *Drivers Installer* menu below.
6. Click to select the driver you wish to install, (you should note down the drivers as you install them).
7. Follow the instructions for each individual driver installation procedure as listed on the following pages.



Figure 4 - 2 - Install Drivers

Drivers & Utilities

4

Win 10 (64-bit) Driver	Page #	Win 10 (64-bit) - Optional Items	Page #
<i>Chipset</i>	<i>Page 4 - 7</i>	<i>Setting Up SATA RAID or AHCI Mode</i>	<i>Page 6 - 2</i>
<i>NVIDIA Video (VGA)</i>	<i>Page 4 - 7</i>	<i>Wireless LAN Module</i>	<i>Page 6 - 21</i>
<i>LAN</i>	<i>Page 4 - 7</i>	<i>Fingerprint Module Configuration</i>	<i>Page 6 - 37</i>
<i>Card Reader</i>	<i>Page 4 - 7</i>	<i>Bluetooth & WLAN Combo Module</i>	<i>Page 6 - 39</i>
<i>Touchpad</i>	<i>Page 4 - 8</i>	<i>Intel® Rapid Storage Technology</i> (required for hard disks in AHCI & RAID modes)	<i>Page 6 - 45</i>
<i>Airplane</i>	<i>Page 4 - 8</i>	<i>Intel® Smart Response Technology</i> (no driver installation required)	<i>Page 6 - 51</i>
<i>Control Center</i>	<i>Page 4 - 8</i>	<i>Sound Blaster Audio</i>	<i>Page 6 - 55</i>
<i>MEI Driver</i>	<i>Page 4 - 8</i>	<i>PC Camera</i> (no driver installation required)	<i>Page 6 - 65</i>
<i>Thunderbolt</i>	<i>Page 4 - 8</i>	<i>Trusted Platform Module</i> (no driver installation required)	<i>Page 6 - 70</i>
<i>Audio</i>	<i>Page 4 - 8</i>	<i>3G/4G Module</i> (no driver installation required)	<i>Page 6 - 76</i>

Table 4 - 1 - Driver Installation

Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules. However the Qualcomm Atheros (Combo) module WLAN driver will be installed with the standard LAN driver, but you will need to install the Bluetooth driver.

Manual Driver Installation

Click **Browse CD/DVD** (button) in the *Drivers Installer* application and browse to the executable file in the appropriate driver folder.

Windows Update

After installing all the drivers make sure you enable **Check for updates** (**Settings > Update & security > Check for updates**) in order to get all the latest security updates etc. (all updates will include the latest **hot-fixes** from Microsoft). See “*Windows Update*” on [page 4 - 9](#) for instructions.

Updating/Reinstalling Individual Drivers

If you wish to update/reinstall individual drivers it may be necessary to uninstall the original driver. To do this go to the **Control Panel** in the *Windows OS* and double-click the **Programs** icon (**Programs > Uninstall a program**). Click to select the driver (if it is not listed see below) and click **Uninstall**, and then follow the on screen prompts (it may be necessary to restart the computer). Reinstall the driver as outlined in this chapter.

If the driver is not listed in the **Programs and Features** menu:

1. Go to the **Control Panel**).
2. Double-click **Device Manager (Hardware and Sound > Devices and Printers > Device Manager)**.
3. Double-click the **device** you wish to update/reinstall the driver for (you may need to click “+” to expand the selection).
4. Click **Driver** (tab) and click the **Update Driver** or **Uninstall** button and follow the on screen prompts.

User Account Control

If a **User Account Control** prompt appears as part of the driver installation procedure, click **Continue** or **Allow**, and follow the installation procedure as directed.

Windows Security Message

If you receive a *Windows* security message as part of the driver installation process. Just click *“Install this driver software anyway”* or *“Install”* to continue the installation procedure.

You will receive this message in cases where the driver has been released after the version of *Windows* you are currently using. All the drivers provided will have already received certification for *Windows*.

New Hardware Found

If you see the message **“New Hardware Found”** during the installation procedure (**other than when outlined in the driver install procedure**), click **Cancel** to close the window, and follow the installation procedure.



Driver Installation General Guidelines

The driver installation procedure outlined in this Chapter (and in **Chapter 7 Options & Modules**), are accurate at the time of going to press.

Drivers are always subject to upgrade and revision so the exact procedure for certain drivers may differ slightly. As a general guide follow the default on screen instructions for each driver (e.g. **Next > Next > Finish**) unless you are an advanced user. In many cases a restart is required to install the driver.

Make sure any modules (e.g. WLAN or Bluetooth) are **ON (i.e. the system is not in Airplane Mode)** before installing the appropriate driver.

Driver Installation Procedure

Insert the *Device Drivers & Utilities + User's Manual* disc and click **Install Drivers** (button).

Chipset

1. Click **1.Install Chipset Driver > Yes**.
2. Click **Next > Accept > Install**.
3. Click **Finish**.
4. Click **Restart Now** to restart the computer.

NVIDIA Video (VGA)

1. Click **2.Install NVIDIA VGA Driver > Yes**.
2. Click **AGREE AND CONTINUE** (button) to accept the terms of the license agreement.
3. Click **Next**.
4. Click the **Close** to complete the installation.

Note: After installing the video driver go to the **Display/Display Settings** control panel to adjust the video settings to the highest resolution.

LAN

*Note: If the computer enters a deep sleep mode during installation, you will be prompted to plug in a network cable, and click **OK**, to continue installation. If a network cable is not available, restart the system and re-install the LAN driver.*

1. Click **3.Install LAN Driver > Yes**.
2. Select the language for the installation and click **Next**.
3. Click **Next > Next**.
4. Click the button to accept the license agreement and click **Next**.
5. Click **Finish > Yes** to restart the computer.
6. The **Killer Network Manager** app can be accessed from the desktop or Apps menu (see *“Killer Network Manager” on page 6 - 26*).

Card Reader

1. Click **4.Install Cardreader Driver > Yes**.
2. Click **Finish**.

Touchpad

1. Click **5.Install Touchpad Driver > Yes.**
2. Click **Next.**
3. Click the button to accept the license agreement and click **Next.**
4. Click **Finish > Restart Now** to restart the computer.

Airplane

Note: Do not use Update Driver in Device Manager to install the Airplane mode driver.

1. Click **6.Install Airplane Driver > Yes.**
2. Click **Next > Install.**
3. Click **Finish** to restart the computer.

Control Center

1. Click **7.Install Control Center AP > Yes.**
2. Click **Next > Install.**
3. Click **Finish** to restart your computer (see *“Flexikey® Application” on page 1 - 18* and *Appendix B*).

MEI Driver

1. Click **8.Install MEI Driver > Yes.**
2. Click **Next.**
3. Click the check box to accept the license and then click **Next.**
4. Click **Next.**
5. Click **Finish.**

Thunderbolt

1. Click **9.Install TBT Driver > Yes.**
2. Click the check box to accept the license and then click **Install.**
3. Click **Finish.**

Audio

1. Click **10. Install Audio Driver > Yes.**
2. Click **Next.**
3. Click **Finish** to restart the computer.

See overleaf.

After installing the audio driver the system will not return to the **Drivers Installer** screen. To install any of the optional drivers, eject the *Device Drivers & Utilities + User's Manual* disc and then reinsert it (or double-click the disc icon in My Computer), and click **Option Drivers** (button) to access the optional driver menu.

It is recommended that you install the **Sound Blaster Audio** application (see "*Sound Blaster Audio*" on [page 6 - 55](#)) and **Intel Rapid Storage Technology** driver (see "*Intel® Rapid Storage Technology*" on [page 6 - 45](#) - required for AHCI & RAID mode).



Windows Update

After installing all the drivers make sure you enable **Check for updates** in order to get all the latest security updates etc. (all updates will include the latest **hotfixes** from Microsoft).

To enable **Windows Update** make sure you are **connected to the internet**:

1. Click the **Start Menu** and select the **Settings** item.
2. Click **Update & Security**.
3. Click **Check for updates** (Windows Update).
4. The computer will now check for updates (you need to be connected to the internet).
5. The system will install any available updates.

Optional Drivers

See the pages indicated in *Table 4 - 1, on page 4 - 4* for the driver installation procedures for any modules included in your purchase option.

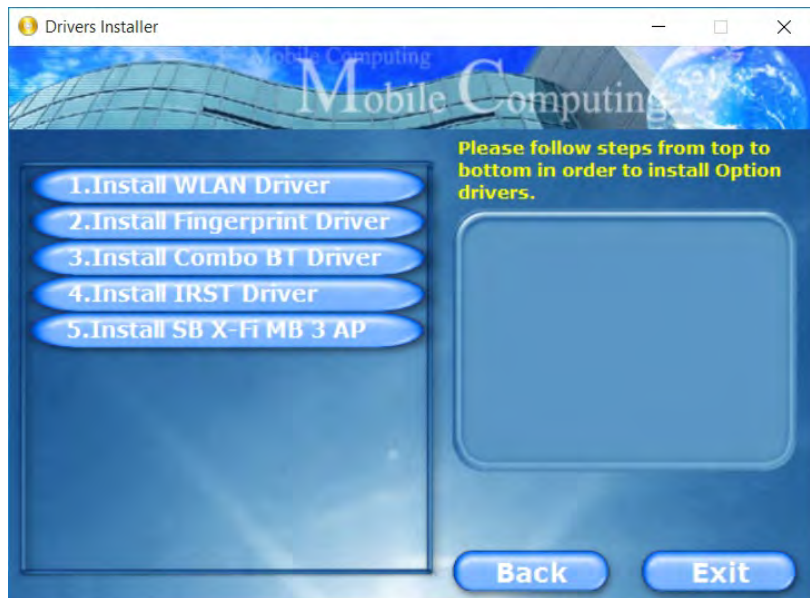


Figure 4 - 3 - Optional Drivers Installer Screen

Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules.

Chapter 5: BIOS Utilities

Overview

This chapter gives a brief introduction to the computer's built-in software:

Diagnostics: The **POST** (Power-On Self Test)

Configuration: The *Setup* utility

If your computer has never been set up, or you are making important changes to the system (e.g. hard disk setup), then you should review this chapter first and note the original settings found in *Setup*. Even if you are a beginner, keep a record of the settings you find and any changes you make. This information could be useful if your system ever needs servicing.

There is one general rule: *Don't make any changes unless you are sure of what you are doing*. Many of the settings are required by the system, and changing them could cause it to become unstable or worse. If you have any doubts, consult your service representative.



BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.



BIOS Settings Warning

Incorrect settings can cause your system to malfunction. To correct mistakes, return to *Setup* and restore the **Optimized Defaults** with <F3>.

UEFI Boot & POST

When UEFI Boot is enabled, then the prompts to **press F2 or F7** will **not appear**. However you can still press F2 to enter the setup, or F7 to choose the preferred boot device, if you press the key immediately the system boots up.

The Power-On Self Test (POST)

If you enable the **Boot-time Diagnostic Screen** in the Setup Utility, each time you turn on the computer the system takes a few seconds to conduct a **POST**, including a quick test of the on-board RAM (memory).

As the **POST** proceeds, the computer will tell you if there is anything wrong. If there is a problem that prevents the system from booting, it will display a system summary and prompt you to run *Setup*.

If there are no problems, the *Setup* prompt will disappear and the system will load the operating system. Once that starts, you can't get into *Setup* without rebooting.

Failing the POST

Errors can be detected during the **POST**. There are two categories, “fatal” and “non-fatal”.

Fatal Errors

These stop the boot process and usually indicate there is something seriously wrong with your system. Take the computer to your service representative or authorized distributor/supplier as soon as possible.

Non-Fatal Errors

This kind of error still allows you to boot. You will get a message identifying the problem (make a note of this message!) and you can then press **F7** (the **F7** on screen will be highlighted to illustrate that the system is processing the request) for boot options.

Press **F2** (give the system a few seconds to enter *Setup*; the **F2** on screen will be highlighted to illustrate that the system is processing the request) to run the **Setup** program and try to correct the problem. If you still get an error message after you change the setting, or if the “cure” seems even worse, call for help.



BIOS Settings Warning

Incorrect settings can cause your system to malfunction. To correct mistakes, return to *Setup* and restore the **Optimized Defaults** with **<F3>**.

The Setup Utility

The **Aptio Setup Utility** tells the system how to configure itself and manage basic features and subsystems (e.g. port configuration).

Entering Setup

To enter *Setup*, turn on the computer and press **F2** (give the system a few seconds to enter *Setup*; the **F2** on screen will be highlighted to illustrate that the system is processing the request) during the **POST** (or press **F7** for boot options). If you get a “Keyboard Error”, (usually because you pressed **F2** too quickly) just press **F2** again.

If the computer is already on, reboot using the **Ctrl + Alt + Delete** combination and then hold down **F2** when prompted. The *Setup* main menu will appear.

To see the boot options press **F7**.

Setup Screens

The following pages contain additional advice on portions of the *Setup*. Along the top of the screen is a menu bar with menu headings. When you select a heading, a new screen appears. Scroll through the features listed on each screen to make changes to *Setup*.

Instructions on how to navigate each screen are in the box at the bottom right side of the screen.

```
→←:Select Screen
↑↓:Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F3: Optimized Defaults
F4: Save Changes & Exit
ESC: Exit
```

If these tools are confusing, press **F1** to call up a **General Help** screen, and then use the arrow keys to scroll up or down the page.

The **Item Specific Help** on the upper right side of each screen explains the highlighted item and has useful messages about its options.

If you see an arrow ► next to an item, press **Enter** to go to a sub-menu on that subject. The sub-menu screen that appears has a similar layout, but the **Enter** key may execute a command.




Setup Menus

The **Setup** menus shown in this section are for **reference** only. Your computer's menus will indicate the configuration appropriate for your model and options.

Figure 5 - 1
Navigation Menu

Main Menu

Figure 5 - 2
Main Menu

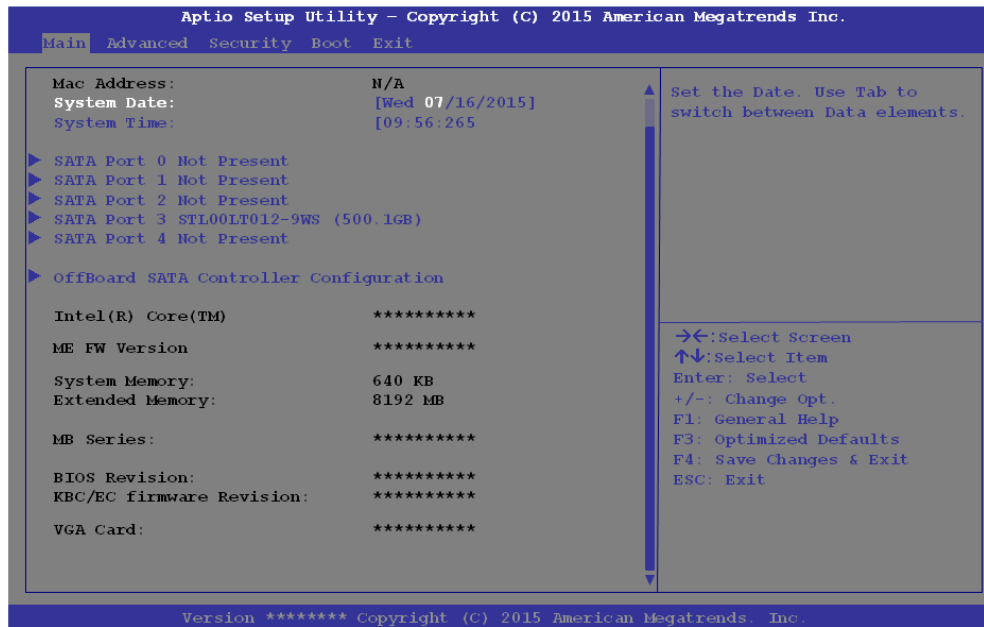

System Time & Date (Main Menu)

The hour setting uses the 24-hour system (i.e., 00 = midnight; 13 = 1 pm). If you can change the date and time settings in your operating system, you will also change these settings. Some applications may also alter data files to reflect these changes.

SATA Port # (Main Menu)

Pressing **Enter** opens the sub-menu to show the configuration of a optical Device/HDD on the computer's SATA Ports.

OffBoard SATA Controller Configuration (Main Menu)

Pressing **Enter** opens the sub-menu to show the configuration of any devices on the off board SATA Controller if applicable.

System/Extended Memory (Main Menu)

This item contains information on the system memory, and is not user configurable. The system will auto detect the amount of memory installed.

MB Series / BIOS Revision / KBC/EC firmware Revision/Mac Address (Main Menu)

This item contains information on the BIOS version, and the identifier address for the device on a network, and is not user configurable.

Advanced Menu

Figure 5 - 3
Advanced Menu



Advanced Chipset Control (Advanced Menu)

The sub-menu here allows you to change the settings for the **GPU Performance**, **FlexiCharger** and to **DDI Control** it as required.


GPU Performance Scaling (Advanced Menu > Advanced Chipset Control)

You can enable/disable NVIDIA GPU Performance scaling from this menu. The NVIDIA Card does the scaling if this option is on, and has less latency than the Intel GPU. This can be useful if you play games etc.

FlexiCharger (Advanced Menu > Advanced Chipset Control)

The sub-menu here allows you to enable/disable the **FlexiCharger**. The FlexiCharger may be set to automatically start charging your battery when the battery reaches a certain capacity level (e.g. you could start the battery charge level at 40%).


See the sidebar warning for information on running the FlexiCharger for an extended period as this is not recommended.



**FlexiCharger
Warning**

If you leave the FlexiCharger continuously "Enabled" for a period of three months or more, the battery meter's reading accuracy will deteriorate.

To reset this, set the FlexiCharger to "Disabled", and then allow the battery to completely discharge (see "**Battery FAQ**" on page 3 - 21) before enabling the function again.

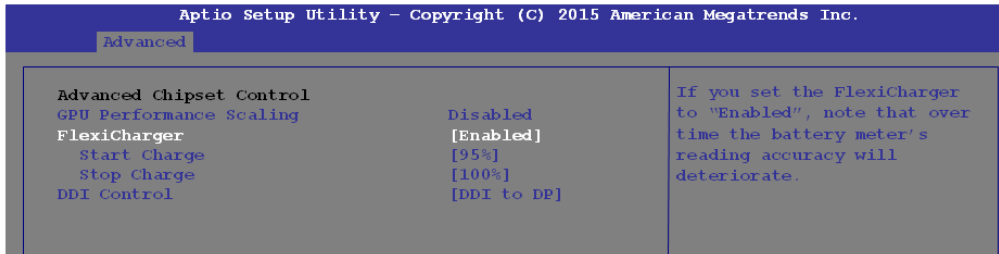

DDI Control (Advanced Menu > Advanced Chipset Control)

You can change DDI (Display Digital Interface) control from DDI to DP (Display-Port) or DDI to TBT (Thunderbolt) here to support external displays connected to these ports.

Figure 5 - 4
Advanced Chipset Control > FlexiCharger



Thunderbolt Port Set for Display

When a display only connection for the Thunderbolt port is enabled (see overleaf) then DisplayPort 2 (6 in Figure 1 - 13) will be turned off (see page 1 - 25).

Intel(R) Thunderbolt Technology

(Advanced Menu > Intel(R) Thunderbolt)

You can enable/disable the Intel(R) Thunderbolt port support from this menu (see over). The Thunderbolt port is enabled by default as a data port in Legacy Mode.

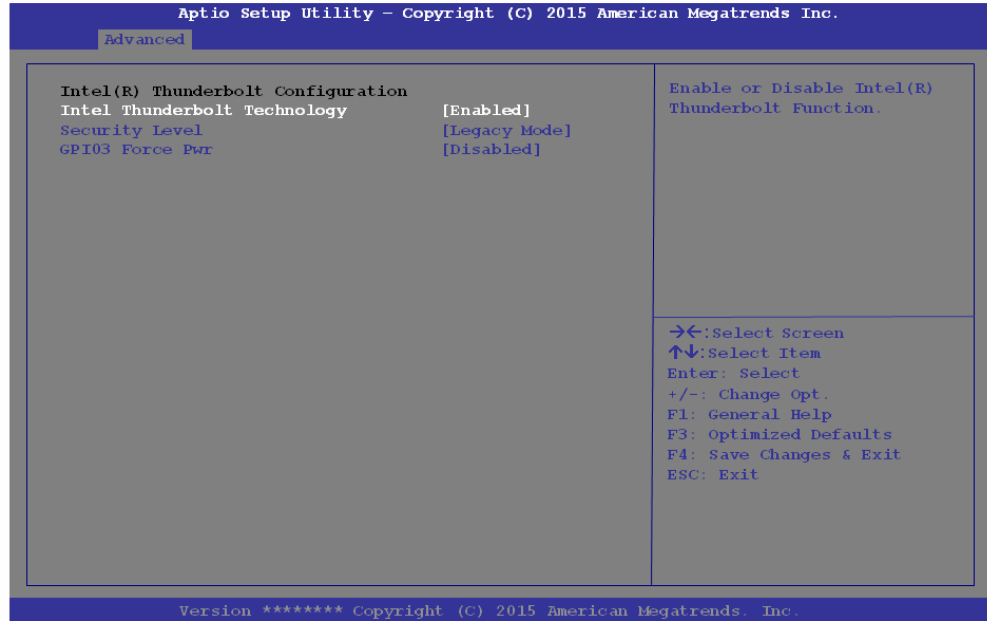


Figure 5 - 5
Advanced Chipset Control
(Advanced Menu)

Security Level

(Advanced Menu > Intel(R) Thunderbolt)

You can set the security level to **Legacy Mode**, **Unique ID**, **One time saved key** or **DP++** only.

- **Legacy mode** will allow any devices to be connected.
- You can set the port to allow only devices with a **Unique ID** to connect. If the unique ID is not located then you will be asked to confirm the connection.
- If you set a **one time saved key** only then the host will write a unique ID to a device to ensure only approved devices can connect.
- Setting the port to **DP++** will only allow display devices to connect to the port, and no data connections will be allowed. **If you want to use the Thunderbolt port for display then you must set this as the security level, and DisplayPort2 (6 in Figure 1 - 13 on page 1 - 21) will then be turned off.**

Thunderbolt Firmware Update

(Advanced Menu > Intel(R) Thunderbolt)

Enable this item when you want to update the Thunderbolt Firmware. **This should only be enabled when you are updating the Thunderbolt firmware, and otherwise should remain disabled.**



Thunderbolt Firmware Update

This should be enabled when you want to update the Thunderbolt firmware.

After updating the Thunderbolt firmware you should disable this item, and it should remain disabled except in cases when you need to update the firmware again in the future.



SATA Mode Selection

If you have installed the **Windows** OS with either **AHCI** or **RAID** mode enabled, **DO NOT** disable the set mode (if you wish to disable the set mode you will need to reinstall the **Windows** OS).

Note the following:

RAID mode with UEFI disabled (legacy mode) does not support PCIe SSDs.

AHCI mode with the IRST driver installed does not support PCIe SSDs.

SATA Mode (Advanced Menu)

You can configure SATA (Serial ATA) control to operate in **AHCI** (Advanced Host Controller Interface) or **RAID** (Redundant Array of Independent disks) modes from this menu. The **SATA Mode** should be set **BEFORE installing an operating system**, and after you have backed up all necessary files and data (see sidebar). See *“Setting Up SATA RAID or AHCI Mode” on page 6 - 2* for details. Make sure you install the **Intel Rapid Storage Technology application** if you have set the SATA Mode to **RAID**, or to **AHCI** (see *“IRST Driver Installation” on page 6 - 45*).

If you wish to change your SATA mode to/from AHCI/RAID mode you will receive a message (see overleaf) to notify you that doing so may prevent your operating system from booting, and may require a reinstall of the OS. If you do wish to change the SATA mode then backup any necessary data on your hard disk(s) as you will need wipe the disks clean in order to prevent system problems.

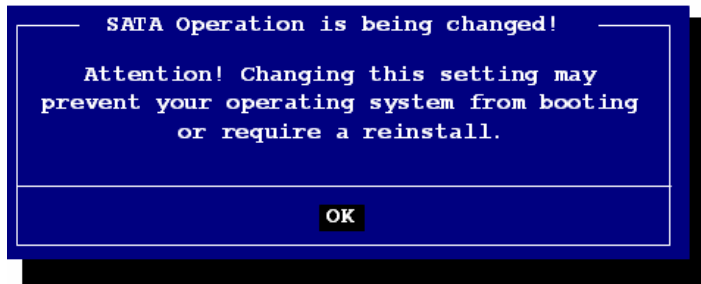


Figure 5 - 6

SATA Mode Change Notification

Boot Logo (Advanced Menu)

Use this menu item to enable/disable the **Boot Logo** screen at system startup **if you have not enabled UEFI Boot**. If you disable the **Boot Logo** you will not see the **F2 Enter Setup** or **F7 Boot Options** prompts on the screen, however you can still press these keys, while the boot screen is displayed, to perform the Enter Setup or Boot Option functions.

Power On Boot Beep (Advanced Menu)

Use this menu item to enable/disable the beep as the computer starts up.

Battery Low Alarm Beep (Advanced Menu)

Use this menu item to enable/disable the battery low alarm beep.

Figure 5 - 7
**SATA Mode Change
Notification**

Security Menu




Security Menu

The changes you make here affect the access to the **Setup** utility itself, and also access to your machine as it boots up after you turn it on. These settings do not affect your machine or network passwords which will be set in your software OS.

5

Figure 5 - 8 Security Menu

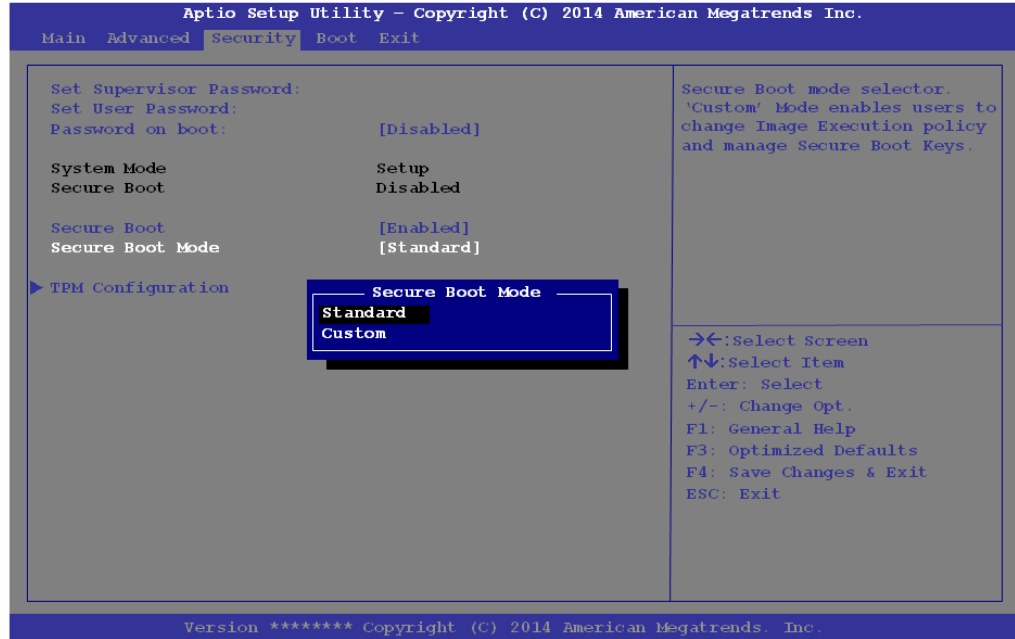

Set Supervisor Password (Security Menu)

You can set a password for access to the **Aptio Setup Utility**. This will not affect access to the computer OS (only the **Aptio Setup Utility**).

Note: To clear existing passwords press **Enter** and type the existing password, then press **Enter** for the new password (without typing any password entry) and **Enter** again to confirm the password clearance.

Note: *You can only set the user password after you have set the supervisor password.*

Set User Password (Security Menu)

You can set a password for user mode access to the **Aptio Setup Utility**. This will not affect access to the computer OS, (only the *Setup* utility) unless you choose to set a **Password on Boot** (see below). Many menu items in the **Aptio Setup Utility** cannot be modified in user mode.

Note: *You can only set the user password after you have set the supervisor password.*

Password on boot: (Security Menu)

Specify whether or not a password should be entered to boot the computer (**you may only set a password on boot if a supervisor password is enabled**). If “*Enabled*” is selected, only users who enter a correct password can boot the system (**see the warning in the sidebar**). The default setting is “*Disabled*”.



Password Warning

If you set a boot password (Password on boot is “Enabled”), **NEVER** forget your password.

The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

Secure Boot Control (Security Menu)

Secure Boot Control prevents unauthorized operating systems and software from loading during the startup process. **Secure Boot** is available as a menu option if you have enabled **UEFI Boot** (see “*Boot Menu*” on page 5 - 18). Enabling Secure Boot will bring up the **Secure Boot Mode** menu to enable you to configure Secure Boot as **Standard** (with a fixed secure boot policy), or **Custom** (which enables you to make changes to the **Key Management** database).

TPM Configuration (Security Menu)

This sub-menu will allow you to enable/disable Trusted Platform Module (TPM) support, and to configure the Security Device Support. Select **TPM Configuration** and press Enter to access the sub-menu. Press Enter to access the **Security Device Support** menu and select **Enable** to support TPM (see *“Trusted Platform Module” on page 6 - 70* for details).

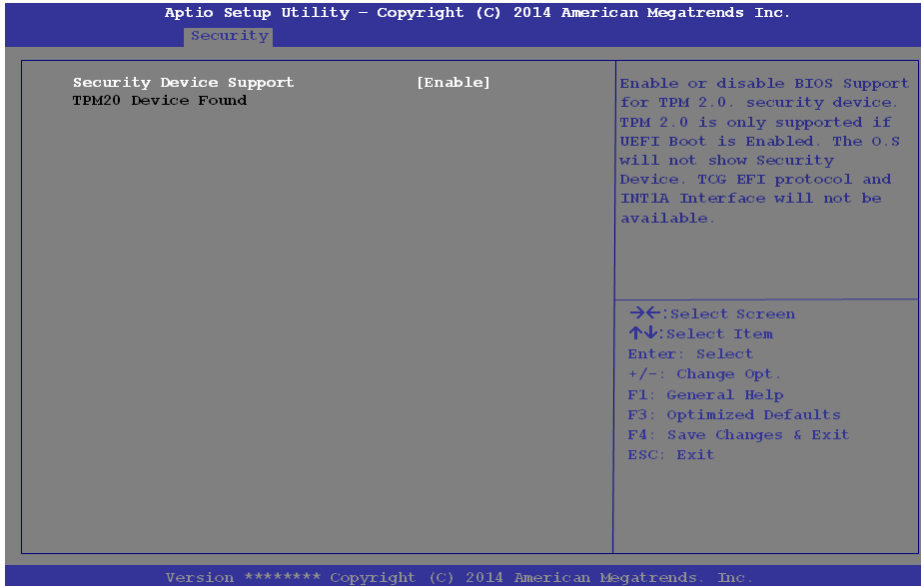


Figure 5 - 9
Security Device Support

Boot Menu

Figure 5 - 10
Boot Menu


5



BIOS Screens

Note that the BIOS screens pictured on these pages are intended for guidance in setting up your system's BIOS.

BIOS versions are subject to constant change and revision, therefore your computer's actual screens may appear slightly different from those pictured on these pages.

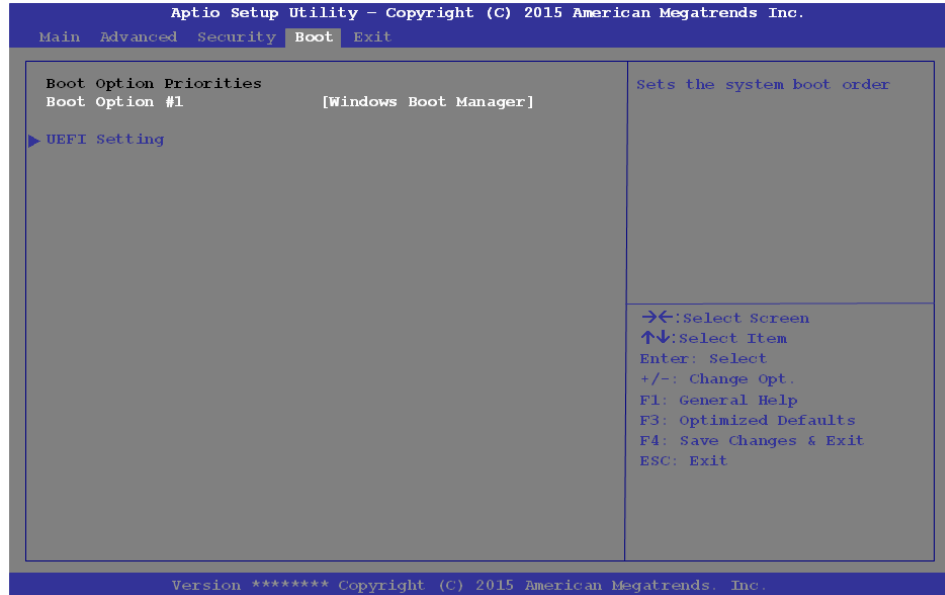

When you turn the computer on it will look for an operating system (e.g. *Windows 7*) from the devices listed in this menu, and **in this priority order**. If it cannot find the operating system on that device, it will try to load it from the next device in the order specified in the **Boot Option Priorities**.

Boot Option Priorities (Boot Menu)

Press Enter to select the Boot Option # and use the arrow keys to select any device in order to move its boot priority up and down the list (the selected device will be highlighted in white).

UEFI Boot (Boot Menu)

Enable/disable UEFI Boot from this menu. The Unified Extensible Firmware Interface (UEFI) specification provides a clean interface between operating systems and platform firmware at boot time. In contrast to BIOS, UEFI defines a set of standard boot and runtime services. The **Network Stack** item will be enabled as an option under UEFI Boot.

Launch CSM (Boot Menu)

Launching CSM allows for traditional operating systems, which do not support UEFI, to load. **Do not Enable this item for Windows 8.1 operating systems.** When **Secure Boot** (“*Secure Boot Control (Security Menu)*” on page 5 - 16) is **Enabled** this item will not be selectable.

Exit Menu

Figure 5 - 11
Exit Menu



Click ***Save Changes and Reset*** to save all changes made. Choosing to ***Discard Changes***, or ***Exit Discarding Changes***, will wipe out any changes you have made to the ***Setup***. You can also choose to restore the original ***Setup*** defaults that will return the ***Setup*** to its original state, and erase any previous changes you have made in a previous session.

Chapter 6: Modules

Overview

This chapter contains the information on the various modules (some of which are **optional**) which may come with your computer, depending on the configuration purchased. If you are unsure please contact your service representative.

The chapter includes information on the following:

- Setting Up SATA RAID or AHCI Mode
- Wireless LAN Module
- Killer Network Manager
- Fingerprint Reader Module
- Bluetooth & WLAN Combo Module
- Intel® Rapid Storage Technology
- Sound Blaster Audio
- PC Camera
- Trusted Platform Module
- 3G/4G Module



RAID Hard Disks/ Solid State Drives

All HDDs/SSDs in a RAID should be identical (the same size and brand) in order to prevent unexpected system behavior.

SATA Mode Selection

The SATA mode selection should be made **before installing your operating system**.

DO NOT change your selected SATA mode unless you intend to re-install your operating system. Make sure you have backed up all your data before doing so.

Setting Up SATA RAID or AHCI Mode

AHCI Mode

Advanced Host Controller Interface (AHCI) is an interface specification that allows the storage driver to enable advanced serial ATA features such as Native Command Queuing (for maximum hard disk efficiency and performance). AHCI mode can be supported by one or two hard disks/solid state drives. Make sure you install the **Intel® Rapid Storage Technology** application if you have set up your HDDs/SSDs in **AHCI** mode (see *“Intel® Rapid Storage Technology” on page 6 - 45*)

RAID

To configure your RAID (Redundant Array of Independent Disks) system in Striping (RAID 0) or Mirroring (RAID 1) modes (see *Table 6 - 1, on page 6 - 3*) you will require **at least two identical** (see sidebar) HDDs/SSDs.

Intel® Rapid Storage Technology Application

Make sure you install the **Intel® Rapid Storage Technology** application if you have set up your HDDs/SSDs in **RAID** mode (see *“Intel® Rapid Storage Technology” on page 6 - 45*).

Note the following:

- **RAID mode with UEFI disabled (legacy mode) does not support PCIe SSDs.**
- **AHCI mode with the IRST driver installed does not support PCIe SSDs.**

RAID Level	Description
RAID 0	Identical drives reading and writing data in parallel to increase performance . RAID 0 implements a striped disk array and the data is broken into blocks and each block is written to a separate disk drive.
RAID 1	Identical drives in a mirrored configuration used to protect data . Should a drive that is part of a mirrored array fail, the mirrored drive (which contains identical data) will handle all the data. When a new replacement drive is installed, data to the new drive is rebuilt from the mirrored drive to restore fault tolerance.

Table 6 - 1
RAID Levels



Array Types

A **Mirrored Array (RAID 1)** provides full data protection, as data can simply be copied from a healthy disk to a replacement for any failed disk.

A **Striped Array (RAID 0)** is **NOT** fault-tolerant. The failure of one drive will result in the loss of all data in the array. It is designed to increase disk performance by spreading the I/O load across the channels and drives.



SATA Mode Selection

The SATA mode selection should be made **before installing your operating system**.

DO NOT change your selected SATA mode unless you intend to reinstall your operating system. Make sure you have backed up all your data before doing so.

Note the following:

- **RAID mode with UEFI disabled (legacy mode) does not support PCIe SSDs.**
- **AHCI mode with the IRST driver installed does not support PCIe SSDs.**

RAID Hard Disks/Solid State Drives

All hard disks/solid state drives in a RAID should be identical (the same size and brand) in order to prevent unexpected system behavior.

SATA RAID Setup Procedure

The actual procedure for setting up a RAID system will depend on whether or not your system has UEFI enabled or not, and if you are using 2 * PCIE SSDs with the *Windows 10 OS* installed on one of them.

See below and follow the procedure that corresponds to your system setup:

- *“SATA RAID Setup - UEFI Enabled” on page 6 - 5*
- *“SATA RAID Setup (2 * PCIE SSDs) - UEFI Enabled” on page 6 - 10*
- *“SATA RAID Setup - UEFI Disabled” on page 6 - 16*

No matter which system setup you use make sure you install the **Intel Rapid Storage Technology driver** - see *“IRST Driver Installation” on page 6 - 45*).

Run the **Intel® Rapid Storage Technology application** to manage your RAID volume as instructed in *“Intel® Rapid Storage Technology for RAID Systems” on page 6 - 46*.

See also *“Deleting a RAID (Windows 10)” on page 6 - 20* (however **backup up any necessary files and data before deleting a RAID**, as doing so will result in the loss of all data on the RAID volumes).

SATA RAID Setup - UEFI Enabled

To configure your RAID (Redundant Array of Independent Disks) system in Striping (RAID 0) or Mirroring (RAID 1) modes (see *Table 6 - 1, on page 6 - 3*) you will require **two identical** hard disks or solid state drives.

You need to setup a RAID before installing your *Windows 10* operating system, and you will need to prepare the following in order to do so.

-
- The *Microsoft Windows 10 OS DVD*.
 - An attached external DVD drive.
 - A hard disk installed in the Primary HDD bay and a **second** (identical) hard disk installed in the Secondary HDD bay.

OR

Two Identical solid state drives.

- The *Device Drivers & Utilities + User's Manual* disc.

-
1. Start-up your notebook computer and press <F2> to enter the **BIOS**.
 2. Go to the **Boot** menu, select **UEFI Setting** and press <Enter> (see page **5 - 18**).
 3. Set **UEFI Boot** to "**Enabled**".
 4. Press <Esc> to exit the menu and go to the **Advanced** menu.
 5. Select **SATA Mode** (see page **5 - 12**), press <Enter> and select "**RAID Mode**".
 6. Press <F4> and <Yes> to "**Save Changes and Reset**".
 7. As the computer restarts press <F2> to enter the **BIOS** again.
 8. Go to **Intel(R) Rapid Storage Technology (Advanced** menu) and press <Enter>.

Modules

Figure 6 - 1
Create RAID Volume
(Advanced > Intel(R)
Rapid Storage
Technology)

9. Select **Create RAID Volume** and press <Enter>.



10. You can now setup your RAID volume using any two installed disks.
11. Go to **Name:** and press <Enter>.
12. Type a name of your choice for your RAID volume and press <Enter>.

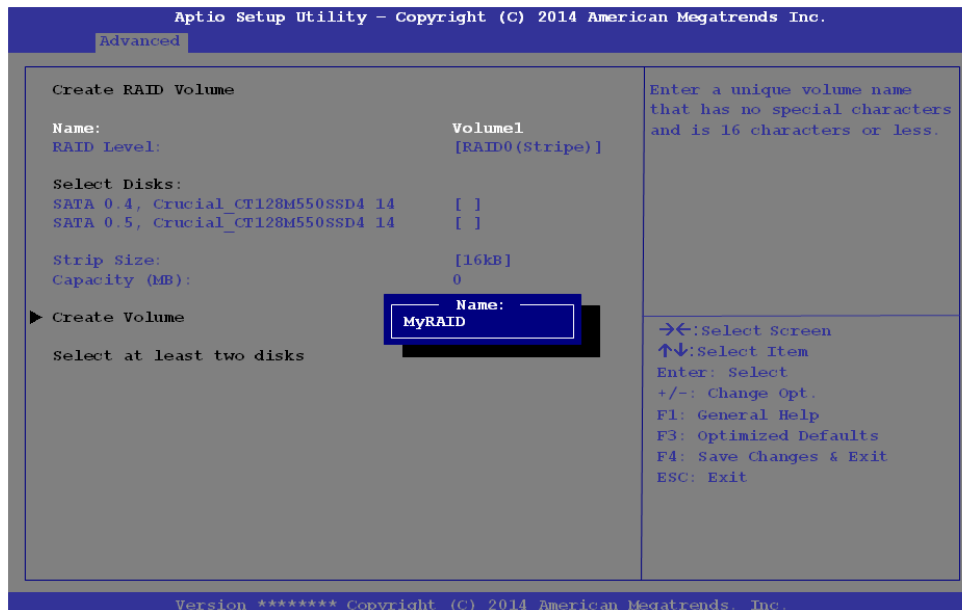


Figure 6 - 2
Name the RAID
Volume (Advanced
> Intel(R) Rapid
Storage
Technology)

13. Go to **RAID Level:** and press <Enter>.
14. Choose the RAID Level required (see *Table 6 - 1, on page 6 - 3* for details) and press <Enter>.
 - **RAID0 (Stripe)**
 - **RAID1 (Mirror)**
15. Go to any of the disks listed under **Select Disks:** and select a disk name and press <Enter>.
16. Move the cursor down (use the arrow keys) onto to **X** (o select the disk required and press <Enter>).

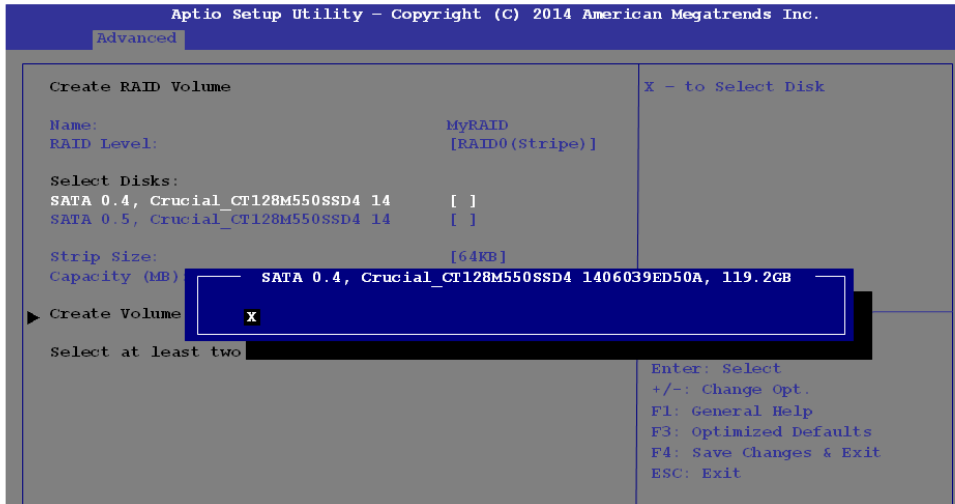


Figure 6 - 3
Select Disks
 (Advanced > Intel(R)
 Rapid Storage
 Technology)

Modules

17. You should select two identical hard disks/SSDs to form your RAID volume.
18. If you have selected **RAID0 (Stripe)** then you can adjust the “**Strip Size**” to your requirements (*it is recommended that you set the “Strip Size” to 128KB*).
19. Go to **Create Volume** and press <Enter>.
20. The RAID volume will then be created and the RAID information will be displayed under **Intel(R) Rapid Storage Technology** (in the **Advanced** menu).

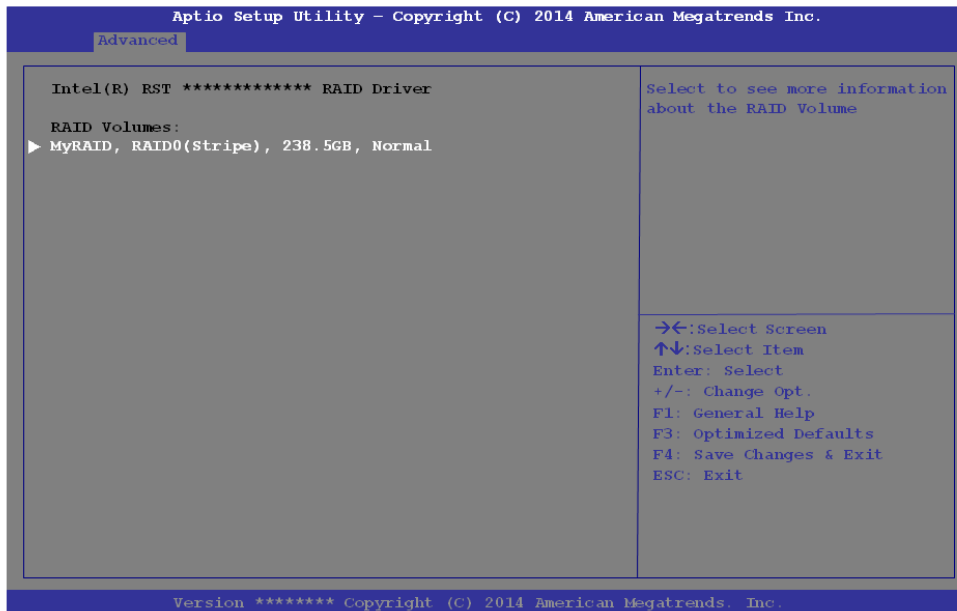


Figure 6 - 4
**Created RAID
Information
(Advanced > Intel(R)
Rapid Storage
Technology)**

21. Press <Esc> to exit the menu.

22. Press <F4> and <Yes> to **“Save Changes and Reset”**, however **ensure that the condition in the bulleted point below is met** before doing so.
 - Make sure the *Windows 10* OS DVD is in the attached DVD drive, as the computer starts up it will automatically boot from the *Windows 10* OS DVD (you will be prompted to press a key to boot from the DVD).
23. Press <F7> as the computer starts up to bring up the boot device menu.
24. Select the DVD drive containing the *Windows 10* OS DVD and press <Enter>.
25. Press a key at system startup to begin installing *Windows* from your *Microsoft Windows 10* disc.
26. Click **Next > Install Now** to continue installing the operating system as normal (see your *Windows* documentation if you need help on installing the *Windows* OS).
27. Follow the on-screen instructions to install the *Windows 10* operating system.
28. Install the *Windows* drivers from the *Device Drivers & Utilities + User’s Manual* disc as per [Table 4 - 1, on page 4 - 4](#) (make sure you install the **Intel Rapid Storage Technology driver** - see overleaf).
29. Run the **Intel® Rapid Storage Technology** application to manage your RAID volume as instructed in [“Intel® Rapid Storage Technology for RAID Systems” on page 6 - 46](#).

SATA RAID Setup (2 * PCIE SSDs) - UEFI Enabled

If you are setting up a RAID using 2 * PCIE SSDs, with the *Windows 10 OS* installed on one of them, then follow the setup procedure below:

To configure your RAID (Redundant Array of Independent Disks) system in Striping (RAID 0) or Mirroring (RAID 1) modes (see *Table 6 - 1, on page 6 - 3*) you will require **two identical** solid state drives.

You need to setup a RAID before installing your *Windows 10* operating system, and you will need to prepare the following in order to do so.

-
- The *Microsoft Windows 10 OS DVD*.
 - An connected external DVD drive.
 - Two Identical PCie solid state drives.
 - The *Device Drivers & Utilities + User's Manual* disc.
 - A USB flash drive.
 - An operable computer (to copy files from the *Device Drivers & Utilities + User's Manual* disc to the USB flash drive).
-

Before setting up the system you will need to copy a driver folder to a USB flash drive. This driver folder is included on the *Device Drivers & Utilities + User's Manual disc* but you will need to go to an operable computer and copy the folder to a USB Flash drive.

1. Go to the operable computer and insert a USB Flash drive.


2. Insert the **Device Drivers & Utilities + User's Manual** disc into the CD/DVD drive of the operable computer.
3. Copy the **f6flpy-x64** folder from the location below (D: denotes your DVD drive) on the **Device Drivers & Utilities + User's Manual** disc to the USB flash drive or external USB hard disk.
 - **D:\Options\RAID\f6flpy-x64**
4. Start-up your notebook computer and press <F2> to enter the **BIOS**.
5. Go to the **Boot** menu, select **UEFI Setting** and press <Enter> (see page **5 - 18**).
6. Set **UEFI Boot** to "**Enabled**".
7. Press <Esc> to exit the menu and go to the **Advanced** menu.
8. Select **SATA Mode** (see page **5 - 12**), press <Enter> and select "**RAID Mode**".
9. Press <F4> and <Yes> to "**Save Changes and Reset**".
10. As the computer restarts press <F2> to enter the **BIOS** again.
11. Go to **Intel(R) Rapid Storage Technology (Advanced)** menu) and press <Enter>.
12. Select **Create RAID Volume** and press <Enter>.



13. You can now setup your RAID volume using any two installed disks.
14. Go to **Name:** and press <Enter>.
15. Type a name of your choice for your RAID volume and press <Enter>.

Figure 6 - 5
Create RAID Volume
(Advanced > Intel(R)
Rapid Storage
Technology)

Figure 6 - 6
Name the RAID Volume (Advanced > Intel(R) Rapid Storage Technology)

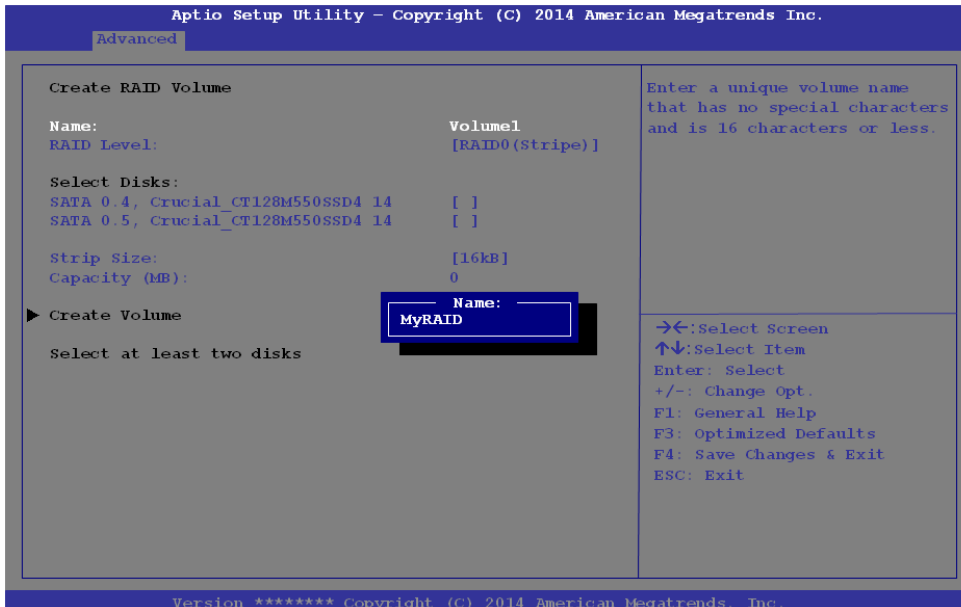

16. Go to **RAID Level:** and press <Enter>.
 17. Choose the RAID Level required (see [Table 6 - 1, on page 6 - 3](#) for details) and press <Enter>.
- **RAID0 (Stripe)**
 - **RAID1 (Mirror)**

18. Go to any of the disks listed under **Select Disks:** and select a disk name and press <Enter>.
19. Move the cursor down (use the arrow keys) onto to **X** (o select the disk required and press <Enter>.


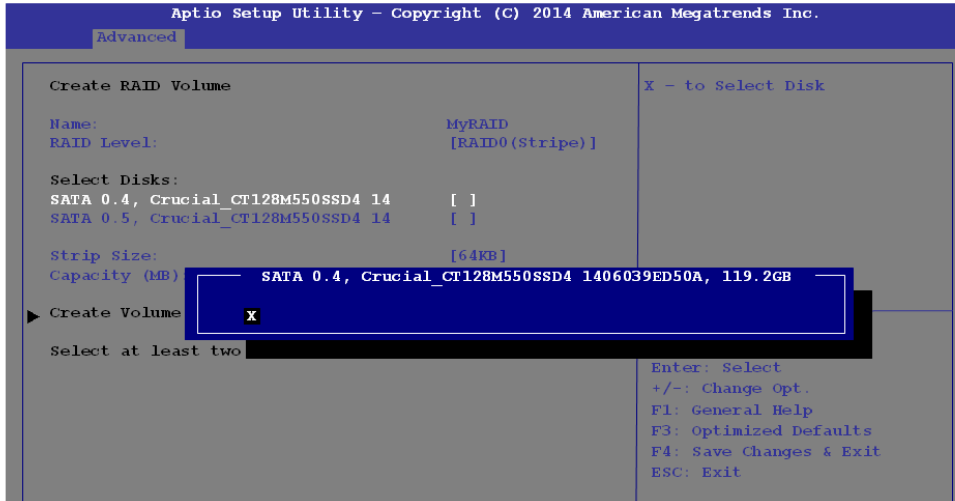


Figure 6 - 7
Select Disks
 (Advanced > Intel(R)
 Rapid Storage
 Technology)

20. You should select two identical hard disks/SSDs to form your RAID volume.
21. If you have selected **RAID0 (Stripe)** then you can adjust the “**Strip Size**” to your requirements (*it is recommended that you set the “Strip Size” to 128KB*).
22. Go to **Create Volume** and press <Enter>.

23. The RAID volume will then be created and the RAID information will be displayed under **Intel(R) Rapid Storage Technology** (in the **Advanced** menu).

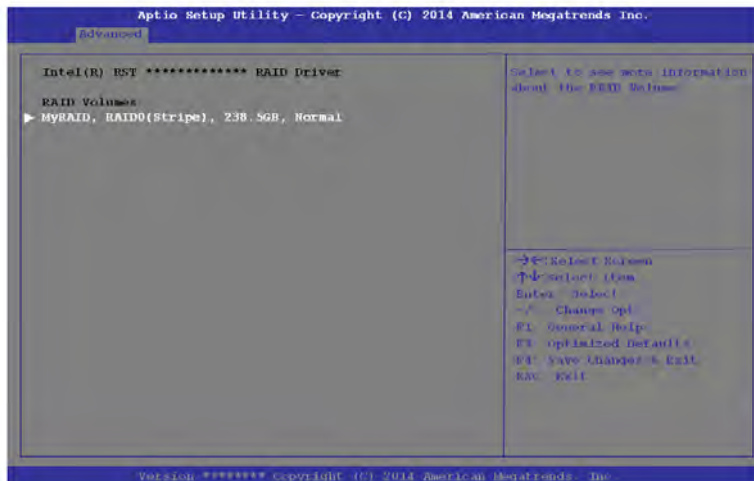

6
Figure 6 - 8
Created RAID
Information
(Advanced > Intel(R)
Rapid Storage
Technology)

24. Press <Esc> to exit the menu.
25. Press <F4> and <Yes> to “**Save Changes and Reset**”, however **ensure that the condition in the bulleted points below are met** before doing so.
- Make sure the **Windows 10** OS DVD is in the attached DVD drive, as the computer starts up it will automatically boot from the **Windows 10** OS DVD (you will be prompted to press a key to boot from the DVD).
 - Make sure your USB Flash drive is attached to one of the computer’s USB ports.
26. Press <F7> as the computer starts up to bring up the boot device menu.

27. Select the DVD drive containing the **Windows 10** OS DVD and press <Enter>.
28. Press a key at system startup to begin installing **Windows** from your **Microsoft Windows 10** disc.
29. Click **Next > Install Now** to continue installing the operating system as normal (see your **Windows** documentation if you need help on installing the **Windows** OS).
30. A prompt will appear to ask you to **Load Driver**.
31. Click **Browse** and browse to the location you copied the files to on your USB Flash drive or external USB hard disk (X: denotes your USB Flash drive):
 - **X:\f6flpy-x64 (for Windows 8 64bit)**
32. Click **Next**.
33. Follow the on-screen instructions to install the **Windows 10** operating system.
34. Install the **Windows** drivers from the **Device Drivers & Utilities + User's Manual** disc as per **Table 4 - 1, on page 4 - 4** (make sure you install the **Intel Rapid Storage Technology driver** - see overleaf).
35. Run the **Intel® Rapid Storage Technology** application to manage your RAID volume as instructed in "**Intel® Rapid Storage Technology for RAID Systems**" **on page 6 - 46**.

SATA RAID Setup - UEFI Disabled

To configure your RAID (Redundant Array of Independent Disks) system in Striping (RAID 0) or Mirroring (RAID 1) modes (see *Table 6 - 1, on page 6 - 3*) you will require **two identical** hard disks or solid state drives.

You need to setup a RAID before installing your *Windows 10* operating system, and you will need to prepare the following in order to do so.

=====

- The *Microsoft Windows 10 OS DVD*.
- An attached external DVD drive.
- A hard disk installed in the Primary HDD bay and a **second** (identical) hard disk installed in the Secondary HDD bay.

OR

Two Identical solid state drives.

- The *Device Drivers & Utilities + User's Manual* disc.

=====

1. Start-up your notebook computer and press <F2> to enter the **BIOS**.
2. Go to the **Boot** menu, select **UEFI Setting** and press <Enter> (see page **5 - 18**).
3. Set **UEFI Boot** to "**Disabled**".
4. Press <Esc> to exit the menu and go to the **Advanced** menu.
5. Select **SATA Mode** (see page **5 - 12**), press <Enter> and select "**RAID Mode**".
6. Press <F4> and <Yes> to "**Save Changes and Reset**".
7. As the computer restarts press **Ctrl + i** to enter RAID configuration menu.

8. Select **1.Create RAID Volume** and press Enter.

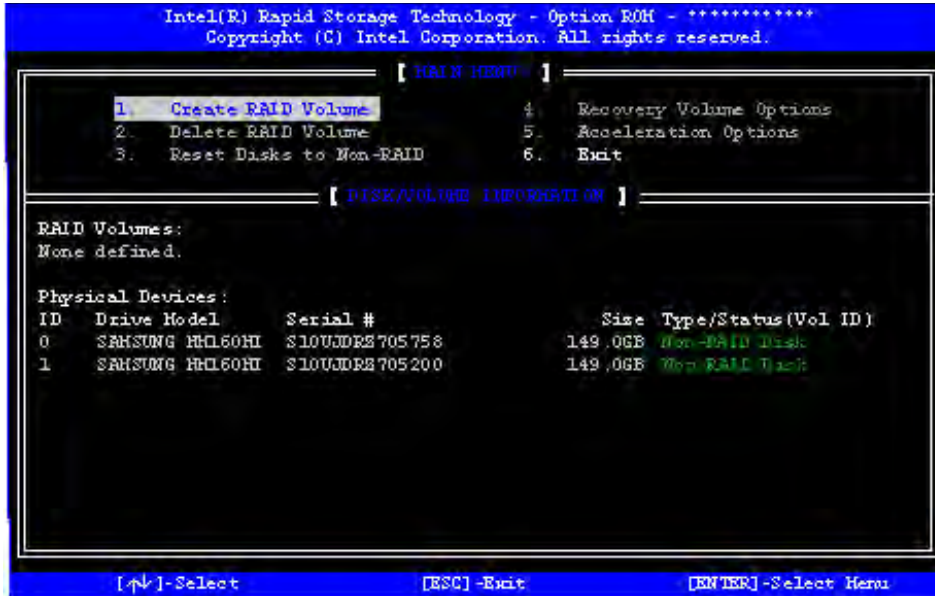


Figure 6 - 9
Intel(R) Rapid
Storage Technology
Option ROM

9. Type the **RAID volume name** and then press Tab or Enter to advance to the next field.
10. Specify (use the up and down arrow keys) the **RAID level (RAID 0 (Stripe) or RAID 1 (Mirror))** and then press Tab or Enter to advance to the next field.
11. Press Enter and the system will select the physical disks to us if applicable.
12. Press Enter and select (if applicable) the Strip Size (best set to **128KB**).

13. Press Enter and select the Capacity size (best set to default).
14. Press Enter to select **Create Volume**.
15. Press Enter to create the volume, and confirm the selection by pressing **Y**.
16. This will now return to the main menu.

Figure 6 - 10
RAID Created

```

Intel(R) Rapid Storage Technology - Option ROM - *****
Copyright (C) Intel Corporation. All Rights Reserved.

[ MAIN MENU ]

1. Create RAID Volume          5. Recovery Volume Options
2. Delete RAID Volume         6. Acceleration Options
3. Reset Disks to Non-RAID    6. Exit

[ DISK/VOLUME INFORMATION ]

RAID Volumes:
ID  Name      Level      Strip      Size  Status  Bootable
0   HybRAID   RAID0(Stripe) 16KB     141.6GB Normal  Yes

Physical Devices:
Port Drive Model      Serial #      Size  Type/Status(Vol ID)
1   SAMSUNG HML60HD  S10UJDE2705758 149.0GB Member Disk (0)
2   SAMSUNG HML60HD  S10UJDE2705200 149.0GB Member Disk (0)

[↑↓]-Select      [ESC]-Exit      [ENTER]-Select Menu
    
```

17. Select **6.Exit** and press Enter, then press **Y** to exit the RAID configuration menu.


18. As the computer starts up make sure the **Windows 10** OS DVD is in the attached DVD drive and it will automatically boot from the **Windows 10** OS DVD (you will be prompted to press a key to boot from the DVD). Alternatively you can press <F7> as the computer starts up to bring up the boot device menu.
19. Select the DVD drive containing the **Windows 10** OS DVD and press <Enter>.
20. Press a key at system startup to begin installing **Windows** from your **Microsoft Windows 10** disc.
21. Click **Next > Install Now** to continue installing the operating system as normal (see your **Windows** documentation if you need help on installing the **Windows** OS).
22. Follow the on-screen instructions to install the **Windows 10** operating system.
23. Install the **Windows** drivers from the **Device Drivers & Utilities + User's Manual** disc as per **Table 4 - 1, on page 4 - 4** (make sure you install the **Intel Rapid Storage Technology driver** - see overleaf).
24. Run the **Intel® Rapid Storage Technology** application to manage your RAID volume as instructed in **"Intel® Rapid Storage Technology for RAID Systems" on page 6 - 46**.

Deleting a RAID (Windows 10)

If you wish to delete an existing RAID then follow the procedure below to do so. However **backup up any necessary files and data before deleting a RAID**, as doing so will result in the loss of all data on the RAID volumes.

1. Start-up your notebook computer and press <F2> to enter the **BIOS**.
2. Go to **Intel(R) Rapid Storage Technology** (in the **Advanced** menu) and press <Enter>.
3. Go to the RAID (listed under **RAID Volumes:**) and press <Enter>.
4. Select **Delete** and press <Enter>.
5. Select **“Yes”** (note that all the data on the volumes will be lost) and press <Enter>.

Figure 6 - 11
Delete RAID
(Advanced > Intel(R)
Rapid Storage
Technology)

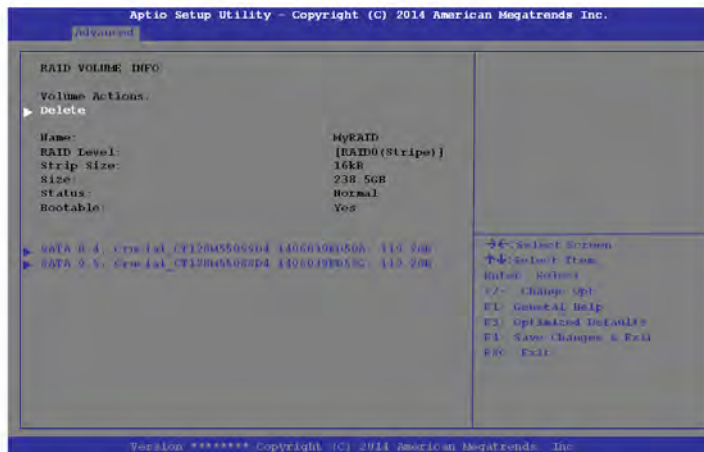

Wireless LAN Module

If you have included an **Intel®**, **3rd Party 802.11b/g/n** or **Qualcomm Atheros (Combo) module** is on (i.e. the system is not in **Airplane Mode**) before installing the driver.

Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 4*.

Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules. However the Qualcomm Atheros (Combo) module WLAN driver will be installed with the standard LAN driver, but you will need to install the Bluetooth driver (see page 6 - 41).

See the appropriate driver installation instructions on the page indicated below:

- See *“3rd Party 802.11b/g/n Driver Installation” on page 6 - 22*.
- See *“Intel® WLAN Driver Installation” on page 6 - 22*.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the **WLAN & Bluetooth module(s)** are **OFF** if you are using the computer aboard aircraft by putting the system in to **Airplane Mode** (see *Table 1 - 4, on page 1 - 20*).

3rd Party 802.11b/g/n Driver Installation


1. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Click **Next**.
5. Click **Finish** to restart the computer.
6. The operating system is the default setting for Wireless LAN control in *Windows* (see page [6 - 23](#)).

Intel® WLAN Driver Installation

1. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **1.Install WLAN Driver > Yes**.
4. Click in the check box to agree to the **End User License Agreement** and click **Install**.
5. Click **Finish**.
6. The operating system is the default setting for Wireless LAN control in *Windows* (see page [6 - 23](#)).

WLAN Configuration in Windows 10

You can configure a wireless connection using one of the following options, however make sure the Wireless LAN module is turned on (and not in Airplane Mode) before configuration begins.

1. Click the Wireless icon  in the notification area of the taskbar.
2. Make sure that **Airplane mode** is **off** (the Airplane mode icon should be gray).
3. A list of available access points will appear.
4. Double-click an access point to connect to it (or click it and click **Connect**).

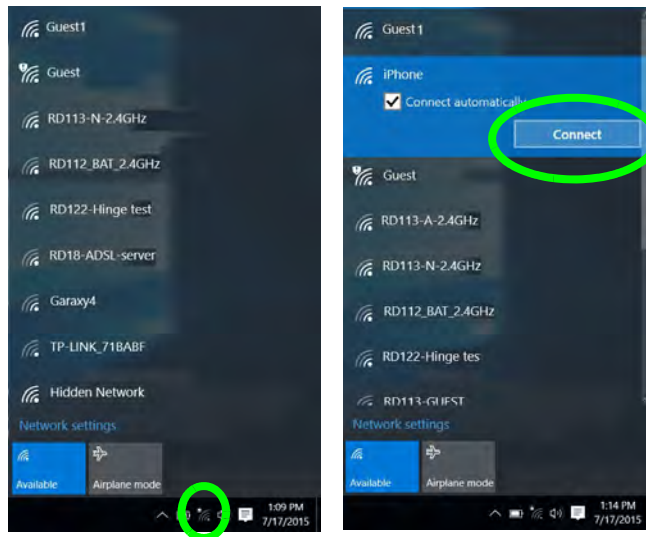


Figure 6 - 12
WiFi & Network
Connections

Modules


5. Enter a network security key (password) if required, and click **Next**.
6. You can choose to share or connect to devices or not.
7. When you are connected to the network access point it will display **Connected** status **Connected**.
8. Select any connected network and click **Disconnect** **Disconnect** to disconnect from a connected access point.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited.

Make sure the module is either **OFF** or in **Airplane mode** if you are using the computer aboard aircraft.

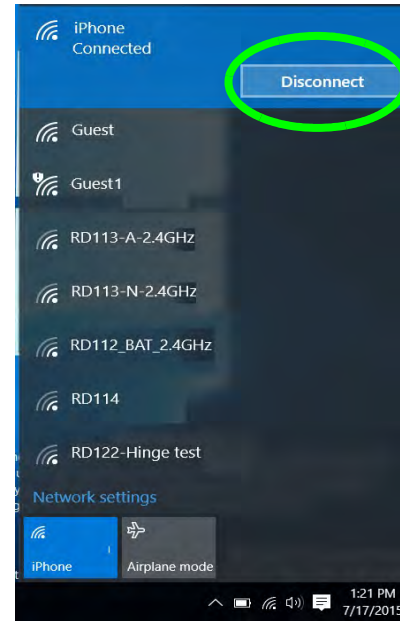

6

Figure 6 - 13
Network Connected
(Click Disconnect)

9. You can click the **Airplane Mode** button to turn the mode On or Off.
10. You need to either use **Airplane Mode**, or to **turn the WLAN module off** aboard aircraft.
11. If you click on **Network Settings** to bring up **Network & Internet** for a more comprehensive list of network and internet settings including **Wi-Fi** (can be turned on/off), **Airplane mode** (Airplane mode and Wireless devices can be turned on/off) **VPN, Dial-up, Ethernet** and **Proxy**.
12. You can also access the **Network & Internet** settings from the **Start Menu** (**Settings > Network & Internet**).

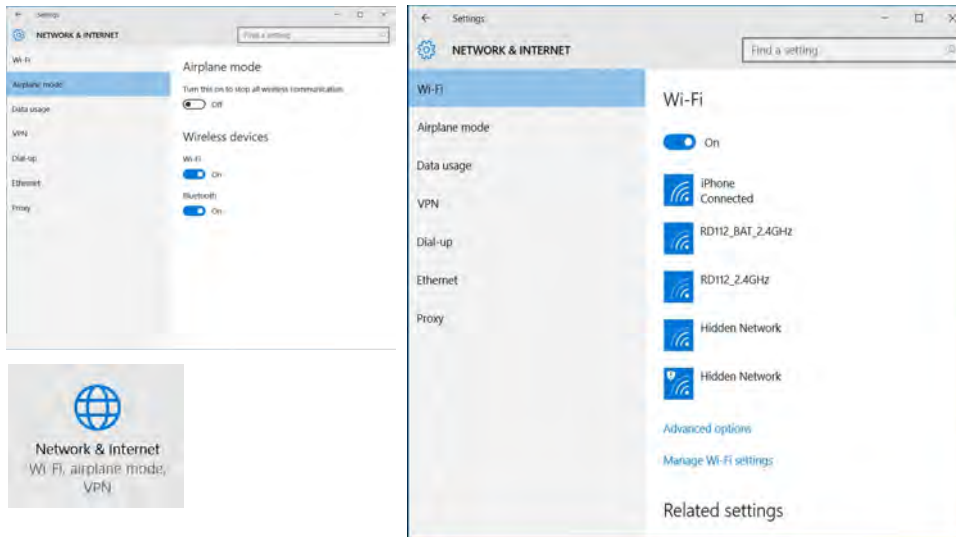


Figure 6 - 14
Network & Internet Settings



Killer Network Manager

This system contains a built-in Killer™ Ethernet controller.

There is also an optional (Factory Option) Killer™ Wireless adapter available for the system. If the Wireless adapter is installed then the WiFi Manager and Killer Wireless control panels will be displayed.

Killer DoubleShot™ Pro will be available if both controllers/adapters are installed.

Killer Network Manager

The **Killer Network Manager** app is installed with the LAN driver (see [“LAN” on page 4 - 7](#)) for your network adapter. The **Killer Network Manager** app can be accessed from the desktop or Apps menu. The app helps you to manage your network performance, optimize connection speed, and to control which applications are using your wireless bandwidth.

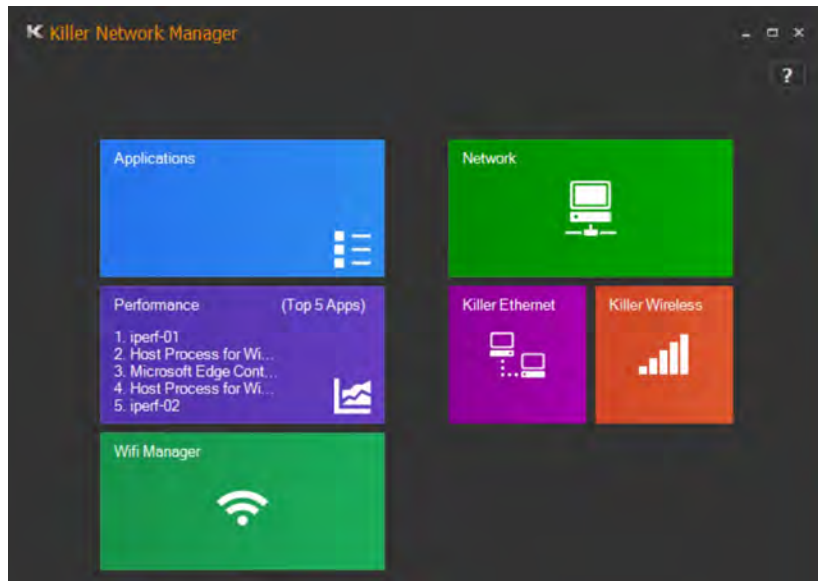


Figure 6 - 15
Killer Network Manager App

Network

Network Settings will display your Internet Provider Speed. Click **Enable Bandwidth Control** to enable the full suite of Killer benefits. Click **Apply Changes** to activate any changes made to the page. You can **Download Latest App Priorities** to update the latest applications rules if available. Click to open the **Access Point List** which contains a list of previously connected Wi-Fi access points (**if a Killer™ Wireless adapter** is installed).

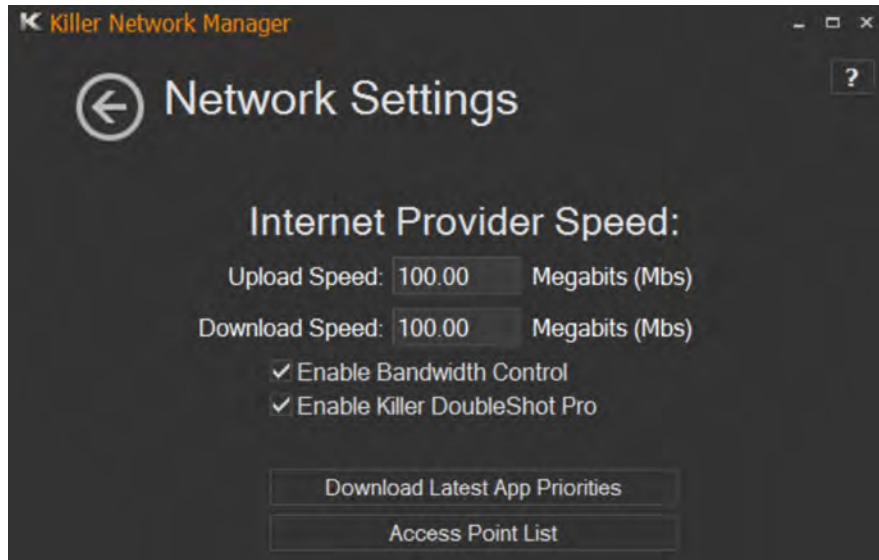


Figure 6 - 16
Killer Network
Manager - Network



Killer DoubleShot Pro Priority


When DoubleShot™ is enabled then applications will display a background color to indicate the priority (see page 6 - 30).

Killer DoubleShot Pro

If your system contains both a Killer™ Ethernet controller (as built-in to this system) and a Killer™ Wireless adapter you can enable Killer DoubleShot™ Pro. DoubleShot™ will automatically choose the fastest network (Ethernet or Wireless) connection(s) and send the high priority traffic (e.g. real time online gaming) over that connection, and standard traffic will be sent over the other connection(s).

6

Figure 6 - 17
Killer Network Manager - Network (Enable Killer DoubleShot Pro)

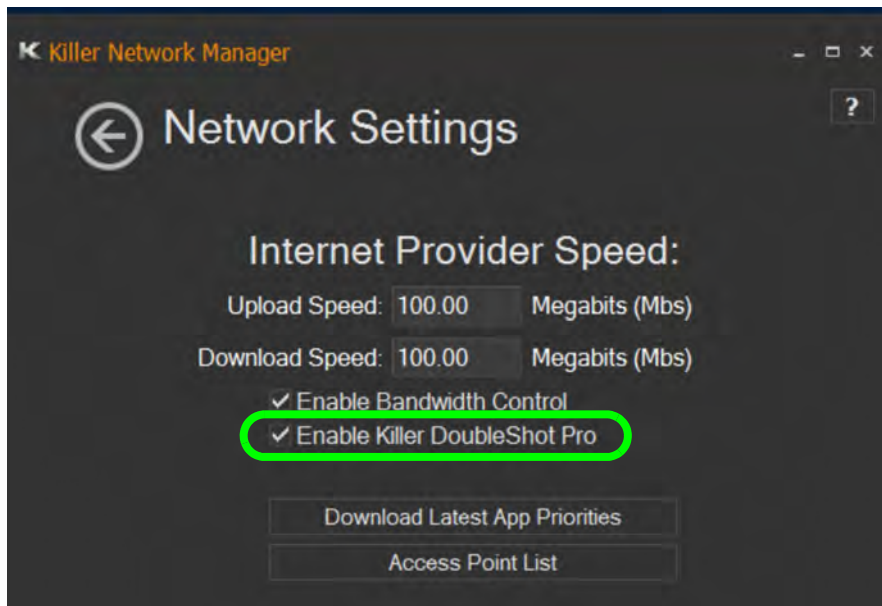

Applications

Applications will list all the programs with active, and inactive, network connections (you can choose to **Show All Applications** or **Reset Application Data**). The programs in the list can be sorted by **Name**, **Priority** (1 highest to 6 lowest), **Download** (by active data download) and **Upload** (by active data upload). Click **Block** to stop network activity from the selected application (**Block** will appear in red if the application is currently blocked). The sliders **Download: 0.00 / 688.44 Mbps (74.0%)** may be adjusted to limit upload/download bandwidth for each application.

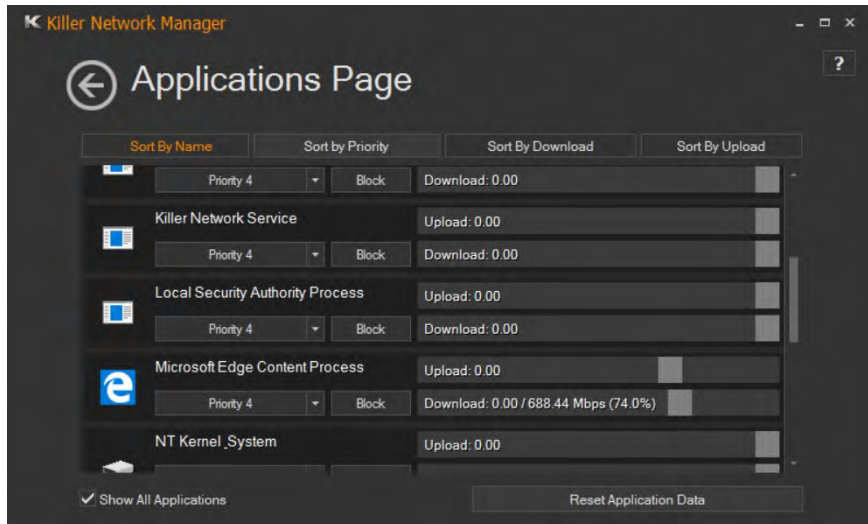


Figure 6 - 18
Killer Network
Manager
Applications

Application Priority with Killer DoubleShot Pro Enabled

If DoubleShot™ is enabled (requires a Killer™ Ethernet controller and a Killer™ Wireless adapter) then the applications will display a background color base on the priority:

- **Red** - Primary adapter supporting highest priority traffic.
- **Blue** - Secondary adapter passing traffic not listed as highest priority.

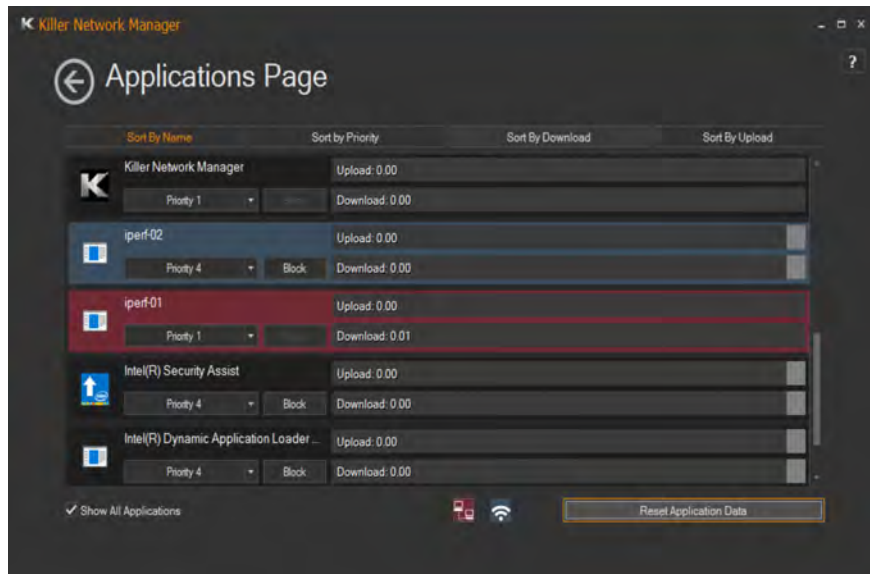


Figure 6 - 19
**Killer Network
Manager
Applications
(Killer DoubleShot
Pro Priority)**

Performance

System Performance displays the top 5 applications by traffic history. This can be reset by selecting **Reset Application Data** on the **Applications** page. **Usage Download/Usage - Upload** shows the incoming/outgoing network traffic over the past 2 minutes, and **Wireless Signal Strength** shows the WiFi signal strength over the past 2 minutes.

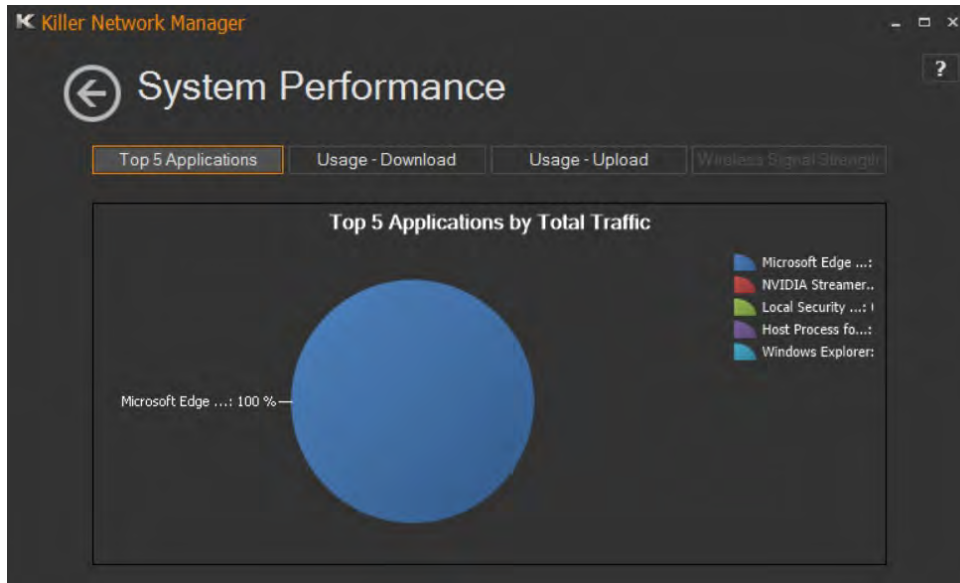



Figure 6 - 20
Killer Network
Manager -
Performance

WiFi Manager

WiFi Manager will display the strength of the available access points in 2.4GHz or 5GHz bands.

6

Figure 6 - 21
Killer Network
Manager - WiFi
Manager

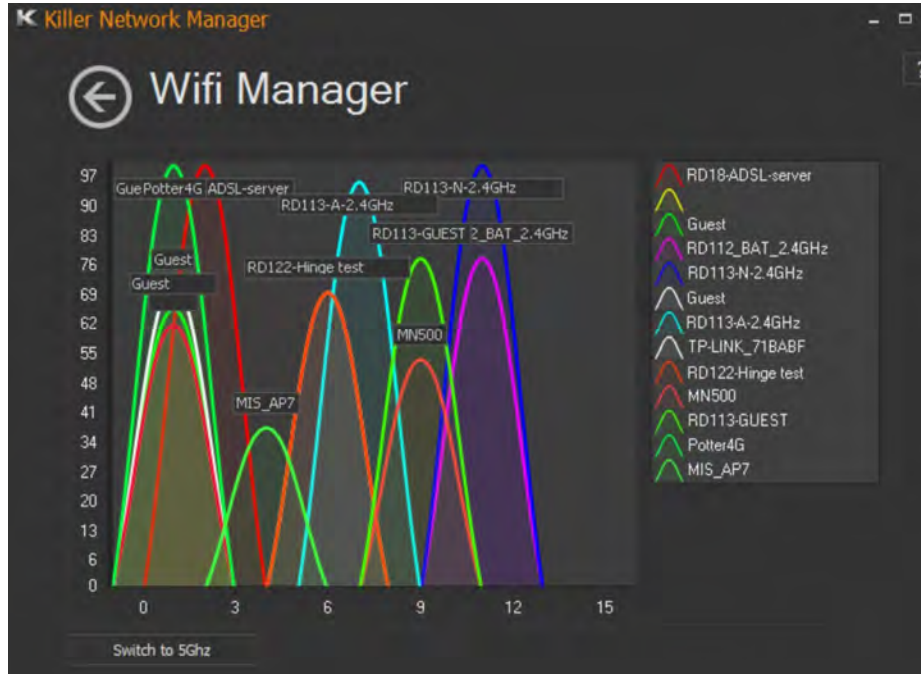

Killer Ethernet

Killer Ethernet displays the current status of the Killer Ethernet controller.



Figure 6 - 22
**Killer Network
Manager - Killer
Ethernet**

Killer Wireless

Killer Wireless displays the current status of the Killer Wireless controller (if installed).



Figure 6 - 23
**Killer Network
Manager - Killer
Wireless**

Fingerprint Reader Module

The fingerprint reader module provides a high level of security for your computer. Make sure you have administrator's rights to your computer, and have a *Windows* password enabled for full security protection.

There are two different fingerprint modules supplied with this model. Install the driver from the *Device Drivers & Utilities + User's Manual* disc by following the appropriate instructions on the page overleaf.

The fingerprint reader module uses the **Sign-in options** configuration of the **Windows Account**.



Fingerprint Reader and Power Saving States

If your computer is in a power saving state (e.g. Hibernate or Sleep) you should keep your finger clear of the fingerprint sensor.

Allow the system to fully resume before swiping your finger across the sensor.


Fingerprint Reader Driver Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into the CD/DVD drive.
2. Click **Option Drivers**.
3. Click **2.Install Fingerprint Driver > Yes**.
4. Click **Next > Install**.
5. Click **Finish** to complete the installation.
6. The fingerprint reader module uses the **Sign-in options** configuration of the **Windows Account** (see overleaf).

Fingerprint Module Configuration

1. Click the **Settings** item in the Start Menu and then click **Accounts** and click **Sign-in options**.
2. You will need to add a **Windows** password (click **Add** under **Password**).
3. After you have added the password you will need to also add a **PIN**.
4. Under **Windows Hello** click **Set up** under **Fingerprint**.
5. The wizard will then guide you through the set up process to scan your fingerprints.

Figure 6 - 24
Accounts - Sign-in options
(Add Fingerprint)

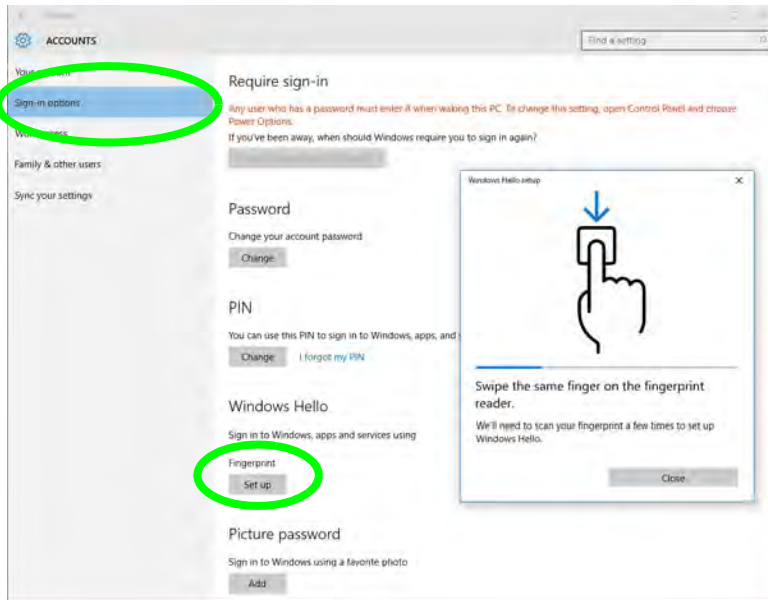

Modules

6. You will be instructed to **swipe the same finger** across the reader a number of times.
7. Click **Close** when complete.
8. You can choose to **Add another** finger (this is recommended) or **Remove** the current fingerprint reading.
9. You can now scan your fingerprint to log-on to the computer.

Bluetooth & WLAN Combo Module

If your purchase option includes the **Combination Wireless LAN & Bluetooth module** (either **Intel®**, **Qualcomm Atheros** or **3rd Party module**) then install the driver as instructed on the following pages.

Make sure that the module is on (i.e. the system is not in **Airplane Mode**) before installing the driver.



Bluetooth Data Transfer

Note that the transfer of data between the computer and a Bluetooth enabled device is supported in one direction only (simultaneous data transfer is not supported). Therefore if you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process from the computer has been completed.

Note that you need to install both the WLAN & Bluetooth drivers for the WLAN & Bluetooth Combo modules.



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the **WLAN & Bluetooth module(s)** are **OFF** if you are using the computer aboard aircraft by putting the system in to **Airplane Mode** (see [Table 1 - 4](#), on [page 1 - 20](#)).

3rd Party Bluetooth (V4.0) Combo Driver Installation

1. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **3.Install Combo BT Driver > Yes**.
4. Click **Next**.
5. Click **Finish** to restart the computer.
6. See *“Bluetooth Configuration in Windows” on page 6 - 42* for configuration instructions.


Intel Bluetooth Combo Driver Installation



1. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **3.Install Combo BT Driver > Yes**.
4. Click **Next > Next**.
5. Click in the check box to accept the license and click **Next**.
6. Select the setup type (**Typical** is recommended) and click **Install**.
7. Click **Finish**.
8. See *“Bluetooth Configuration in Windows” on page 6 - 42* for configuration instructions.

Qualcomm Atheros Bluetooth Combo Driver Installation

1. **Make sure the system is not in Airplane Mode**, and then insert the *Device Drivers & Utilities + User's Manual* disc into the DVD drive.
2. Click **Option Drivers** (button).
3. Click **3.Install Combo BT Driver > Yes**.
4. Click **Next > Next**.
5. Click **Install**.
6. Click **Finish**.
7. Click **Yes** to restart the computer.
8. See *“Bluetooth Configuration in Windows” on page 6 - 42* for configuration instructions.

Bluetooth Configuration in Windows

1. Click the **Settings** item in the Start Menu and then click **Devices** (or click the Bluetooth icon  in the taskbar and click **Add a Bluetooth Device**).
2. Click **Bluetooth** and make sure Bluetooth is **On** and a list of discovered devices will appear.

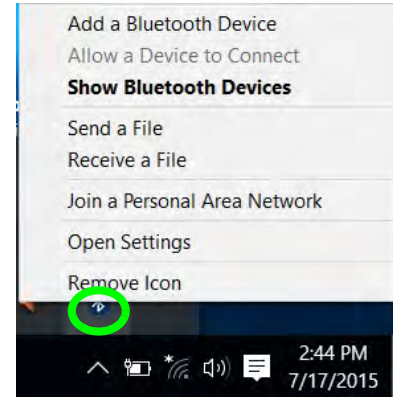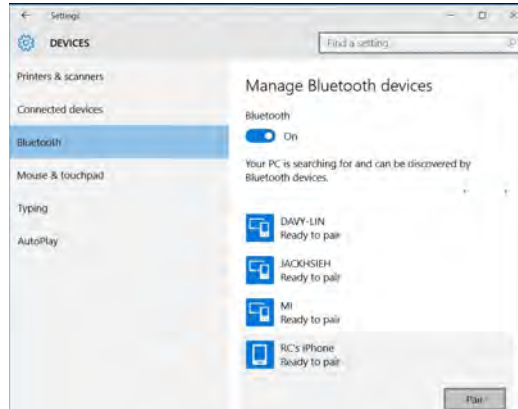

3. Double-click the device you want to pair with the computer and click **Pair**.
4. On first connection the computer will provide you with a pairing code to be entered onto the device.

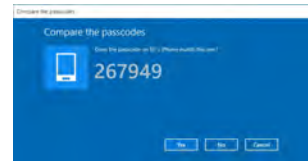


Figure 6 - 25
Devices > Bluetooth
Bluetooth Taskbar
Menu

Figure 6 - 26
Enter the Passcode

5. Enter the code into your Bluetooth enabled device and click **Yes** on the computer to complete the pairing.
6. Select a device and click **Remove Device** Remove device to disconnect from any device.

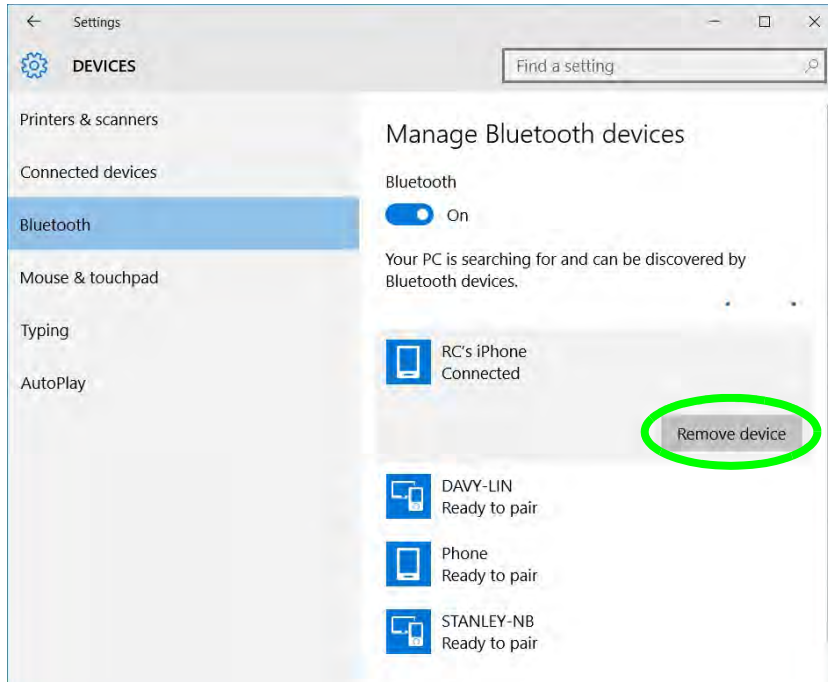



Figure 6 - 27
Devices > Bluetooth
Remove Device

To Make your Computer Discoverable to Bluetooth Devices

1. Click the **Settings** item in the Start Menu and then click **Devices**.
2. Click **Bluetooth** and under **Related Settings** click **More Bluetooth options** (or click the Bluetooth icon  in the taskbar **Open Settings**).
3. In **Bluetooth Settings** make sure that **Allow Bluetooth devices to find this PC** check box (**Discovery**) has a check inside it.
4. Make sure that the **Alert me when a new Bluetooth device wants to connect** check box (**Notifications**) has a check inside it, if you want to be notified when a Bluetooth device wants to connect.

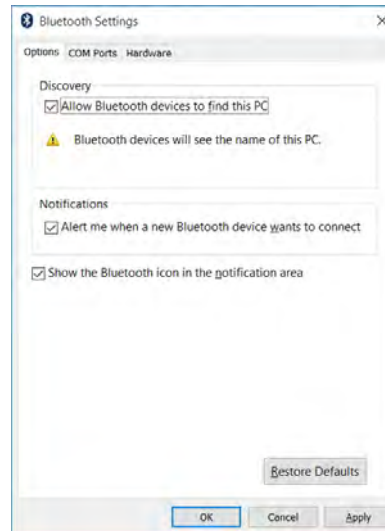


Figure 6 - 28
Bluetooth Settings

Intel® Rapid Storage Technology

The **Intel Rapid Storage Technology application** provides high-performance SATA and SATA RAID capabilities. Install the **Intel Rapid Storage Technology application** (after installing all necessary drivers in the correct order) to support your **RAID** system or SATA drive if set up in **AHCI mode** in the BIOS (see **“SATA Mode (Advanced Menu)” on page 5 - 12**).

IRST Driver Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **4.Install IRST Driver > Yes**.
4. Click **Next**.
5. Click the check box to accept the license and click Next.
6. Click **Next > Next > Next**.
7. Click **Finish** to restart the computer.
8. When the system restarts the OS will pop up a message to prompt you to **Restart again** (*note that if your system has a single PCIe M.2 SSD then a second reboot will not be required*) to restart the computer again.

See the following pages for more information if you have set your hard disks up in a RAID configuration.



IRST and M.2 PCI-e SSDs

Note that Intel® Rapid Storage Technology **does not support M.2 SSDs with a PCI-e Interface** (M.2 SSDs with a SATA Interface are supported).

Note the following:

- **RAID mode with UEFI disabled (legacy mode) does not support PCIe SSDs.**
- **AHCI mode with the IRST driver installed does not support PCIe SSDs.**



IRST and M.2 PCI-e SSDs

Note that Intel® Rapid Storage Technology does not support M.2 SSDs with a PCI-e Interface (M.2 SSDs with a SATA Interface are supported).

Intel® Rapid Storage Technology for RAID Systems

Intel® Rapid Storage Technology application displays status information on your RAID configuration. Run the **Intel® Rapid Storage Technology** application from the item in the **Start** menu.

When the **Intel® Rapid Storage Technology** application is launched the system will open the **Status** window. Here you can view the general health of the storage system. Various volume creation and management options are available depending on the system's status.


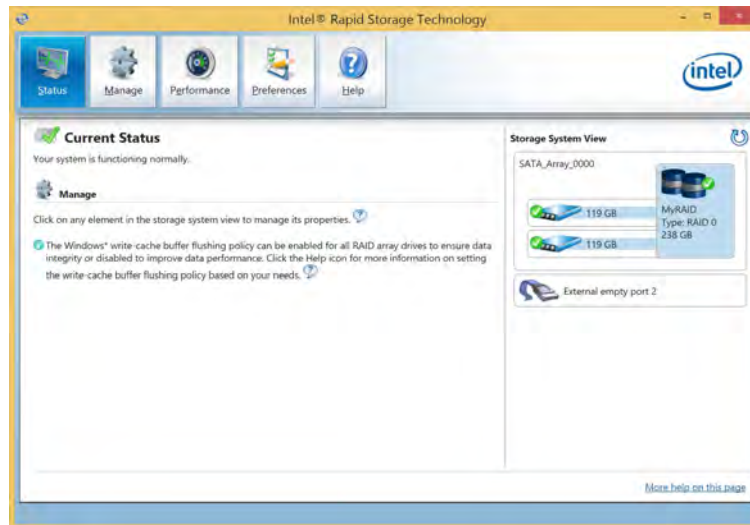


Figure 6 - 29

Intel® Rapid Storage Technology Status

Intel® Rapid Storage Technology Help

If a hard drive member of a RAID volume is reported as “**Degraded**” or “**Failed**” it may be possible to recover the volume. If the volume cannot be restored then you will need to recreate the RAID volume and restore the data from a back up. Click the **Help** menu (or press **F1**) for instructions on how to recover or recreate RAID Volumes.

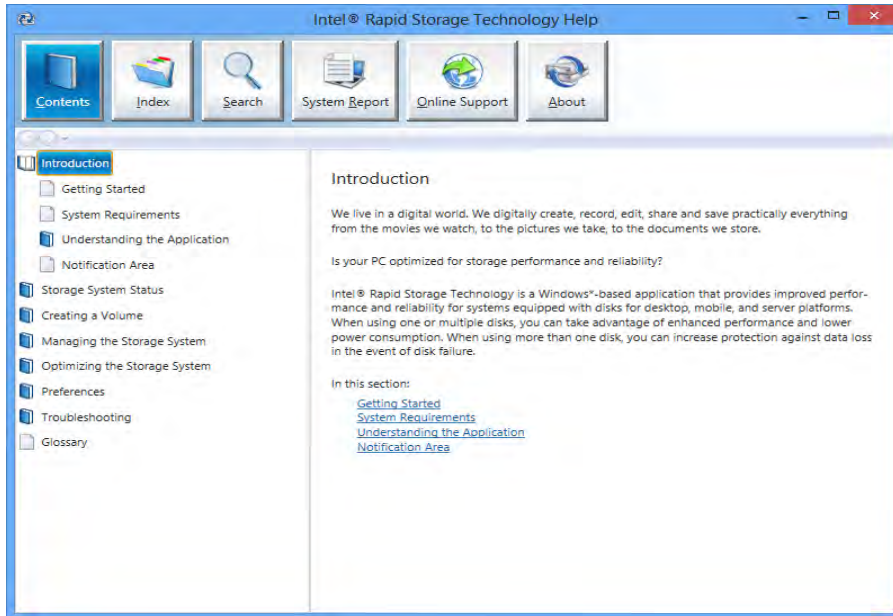

Help

Click the **Help** (or press **F1**) menu button at the top of the **Intel® Rapid Storage Technology** application.

Click **Contents** to view the general list of subjects covered, click **Index** or **Search** for a more specific help topics on a particular item.

Click **More help on this page** at the bottom of any page for page specific help.

Figure 6 - 30
Intel® Rapid Storage Technology Help

RAID Volume Data Verification and Repair

The RAID volume data verification process identifies any inconsistencies or bad data on a RAID 0 or RAID 1 volume. The table outlines what occurs for each RAID level:

Table 6 - 2
RAID Level
Verification &
Repair Status

RAID Level	Verify	Verify & Repair
RAID 0	Bad blocks are identified.	N/A
RAID 1	Bad blocks are identified. Data on the mirrored drive is compared to data on the source drive.	Bad blocks are reassigned. If the data on the mirrored drive does not match the data on the source drive, the data on the mirrored drive is overwritten by the data on the source.

Replacing and Reverting Recovery and Master Volumes

If a master or recovery drive fails you will need to add a new identical drive and rebuild the recovery volume to the drive. You can also revert the master drive to the state of the previous volume update. For details on how to do this see the help file *“Intel® Rapid Storage Technology Help” on page 6 - 47.*

See over for details on how to verify and repair RAID volume data. Verification will identify and repair data inconsistencies on the volume.

Verifying and Repairing RAID Volume Data

1. Run the **Intel® Rapid Storage Technology** application.
2. Click to **select the RAID** in the pane on the right side of the window.
3. Click **Manage** and click **Advanced**.
4. Click **Verify** and click **Verify** (button) to begin the process (in some cases you may be required to **initialize** a volume before verification).

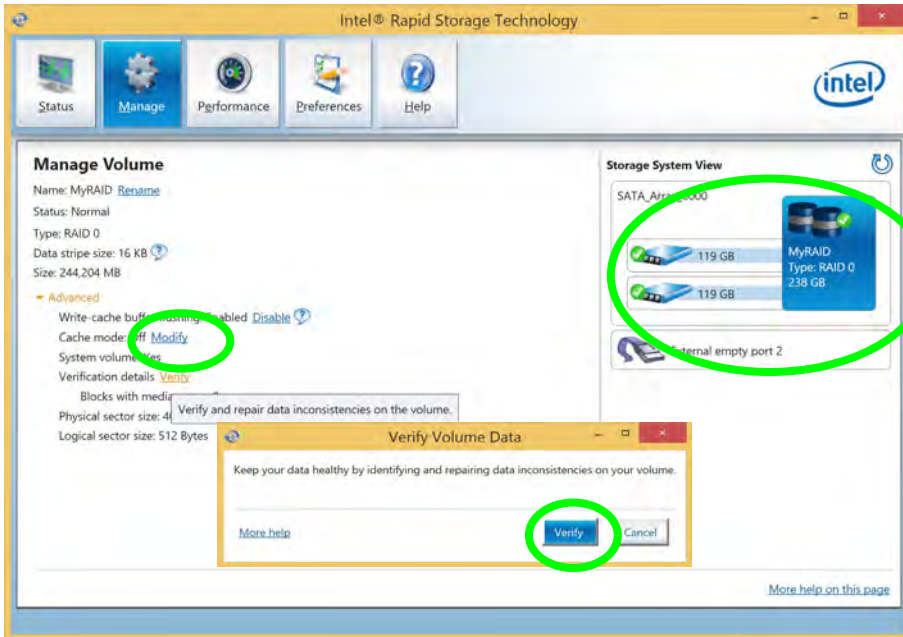


Figure 6 - 31
Intel® Rapid
Storage
Technology
Verify

Modules



Scheduling Verify & Repair

You can schedule verification and repair by clicking **Preferences > Scheduler** and enabling a set time for verification and repair.

5. The completion percentage will be listed under **Status** (verifying and repairing).
6. Click **Close** in the Verify Volume Data Results window.

Manage Volume

Name: MyRAID

Status: Verifying 34% complete [Cancel](#)

Type: RAID 0

Data stripe size: 16 KB [?](#)

Size: 244,204 MB

Advanced

Cache mode: Off

System volume: Yes

Verification details

Verification errors found: 0

Blocks with media errors: 0

Physical sector size: 4096 Bytes

Logical sector size: 512 Bytes

Figure 6 - 32
Intel® Rapid Storage Technology Verify



Intel® Smart Response Technology

Intel® Smart Response Technology is an Intel® Rapid Storage Technology (RST) caching feature that accelerates computer system performance by using the SSD as cache memory between the hard disk drive and system memory.

System Requirements to support Intel® Smart Response Technology:

- System BIOS with SATA mode set to RAID (see ““*SATA Mode (Advanced Menu)*” on page 5 - 10).
- Intel Rapid Storage Technology software installed.
- A Solid State Drive (SSD) with a minimum capacity of 18.6GB (or with a partition on the drive formatted to more than 18.6GB e.g a 20GB partition set on the SSD). Note that the SSD requires at least 5MB of free unpartitioned and unallocated space (if you have used all the disk space for the partition you will need to shrink some of space for the cache memory’s use).



Intel® Smart Response and M.2 PCI-e SSDs

Note that Intel® Smart Response Technology does not support M.2 SSDs with a PCI-e Interface (M.2 SSDs with a SATA Interface are supported).


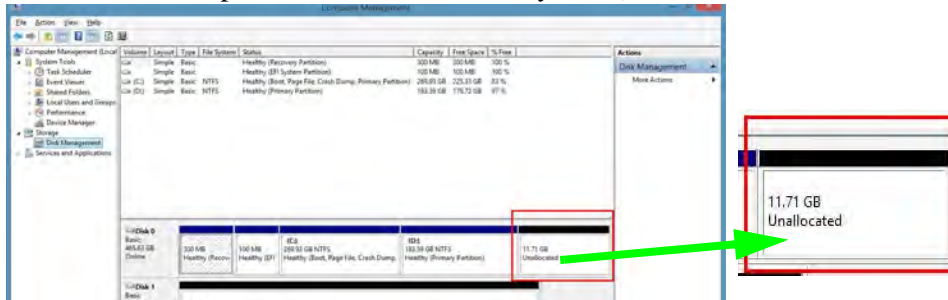


Figure 6 - 33
Computer Management - Disk Management - Unallocated SSD Space

See overleaf for instructions on enabling Intel® Smart Response Technology.

Enabling Intel Smart Response Technology

1. Run the **Intel® Rapid Storage Technology** application.
2. Click **Enable acceleration** under **Performance > Smart Response Technology** (*note that you will at least 5MB of free unpartitioned and unallocated space on the SSD otherwise the Smart Response Technology item will not appear*).

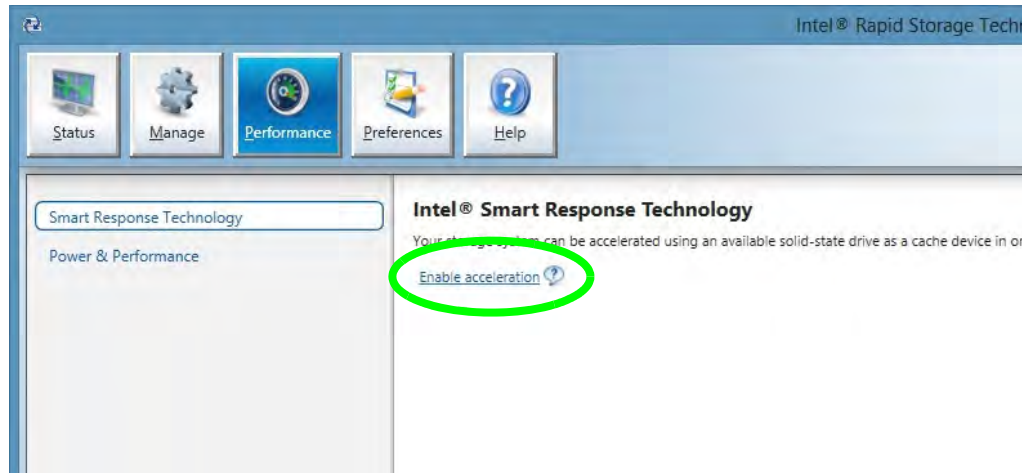

6
Figure 6 - 34
Intel® Rapid Storage Technology - Performance Enable Acceleration

3. Select the SSD to be used as a cache device.
4. Select the size from the SSD to be allocated for the cache memory (any remaining space on the SSD can be used for data storage using the simple data single-disk RAID 0 volume that is automatically created).

5. Select the HDD (or RAID volume) to be accelerated (it is highly recommended that you accelerate the system volume or system disk for maximum performance).
6. Select the acceleration mode, and then click **OK** (Enhanced mode is selected by default).

Note: **Enhanced mode** (default): Acceleration optimized for data protection.
Maximized mode: Acceleration optimized for input/output performance.

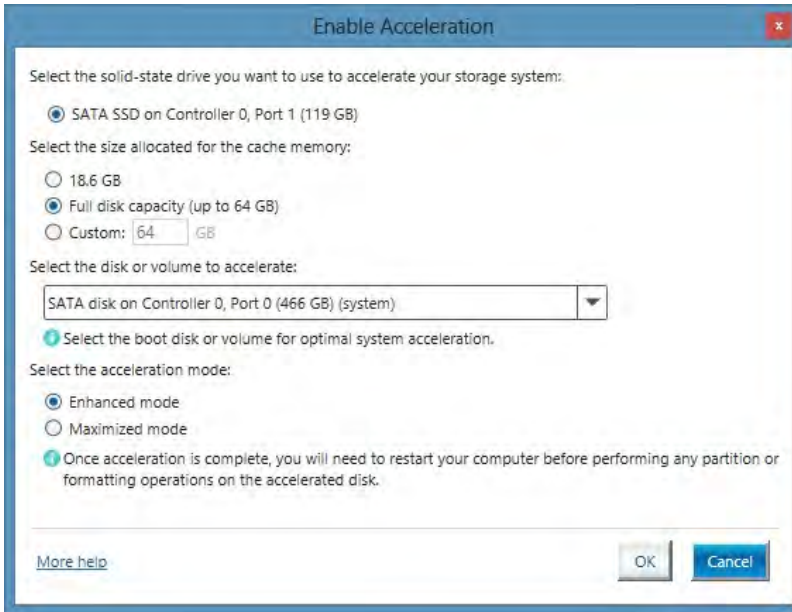


Figure 6 - 35
Enable Acceleration Options

- The page will refresh and report the new configuration in under **Performance > Smart Response Technology**.



Figure 6 - 36
Intel® Rapid Storage Technology - Performance (Smart Response Technology)

Sound Blaster Audio

Install the **Sound Blaster AP** to allow you to configure the audio settings to your requirements for the best performance in games, music and movies.

Sound Blaster X-Fi MB-5 Audio AP Installation

1. Insert the *Device Drivers & Utilities + User's Manual* disc an attached DVD drive.
2. Click **Option Drivers** (button).
3. Click **5.Install SBX-Fi MB 5 AP > Yes**.
4. Click **Yes** to accept the license agreement terms.
5. Click **Next > Full Installation** (button).
6. Click **Next > Finish** to restart the computer.

Run the **Sound Blaster X-FI MB5** control panel from the notification area of the taskbar (or from the item in the Start menu). Click on the tabs to access the any of the control panel menus.

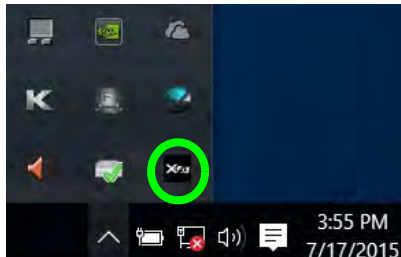


Figure 6 - 37
**Sound Blaster X-Fi
MB5
(Taskbar
Notification Area
Icon)**


Profile

You can setup a Profile with your audio preference settings and choose to save the settings for **Music**, **Movie** or different **Game Types**. These settings can be exported or imported as required, and custom Profiles may be set and saved as required.

Figure 6 - 38
Sound Blaster X-Fi
MB5 Profile



SBX Pro Studio

Click the slider button under the control to enable/disable the control, and click the yellow slider to adjust the levels. Press the play button  to test settings.



- **Surround:** Provides virtual sound channels to control the level of immersion.
- **Crystalizer:** Enhances audio to make it sound livelier.
- **Bass:** Enhances the bass level of the sound system.
- **Dialog Plus:** Enhances dialogue levels for movies etc.
- **Smart Volume:** Minimizes sudden volume changes to avoid the need for constant adjustment. It is recommended that this is set to **Loud** (see sidebar).



Smart Volume Setting

The default setting for **Smart Volume** in **SBX Pro Studio** is set to **Normal**.

To get the full effect of this setting it is recommended that you set it to **Loud**.

6

Figure 6 - 39
Sound Blaster X-Fi
MB5 SBX Pro Studio

Modules

Scout Mode


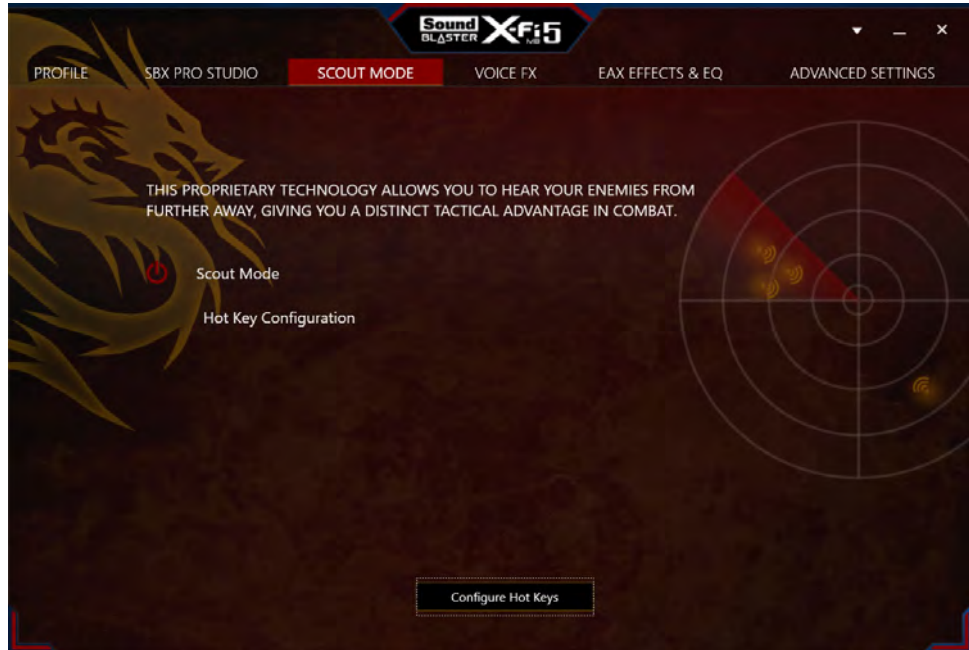
Click on the power button  to enable **Scout Mode** to enhance your ability to hear enemies in games from a further distance away than would normally be possible.

Figure 6 - 40
Sound Blaster X-Fi
MB5 Scout Mode



Voice FX


Click on the power button  to enable **Voice FX** and click on the sliders to adjust the settings. Select the mode required from the dropbox, and click on **Test** to hear the playback of the effect.



Figure 6 - 41
Sound Blaster X-Fi
MB5 Voice FX

EAX Effects & EQ

Click to select either/or **EAX Effects** or **EQ**, select the mode required from the drop-box and click on the sliders to adjust the settings. Click on **Save** to save any custom changes to the set levels and effects.

Figure 6 - 42
**Sound Blaster X-Fi
MB5 EAX Effects &
EQ**



Advanced Settings

Click on **SPEAKERS/HEADPHONES**, select the speaker/headphone configuration from the dropdown, and click on **Test** to hear the effect. You can also adjust the **Bass Management** by clicking the **Bass Redirection** and **Subwoofer Gain**, and click on the slider to adjust the **Crossover Frequency**. Click **SPEAKER CALIBRATION** to calibrate the distance and level of the speakers.

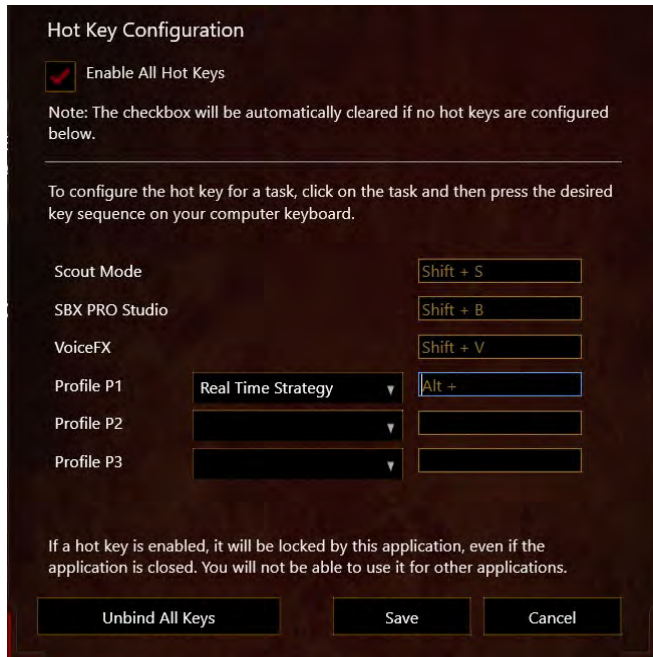


Figure 6 - 43
Sound Blaster X-Fi
MB5 Advanced
Settings

Hot Key Configuration

Click **Configure Hot Keys** in **Scout Mode** to access the **Hot Key Configuration** menu. Click **Enable All Hot Keys**, and then click on the task and press the key sequence required. Any hotkeys chosen will be locked by the application, and therefore will not be able to be used in other applications.

Figure 6 - 44
Sound Blaster X-Fi
MB5 Hot Key
Configuration



Creative ALchemy

The Creative ALchemy application can be run from the shortcut in the **Start** menu. Use the left menu to select any installed games and click the button to move them to the right column to enable ALchemy support for the game. Creative ALchemy restores hardware accelerated audio to enable EAX effects and 3D Audio when playing Direct Sound3D games.

Creative Software AutoUpdate

Run the application from the shortcut in the **Start** menu and make sure you are connected to the internet, then click **Next** and follow the on screen instructions to update the software.

Sound Blaster Audio & HDMI/Display Port

1. When you connect a display to the HDMI-Out port, or Display Port the Sound Blaster Cinema controls will be disabled.
2. A warning box will pop-up and will prompt “...***Do you want to select another audio device now?***”.
3. Click **No** to continue using the audio output from your external display attached to the HDMI-Out port, or Display Port (do not attempt to select another audio device when connected to the external display).

Figure 6 - 45
Bass Management
Sound Blaster X-Fi
MB5 Advanced
Settings

Testing 5.1 Surround Sound (Advanced Settings)

If you are using the **Sound Blaster X-Fi MB5** control panel (**Advanced Settings**) to test your headphones/speakers, set up as a 5.1 surround sound system with the microphone jack enabled as the "Center/Subwoofer" (see *Figure 2 - 3 on page 2 - 5*) in the **Realtek HD Audio Manager**, you may not hear the low Subwoofer test tone as some headphones/speakers do not support low frequencies.

If your headphones/speakers do not support low frequencies then follow the instructions below to obtain an effective sound test.

1. Attach your headphones/speakers to the headphone out jack.
2. Run the **Sound Blaster X-Fi MB5** control panel from the notification area of the taskbar (or from the item in the Start screen).
3. Click **ADVANCED SETTINGS > SPEAKERS/HEADPHONES**.
4. Select **5.1 Surround** under **Speakers/Headphones Configuration**.
5. Click to place checks in the **Bass Redirection/Subwoofer Gain** check boxes.
6. Move the slider for **Crossover Frequency** to its maximum setting.
7. Click **Test** to hear the sound.
8. Your headphones/speakers will now be configured for 5.1 Surround.




PC Camera

Use the **Fn + F10** key combination (see *“Function Keys & Visual Indicators” on page 1 - 20*) or **Control Center button** to toggle power to the PC Camera module.

When the PC Camera is in use the LED indicator to the left of the camera will be illuminated (see ② *Figure 1 - 2 on page 1 - 6/Figure 1 - 3 on page 1 - 7*).

Note that you need to use the **Camera app**  in *Windows* to take pictures and capture video.

Camera App

1. Make sure the PC Camera is turned on by using the **Fn + F10** key combination (or **Control Center button**).
2. Run the Camera app from the Start menu by clicking on the **Camera app icon**  (you can type “camera” into the search box to find the Camera app if it is not pinned to the Start menu).
3. The interface displays two buttons on the right of the screen; one for photo and one for video.




Photo

Video


4. Simply click on the appropriate button to switch to either photo or video modes.
5. You can use the buttons at the top to access the **Photo** collection, **Self Timer** or **Settings**.



Figure 6 - 47
Camera Menu Bar

- Click **Settings**  to access the camera settings menu to make adjustments for **Camera Button** long key press function, **Photo Aspect ratio**, **Framing grid**, **video recording frame rates**, **Flicker reduction** and **Digital video stabilization**.




Camera Settings

The **Self Timer** may be set to take Photos after **2, 5 or 10** seconds and can also be set to continue taking pictures until the camera button is pressed again.

The **Aspect Ratio** can be changed to those supported by the system.





You can use a **Framing grid** to help you line up pictures.

The **Video recording** resolution and frame rate can be set to any supported by the system. Note that capturing high resolution video files requires a substantial amount of disk space for each file. After recording video, check the video file size (right-click the file and select Properties) and the remaining free space on your hard disk (go to File Explorer, right-click the hard disk, and select Properties). If necessary you can remove the recorded video file to a removable medium e.g. CD, DVD or USB Flash drive.

If you need to reduce any screen flicker, change the settings in **Flicker reduction** to either e.g. 50Hz or 60Hz.

Figure 6 - 48
Camera Settings

Taking Pictures/Capturing Video

1. Make sure the PC Camera is turned on by using the **Fn + F10** key combination (or **Control Center button**).
2. Run the Camera app from the Start menu by clicking on the **Camera app icon**  (you can type “camera” into the search box to find the Camera app if it is not pinned to the Start menu).
3. Click to select either **photo**  or **video**  modes.
4. Click the photo icon to take a picture, and the camera icon will briefly turn yellow as the picture is taken.
5. Click on the video icon  to start video capture (if video capture begins a timer will appear at the bottom of the screen and the icon will turn yellow).
6. To stop video capture click the video icon again.

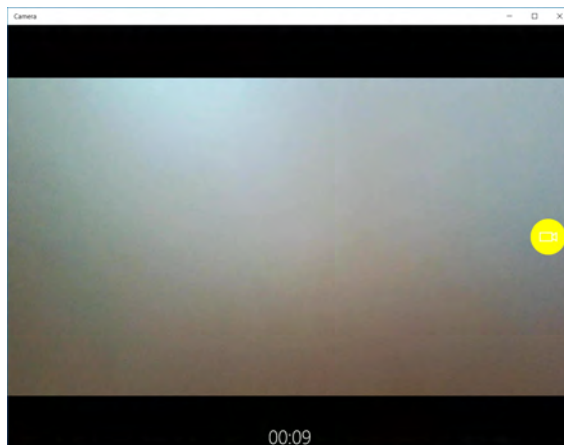


Figure 6 - 49
**Video Camera
Recording in
Process**

- Captured photos and videos will be saved to the **Photos** app stored in the Start menu (type **Photos** into the search box if you cannot find the app).

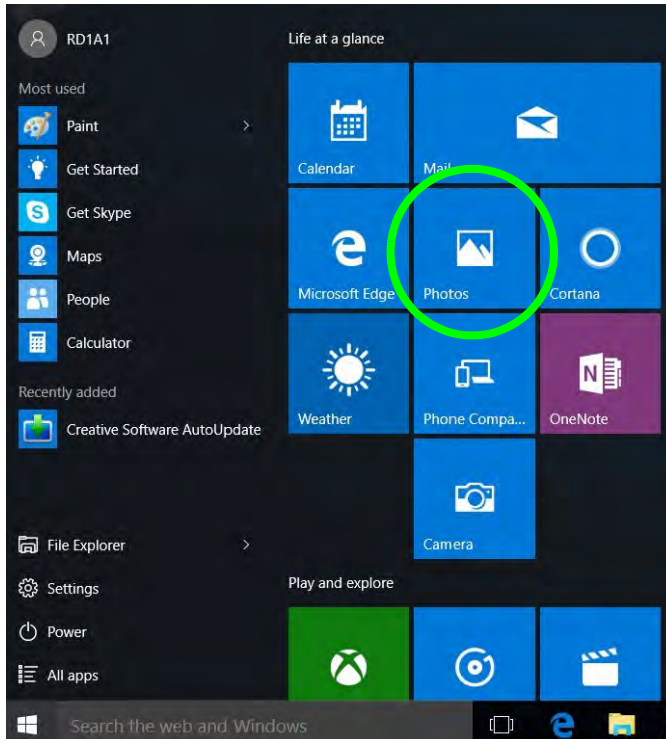


Figure 6 - 50
Photo App
(For Captured
Photos & Videos)

Trusted Platform Module

(Optional)

The **TPM security chip** allows you to create and manage digital certificates for user and platform authentication. This type of security is usually administered within large enterprises and organizations, and therefore requires implementation by a system administrator before users can access security features.

Individual users can use the TPM as an authentication with the fingerprint reader.

Make sure you have administrator's rights to your computer, and have a *Windows* password enabled for full security protection. In addition **Make sure you prepare a removable media (e.g. a USB flash drive) to store passwords etc. before beginning the TPM initialization process.**

Before setting up the TPM functions you must initialize the security platform.

Enabling & Managing TPM

1. Restart the computer.
2. Enter the **Aptio Setup Utility** pressing **F2** during the POST/startup.
3. Use the arrow keys to select the **Security** menu.
4. Select **TPM Configuration** and press Enter to access the sub-menu.
5. Press Enter under **Security Device Support** menu and select **Enable**.
6. You will then need to press **F4** to save the changes and restart the computer.
7. You can now manage the TPM from **Windows**.

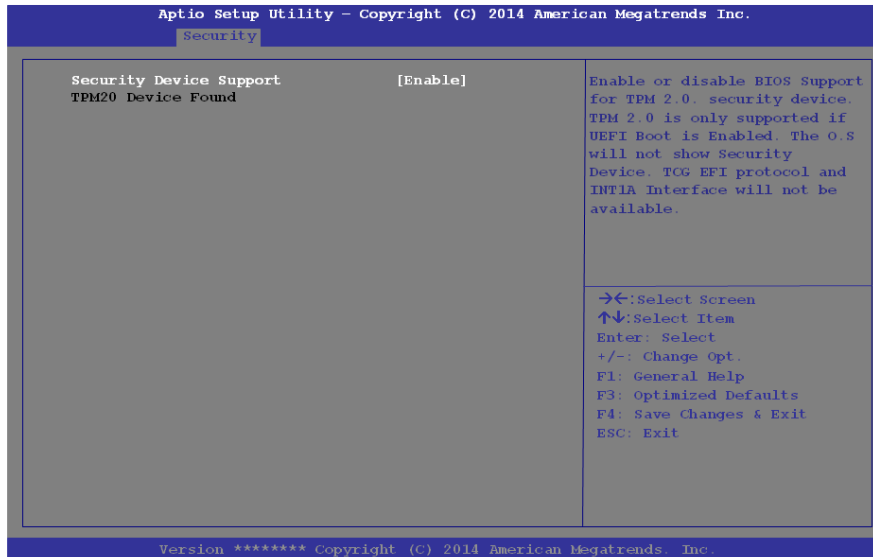


Figure 6 - 51
TPM State (Enable)


TPM Management in Windows

You can manage your TPM settings from within *Windows*:

1. Go to the **Control Panel**.
2. Click **BitLocker Drive Encryption (System and Security)**.
3. Click **TPM Administration**.

6

Figure 6 - 52
BitLocker Drive Encryption (TPM Administration)

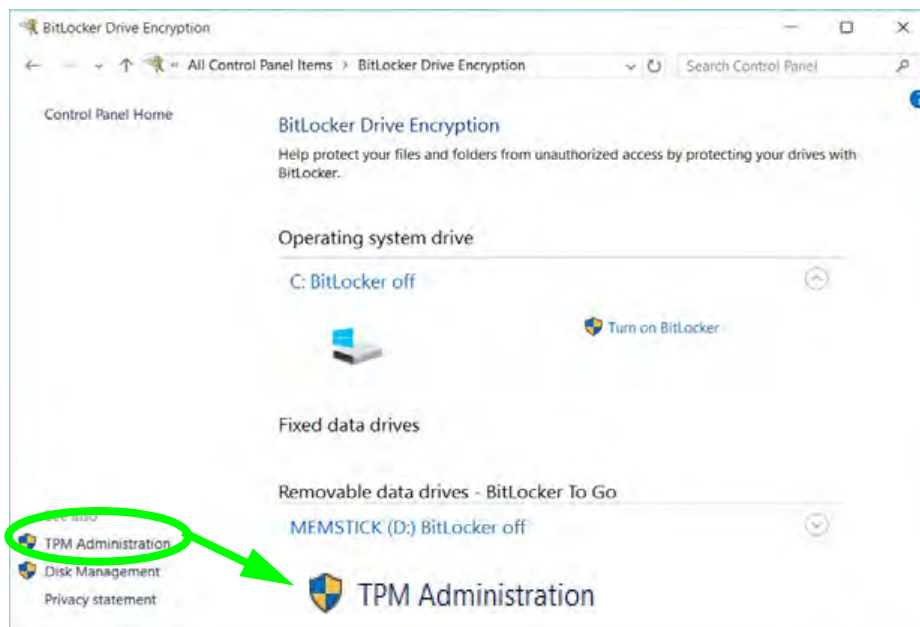

- 4. The TPM Management window allows you to configure the TPM within **Windows**. As TPM is usually administered within large enterprises and organizations, your system administrator will need to assist you in managing the information here.

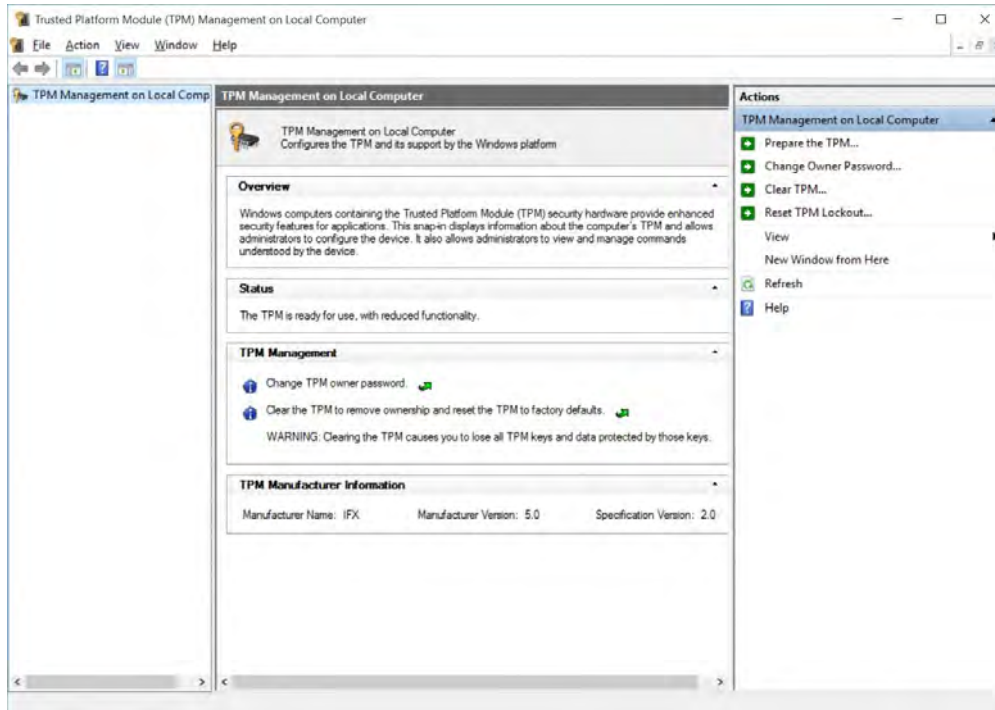


Figure 6 - 53
Trusted Platform
Module (TPM)
Management on
Local Computer
Administration

TPM Actions

1. Click **Prepare the TPM** and follow the instructions in the Wizard to prepare the TPM (this will probably require a restart of the computer and confirmation of the setting changes after restart by pressing the appropriate F key).
2. After the restart the TPM will be prepared and you can then use the **Actions** menu to **Turn TPM off**, **Change Owner Password**, **Clear TPM** or **Reset TPM Lockout**.
3. A wizard will help take you through any setup steps.

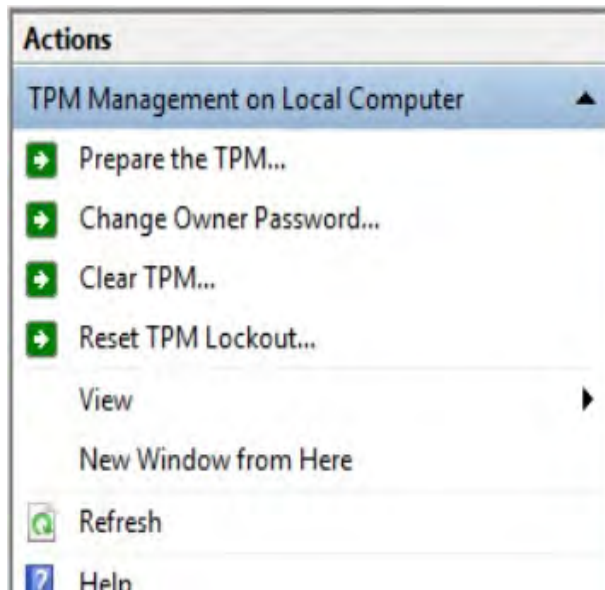


Figure 6 - 54
TPM Actions Menu

BitLocker

BitLocker Drive Encryption can be used in conjunction with the TPM to encrypt data on the disk. Access the Microsoft **BitLocker Drive Encryption** control panel applet from the *Windows* control panel (**System and Security**).

1. Click **Turn on Bit Locker**.
2. Follow the on-screen instructions to setup BitLocker, and make sure you have a removable media (e.g. a USB flash drive) to store saved recovery keys etc.

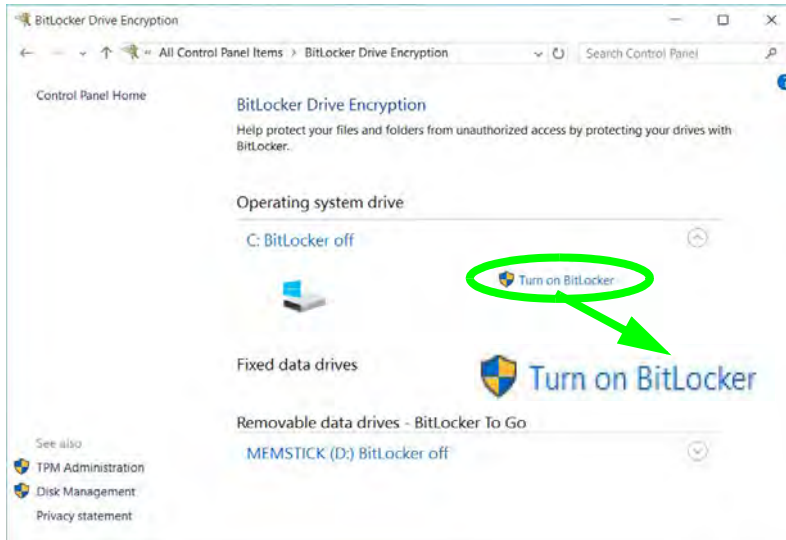


Figure 6 - 55
BitLocker Drive Encryption



Wireless Device Operation Aboard Aircraft

The use of any portable electronic transmission devices aboard aircraft is usually prohibited. Make sure the **WLAN, Bluetooth and 3G/4G module(s) are OFF** (or the system is in **Airplane Mode**) if you are using the computer aboard aircraft (see [Table 1 - 4, on page 1 - 20](#)).

3G/4G Module

If you have included an **optional UMTS/HSPA+** based 3G Module (Universal Mobile Telecommunications System or High Speed Packet Access) module or **LTE** (Long Term Evolution) 4G module (see *“Communication” on page D - 4* for specification details) in your purchase option, ***you do not require a driver/application installation for Windows 10***. Follow the instructions overleaf to install the USIM card (which will be provided by your service provider), and then **use the Charms Bar Wireless icon to access the 3G/4G network** in the same manner as the WLAN (see page [6 - 23](#)).



Important Notice

If your purchase option includes both Wireless LAN and 3G/4G modules, then the appropriate antennas will be installed. Note that In order to comply with FCC RF exposure compliance requirements, the antenna must not be co-located or operate in conjunction with any other antenna or transmitter.


Important Notice - 3G/4G & Bluetooth/Wireless LAN Modules

In order to comply with FCC regulations you should NOT operate the 3G/4G module and the Bluetooth/Wireless LAN modules at the same time as this may disrupt radio frequency, and cause interference. When the 3G/4G module is powered on, make sure that the Bluetooth/Wireless LAN modules are powered off.

3G/4G SIM Card Insertion

You will need to remove the battery in order to insert the USIM card.

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow.
3. Slide the latch **2** in the direction of the arrow and the battery will pop up to be released.
4. Lift the battery up from the groove at point **3**.
5. Remove the battery from the bay **4**.

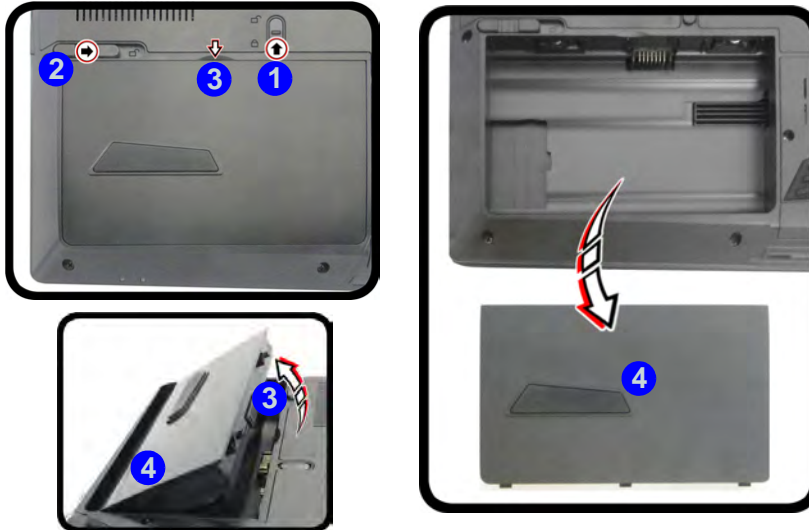

Warning Warning

Please check with your service representative before undertaking any upgrade procedures to find out if this will VOID your warranty.

Figure 6 - 56
Battery Removal

Modules



USIM Card Orientation

Note that the USIM card's readable side (with the gold-colored contacts) should face upwards as illustrated.

6. Remove the battery from the bay **4**.
7. Insert the USIM card **5** as illustrated below (pay careful attention to the orientation of the card as the gold contact side of the card should face upwards) until it clicks fully into position.
8. To eject the card simply press it until it ejects, but do not attempt to eject the card while connected to a 3G/4G network (however your machine should be powered off when removing the battery in any case).
9. Reinsert the battery **6** as illustrated and slide the latches **7** & **8** into the lock position.

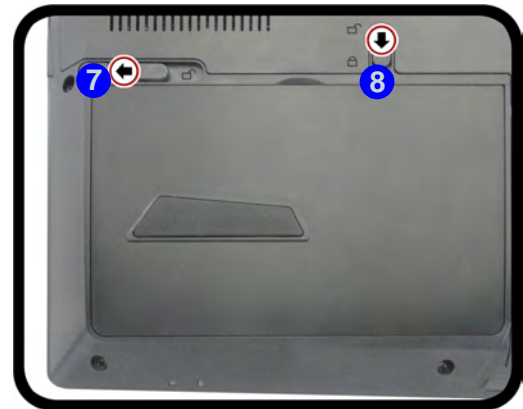
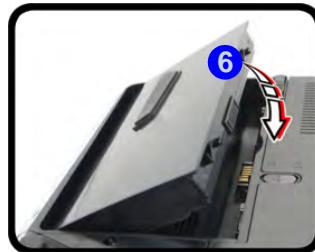



Figure 6 - 57
**USIM Card & Battery
Insertion**

3G/4G Configuration in Windows 10

You can configure a 3G/4G connection as below, however make sure the system is not in Airplane Mode before configuration begins. You can connect to a 3G/4G connection in much the same way as the WLAN connection.

1. Click the **Settings** item in the Start Menu and then click **Network and Internet**.
2. Click **Cellular** a list of available access points will appear.
3. Click the access point and click **Connect**.
4. The system will connect to your network.
5. **Connected** will appear under the connection.
6. You can then access the internet, download e-mail etc. as per any internet connection.
7. To disconnect you can select the connection and click **Disconnect**.
8. You need to use **Airplane Mode** aboard aircraft.
9. You can also click the Wireless icon  in the notification area of the taskbar, click **Cellular** and double-click an access point connect to access the connection information.

Modules

6

Chapter 7: Troubleshooting

Overview

Should you have any problems with your computer, before consulting your service representative, you may want to try to solve the problem yourself. This chapter lists some common problems and their possible solutions. This can't anticipate every problem, but you should check here before you panic. If you don't find the answer in these pages, make sure you have followed the instructions carefully and observed the safety precautions in the preface. If all else fails, talk to your service representative. You should also make a record of what happened and what remedies you tried.

Of course, if something goes wrong, it will happen at the most inconvenient time possible, so you should preview this section just in case. If, after you've tried everything, and the system still won't cooperate, try turning it off for a few minutes and then rebooting. You will lose any unsaved data, but it may start working again. Then call your service representative.

Basic Hints and Tips

Many of the following may seem obvious but they are often the solution to a problem when your computer appears not to be working.

- **Power** - Is the computer actually plugged into a working electrical outlet? If plugged into a **power strip**, make sure it is actually working. Check the **LED Power Indicators** (see *“LED Indicators” on page 1 - 9*) to see the computer’s power status.
- **Connections** - Check all the **cables** to make sure that there are no **loose connections** anywhere.
- **Power Savings** - Make sure that the system is not in **Hibernate** or **Sleep** mode by pressing the keys configured in your *Power Options* (see *“Configuring the Power Buttons” on page 3 - 9*), the **Fn + F12** key combination, or power button to wake-up the system.
- **Brightness** - Check the brightness of the screen by pressing the **Fn + F8 and F9** keys to adjust the brightness (see *Table 1 - 4, on page 1 - 20*).
- **Display Choice** - Press **Fn + F7** to make sure the system is not set to “external only” display.
- **Boot Drive** - Make sure there are no **optical media and/or USB storage devices** in any connected drive.

Backup and General Maintenance

- Always **backup** your important data, and keep copies of your OS and programs safe, but close to hand. Don't forget to note the **serial numbers** if you are storing them out of their original cases, e.g. in a CD wallet.
- Run **maintenance programs** on your hard disk and OS as often as you can. You may schedule these programs to run at times when you are not using your computer. You can use those that are provided free with your OS, or buy the more powerful dedicated programs to do so.
- Write down your passwords and keep them safe (away from your computer). This is especially important if you choose to use a **Boot** password for the SCU (see *“Security Menu” on page 5 - 14*).
- Keep copies of vital **settings files** such as network, dialup settings, mail settings etc. (even if just brief notes).



Bottom Cover Removal Warning

Users should not remove any cover(s) and /or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty. If you need to replace/remove the hard disk/RAM/optical device etc., for any reason, please contact your distributor/supplier for further information.

Viruses

- Install an **Anti-Virus** program and keep the **definitions file** (the file which tells your program which viruses to look for) up to date. New computer viruses are discovered daily, and some of them may seriously harm your computer and cause you to lose data. **Anti-Virus** programs are commercially available and the **definitions file updates** are usually downloadable directly from the internet.
- Be careful when opening e-mail from sources you don't know. **Viruses** are often triggered from within **e-mail attachments** so take care when opening any attached file. You can configure most **Anti-Virus** programs to check all **e-mail attachments**. **Note:** You should also beware of files from people you know as the virus may have infected an **address book** and been automatically forwarded without the person's knowledge.
- Keep a "**Bootable CD-ROM/DVD-ROM/USB storage device**" (this CD/DVD/USB device provides basic information which allows you to startup your computer) handy. You may refer to your OS's documentation for instructions on how to make one, and many **Anti-Virus** programs will also provide such a disk (or at least instructions on how to make one).

 
Upgrading and Adding New Hardware/Software

- Do not be tempted to make changes to your **Windows Registry** unless you are very sure of what you are doing, otherwise you will risk severely damaging your system.
- Don't open your computer or undertake any repair or upgrade work if as this may violate the terms of your warranty.
- Read the **documentation**. We can assume, since you are reading this that you are looking at the computer's manual, but what about any new peripheral devices you have just purchased? Many problems are caused by the installation of new hardware and/or software. Always refer to the documentation of any new hardware and/or software, and pay particular attention to files entitled "**READ ME**" or "**READ ME FIRST**".
- When installing a new device always make sure the device is powered on, and in many cases you will need to restart the computer. Always check that all the cables are correctly connected.
- Make sure you have installed the **drivers** for any new hardware you have installed (latest **driver files** are usually available to download from vendor's websites).
- Thoroughly check any **recent changes** you made to your system as these changes may affect one or more system components, or software programs. If possible, go back and undo the change you just made and see if the problem still occurs.

Troubleshooting

- Don't over complicate things. The less you have to deal with then the easier the source of the problem may be found; **Example** - if your computer has many devices plugged into its ports, and a number of programs running, then it will be difficult to determine the cause of a problem. Try disconnecting all of the devices and restarting the computer with all the peripheral devices unplugged. A process of elimination (adding and removing devices and restarting where necessary) will often find the source of a problem, although this may be time consuming.

Problems and Possible Solutions

Problem	Possible Cause - Solution
<p>You turned on the power but it doesn't work.</p>	<p><i>Battery missing / incorrectly installed.</i> Check the battery bay, make sure the battery is present and seated properly (the design of the battery only allows it to go in one way). Make sure there's nothing interfering with the battery contacts.</p>
<p>The battery LED power indicator , is blinking orange.</p>	<p><i>Low Battery.</i> Plug in the DC power source. If the computer doesn't start up immediately, turn it off then on again.</p>
<p>You are losing battery power too quickly.</p>	<p><i>The system is using too much power.</i> If your OS has a <i>Power Options</i> scheme (see "Power Plans" on page 3 - 5) check its settings. You may also be using a <i>peripheral device/USB device</i> that is drawing a lot of power.</p>
<p>Actual battery operating time is shorter than expected.</p>	<p><i>The battery has not been fully discharged before being recharged.</i> Make sure the battery is fully discharged and recharge it completely before reusing (see "Battery Information" on page 3 - 17).</p> <p><i>Power Options have been disabled.</i> Go to the Control Panel in <i>Windows</i> and re-enable the options.</p> <p><i>A peripheral device/USB device is consuming a lot of power.</i> Turn off/remove the unused device to save power.</p>

Troubleshooting

Problem	Possible Cause - Solution
The computer feels too hot .	<p>Make sure the computer is properly ventilated and the Vent/Fan intakes are not blocked. If this doesn't cool it down, put the system into Hibernate mode or turn it off for an hour. Make sure the computer isn't sitting on a thermal surface (see “Overheating” on page 1 - 22, 1 - 26 & 1 - 27). Make sure you're using the correct adapter.</p> <p>Make sure that your notebook is completely powered off before putting it into a travel bag (or any such container). Putting a notebook which is powered on in a travel bag may cause the Vent/Fan intakes to be blocked.</p>
Nothing appears on screen.	<p><i>The system is in a power saving mode.</i> Toggle the sleep/resume key combination, Fn + F12 (see “Configuring the Power Buttons” on page 3 - 9).</p> <p><i>The screen controls need to be adjusted.</i> Toggle the screen control key combinations Fn + F8/F9. If you're connected to an external monitor, make sure it's plugged in and turned on. You should also check the monitor's own brightness and contrast controls.</p> <p><i>The computer is set for a different display.</i> Toggle the screen display key combination, Fn + F7. If an external monitor is connected, turn it on.</p> <p><i>The screen saver is activated.</i> Press any key or touch the TouchPad.</p>
No image appears on the external monitor I have plugged in and powered on.	<p><i>You haven't installed the video driver and configured it appropriately from the Control Panel.</i> See Appendix C for instructions on installing and configuring the video driver.</p>


Problem	Possible Cause - Solution
The Thunderbolt Port doesn't appear to work.	<i>The Thunderbolt Port must be enabled in the BIOS. You will need to enable Thunderbolt support in the BIOS “Intel(R) Thunderbolt Technology (Advanced Menu > Intel(R) Thunderbolt)” on page 5 - 10.</i>
An external display will not connect to the Thunderbolt Port .	<i>The security level of the Thunderbolt Port must be set to support Display only in order to support external display connections. If you want to use the Thunderbolt port to support display devices then you will need to set the security level to support display devices only (see “Security Level (Advanced Menu > Intel(R) Thunderbolt)” on page 5 - 11). When the Thunderbolt port is set to be used for display only, then DisplayPort 2 (6 in <i>Figure 1 - 13 on page 1 - 21</i>) will be turned off.</i>
One of the DisplayPorts doesn't work.	<i>You have enabled the Thunderbolt port as Display only and this turns one of the DisplayPorts off. See “Security Level (Advanced Menu > Intel(R) Thunderbolt)” on page 5 - 11 and change the security level of the port.</i>
You forget the boot password .	<i>If you forget the password, you may have to discharge the battery of the CMOS. Contact your service representative for help.</i>




Password Warning

If you choose to set a boot password, **NEVER** forget your password. The consequences of this could be serious. If you cannot remember your boot password you must contact your vendor and you may lose all of the information on your hard disk.

Troubleshooting

Problem	Possible Cause - Solution
The sound cannot be heard or the volume is very low .	<i>The volume might be set too low.</i> Check the volume control in the Volume Control Panel in the <i>Windows</i> notification area, or use the key combination Fn + F5 and F6 (see <i>“Function Keys & Visual Indicators” on page 1 - 20</i>) to adjust.
Unwelcome numbers appear when typing.	<i>Num Lock is turned ON</i> (see <i>“LED Indicators” on page 1 - 9</i>).
 <h3>Other Keyboards</h3> <p>If your keyboard is damaged or you just want to make a change, you can use any standard USB keyboard. The system will detect and enable it automatically. However special functions/hot keys unique to the system's regular keyboard may not work.</p>	
The system freezes or the screen goes dark.	<i>The system's power saving features have timed-out.</i> Use the AC/DC adapter, press the sleep (Fn + F12) key combination, or press the power button if no LEDs are lit.
The system never goes into a power saving mode .	Power Options features are not enabled. Go to the Windows Power Options menu and enable the features you prefer (see <i>“Power-Saving States” on page 3 - 7</i>). Make sure you have enabled Hibernate mode from the control panel.

Problem	Possible Cause - Solution
The Wireless LAN/Bluetooth modules cannot be detected.	<i>The modules are off as the computer is in Airplane Mode. Check the LED indicator  to see if it is in Airplane Mode (see “LED Indicators” on page 1 - 9). Use the Fn + F11 key combination to toggle Airplane Mode on/off (see Table 1 - 4, on page 1 - 20).</i>
The PC Camera module cannot be detected.	<i>The module is off. Press the Fn + F10 key combination in order to enable the module (see “Function Keys & Visual Indicators” on page 1 - 20). Run the camera application to view the camera picture.</i>
The Wireless LAN/Bluetooth modules cannot be configured.	<i>The driver(s) for the module(s) have not been installed. Make sure you have installed the driver for the appropriate module (see the instructions for the appropriate module in “Wireless LAN Module” on page 6 - 21 and/or “Bluetooth & WLAN Combo Module” on page 6 - 39).</i>
A file cannot be copied to/from a connected Bluetooth device.	<i>The transfer of data between the computer and a Bluetooth enabled device is supported in one direction only (simultaneous data transfer is not supported). If you are copying a file from your computer to a Bluetooth enabled device, you will not be able to copy a file from the Bluetooth enabled device to your computer until the file transfer process has been completed</i>

Troubleshooting

Problem	Possible Cause - Solution
<p>The computer is off (or in Sleep Mode) but powered by the AC/DC adapter plugged in to a working outlet, or by battery with a capacity above 20%. I have plugged a device into the powered USB port in order to charge it, but the device is not charging.</p>	<p><i>The port is not powered on.</i> Toggle power to the port using the Fn + power button combination.</p> <p><i>This function may not work with certain external USB compliant devices (check your device's documentation).</i> If this is the case, power the computer on and connect the external USB device in order to charge it.</p> <p>Note that this function is designed to help charge USB compliant devices, but is not designed to allow their operation.</p>
<p>No sound can be heard through an HDMI connected display.</p>	<p><i>You have not configured the HDMI audio output.</i> See “G-SYNC” on page C - 19.</p>
<p>Audio Volume is too low when listening through headphones.</p>	<p><i>You have set the Speaker Configuration to 5.1 or 7.1 Speaker.</i> It is recommended that you set the Speaker Configuration to Stereo (not to 5.1 or 7.1 Speaker) when listening through headphones in order to maximize audio quality. See “Audio Features” on page 2 - 4.</p>
<p>The Sound Blaster audio controls don't work when the system is connected to an external display through an HDMI/ Display Port cable.</p>	<p><i>Note that Sound Blaster Audio will be disabled when you are connecting to an external display through an HDMI or Display Port connection.</i> See “Sound Blaster Audio & HDMI/Display Port” on page C - 28.</p>
<p>The fingerprint reader has problems scanning fingers.</p>	<p><i>When fingers are wet or sweaty the software application may have difficulty reading a scanned finger.</i> Make sure your fingers are clean and dry when attempting to scan them across the sensor for detection.</p>

Problem	Possible Cause - Solution
<p>I have used Update Driver in Device Manager (Unknown device > Other Devices) to try and install the Airplane Mode driver. Windows encountered a problem in attempting to update the driver, and a yellow exclamation mark appears in Device Manager against the Unknown device.</p>	<p><i>It is very important that the drivers are installed in the order indicated in Chapter 4 (which is the numbered installation order on the Device Drivers & Utilities + User's Manual disc). This issue can occur when drivers are manually installed, and not in the correct order.</i></p> <p>If you have attempted to Update Driver from the Device Manager control panel and have encountered problems, then use the method below to correct this:</p> <p>To correct this problem:</p> <ol style="list-style-type: none"> 1. Go to the Programs and Features (Programs) control panel in Windows. 2. Select any installed Airplane Mode driver item (e.g. Insyde Airplane Mode HID Mini-Driver), and click Uninstall/Change to uninstall the current driver. 3. Restart the computer. 4. Insert the <i>Device Drivers & Utilities + User's Manual disc</i> and click Install Drivers (button). 5. Double-click the Airplane Driver item in the menu. 6. Follow the instructions to install the correct driver (you will need to restart the computer as part of the installation process).

Troubleshooting

Problem	Possible Cause - Solution
When using a Bluetooth headset the audio appears to be mono and not stereo.	<p><i>This is a common issue with Bluetooth headsets. To resolve this issue do the following (you will need to repeat this procedure after every boot up, restart, or when the system resumes from hibernation):</i></p> <ol style="list-style-type: none">1. Go to the Devices & Printers control panel in Windows.2. Double-click the Bluetooth headset.3. Click Connect to complete the stereo connection. <p>OR</p> <ol style="list-style-type: none">1. Go to the Sound control panel in Windows.2. Right-click (in the Playback tab) the Bluetooth Stereo Audio device (the default device is Headset).3. Click Connect to complete the stereo connection.

Thunderbolt Support

You can **enable/disable** Thunderbolt support (and set the security level) in the **BIOS/Aptio Setup Utility**. It is enabled in Legacy Mode by default.

1. Restart the computer.
2. Enter the **Aptio Setup Utility** (BIOS) by pressing **F2** at startup.
3. Use the arrow keys to select the **Advanced** menu.
4. Select **Intel(R) Thunderbolt** and press Enter.
5. Select **Intel(R) Thunderbolt Technology**, press Enter and select **Enabled/Disabled**.
6. If Enabled select **Security Level** and press Enter.
7. Select the level required from the menu and press Enter after making the selection:
 - **Legacy mode** will allow any devices to be connected.
 - You can set the port to allow only devices with a **Unique ID** to connect.
 - If you set a **one time saved key** to ensure only approved devices can connect.
 - Setting the port to **DP++** will only allow display devices to connect to the port, and no data connections will be allowed. **If you want to use the Thunderbolt port for display only then you must set this as the security level, and DisplayPort2 (6 in *Figure 1 - 13 on page 1 - 21*) will then be turned off.**
8. Press **F4** to save any changes made and restart the computer.

Ejecting Thunderbolt Devices





To prevent system problems **do not simply pull the cable out from the Thunderbolt port**. Go to the notification area of the taskbar in the Desktop app and click on the **Safely Remove Hardware and Eject Media** icon.

 




Appendix A: Interface (Ports & Jacks)

Overview





The following chapter will give a quick description of the ports & jacks which allow your computer to communicate with external devices, connect to the internet etc.

Ports and Jacks



Item	Description
<p>Card Reader</p> 	<p>The card reader allows you to use the following digital storage cards:</p> <p>MMC (MultiMedia Card) / RSMHC SD (Secure Digital) / Mini SD / SDHC / SDXC (up to UHS-II)</p> <p>Push the card into the slot and it will appear as a removable device.</p>
<p>DC-In Jack</p> 	<p>Plug the supplied AC/DC adapter into this jack to power your computer.</p>
<p>DisplayPort 1.2</p> 	<p>The DisplayPort is a digital display interface standard that allows a digital audio/video interconnect, between the computer and its external display or a home-theater system. Note When you enable a display only connection for the Thunderbolt port (in the BIOS) then one of the DisplayPorts will be turned off (see page A - 5).</p> <div data-bbox="440 680 1458 897" style="border: 2px solid red; border-radius: 15px; padding: 10px;"><p style="text-align: center;"> DisplayPort Cables</p><p>When using cables connected to the Display Port, try to make sure that the cables are not bent excessively, as bending the cables may cause signal problems.</p></div>

Item	Description
<p>e-SATA / Powered USB 3.0 Combo Port</p> 	<p>This e-SATA (external Serial Advanced Technology Attachment) port allows you to plug-in external Serial ATA hard drives. This port also serves as a powered USB 3.0 port.</p> <p><i>Note:</i> The powered USB 3.0 port (see Figure 1 - 15 on page 1 - 24) may be toggled on /off by means of the Fn + Power Button key combination. When the powered USB port is on it will supply power (for charging devices only, not for operating devices) when the system is off but still powered by the AC/DC adapter plugged into a working outlet, or powered by the battery with a capacity level above 20% (this may not work with certain devices - see page 7 - 12).</p> <p>Note: This function is designed to help charge USB compliant devices, but is not designed to allow their operation.</p>
<p>HDMI-Out Port</p> 	<p>The HDMI-Out (High-Definition Multimedia Interface) port is an audio/video connector interface for transmitting uncompressed digital streams. This allows you to connect an external monitor, TV or Flat Panel Display etc. as a display device (see “Configuring an External Display (NVIDIA)” on page C - 7) by means of a HDMI cable. Note that HDMI carries both audio and video signals.</p>
<p>Headphone-Out Jack</p> 	<p>Headphones or speakers may be connected through this jack. Note: Set your system's volume to a reduced level before connecting to this jack.</p>
<p>Line-In Jack</p> 	<p>The Line-In jack allows you to play audio sources through the computer's speakers. Note that audio input through Line-in will default to the mute setting. To set up your audio sources to play through the Line-in jack go to the Sound  control panel and make sure the Mute box is not checked.</p>


Interface (Ports & Jacks)

Item	Description
<p data-bbox="161 228 370 247">Microphone-In Jack</p> 	<p data-bbox="434 228 1187 247">Plug an external microphone in to this jack to record on your computer.</p>
<p data-bbox="177 351 354 370">RJ-45 LAN Jack</p> 	<p data-bbox="434 351 900 370">This port supports LAN (Network) functions.</p> <p data-bbox="434 378 1198 397">Note: Broadband (e.g. ADSL) modems usually connect to the LAN port.</p>
<p data-bbox="177 482 354 501">S/PDIF-Out Jack</p> 	<p data-bbox="434 482 1465 591">This S/PDIF (Sony/Philips Digital Interface Format) Out Port allows you to connect your DVD-capable PC to a Dolby AC-3 compatible receiver for “5.1” or ‘dts’ surround sound. External 71CH Audio Output is supported by Headphone, Microphone, Line-In & S/PDIF Jacks (see “Setup for 5.1 or 7.1 Surround Sound” on page 2 - 5).</p>
<p data-bbox="172 623 365 642">Security Lock Slot</p> 	<p data-bbox="434 623 1465 673">To prevent possible theft, a Kensington-type lock can be attached to this slot. Locks can be purchased at any computer store.</p>

A

Item	Description
Thunderbolt™ 3 Port/ USB 3.1 Type C Port 	<p>This unified Thunderbolt 3 port/ USB 3.1 port allows for the connection of external peripherals to the computer by combining PCI Express (PCIe), DisplayPort (DP), USB 3.1 and its own Thunderbolt 3 technologies. Up to seven peripherals may be supported by one connector by daisy-chaining the devices. Devices supported include HDDs/SSDs, Audio Interfaces, docks, display devices, cameras, network cables etc.</p> <p>Install the driver as instructed in <i>“Thunderbolt Port” on page 4 - 7</i>. This will install the Thunderbolt software to your computer, and this can be accessed by clicking or double-clicking the icon  in the Start screen, Desktop app or notification area of the taskbar.</p> <p>You will need to enable Thunderbolt support in the BIOS <i>“Intel(R) Thunderbolt Technology (Advanced Menu > Intel(R) Thunderbolt)” on page 5 - 10</i>. You can also set the level of security for the Thunderbolt port in the BIOS. If you want to use the Thunderbolt port to support display devices then you will need to set the security level to support display devices only (see <i>“Security Level (Advanced Menu > Intel(R) Thunderbolt)” on page 5 - 11</i>). When the Thunderbolt port is set to be used for display only, then DisplayPort 2 (6) in <i>Figure 1 - 13 on page 1 - 21</i> will be disabled.</p> <ol style="list-style-type: none"> 1. Plug a Thunderbolt™ device into the Thunderbolt™ port. 2. Some Thunderbolt devices will require their own driver installation at this point. 3. Access the Thunderbolt software to view information on device chains. <p>See over for details on how to eject Thunderbolt devices.</p>

Interface (Ports & Jacks)

Item	Description
<div data-bbox="762 252 826 293" style="text-align: center;"></div> <div data-bbox="625 305 967 333" style="text-align: center;"><h3>Ejecting Thunderbolt Devices</h3></div> <p data-bbox="158 344 1436 398">In order to prevent system problems make sure you do not simply pull the cable out from the Thunderbolt port. The hardware must be ejected safely:</p> <ol data-bbox="158 412 1431 527" style="list-style-type: none">1. Go to the notification area of the taskbar in the Desktop App and click on the Safely Remove Hardware and Eject Media icon.2. Click on Eject "<i>Thunderbolt Device Name</i>".3. When you see the "Safe to Remove Hardware" message you can remove the cable.	

A

Appendix B: Control Center & Flexikey®



Overview

The following chapter will give a quick description of the functions of the **Control Center & Flexikey®** applications.

Control Center

The **Control Center** gives quick access to frequently used controls, power management features and enables you to quickly turn modules on/off. Click the **Control Center** icons to toggle the appropriate function, or hold the mouse button down and move the dial control where applicable. Certain functions will automatically be adjusted when a power mode is selected. The **Control Center** in *Windows 10* works under the **Desktop** app and not under the Start screen.

Flexikey®

The **Flexikey®** application is a quick hotkey configuration application, which allows you to **assign a single key to launch multiple key combinations**, or to **launch programs and applications**, to **create text macros** and to **disable** certain keys. The application can also be used to **configure the mouse buttons** to create hotkeys for gaming etc. All the configuration settings are retained under (up to 12) **profiles** to which the settings are applied. Click **Flexikey®** in the **Gaming** section of the Control Center, or the **click the icon**   in the notification area of the taskbar, to launch the application.



Control Center & Flexikey®



B



Control Center Access

To run the Control Center press the **Fn + Esc** key combination, or double-click the icon  in the notification area of the taskbar. Close the Control Center by clicking the  close icon in the top right of the panel (move the cursor onto the top right corner of the panel to highlight it).

Flexikey® Access

The **Flexikey®** is accessed from within the Control Center by clicking **Flexikey®** in the **Gaming** section of the Control Center.

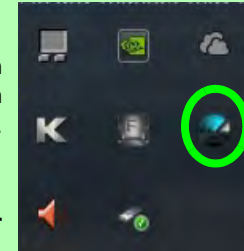


Figure B - 1 - Control Center & Flexikey®

Power Modes

You can set a **Power Mode** by clicking the appropriate icon at the top of the **Control Center**. Each power mode will affect the Power Conservation Mode, Airplane Mode, Power Plan and PC camera power etc.

You can click a **Control Center** icon to set an overall power mode and then click individual icons in the **Control Center** to power on/off the Touchpad and PC camera.








Modes		Quiet	Power Saving	Performance	Entertainment
Icon					
Power Plan		Balanced	Power Saver	High Performance	Balanced
Power Conservation Mode		Balance	Energy Star	Performance	Balance
PC Camera		ON	OFF	ON	ON
TouchPad		ON	ON	ON	OFF
Airplane Mode		OFF	ON	OFF	OFF

Table B - 1- Power Modes


Control Center & Flexikey®

Control Center Menus

The Control Center contains 3 menu headings (**System Program**, **Device** and **Gaming**) under the Power Modes. Click the menu headings and then click any of the buttons outlined on the following pages.



Display Utility

The **Display Utility** icon  will only appear in the **System Program** menu if your display's resolution is QHD (2560 * 1440) or above.

The **Display Utility** allows you to adjust text size on the screen to make it easier to view (see page [B - 8](#)).



The **System Program** will display an arrow icon  at the bottom right of the menu which you can click to allow you to access the second page of the menu containing the **Time Zone** item.



Figure B - 2 - Control Center Menus

Power Status (System Program) 

The **Power Status** icon will show whether you are currently powered by the battery, or by the AC/DC adapter plugged in to a working power outlet. The power status bar will show the current battery charge state.

Brightness (System Program) 

The **Brightness** icon will show the current screen brightness level. You can use the slider to adjust the screen brightness or the **Fn + F8/F9** key combinations, or use the **Fn+ F2** key combination to turn off the LED backlight (press any key to turn it on again).

Volume (System Program) 

The **Volume** icon will show the current volume level. You can use the slider to adjust the Volume or the **Fn + F5/F6** key combinations, or use the **Fn+ F3** key combination to mute the volume.


Fan Speed (System Program) 

You can set the fan speed to **Maximum (full power)**, **Automatic**, **Custom** or **Overclock** from this menu item. The fan speed will adjust itself automatically to control the heat of the CPU. However you can adjust the setting to maximum if you prefer. **Overclock** will be selected automatically if you have enabled CPU or GPU over-clocking (in this case do not change the setting).

(See over)

Control Center & Flexikey®

Select **Custom** and click on the sliders to adjust the settings to your preference, however these settings can be overridden by the system, as a safety precaution, if it requires heavier use of the fan.

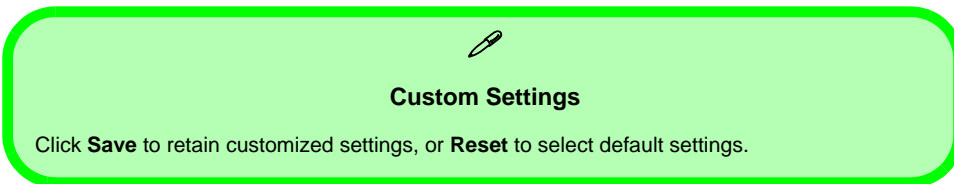

Power Conservation (System Program)

This system supports **Power Saving** power

management features that place computers (CPU, hard drive, etc.) into a low-power sleep modes after a designated period of inactivity (see *“Power Conservation Modes” on page 3 - 12*). Click either the **Performance**, **Balanced** or **Power Saving** button.

 


Sleep Button (System Program)



Click either the **Hibernate** or **Sleep** buttons to have the computer enter the selected power-saving mode (see *“Power-Saving States” on page 3 - 7*).


Desktop Background (System Program)



Clicking the **Desktop Background** button will allow you to change the desktop background picture.

Display Switch (System Program)



Click the **Display Switch** button to access the menu (or use the  + **P** key combination) and select the appropriate attached display mode.

Time Zone (System Program)

Clicking the **Time Zone** button will access the **Date and Time Windows** control panel.

TouchPad/Camera (Device)

Click either of these buttons

to toggle the TouchPad or camera module's power status. The icon will appear dimmed when it is off. Note that the power status of the camera module is also effected by the **Power Mode** selected (see [Table B - 1, on page B - 3](#)).

Caps Lock/Scroll Lock/ Number Lock/Airplane Mode

Click the button to toggle the appropriate lock mode and Airplane Mode.

**Left Windows Key (Gaming)**

 
Click **Disable** to disable the Windows Key on the left side of the keyboard. This may be useful if you are using the gaming keys (**W, A, S & D**) and wish to avoid accidentally triggering menus with the Windows Key.

Headphone (Gaming)

The headphones may be set for different effects using this menu.


Flexikey® (Gaming)

Click the button to access the **Flexikey®** application.



Control Center & Flexikey®

Display Utility (System Program for High Definition displays only)

The **Display Utility** icon  will only appear in the **System Program** menu if your display's resolution is QHD (2560 * 1440) or above. The **Display Utility** allows you to adjust text size on the screen to make it easier to view.

The initial screen will display the default **Express** settings as indicated below.



Figure B - 3 - Display Utility - Express Settings

Click **Save** to retain the settings, and you will then need to sign out of the computer, and sign back in again, to adjust the settings. **Note that you must save any open files and close open programs before signing out in order not to lose any work.**

Click **Advanced** to adjust the settings to adjust the overall DPI scaling to your requirements, or you can also click on the items (**Icons, Title Bars, Message Boxes, Menus, Tool Tips & Palette Titles**) in the lower half of the screen to customize the text size.



Figure B - 4 - Display Utility - Advanced Settings

Click **Save** to retain the settings, and you will then need to sign out of the computer, and sign back in again, to adjust the settings. **Note that you must save any open files and close open programs before signing out in order not to lose any work.**

Any changes made to the individual text size items are linked to the overall **DPI Scaling** selected. If you change the **DPI scaling**, the customized text size changes will become grayed out and will only become available again after you have signed out of the computer, and signed back in again.

Control Center & Flexikey®


The **System Program** will display an arrow icon  at the bottom right of the menu which you can click to allow you to access the second page of the menu containing the Time Zone item.



Figure B - 5 - Time Zone (if Display Utility is Included)

B

CPU Overclocking Support

You can enable overclocking support for systems with Intel® Core™ i7-6700K (4.0GHz) & Intel® Core™ i7-6600K (3.5GHz) CPUs. However to support overclocking for this CPU you will need to install the **Intel(R) Extreme Tuning Utility** which is provided on the *Device Drivers & Utilities + User's Manual disc*.

1. Make sure all the necessary drivers and utilities are already installed on the computer.
2. Insert the *Device Drivers & Utilities + User's Manual* disc into an attached DVD drive.
3. Browse to the location (D: denotes your DVD drive) below on the *Device Drivers & Utilities + User's Manual* disc.
 - **D:\Options\XTU_6.XXXXX (X denotes the version number which is subject to change)**
4. Run the XTU-Setup.exe executable file.
5. Click the checkbox to accept the terms of the license agreement and click **Install and then** click **Close**.
6. Access the **Intel(R) Extreme Tuning Utility** from the desktop shortcut or from the apps menu.
7. Note that making alterations to clock frequency and/or voltage can cause system instability, cause components to fail, cause heat damage and result in data loss, and any changes made may affect the processor warranty.



Figure B - 6 - Intel Extreme Utility - Warning

Control Center & Flexikey®

- You will need to agree to the usage conditions before continuing.
- You may tune the system using the set of controls provided on the left side menus e.g. System Information etc.

The screenshot displays the Intel Extreme Tuning Utility (XTU) interface. The main window is titled "Intel® Extreme Tuning Utility" and features a dark theme. On the left, a sidebar contains navigation options: System Information, Core, Basic Tuning, Advanced Tuning (selected), Core, Cache, Graphics, Stress Test, Benchmarking, Profiles, and App-Profile Pairing. The "Advanced Tuning" section is active, showing various system parameters and their current values. The "Core" section includes Reference Clock (100,000 MHz), Core Voltage Mode (Dynamic CPU Voltage Offset), Processor Core IccMax (68.00 A), Turbo Boost Short Power Max (56,250 W), and Turbo Boost Power Time Window (8.00 Seconds). The "Cache" section shows Processor Cache Ratio (36 x), Processor Cache Voltage (Default), and Processor Ring/Cache IccMax (68.00 A). The "Graphics" section includes Processor Graphics Voltage Mode (Adaptive), Processor Graphics Voltage (Default), Processor Graphics Voltage CL (0.000000 mV), Processor Graphics State InM (2000 A), Processor Graphics Under V (Default), Processor Graphics Under V (Adaptive), Processor Graphics Under V (Default), Processor Graphics Under V (0.000000 mV), Processor Graphics Ratio Limit (2.0 x), and Max Processor Graphics Freq. (200 MHz). The right side of the window displays a comparison table for "Core" settings, with columns for "Default" and "Proposed" values. The bottom of the window features a real-time monitoring dashboard with CPU Temperature (39 °C), CPU Utilization (6%), Processor Frequency (0.00 GHz), CPU Utilization (6%), Memory Utilization (2024 MB), CPU Temperature (39 °C), Thermal Throttling (0%), Processor Frequency (0.50 GHz), Processor Cache Frequency (0.80 GHz), Graphics Frequency (0 MHz), Active Core Count (1), and a 5-minute timer.

Figure B - 7 - Intel(R) Extreme Tuning Utility

10. A Help file is provided and you can check the Intel website for further information.

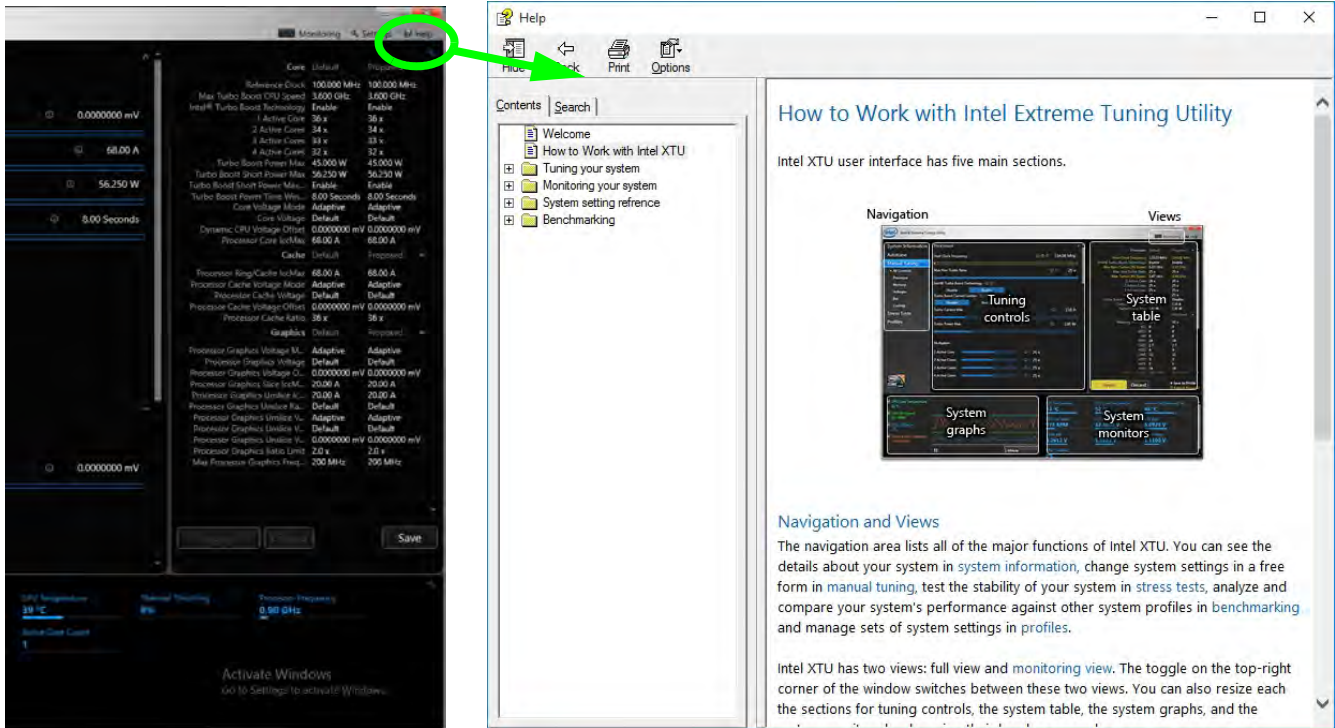


Figure B - 8 - Intel(R) Extreme Tuning Utility - Help

Control Center & Flexikey®

After the Intel(R) Extreme Tuning Utility has been installed, the **CPU Overclocking** button will appear on your **Control Center Gaming** page. This button provides quick access to the **Intel(R) Extreme Tuning Utility**. If you have enabled CPU overclocking the **Fan Speed** will also automatically be set to overclock (do not adjust this fan speed setting if you have enabled CPU overclocking).



Figure B - 9 - Gaming with CPU Overclocking

GPU Overclocking

Click the button to access the enable/disable GPU overclocking for certain types of CPU and GPU (contact your distributor or supplier to see if this is applicable to your model). Overclocking the graphics processing unit (or GPU) involves running your graphics processor at a faster speed than was originally intended. GPU overclocking is useful when undertaking intensive graphic tasks e.g. 3D rendering and gaming, without dropping framerates etc.



Figure B - 10 - Control Center Gaming with GPU Overclocking

Control Center & Flexikey®

Overclocking should only be enabled when powered by a plugged-in adapter, and not on battery power. The Fan Speed will also automatically be set to overclock (do not adjust this fan speed setting if you have enabled GPU overclocking).

Click **On** to enable GPU overclocking, and **Save** to retain the setting changes, and then click **OK** when the system warning message appears. The message highlights the fact that while overclocking the GPU offers a boost to graphics performance, it can cause system instability in certain circumstances as the harder you push the processor, the more power you will need to supply to it, and the hotter the system will run. Therefore it is not recommended that you enable GPU overclocking for extended periods, only as and when specifically required.

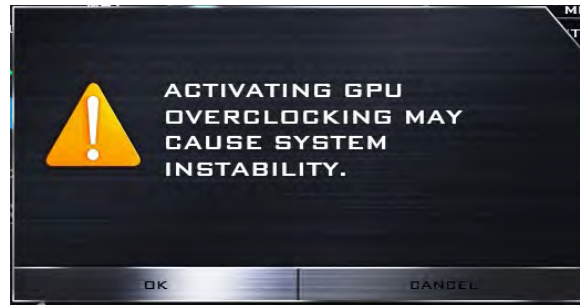
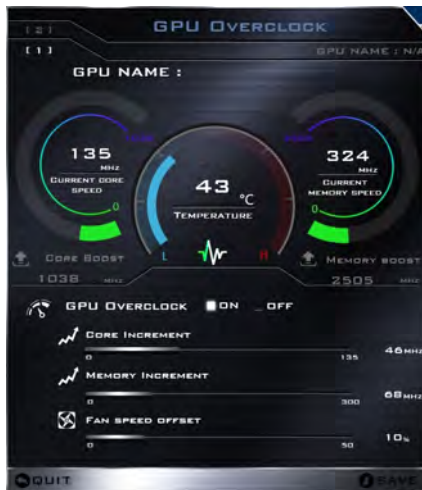


Figure B - 11 - GPU Overclocking

Flexikey® Application

Click the button  in the **Control Center**, or the **click the icon**   in the notification area of the taskbar, to access the **Flexikey®** application.

Profiles

The menus on the left side of the application relate to Profiles. You can **Add** or **Delete** Profiles (**you can maintain 12 active Profiles**), **Export** and **Import** profiles from the menus. If you double-click on a Profile you can change the **Profile Name**, and change an **Image** file (images created using PNG files).

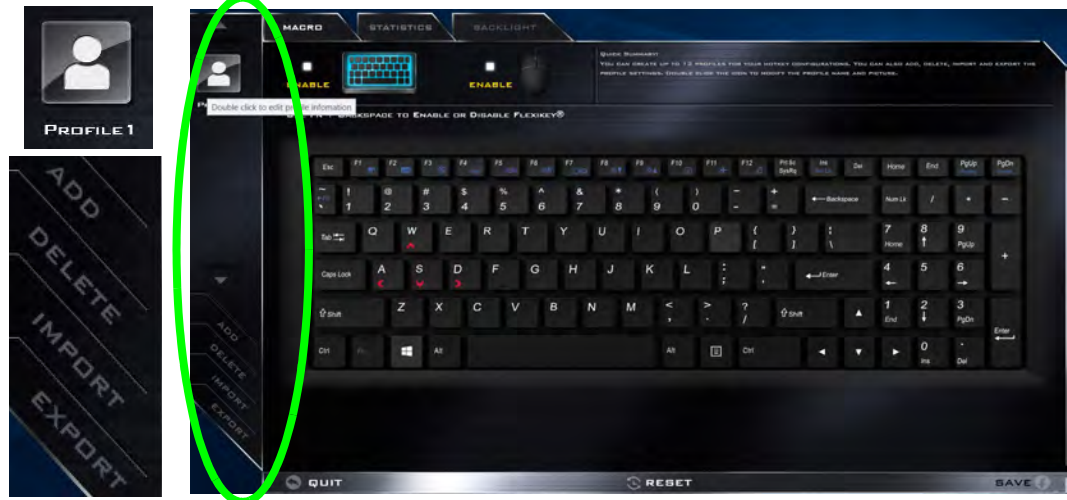
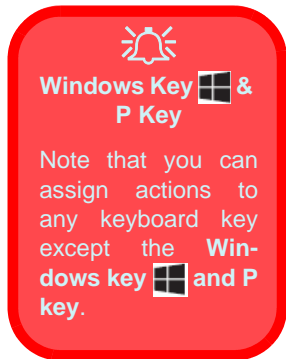


Figure B - 12 - Flexikey® - Profiles

Control Center & Flexikey®

Flexikey® Application Features

- **EXPRESS KEY** - This feature allows you to configure a single key to send multiple key combinations or to create more useful shortcut keys. This is useful in gaming or when using applications which have a complex set of keyboard shortcuts.
- **LAUNCH APP** - This simply assigns single keys to launch any program's or application's executable file.
- **EXPRESS TEXT** - With this you can assign single keys to send commonly used strings of text.
- **DISABLE** - Use this function to disable any keyboard keys.
- **STATISTICS** - Use this to quickly record keys in use in any application, and to disable unused keys.

Keyboard and Mouse Settings

Click **Enable** to create settings for the keyboard and/or mouse by clicking the button on the top left of the screen (e.g. you may wish to create a profile with settings only for the mouse or keyboard). Clicking on the keyboard or mouse icons will allow you to access the settings page for the either the keyboard or mouse.

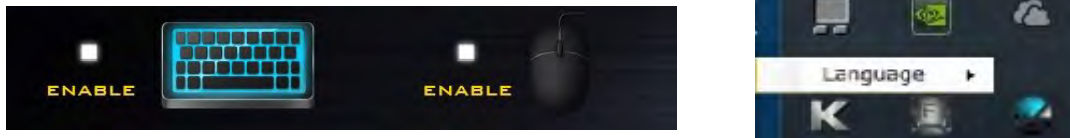



Figure B - 13 - Enable Keyboard & Mouse / Language Selection

Language Interface

You can change the language interface by right-clicking the icon  in the notification area of the taskbar and selecting the language from the menu.

Enabling or Disabling Flexikey®

You can enable or disable Flexikey® (and therefore any hotkeys or mouse profile functions currently in use) by using the **Fn + Backspace** key combination. Pressing this key combination will toggle you between the currently selected keyboard or mouse profile to the standard keyboard and/or mouse settings, and back again.

*** USE FN + BACKSPACE TO ENABLE OR DISABLE FLEXIKEY®**

Figure B - 14 - Enable/Disable Flexikey®



The icon Flexikey® icon in the notification area of the taskbar will appear grayed out  when Flexikey® is off, and in color  when on (an on screen icon will also pop-up to display the status of the application as it is toggled on/off).





Figure B - 15 - Taskbar Notification Area Icons

Control Center & Flexikey®

Keyboard Settings

The keyboard settings allow you to configure actions for any single key (or a combination of keys). Click the key and then select the **Action Type** (**Express Key**, **Launch App**, **Express Text** or **Disable**) from the menu at the bottom of the page. You can rename the action by clicking in the **Name** box, and click in **Tool Tips** to type in a note to remind you of the action's function.




Windows Key  &
P Key


Note that you can assign actions to any keyboard key except the Windows key  and P key.

Figure B - 16 - Key Configuration

Mouse Settings

When an external mouse is attached, the mouse settings allow you to configure actions for the left **1**, right **2** and middle **3** buttons of the attached mouse, and also for any backward **4** and forward **5** buttons if applicable (on a gaming type mouse). Click the button number and then select the **Action Type** (**Express Key**, **Launch App**, **Express Text** or **Disable**) from the menu at the bottom of the page. You can rename the action by clicking in the **Name** box, and click in **Tool Tips** to type in a note to remind you of the action's function.



Figure B - 17 - Mouse Configuration

B

Keyboard Settings - Express Key

To configure a single key to send multiple key combinations, or to create more useful shortcut keys, use **Express Key**.

1. **Enable** and select the keyboard under your chosen profile, click on a key to select it, and then click to select **Express Key** in **Action Type**.
2. In the following example we want to change an existing game key configuration which uses the **left shift** key for sprinting, and the **W** key for moving forwards, to use the **left Ctrl** key to combine this movement to sprint forward.
3. Click on the chosen key for the shortcut action.
4. Click in the **Tool Tips** field and type to give the key combination a name e.g. “*Sprint Fwds*”, then click back in the Name field (to avoid adding the recorded keys to the Tool Tips name).
5. Click **Start Record** and then **press** the key or keys (in this case we will **press** Left Shift and W) required (make sure you **press the key(s) required** and do not click on them).
6. Click **Stop Record** to complete the process.



Figure B - 18- Express Key Record Key Combination

- Click **Save** to save the settings within your chosen profile.
- If you want to remove any individual key click to select it, and then click **Delete**.
- If you want to clear all the settings click **Restore** to return to the default key setting.
- Any assigned **Express Keys** will appear in **orange**.



Figure B - 19 - Key Combination Set



Tool Tips

The Tool Tips field allows you to type a note to remind yourself of the function you have programmed the key for under any Profile.

Control Center & Flexikey®

Enabling Time Record

If you want to create a delay between key presses within the key combination, then you can use **Time Record** function to do so.


1. **Enable** and select the keyboard under your chosen profile, click to select a key for the shortcut action, and then click to select **Express Key** in **Action Type**.
2. Click in the **Tool Tips** field and type to give the key combination a name, then click back in the Name field (to avoid adding the recorded keys to the Tool Tips name).
3. Click **Start Record** and then **press** the key or keys required in the sequence and time delay between key presses required (make sure you **press the key(s) required** and do not click on them).
4. Click **Stop Record**.
5. Click to select a key in the sequence and click **Enable Time Record**  **ENABLE TIME RECORD**, then click a key to view the time delay.




Figure B - 20 - Enable Time Record

- You can edit the delay between key presses by clicking in the **Delay Time (MS)** field and typing a new number for the delay between the key presses.



Figure B - 21 - Time Record Between Key Presses

- Click  to close the Time Record window.
- Click **Save** to save the settings within your chosen profile.
- If you want to remove any individual key click to select it, and then click **Delete**.
- If you want to clear all the settings click **Restore** to return to the default key setting.

Keyboard Settings - Launch App

You can configure keys to launch any application or program as follows:

1. **Enable** and select the keyboard under your chosen profile, click to select a key to launch the application, and then click to select **Launch App** in **Action Type**.
2. Click **Browse...** at the bottom right of the application window.

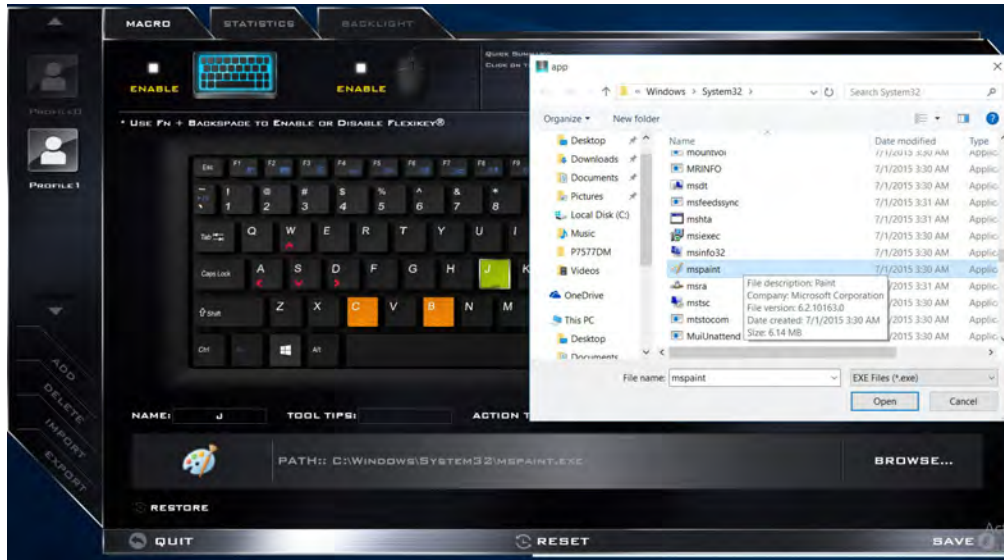


Figure B - 22 - Keyboard - Launch App (Browse to Executable File)

3. Navigate to the executable file of the application and click **Open**.
4. The key will now be configured to open the selected application under your chosen Profile, and the key will appear in **green**.



Figure B - 23 - Key Set to Launch App

5. If you want to remove any **Launch App Key**, select it and click on **Restore**.
6. Click **Save** to save the settings within your chosen profile.

Keyboard Settings - Express Text

A single key can be set to send a string of text within any application using **Express Text**.

1. **Enable** and select the keyboard under your chosen profile, click to select a key, and then click to select **Express Text** in **Action Type**.
2. Click in **Start** key if required (the **Start** key is the key used to in your target program to open a text message), or you can leave it blank if you prefer.
3. Click in the **Click to type** field and type in your message.



Figure B - 24 - Keyboard - Express Text

4. Click in **Send** key if required (the **Send** key is the key used to in your target program to send a text message e.g the Enter key would be the most commonly used), or you can leave it blank if you prefer.
5. The key will now be configured to send the text message in the target program under your chosen Profile, and the key will appear in **blue**.
6. If you want to remove any **Express Text** key, select it and click on **Restore**.
7. Click **Save** to save the settings within your chosen profile.



Copy & Paste Text

Note that some applications and games do not support copy and pasted text. Where this is the case, any text you may have copy and pasted in to the “Type to Text” field may not be displayed within the application. In this case you will need to type the text into the field instead.

Keyboard Settings - Disable

You can use the program to disable any keys not required.

1. **Enable** and select the keyboard under your chosen profile, click to select a key to disable, and then click to select **Disable** in **Action Type**.
2. The key will now be disabled.
3. If you want to enable the key again, select it and click on **Restore**.
4. Click **Save** to save the settings within your chosen profile.
5. The key will be disabled under your chosen Profile, and the key will appear in **Gray**.



Figure B - 25 - Keyboard - Disable

Mouse Settings - Express Key

To assign a mouse button click to send multiple key combinations (an external mouse must be attached), or to create more useful shortcut keys, use **Express Key**.

1. **Enable** and select the mouse under your chosen profile, click on a mouse button to select it, and then click to select **Express Key** in **Action Type**.
2. In the following example we will configure the central mouse wheel to combine the actions of **left shift** key for sprinting, and the **W** key for moving forwards in a game program.
3. Click on the central mouse wheel for the shortcut action.



Figure B - 26 - Mouse - Express Key Record Key Combination (Mouse)

Control Center & Flexikey®

4. Click in the **Tool Tips** field and type to give the key combination a name e.g. “*Sprint Fwds*”, then click back in the Name field (to avoid adding the recorded keys to the Tool Tips name).
5. Click **Start Record** and then **press** the key or keys (in this case we will **press** Left Shift and W) required (make sure you **press the key(s) required** and do not click on them).
6. Click **Stop Record** to complete the process.
7. Click **Save** to save the settings within your chosen profile.
8. If you want to remove any mouse setting click to select it, and then click **Delete**.
9. If you want to clear all the settings click **Restore** to return to the default mouse setting.
10. The mouse button for any assigned Express Keys will appear in **orange**.

Enabling Time Record for Mouse Settings

If you want to create a delay between key presses within the mouse click combination, then you can use **Time Record** function to do so in the same manner as that used for keyboard settings (see “*Enabling Time Record*” on page B - 24).

Mouse Settings - Launch App

You can assign a mouse button click to launch any application or program as follows:

1. **Enable** and select the mouse under your chosen profile, click on a mouse button to select it, and then click to select **Express Key** in **Action Type**.
2. Click **Browse...** at the bottom right of the application window.

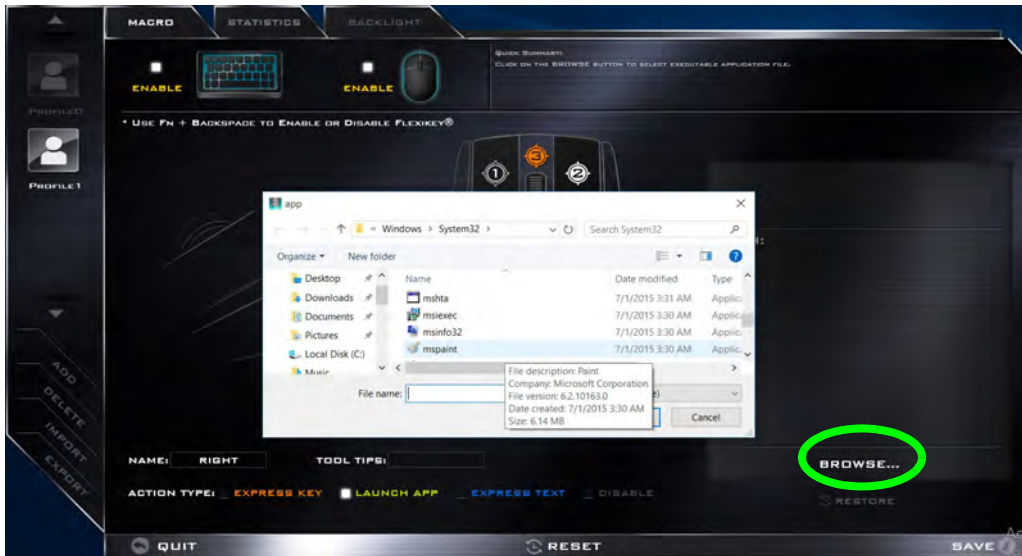


Figure B - 27 - Mouse - Launch App (Browse to Executable File)

Control Center & Flexikey®

3. Navigate to the executable file of the application and click **Open**.
4. The mouse click will now be configured to open the selected application under your chosen Profile, and the button will appear in **green**
5. Click **Save** to save the settings within your chosen profile.



Figure B - 28 - Mouse Button Set to Launch App

Mouse Settings - Express Text

A mouse button click can be set to send a string of text within any application using **Express Text**.

1. **Enable** and select the mouse under your chosen profile, click on a mouse button to select it, and then click to select **Express Text** in **Action Type**.
2. Click in **Start** key if required (the **Start** key is the key used to in your target program to open a text message), or you can leave it blank if you prefer.
3. Click in the **Text Context** field and type in your message.



Figure B - 29 - Mouse - Express Text

Control Center & Flexikey®

4. Click in **Send** key if required (the **Send** key is the key used to in your target program to send a text message e.g the Enter key would be the most commonly used), or you can leave it blank if you prefer.
5. The mouse button click will now be configured to send the text message in the target program under your chosen Profile, and the button will appear in **blue**.
6. If you want to remove any **Express Text** mouse button, select it and click on **Restore**.
7. Click **Save** to save the settings within your chosen profile.

Mouse Settings - Disable

You can use the program to disable any mouse button clicks if not required.

1. **Enable** and select the mouse under your chosen profile, click on a mouse button to select it, and then click to select **Disable** in **Action Type**.
2. The button click will now be disabled.
3. If you want to enable the button again, select it and click on **Restore**.
4. Click **Save** to save the settings within your chosen profile.
5. The button click will be disabled under your chosen Profile, and the key will appear in **Gray**.



Figure B - 30 - Mouse - Disable

Statistics

The **Statistics** tab allows you to record keys used in any application, and to **disable** any infrequently, or unused, keys to save any accidental incorrect key presses.

1. Click the **Statistics** Tab, and press **Start Record** to start recording the frequency of key presses for keys used.
2. You can then go to the application you wish to use the profile for, and use the application as normal so that a standard set of keys used may be recorded.
3. Return to the Flexikey® application and press **Stop Record** to stop recording.
4. At the end of the recording process colors will represent the frequency of key presses, with red as the most frequent through to lighter blue the less frequent (the color bar at the bottom of the screen displays the color code against the number of key presses).
5. Under **Quick Disable** click the color which corresponds to the keys you wish to disable.
6. All disabled keys will then change to gray and will be disabled under this profile.



Figure B - 31 - Statistics

Appendix C: NVIDIA Video Driver Controls

The basic settings for configuring the LCD are outlined in *“Video Features” on page 1 - 38*.

NVIDIA Video Driver Installation

Make sure you install the drivers in the order indicated in *Table 4 - 1, on page 4 - 4*.

1. Insert the *Device Drivers & Utilities + User’s Manual* disc and click **Install Drivers** (button).
2. Click **2.Install VGA Driver > Yes**.
3. Click **AGREE AND CONTINUE** (button) to accept the terms of the license agreement.
4. Click **Next**.
5. Click the **Close** button to complete the installation.




Video Card Options

Note that card types, specifications and drivers are subject to continual updates and changes. Check with your distributor/supplier for the latest details on video cards supported (see *“Video Adapter Options” on page D - 2*).

NVIDIA Video Driver Controls

NVIDIA Control Panel

To access the **GeForce.....** control panel from the desktop; right-click the **desktop**, then click **NVIDIA Control Panel**.

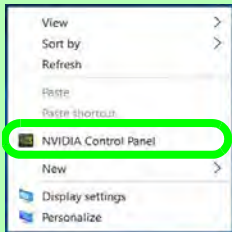

NVIDIA Control Panel

More advanced video configuration options are provided in the **NVIDIA Control Panel** tab.

1. Go to the **Control Panel**.
2. Double-click **NVIDIA Control Panel** (click to view the control panel in either **Large icons** or **Small icons** if you are in **Category** view).

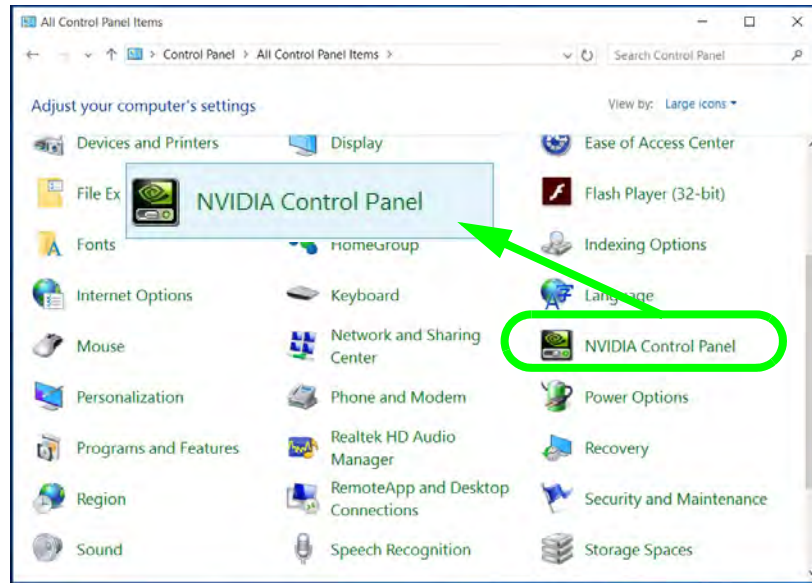


Figure C - 1
NVIDIA Control Panel

The **NVIDIA Control Panel** provides additional video configuration controls and tools which allow quick access to features such as display configuration, 3D Settings and Help menus etc.



Navigating the Control Panel

Navigate through the control panels in much the same way as you would a web page. Click on the sub-headed tasks in the left menu (and on the highlighted links) for information. Use the buttons on the top left to go back, forward etc.

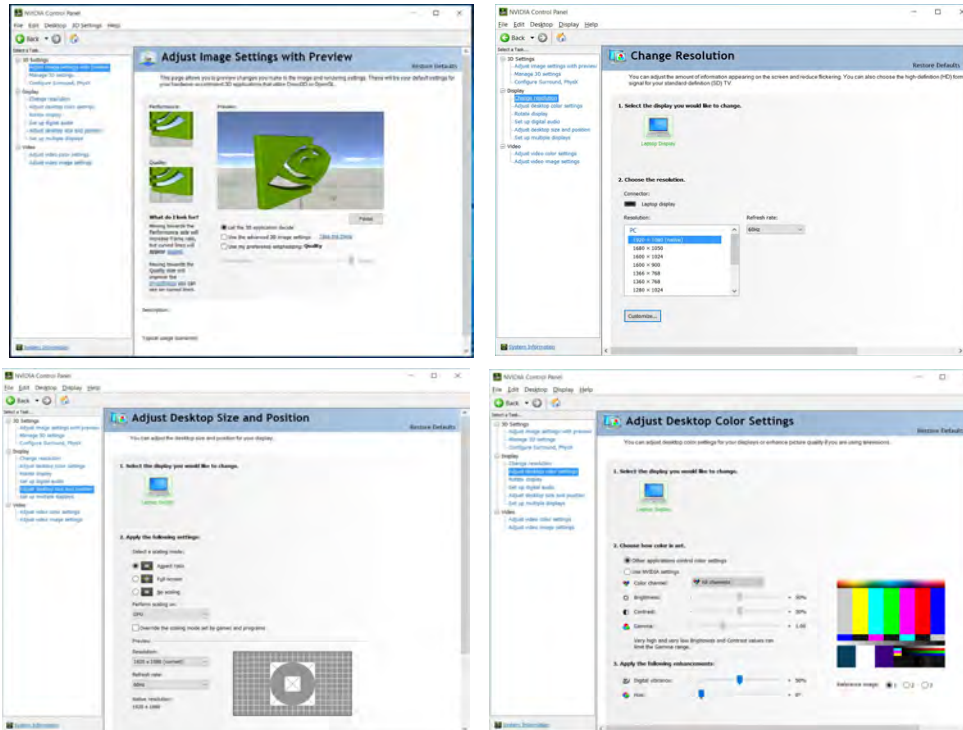



Figure C - 2
NVIDIA Control Panels



NVIDIA Video Driver Controls

The **Help** menus provide index and search features, and direct links to the NVIDIA website etc.

Figure C - 3
Help Menu

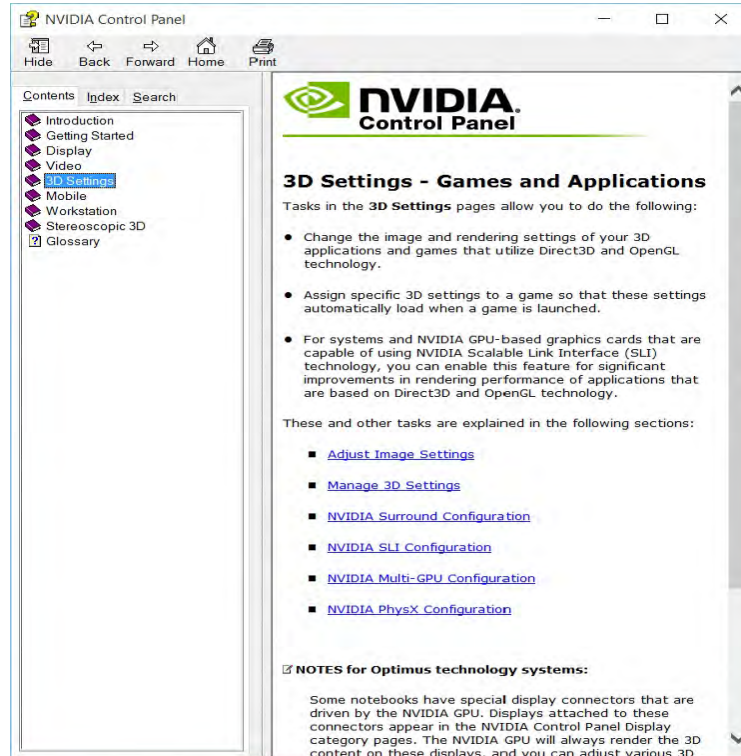

Change Resolution

You can **Change Resolution** for your attached displays from the NVIDIA control panel.

1. Attach your external display to the appropriate port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page **C - 2**).
3. Double-click **Display** (if the sub-menus are not visible), and then click **Change resolution**.
4. Click to select the display, and then adjust the settings from “**2.Choose the resolution.**” and “**3.Apply the following settings.**”
5. Click **Apply** to save the settings.

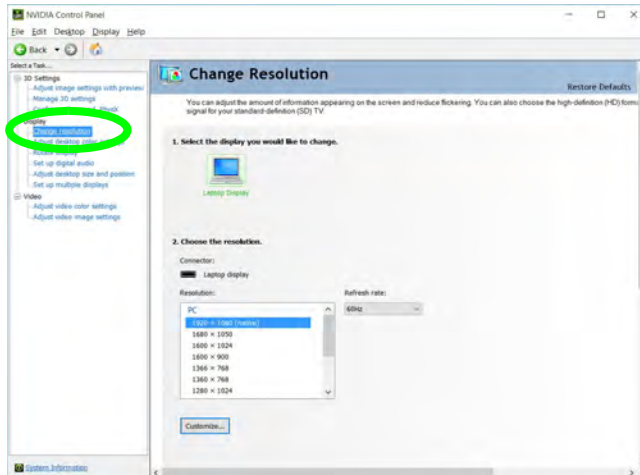


Figure C - 4
Change Resolution



**Sound Blaster
Audio & HDMI
Connection**

Note that Sound Blaster audio will be disabled when you are connecting to an external display through an HDMI connection.

Table C - 1
Display Modes

Display Devices

Note that you can use an HDMI (High-Definition Multimedia Interface) cable connected to the HDMI-Out port and/or DisplayPort compatible cable connected to a DisplayPort 1.2 to connect an external display. You can also use the Thunderbolt Port connected to a compatible display device (see below). See your external display device’s manual to see which formats it supports.


Display Mode	Description
Single	One of the connected displays is used as the display device
Clone	Clone simply shows an exact copy of the Primary display desktop on the other display(s). This mode will drive multiple displays with the same content
Extend	Extend treats connected displays as separate devices, and they act as a virtual desktop resulting in a large workspace. When enabled, you can drag any icons or windows across to the other display desktop. It is therefore possible to have one program visible in one display, and a different program visible in the other display

You will need to enable Thunderbolt support in the BIOS *“Intel(R) Thunderbolt Technology (Advanced Menu > Intel(R) Thunderbolt)” on page 5 - 10*. You can also set the level of security for the Thunderbolt port in the BIOS. If you want to use the Thunderbolt port to support display devices then you will need to set the security level to support display devices only *“Security Level (Advanced Menu > Intel(R) Thunderbolt)” on page 5 - 11*. If you want to use the Thunderbolt port for display then you must set this as the security level, and DisplayPort2 (6 in *Figure 1 - 13 on page 1 - 21*) will then be turned off.

Configuring an External Display (NVIDIA)

Clone the Displays

1. Attach your external display to the appropriate port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page [C - 2](#)).
3. Double-click **Display** (if the sub-menus are not visible), and then click **Set up multiple displays**.
4. Any attached display will appear under “**1. Select the displays you want to use.**”

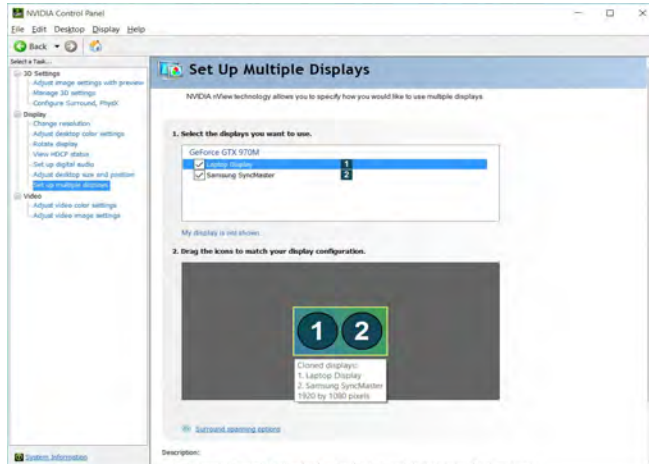

5. Click the check box alongside any display you wish to use.
6. Click **Apply** > **Yes** to save any changes made (the **Apply** button will appear in the bottom right of the control panel when changes have been made).



Display Not Shown

If the attached display does not appear in the “**1. Select the displays you want to use.**” window, click “**My Display is not shown...**” and then click the appropriate button to force detection of the missing display.

HDMI Audio Setup

See “**G-SYNC**” on [page C - 19](#) for instructions on configuring audio for HDMI display devices.

Figure C - 5
Set Up Multiple Displays

NVIDIA Video Driver Controls




Changing the Primary Display on Extended Displays

If you want to switch the primary display if the displays are extended then right-click the secondary display icon and select **“Make Primary”**. Click **Apply > Yes** to save the change (see over).

Extending the Display

1. Attach your external display to the appropriate port, and turn it on.
2. Go to **NVIDIA Control Panel** (see page **C - 2**).
3. Double-click **Display** (if the sub-menus are not visible), and then click **Set up multiple displays**.
4. Click to select a primary display under **“1. Select the displays you want to use.”**
5. Right-click the icons under **“2. Drag the icons to match....”** and select **Extend**.

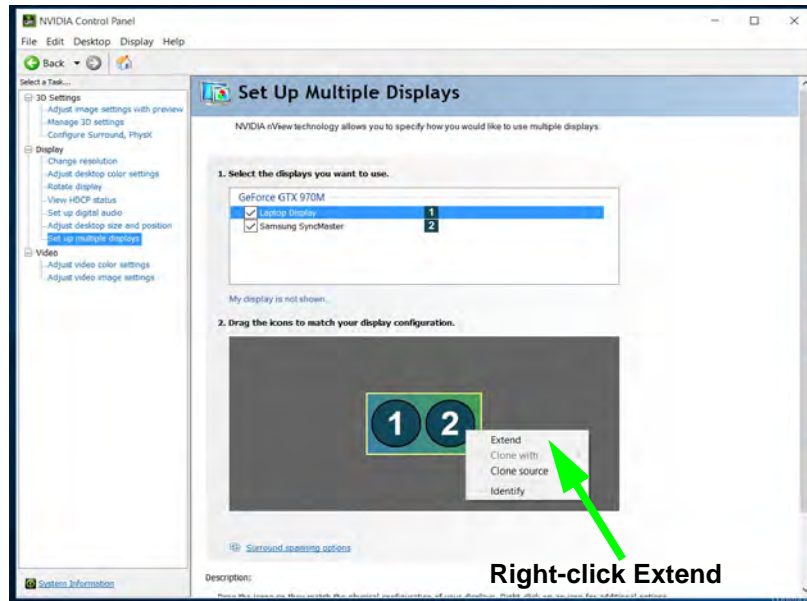


Right-click Extend

Figure C - 6

Extend the Display

C

6. The Primary display (the main window display) will be denoted by an **asterisk *** in the top right corner of the icon.
7. To change the Primary display **right-click the icon** and select **Make primary**.
8. Click **Apply > Yes** to save any changes.

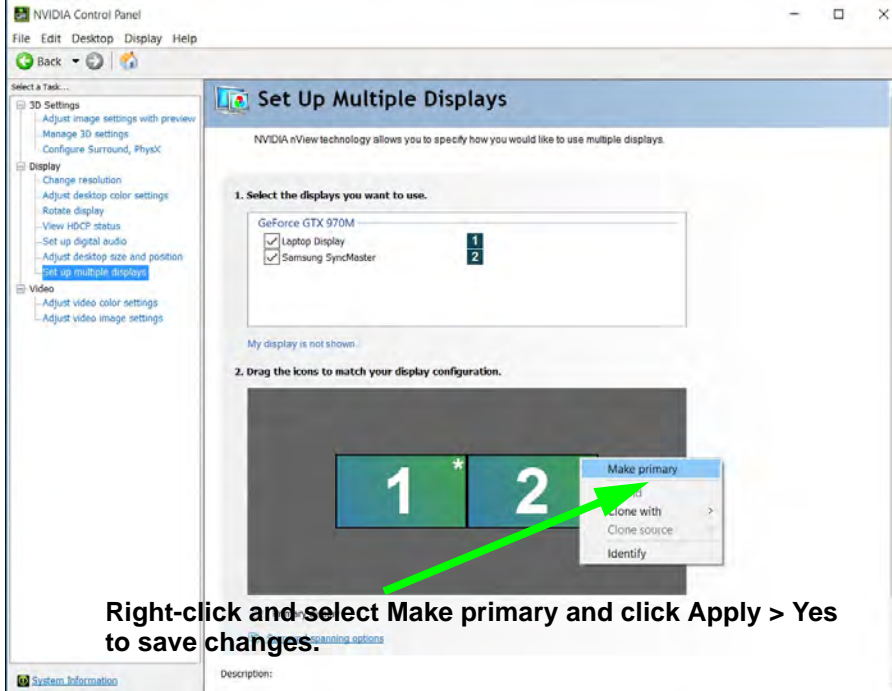


Right-click and select Make primary and click Apply > Yes to save changes.

Figure C - 7
Switch Primary Display

NVIDIA Video Driver Controls

9. You can drag the icons to match the desktop layout you want to use (e.g. you may want to extend the display to the right or left of the primary display).
10. Click **Apply** > **Yes** to save any further changes.

Figure C - 8
**Drag Display
Icons**

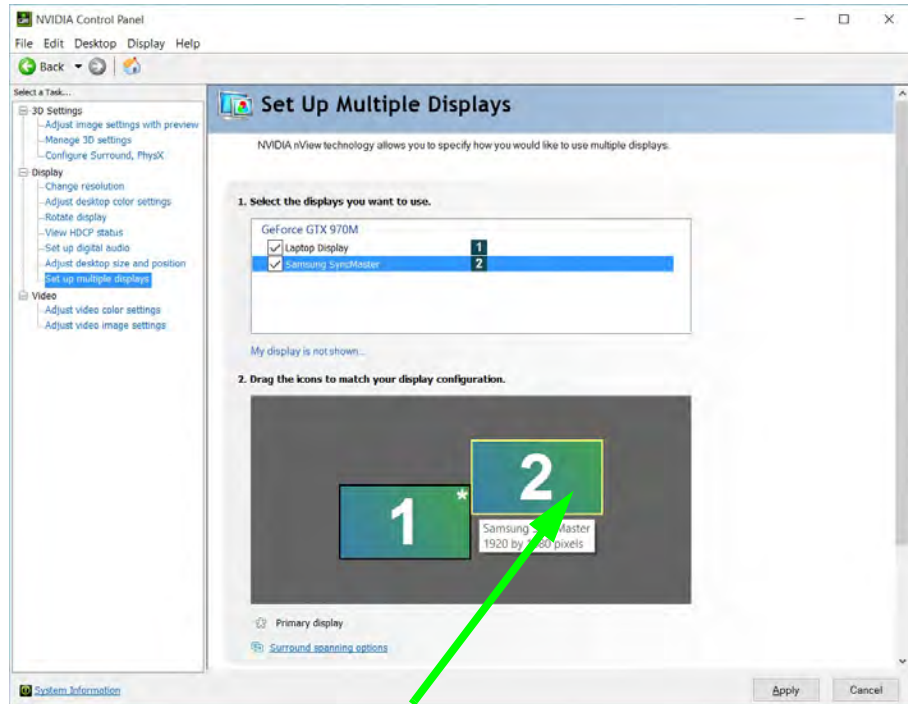

Drag the display icons to match the layout you want to use.

Multiple Display Connections to HDMI-Out Port/DisplayPorts/Thunderbolt Port

Note that certain **NVIDIA** video cards **can support up to three external displays** (one attached to the HDMI-Out Port and two others attached to the Display Ports/Thunderbolt Port - see sidebar for restrictions), in addition to the built-in LCD.

Therefore it is possible to set up 4 simultaneous displays (including the built-in LCD), and these may be configured in **Clone** mode or **Extend** mode as required. Connect all the attached displays to the appropriate ports, and configure them as outlined on the previous pages.



Video Adapters & Display Port Support

Note that **NVIDIA® GTX**, and **Quadro M5000M & M3000M** video adapters support external displays attached to **both Display ports** simultaneously.

NVIDIA® Quadro M1000M video adapters support only a single external display attached to **one of the Display Ports**.

For more information contact your distributor/supplier.

Configure Other Displays Using Project

You can configure attached displays from **Project**.

1. Attach your display to the appropriate port, and turn it on.
2. Press the **Windows + P** key combination.
3. Click on any one of the options from the menu to select **PC screen only**, **Duplicate**, **Extend** or **Second screen only**.
4. You can also click **Connect to a wireless display** at the bottom of the **Project** screen and follow the steps to connect to any wireless enabled display.

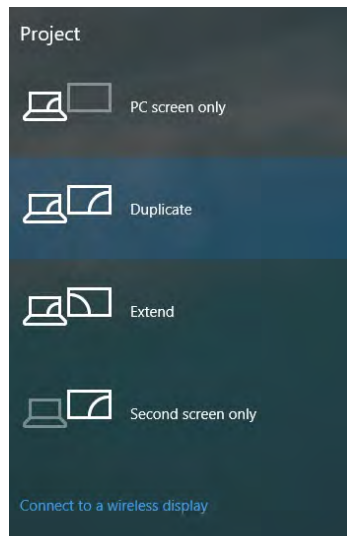


Figure C - 9
Project

Configuring an External Display In Windows

1. Attach your external display to the appropriate port, and turn it on.
2. Go to the **Control Panel**.
3. Click **Display** (icon) and **Adjust Resolution (Appearance and Personalization)**.
4. Click the **Detect** button.
5. The computer will then detect any attached displays.

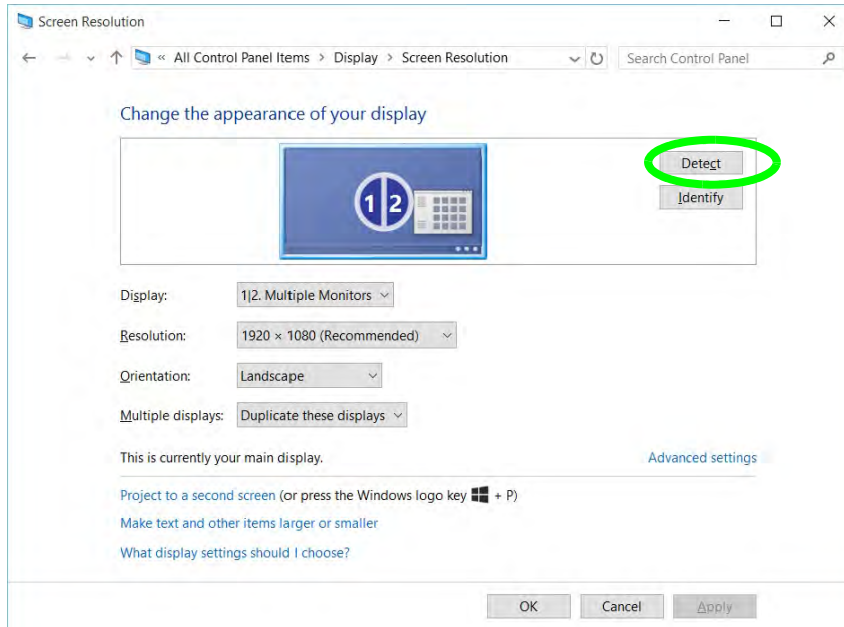


Figure C - 10
Screen Resolution
Multiple Displays

NVIDIA Video Driver Controls

6. You can configure the displays from the **Multiple Displays** menu.

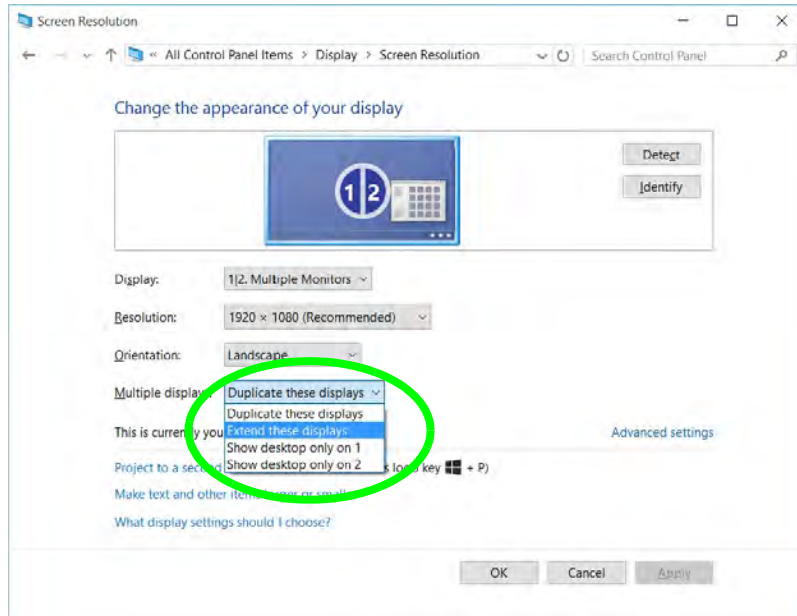


Figure C - 11
**Screen Resolution
Multiple Display
Options**

- Duplicate these displays - Shows an exact copy of the main display desktop on the other display(s)
- Extend these displays - Treats both connected displays as **separate** devices
- Show desktop only on 1/2 - Only one of your displays is used.

C - 14 You can configure attached displays from Project.

The **System** Control Panel in **Settings** may also be used to configure displays.

1. Attach your external display to the appropriate port, and turn it on.
2. Click the Start Menu and click **Settings > System** (or right-click the desktop and select **Display Settings**).
3. You can change Duplicate, Extend or choose to display on 1 screen only.
4. Click **Apply** to save any changes made.
5. Click **Advanced display settings** to access further options.

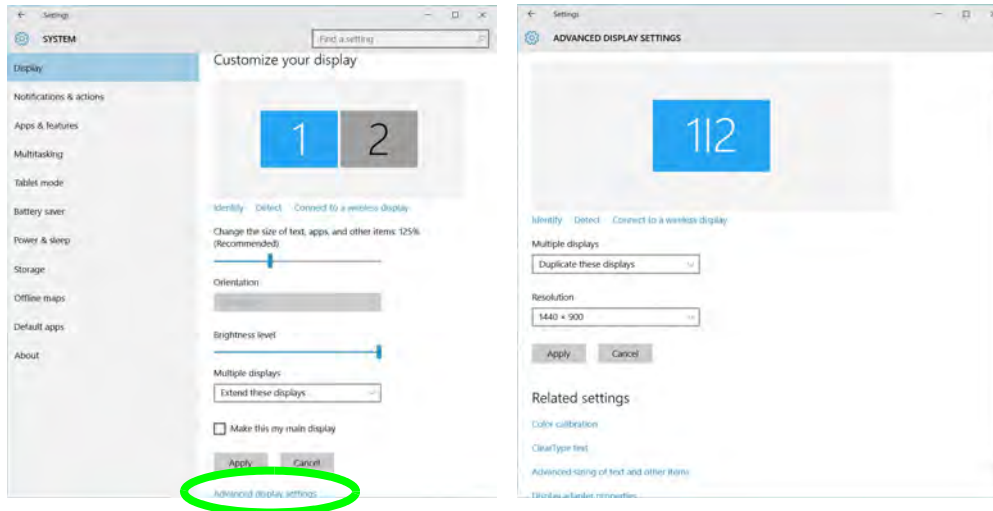



Figure C - 12
System > Display

Manage 3D Settings

You can configure the 3D **global settings** (to be applied to all application programs) or make specific adjustments for installed **program settings**.

1. Go to **NVIDIA Control Panel** (see page **C - 2**).
2. Click **Manage 3D Settings** and select either **Global Settings** or **Program Settings**.
3. Click the **Setting** menu items to select any Global options required, or **select a program to customize** from the drop-down menu (click **Add** to add any program that does not appear in the menu).
4. Click **Apply** to save the settings.

Figure C - 13
Manage 3D
Settings

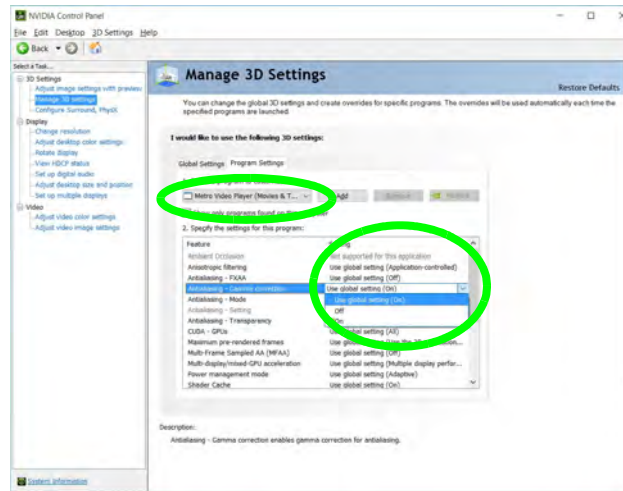

HDCP Status

If your external display is HDCP (High Bandwith Digital Content protection) compatible then the NVIDIA control panel will display the HDCP system status.

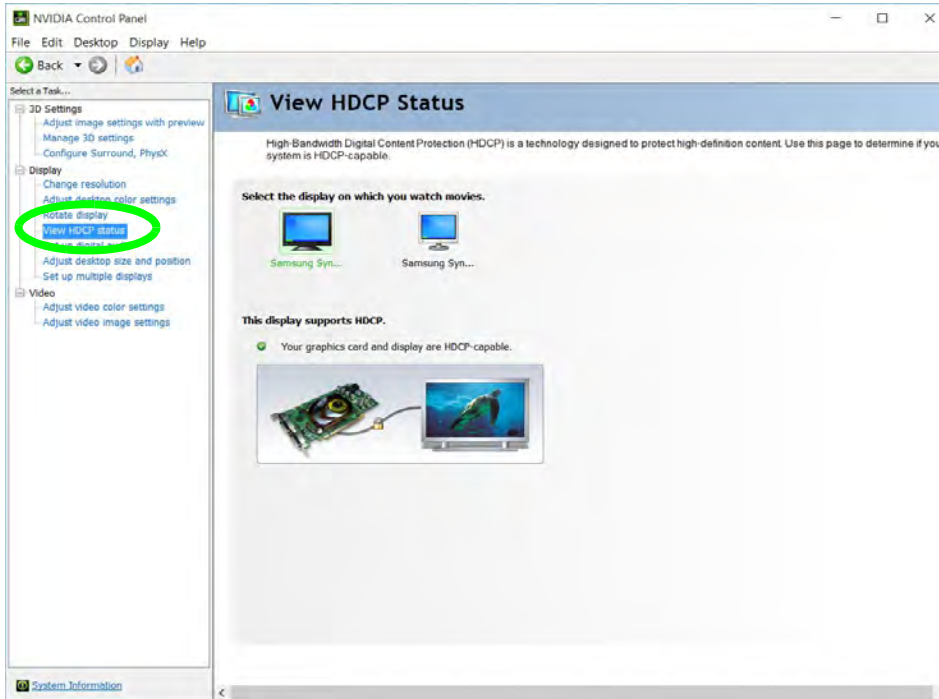



Figure C - 14
HDCP Status

Adjust Video Settings

You can adjust video color and image settings from the **Video** sub-menus.


1. Go to **NVIDIA Control Panel** (see page **C - 2**).
2. Click “+” next to **Video** if its sub-items are not shown and then click either **Adjust video color settings** or **Adjust video image settings**.
3. Make any adjustments required for any display and click **Apply** to save the settings.

Figure C - 15
Adjust Video Color Settings

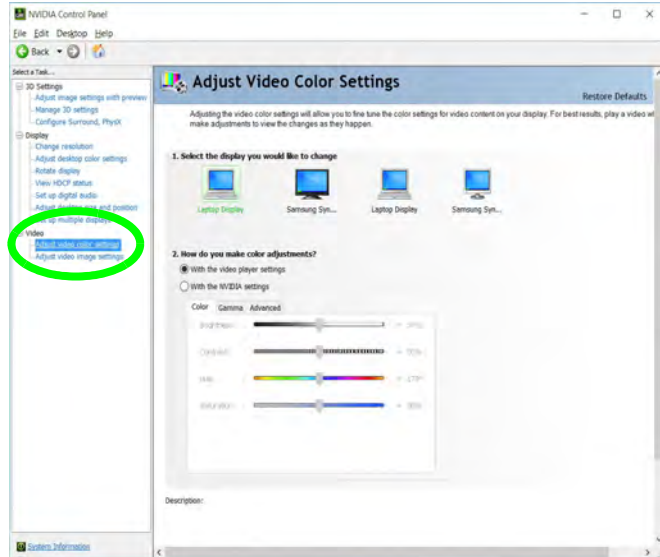

G-SYNC

Click to put a check in the box to **Enable G-SYNC** (it is enabled by default). G-SYNC is designed to provide a smooth game play experience from your GeForce product by synchronizing the monitor’s refresh cycle to the GPU’s render rate, thus removing lag and stutter issues, in order to have objects appear sharper and scenes display instantly.

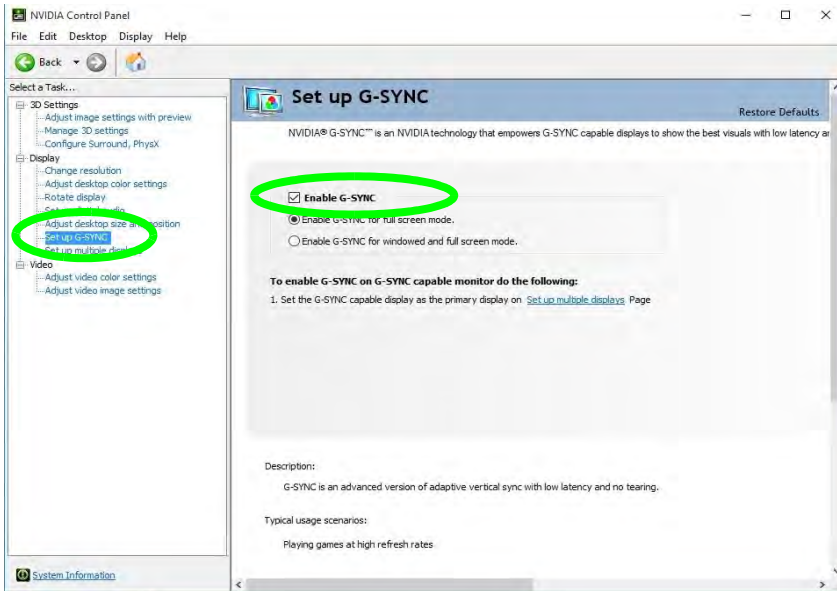



G-SYNC Support

G-SYNC is only supported if you have a G-SYNC capable display and a GTX series video adapter (contact your distributor or supplier for details).


Figure C - 16
Set Up G-SYNC




Setting up G-SYNC

1. Go to **NVIDIA Control Panel** (see page **C - 2**).
2. Click “+” next to **Display** if its sub-items are not shown and then click **Set up G-SYNC** (you must have a G-SYNC capable display and video adapter).
3. Click **Enable G-Sync** (you can select for ...full screen mode or ..for windowed and full screen mode).
4. Click “+” next to **Display** if its sub-items are not shown and then click **Set up multiple displays**, and set the G-SYNC capable display as the **Primary Display** in the configuration.
5. Click “+” next to **3D Settings** if its sub-items are not shown and then click **Manage 3D Settings**.
6. Click **Global Settings**, select **Vertical sync** and then select **G-SYNC**. Setting G-SYNC in global settings means it will be applied to all games. If you want to test the effect you can select the “**Program settings**” tab and disable G-SYNC for a specific game.

Figure C - 17
3D Settings > Global Settings > Vertical sync

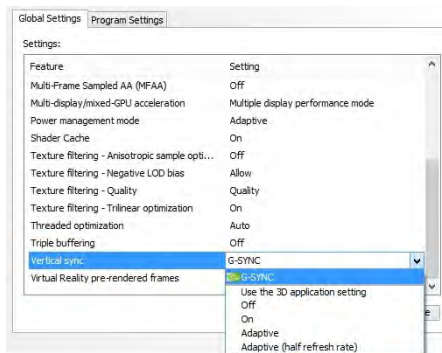

NVIDIA GeForce Experience

If you have a working internet connection (and you will need remain connected to the internet to run **NVIDIA GeForce Experience**) you can click the **NVIDIA GeForce Experience** desktop icon  (or App) to run the application. This will optimize your gaming settings for your GTX video card by downloading the latest settings from the NVIDIA cloud data center.

After initially running the **NVIDIA GeForce Experience** application, you should then **restart the computer and run the application again** in order to install all the updated features.



Figure C - 18
NVIDIA GeForce
Experience
My Rig

C

NVIDIA Video Driver Controls

NVIDIA GeForce Experience Features

- Click the **Games** tab and click *Scan for games* to update the optimal settings for your installed games from the NVIDIA cloud data center for your PC.
- The **Drivers** tab allows you to check and download the latest available video driver.
- **My Rig** provides information on your system and the NVIDIA utilities.
- **SHIELD** streams your PC games to the NVIDIA SHIELD gaming portable.
- **Preferences** lists your current preference list.
- **ShadowPlay™** allows you to easily record your favorite gaming moments (you can also broadcast your game on Twitch).

Figure C - 19
NVIDIA GeForce
Experience
Preferences



NVIDIA GeForce Experience - BatteryBoost

BatteryBoost allows you to optimize your system's battery life when gaming. You can adjust the **BatteryBoost** slider in **Preferences > BatteryBoost** (make sure you have restarted the computer after the first run of **NVIDIA GeForce Experience**).

Running BatteryBoost

1. On first run of **NVIDIA GeForce Experience** you should be connected to the internet (BatteryBoost will not appear at this stage).
2. After the first run you should restart the computer manually, but you must still be connected to the internet (the LAN cable should be plugged-in, or your WiFi connection should be set to **Connect Automatically**) as the computer restarts.
3. BatteryBoost will be present when **NVIDIA GeForce Experience** is run again.

Click to put a tick in the box alongside **BatteryBoost** to enable the feature, then adjust the slider towards **Longer battery life** or **Higher performance** as preferred.

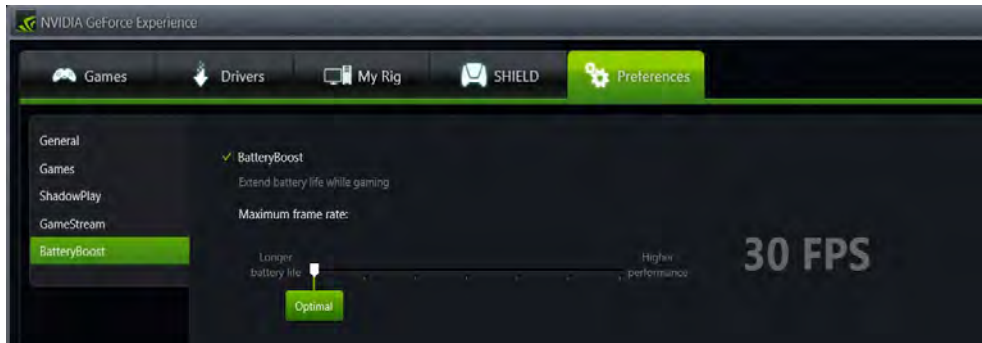


Figure C - 20
NVIDIA GeForce
Experience
BatteryBoost

NVIDIA Video Driver Controls

NVIDIA GeForce Experience - ShadowPlay


Click on the **ShadowPlay** icon  at the top right of the control panel and then click the power button to enable the feature. You can adjust the settings from the menu buttons.



Figure C - 21
NVIDIA GeForce
Experience
ShadowPlay

HDMI Audio Configuration

As HDMI (High-Definition Multimedia Interface) carries both **audio** and video signals you can configure the audio output from the **NVIDIA control panel** and **Sound** control panel. The settings will depend upon the external HDMI display you have connected to.

Connected displays will appear alongside the appropriate port. Click **“Open Windows Sound Settings”** (button) to access the **Sound** control panel.

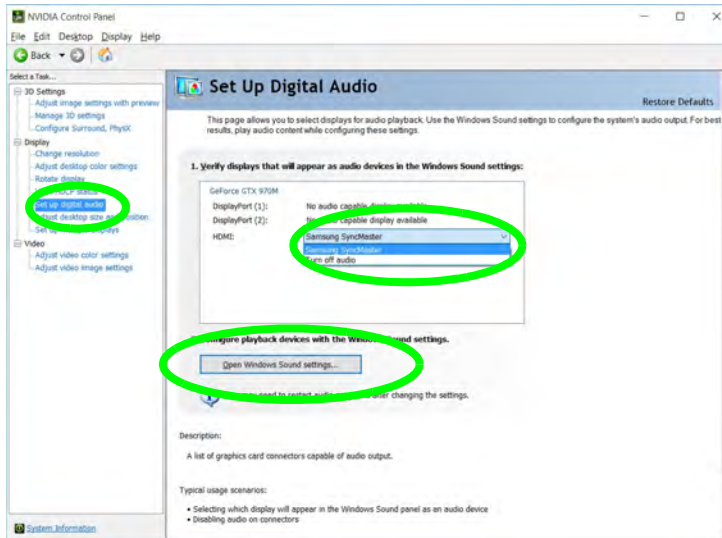


Figure C - 22
Set up Digital Audio

NVIDIA Video Driver Controls



Volume Adjustment

 
The sound volume level can be clicking using the volume control icon  in the **notification area of the taskbar**.




Figure C - 23

Sound - HDMI Device (set Default)

Audio Setup for HDMI

In some cases it will be necessary to go to the Sound control panel and manually configure the HDMI audio output.

1. Go to the **Sound** control panel.
2. Click **Playback** (tab)
3. The playback device will be selected.
4. You may need to select the audio device and click **Set Default** (button).
5. Double-click the device to access the control panel tabs.

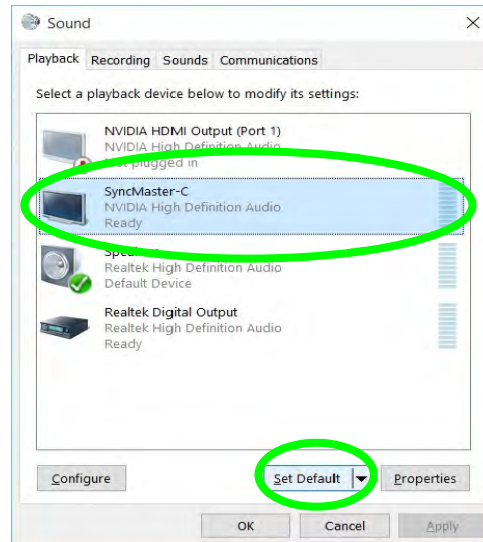

6. Adjust the HDMI settings from the control panel tabs.
7. Click **OK** to close the **Sound** control panel.

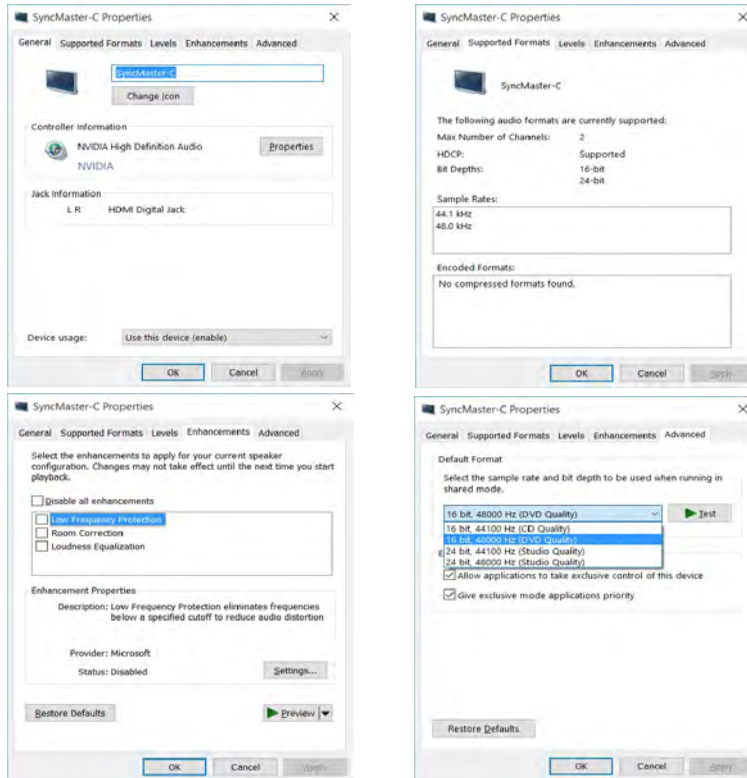


Figure C - 24
HDMI Device
Properties





Other Applications

If you are using a third party application to play DVDs etc. you will need to consult the application's documentation to see the appropriate audio configuration (the application must support digital to analog translation).

HDMI Notes

- Connect a device with HDMI support to the HDMI-Out port **BEFORE** attempting to play audio/video sources through the device.
- Under certain conditions, if the HDMI cable is disconnected, the default audio playback device will not revert to speakers until the computer is restarted (if you do not wish to restart the computer then go to the **Sound** control panel and select **Speakers** as the default audio playback device).

HDMI Video Configuration

1. Connect an HDMI cable from the HDMI-Out port to your external display.
2. Configure your external display as per the instructions in ***“Configuring an External Display (NVIDIA)” on page C - 7.***
3. Set up your external display (TV or LCD) for HDMI input (see your display device manual).
4. You can now play video/audio sources through your external display.

Sound Blaster Audio & HDMI/Display Port

1. When you connect a display to the HDMI-Out port, or Display Port the Sound Blaster Cinema controls will be disabled.
2. A warning box will pop-up and will prompt ***“...Do you want to select another audio device now?”***.
3. Click **No** to continue using the audio output from your external display attached to the HDMI-Out port, or Display Port (do not attempt to select another audio device when connected to the external display).

Wireless Display

Wireless Display uses your Wireless LAN module/WLAN Bluetooth Combo module (you need to make sure that your video adapter/display device is compatible with your particular WLAN/Combo module) in conjunction with a **compatible video adapter/display device** (purchased separately) to allow you to display the contents of the notebook display on another display (e.g. HDTV), without the need to have cables stretching across a room.

You can use the wireless display to play games, browse the internet, display videos or photo slide shows on your TV/external display without using HDMI or A/V cables.

Before configuring **Wireless Display** you will need to set up your **compatible adapter** with your display/speakers. Connect the adapter using an HDMI or A/V cable and turn on the display (or in the case of speakers connect them to the wireless speaker adapter with the cables provided with the adapter), and then set the display to the appropriate input channel (see the documentation supplied with your **compatible adapter/display** for full details).

Note that no driver or application is required for wireless display in *Windows 10*.




Compatible Adapters

For a list of compatible adapters check the video adapter/display device documentation, or with your distributor/supplier.

Wireless Display Configuration

1. Note that no driver or application is required for wireless display in **Windows 10**.
2. Press the **Windows + P** key combination.
3. Click **Connect to a wireless display** at the bottom of the **Project** screen and follow the steps to connect to any wireless enabled display.

Figure C - 25
Add a Wireless Display

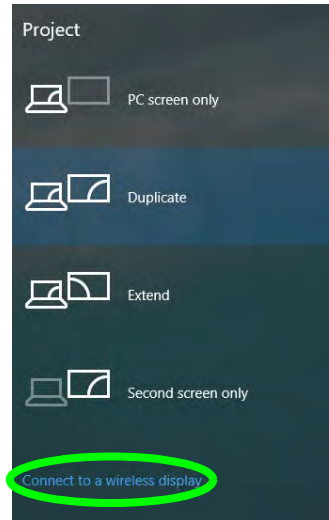

4. The system will then search for compatible display devices (**this may take up to 60 seconds** so allow time for this to complete).
5. Double-click any detected display device in the list.

6. You may then need to input a pin number for the device to which you are connecting and click **Next**.
7. The display will then connect (for specific settings for your display see the documentation supplied with your compatible adapter/display for full details).
8. Go to the **Project** menu and click **Disconnect** to temporarily disconnect from the wireless display.
9. To permanently disconnect from the display (you will need to go back through the connection process again) you can select it in **Devices** and click **Remove Device > Yes**.



Appendix D: Specifications



Latest Specification Information

The specifications listed in this Appendix are correct at the time of going to press. Certain items (particularly processor types/speeds and CD/DVD device types) may be changed, updated or delayed due to the manufacturer's release schedule. Check with your distributor/supplier for details.

Specifications

Processor Intel® Core™ i7-6700K (4.0GHz) 8M Smart Cache, LGA 1151, 14nm (14 Nanometer), DDR4-2133MHz, TDP 91W Intel® Core™ i5-6600K (3.5GHz) 8M Smart Cache, LGA 1151, 14nm (14 Nanometer), DDR4-2133MHz, TDP 91W Intel® Core™ i5-6500 (3.2GHz) 6M Smart Cache, LGA 1151, 14nm (14 Nanometer), DDR4-2133MHz, TDP 65W Intel® Core™ i5-6400 (2.7GHz) 6M Smart Cache, LGA 1151, 14nm (14 Nanometer), DDR4-2133MHz, TDP 65W	Core Logic Intel® Z170 Express Chipset Display Model A: 15.6" (39.62cm) QFHD (3840 * 2160) / FHD (1920 * 1080), 3.2mm, 16:9 Backlit Panel Model B: 17.3" (43.94cm) FHD (1920 * 1080), 6.2mm, 16:9 Backlit Panel Model C: 17.3" (43.94cm) QFHD (3480 * 2160) FHD (1920 * 1080), 4.0 mm, 16:9 Backlit Panel Memory Dual Channel DDR4 Four 260 Pin SO-DIMM Sockets Supporting DDR4 2133 MHz Memory Modules (<i>real operational frequency depends on the FSB of the processor</i>) Memory Expandable from 4GB (minimum) up to 64GB (maximum) Compatible with 4GB/8GB/16GB Modules	 SO-DIMM Memory Types All SO-DIMM memory modules installed in the system should be identical (the same size and brand) in order to prevent unexpected system behavior. Do not mix SO-DIMM memory module sizes and brands otherwise unexpected system problems may occur.
 CPU Speed & Computer in DC Mode Note that when the computer is in DC mode (powered by the battery only) the CPU may not run at full speed. This is a design feature implemented in order to protect the battery.	Video Adapter Options NVIDIA® GeForce GTX 980M PCIe * 16 Video Card 8GB GDDR5 Video RAM Microsoft DirectX® 12 Compatible NVIDIA PhysX™ GeForce CUDA™ Technology Supports 4 Active Displays Supports NVIDIA® Surround View See over	

Specifications

<p>NVIDIA® GeForce GTX 970M PCIe * 16 Video Card 6GB GDDR5 Video RAM Microsoft DirectX® 12 compatible NVIDIA PhysX™ GeForce CUDA™ Technology Supports 4 Active Displays Supports NVIDIA® Surround View</p> <p>NVIDIA® GeForce GTX 965M PCIe * 16 Video Card 4GB GDDR5 Video RAM Microsoft DirectX® 12 compatible NVIDIA PhysX™ GeForce CUDA™ Technology Supports 4 Active Displays Supports NVIDIA® Surround View</p> <p>NVIDIA® G-SYNC™ Technology (supported by some LCD panels and GTX series video adapters only)</p> <p>-----</p> <p>NVIDIA® Quadro M5000M PCIe * 16 Video Card 8GB GDDR5 Video RAM Microsoft DirectX® 11.1 compatible Open GL 4.3</p>	<p>NVIDIA® Quadro M3000M PCIe * 16 Video Card 4GB GDDR5 Video RAM Microsoft DirectX® 11.1 compatible Open GL 4.3</p> <p>NVIDIA® Quadro M1000M PCIe * 16 Video Card 2GB GDDR5 Video RAM Microsoft DirectX® 11.1 compatible Open GL 4.3</p> <p><u>For Model C Only:</u> NVIDIA® GeForce GTX 980 PCIe * 16 Video Card 8GB GDDR5 Video RAM Microsoft DirectX® 12 Compatible NVIDIA PhysX™ GeForce CUDA™ Technology</p> <p>Supports 4 Active Displays Supports NVIDIA® Surround View Supports GPU Overclocking</p> <p>-----</p> <p>NVIDIA® G-SYNC™ Technology (supported by some LCD panels and GTX series video adapters only)</p>	<p>Storage</p> <p>Two Changeable 2.5" 7mm/9.5mm (h) Hard Disk Drives (HDD) / Solid State Drives (SSD) with SATA Interface (RAID 0/1)</p> <p>Two M.2 2280 SSDs with SATA / PCIe Gen x3/ x4 Interface (RAID 0/1) (Factory Option)</p> <p>BIOS</p> <p>One 64Mb SPI Flash ROM AMI BIOS</p> <p>Audio</p> <p>High Definition Audio S/PDIF Digital Output Built-In Array Microphone 2 Built-In 2W Speakers Sound Blaster® X-Fi® MB5 External 7.1CH Audio Output Supported By Headphone, Microphone, Line-In & S/PDIF Jacks ANSP™ 3D Sound Technology on Headphone Output</p> <p><u>For Models B & C Only:</u> One Built-in Subwoofer Speaker</p>
--	--	---



Specifications

Keyboard & Pointing Device	Card Reader	Intel® Dual Band Wireless-N 7265 (2*2 802.11 b/g/n) M.2 WLAN + Bluetooth Combo M.2 2230 Module (Factory Option)
Full Size Color Illuminated Keyboard with Numeric Keypad & Anti-Ghost Keys Built-In TouchPad (with Multi Gesture & Scrolling Functionality) W/A/S/D Game Keys	Embedded Multi-In-1 Push-Push Card Reader - MMC / RSMMC - SD/ Mini SD / SDHC / SDXC (up to UHS-II) Card Reader Note: Some cards require adapters usually supplied with the cards.	Intel® Dual Band Wireless-AC 3165 (1*1 802.11 ac) WLAN + Bluetooth Combo M.2 2230 Module (Factory Option)
Indicators	Slots	Intel® Dual Band Wireless-AC 8260 (2*2 802.11 a/c) M.2 WLAN + Bluetooth Combo M.2 2230 Module (Factory Option)
LED Indicators - Power/Suspend, Battery, HDD, Airplane Mode, Num Lock, Caps Lock, Scroll Lock, Camera	Three M.2 Slots: ===== Slot 1: for M.2 2230 WLAN Combo Module Card with PCIe & USB Interfaces (A Key) Slot 2: for M.2 2280 SSD Card with SATA/ PCIe x3/ x4 Interface (M Key) Slot 3: for M.2 2280 SSD Card with SATA/ PCIe x3/ x4 Interface (M Key) OR (For Model A Only) LTE/HSPA+ M.2 3042 3G or 4G Module Card with USB Interface (Factory Option) Note: LTE-1 / LTE-2 Antenna (Factory Option)	3rd Party Combo WLAN (802.11b/g/n) and Bluetooth v4.0+LE Combo M.2 2230 Module (Factory Option)
Interface	Communication	Qualcomm® Atheros Killer™ Wireless-AC 1535 Dual Band (2*2 802.11 ac) WLAN + Bluetooth 4.1 Combo M.2 2230 Module (Factory Option)
Three USB 3.0 Ports One eSATA Port (SATA/ AC/DC powered USB3.0 Combo Port) One USB 3.1 Port (Type C) / Thunderbolt™ 3 Port Two Display Ports 1.2 One HDMI™ (High-Definition Multimedia Interface) Out Port (with HDCP) One Microphone-In Jack One Headphone/Speaker-Out Jack One S/PDIF Out Jack One Line-In Jack One RJ-45 LAN Jack One DC-In Jack	Built-In 10/100/1000Mb Base-TX Ethernet LAN 2.0M FHD PC Video Camera Module	Killer DoubleShot™ Pro with Killer™ Wireless-AC 1535 Module (Factory Option) For Model A Only: 3G UTMS/HSPA+ M.2 3042 Card Module (Factory Option) OR 4G LTE M.2 3042 Card Module (Factory Option)

Specifications

Operating System	Power	<p>Model B: 418mm (w) * 282mm (d) * 16 - 38.9mm(h) 3.9kg *Barebone System with VGA Card & Battery</p> <p>Model C: 418mm (w) * 295.3mm (d) * 40.9mm(h) 3.9kg *Barebone System with VGA Card & Battery</p> <p><i>*A barebone system does not include the HDD, RAM, adapter, power cord and factory option modules (weight tolerance within +/- 5%).</i></p>
Windows® 10 (64-bit)	Removable 8 Cell Smart Lithium Ion Battery Pack 82WH Full Range AC/DC Adapter – AC in 100 - 240V, 50 - 60Hz DC Output 19.5V, 11.8A (230 Watts) Full Range AC/DC Adapter – AC in 100 - 240V, 50 - 60Hz DC Output 19.5V, 16.9A (330 Watts) - Factory Option - For Some Model B and Model C Types	
Features (By Model Type)	Environmental Spec	
Rubber Painting Painted Style Shipping Mode NVIDIA® G-SYNC™ Technology (supported by some LCD panels and GTX series video adapters only)		
Security	Temperature Operating: 10°C - 35°C Non-Operating: -20°C - 60°C Relative Humidity Operating: 20% - 80% Non-Operating: 10% - 90%	
Security (Kensington® Type) Lock Slot BIOS Password Fingerprint Reader Module (Factory Option) Trusted Platform Module 2.0		
Power Management	Physical Dimensions & Weight	
ACPI V5.0 Supports Wake on LAN Supports Wake on USB Supports Wake on RTC Alarm (AC Mode Only)	<p>Model A: 386mm (w) * 262mm (d) * 7 - 35.7mm(h) 3.4kg *Barebone System with VGA Card & Battery</p>	

Specifications

D