

SERVICE MANUAL

notebook

N855HC



Notebook Computer

N855HC

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
February 2017

Trademarks

Intel and Intel Core are trademarks of Intel Corporation.

Windows® is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.



About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *N855HC* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

Preface

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit as follows:
 - AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19.5V, 6.15A (**120** Watts) minimum AC/DC Adapter.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

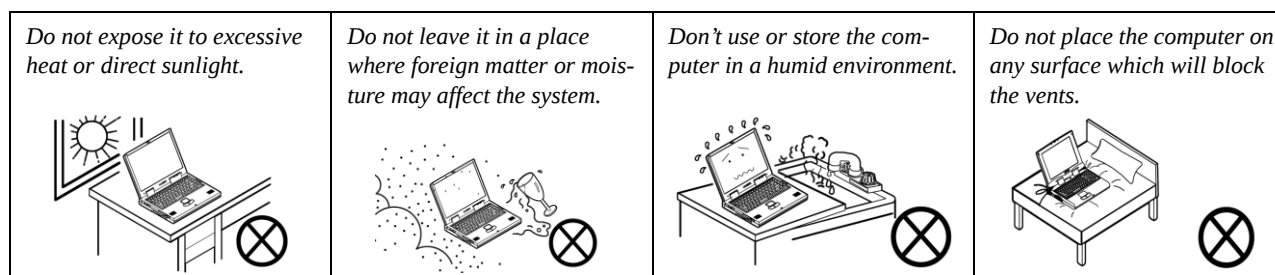


3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.



Preface


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

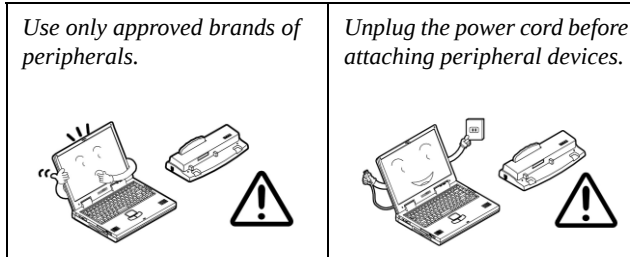

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

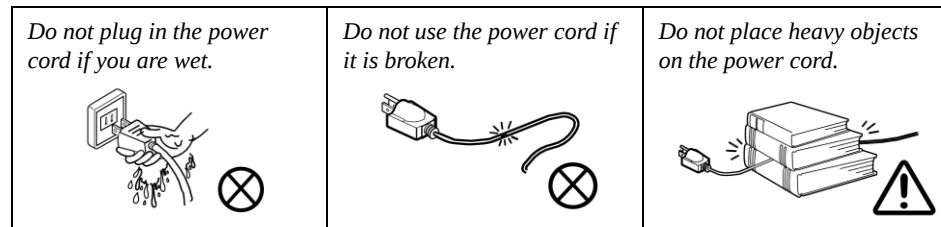

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.



Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Preface

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 135 degrees); use the other hand (as illustrated in Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

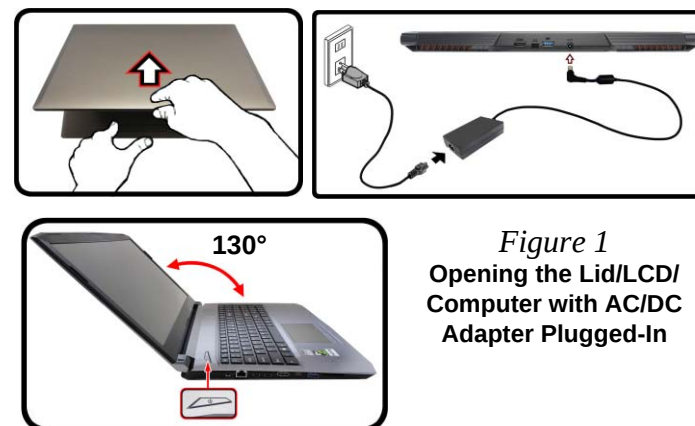


Figure 1
Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In



Shut Down

Note that you should always shut your computer down by choosing the **Shut down** command in **Windows** (see below). This will help prevent hard disk or system problems.

Click the icon  in the **Start Screen** and choose **Shut down** from the menu.



Or

Right-click the **Start button**  at the bottom of the **Start Screen** or the **Desktop** and choose **Shut down or sign out** > **Shut down** from the context menu.

Contents

Introduction1-1

Overview	1-1
Specifications	1-2
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right Side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Keyboard	2-6
Removing the Hard Disk Drive	2-7
Removing the System Memory (RAM)	2-9
Removing the M.2 SSD Module	2-10
Removing the Wireless LAN Module	2-11
Wireless LAN, Combo, 3G & LTE Module Cables	2-12
Removing the 3G Module	2-13
Removing the CPU Heat Sink	2-14
Removing the CCD	2-15

Part ListsA-1

Part List Illustration Location	A-2
---------------------------------------	-----

Top	A-3
Bottom	A-4
Main Board	A-5
HDD	A-6
LCD	A-7

Schematic Diagrams.....B-1

System Block Diagram	B-2
Processor 1/6	B-3
Processor 2/6	B-4
Processor 3/6	B-5
Processor 4/6	B-6
Processor 5/6	B-7
Processor 6/6	B-8
DDR4 CHA SO-DIMM	B-9
DDR4 CHB SO-DIMM	B-10
VGA PCI-E Interface	B-11
VGA Frame Buffer Interface	B-12
VGA Frame Buffer A	B-13
VGA Frame Buffer A	B-14
VGA Frame Buffer B	B-15
VGA Frame Buffer B	B-16
VGA I/O	B-17
VGA NVVDD Coupling	B-18
PS8625	B-19
Panel, Inverter	B-20
CRT	B-21
HDMI	B-22
PCH 1/9	B-23
PCH 2/9	B-24
PCH 3/9	B-25

Preface

PCH 4/9	B-26
PCH 5/9	B-27
PCH 6/9	B-28
PCH 7/9	B-29
PCH 8/9	B-30
PCH 9/9	B-31
M.2 3G Card	B-32
M.2 WLAN+BT, SSD	B-33
ASM 1142 & 2142	B-34
ASM Power	B-35
USB, Charger	B-36
Card Reader / LAN RTL8411B	B-37
HDD, Click TP, Audio, Hall Con..	B-38
LED, CCD, TPM, Power SW Con.	B-39
Audio Codec ALC269 VC2	B-40
KBC-ITE IT8587	B-41
5V, 5VS, 3.3V, 3.3VS, 3.3VA	B-42
VDD1.0, VCCIO	B-43
VDD3, VDD5	B-44
DDR 1.2V/0.6VS, 2.5V	B-45
VCore, VCCGT Output Stage	B-46
VCC_Core, VCCGT	B-47
1.0DX_VCCSTG/VCCSFR_OC, 3.3VA	B-48
VCCSA	B-49
AC_In, Charger	B-50
NVVDD	B-51
FBVDDQ	B-52
PEX_VDD/3V3	B-53
Audio Board	B-54
Power Switch Board	B-55
Hall Sensor Board	B-56
Click Board	B-57

LED Board	B-58
-----------------	------

Power Sequence	B-59
----------------------	------

Updating the FLASH ROM BIOS..... C-1

Download the BIOS	C-1
-------------------------	-----

Unzip the downloaded files to a bootable CD/DVD or

USB Flash drive	C-1
-----------------------	-----

Set the computer to boot from the external drive	C-1
--	-----

Use the flash tools to update the BIOS	C-2
--	-----

Restart the computer (booting from the HDD)	C-2
---	-----

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **N855HC** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Windows 10*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **N855HC** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Kabylake H Processort

(2.70GHz)

8MB Smart Cache, **14nm**, DDR4-2400MHz, TDP 45W

(2.40GHz)

8MB Smart Cache, **14nm**, DDR4-2400MHz, TDP 45W

Core Logic

Intel® HM175 Chipset

BIOS

64Mb SPI Flash ROM

AMI BIOS

Memory

Two 260 Pin SO-DIMM Sockets Supporting **DDR4 2400MHz** Memory

Memory Expandable up to 32GB

(The real memory operating frequency depends on the FSB of the processor.)

LCD Options

15.6" (39.62cm), 16:9, HD (1366x768)/ FHD (1920x1080)

Video Adapter

Intel® Integrated GPU and NVIDIA® Discrete GPU

Supports Microsoft Hybrid Graphics

Intel Integrated GPU

Intel® UMA Graphics

Dynamic Frequency

Intel Dynamic Video Memory Technology

Microsoft DirectX®12 Compatible

NVIDIA® Discrete GPU

NVIDIA® GeForce GTX 950M

2GB GDDR5 Video RAM on board

Microsoft DirectX® 12 Compatible

Storage

One Changeable 2.5" 7.0mm (h) SATA3 HDD/SSD

(Factory Option) One M.2 **SATA/PCIe Gen3 x4** Solid State Drive (SSD)

Audio

High Definition Audio Compliant Interface

2 * Built-In Speakers

Built-In Array Microphone

Or

(Factory Option) Built-In Microphone

Sound Blaster™ Cinema 3

Security

Security (Kensington® Type) Lock Slot

BIOS Password

Intel PTT for systems without hardware TPM

(Factory Option) TPM v 2.0

Keyboard

Full-size "WinKey" keyboard (with numeric keypad)

Or

(Factory Option) Full-size "WinKey" **Illuminated White-LED** Keyboard (with numeric keypad)

Pointing Device

Built-in Touchpad

Interface

One USB 2.0 Port

One USB 3.0 (USB 3.1 Gen 1) Type A Port

One USB 3.0 (USB 3.1 Gen 1) Type A Port and one USB 3.0 (USB 3.1 Gen 1) Type C Port

Or

(Factory Option) One USB 3.1 Gen 2 Type A Port and one USB 3.1 Gen 2 Type C Port

One HDMI-Out Port

Two Mini DisplayPorts 1.2

One Headphone-Out Jack

One Microphone-In Jack

One RJ-45 LAN Jack

One DC-in Jack

Card Reader

Embedded Multi-In-1 Card Reader

MMC (MultiMedia Card) / RS MMC

SD (Secure Digital) / Mini SD / SDHC/ SDXC

M.2 Slots

Slot 1 for **WLAN and Bluetooth** Combo Module

Slot 2 for **SATA/PCIe Gen3 x4 SSD**

(Factory Option) Slot 3 for **3G/4G** Module

Communication

Built-In Gigabit Ethernet LAN

1.0M HD PC Camera Module

(Factory Option) 2.0M FHD PC Camera Module

(Factory Option) M.2 **3G** or **4G** Module

WLAN/ Bluetooth M.2 Modules:

(Factory Option) Intel® Dual Band Wireless-AC 8265 Wireless LAN (**802.11ac**) + Bluetooth **4.1**

(Factory Option) Intel® Dual band Wireless-AC 3168 Wireless LAN (**802.11ac**) + Bluetooth **4.0**

Environmental Spec**Temperature**

Operating: 5°C - 35°C

Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%

Non-Operating: 10% - 90%

Power

Full Range AC/DC Adapter

AC Input: 100 - 240V, 50 - 60Hz

DC Output: 19.5V, 6.15A (**120W**)

(Factory Option) Removable 6 Cell Smart Lithium-Ion Battery Pack, 62WH

(Factory Option) Removable 6 Cell Smart Lithium-Ion Battery Pack, 47WH

Dimensions & Weight

378mm (w) * 267mm (d) * 24.9mm (h)

2.5kg (Barebone with 47WH Battery)

Introduction

Figure 1
Top View

1. PC Camera
2. *PC Camera LED
**When the PC camera is in use, the LED will be illuminated.*
3. Built-In Array Microphone
4. LCD
5. Power Button
6. Keyboard
7. Touchpad & Buttons

External Locator - Top View with LCD Panel Open



External Locator - Front & Right Side Views

Figure 2
Front View

1. LED Indicator

FRONT VIEW



Figure 3
Right Side View

1. Headphone-Out Jack
2. Microphone-In Jack
3. USB 2.0 Port
4. USB 3.0 (USB 3.1 Gen 1) Type A Port
5. Vent
6. Security Lock Slot

RIGHT SIDE VIEW



Introduction

External Locator - Left Side & Rear View

Figure 4

Left Side View

1. DC-In Jack
2. RJ-45 LAN Jack
3. External Display Port
4. HDMI-Out Port
5. USB 3.0 (USB 3.1 Gen 1) Type C Port Or
(Factory Option)
USB 3.1 Gen 2 Type C Port
6. USB 3.0 (USB 3.1 Gen 1) Type A Port Or
(Factory Option)
USB 3.1 Gen 2 Type A Port
7. Multi-in-1 Card

LEFT SIDE VIEW



REAR VIEW



Figure 5

Rear View

1. Vent

External Locator - Bottom View



Figure 6
Bottom View

1. Battery
2. Vent
3. Speakers



Overheating

To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Introduction

Figure 7
Mainboard Top
Key Parts

- 1. KBC-ITE IT8587

Mainboard Overview - Top (Key Parts)



Mainboard Overview - Bottom (Key Parts)

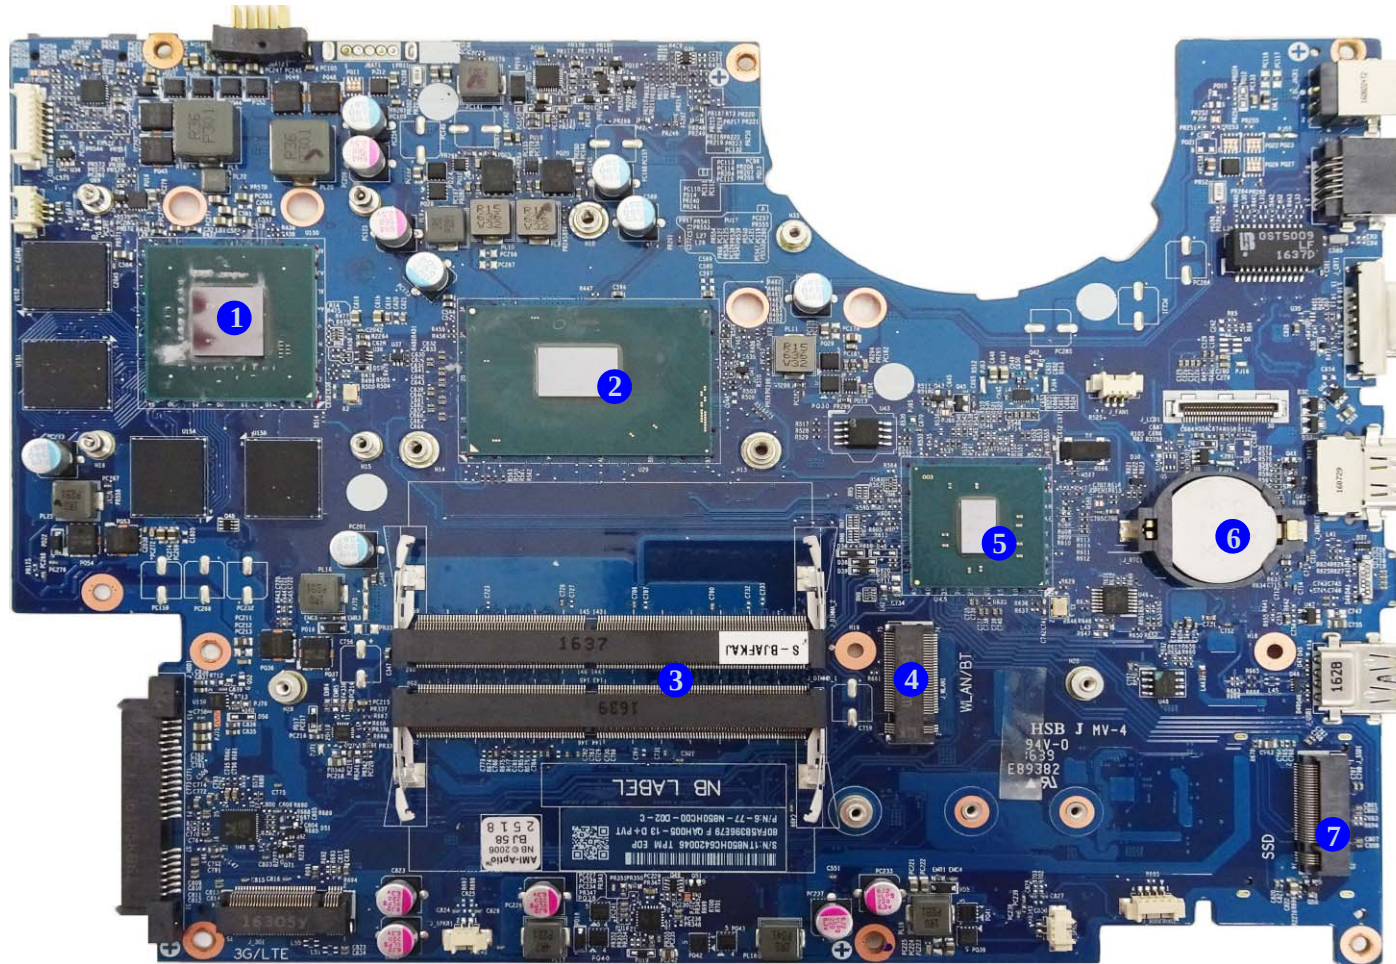


Figure 8
Mainboard Bottom
Key Parts

1. GPU
2. CPU
3. Memory Slots
DDR4 SO-DIMM
4. Mini-Card
Connector (WLAN
Module)
5. PCH
6. CMOS Battery
7. M.2-Card
Connector (SSD
Module)

Introduction

Figure 9
Mainboard Top Connectors

Mainboard Overview - Top (Connectors)

1. DC-In Jack
2. RJ-45 LAN Jack
3. External Display Port
4. HDMI-Out Port
5. USB Port 3.0/3.1 (Type C) Connector
6. USB Port 3.0/3.1 (Type A) Connector
7. Multi-in-1 Card Reader
8. KB LED Connector
9. Keyboard Cable Connector


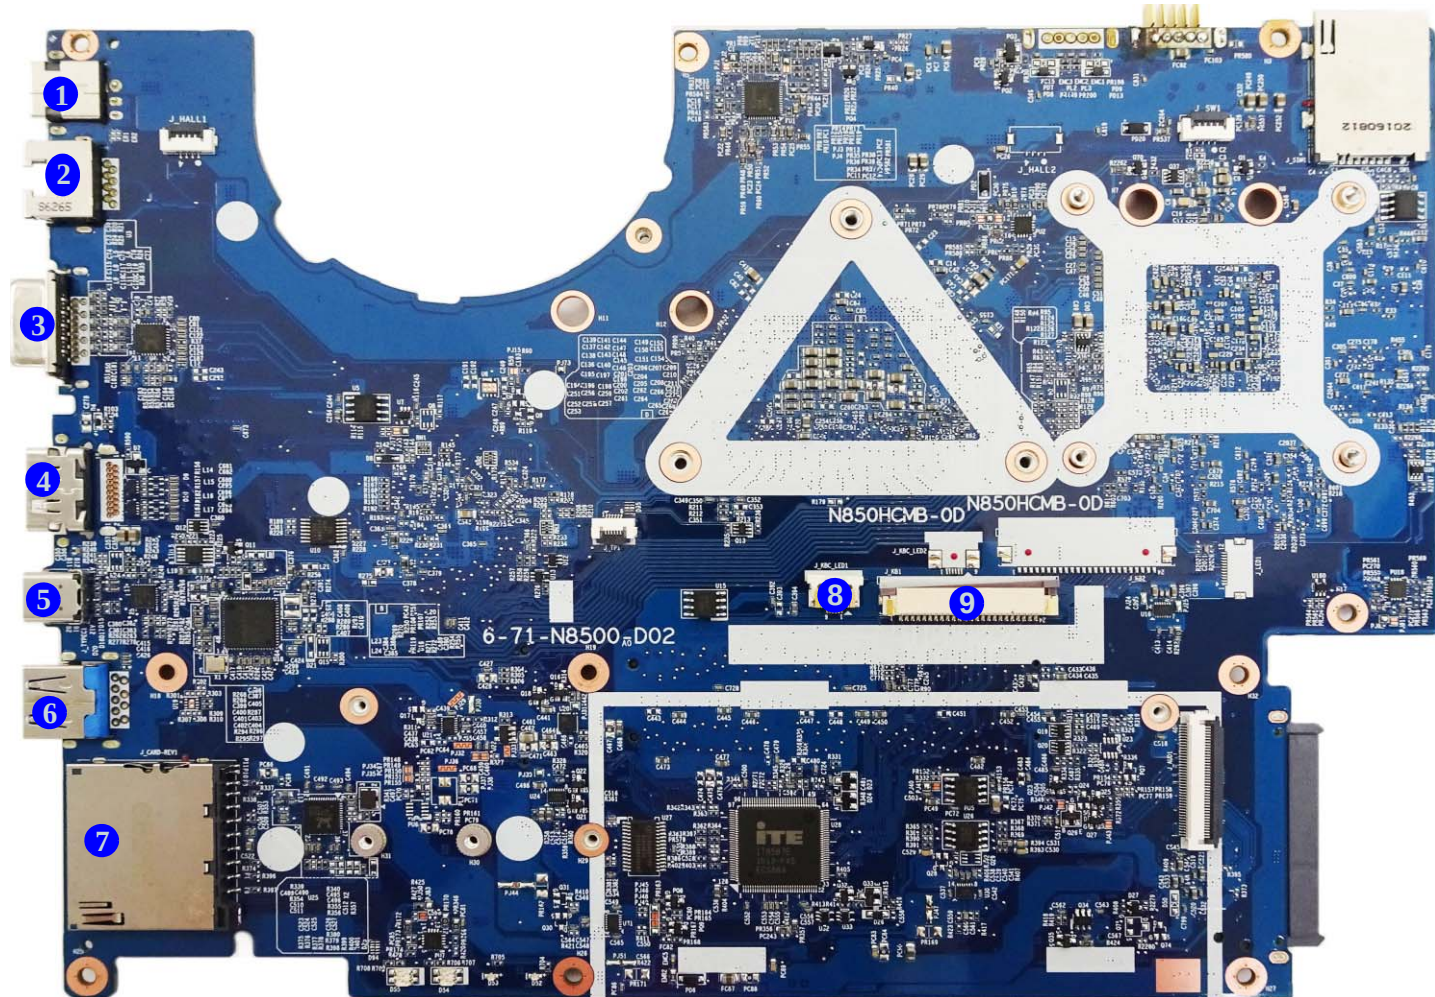


Figure 10
Mainboard Bottom
Connectors

1. CCD Connector
2. Fan Connector
3. HDD Connector
4. Speaker Connector
5. LCD Connector

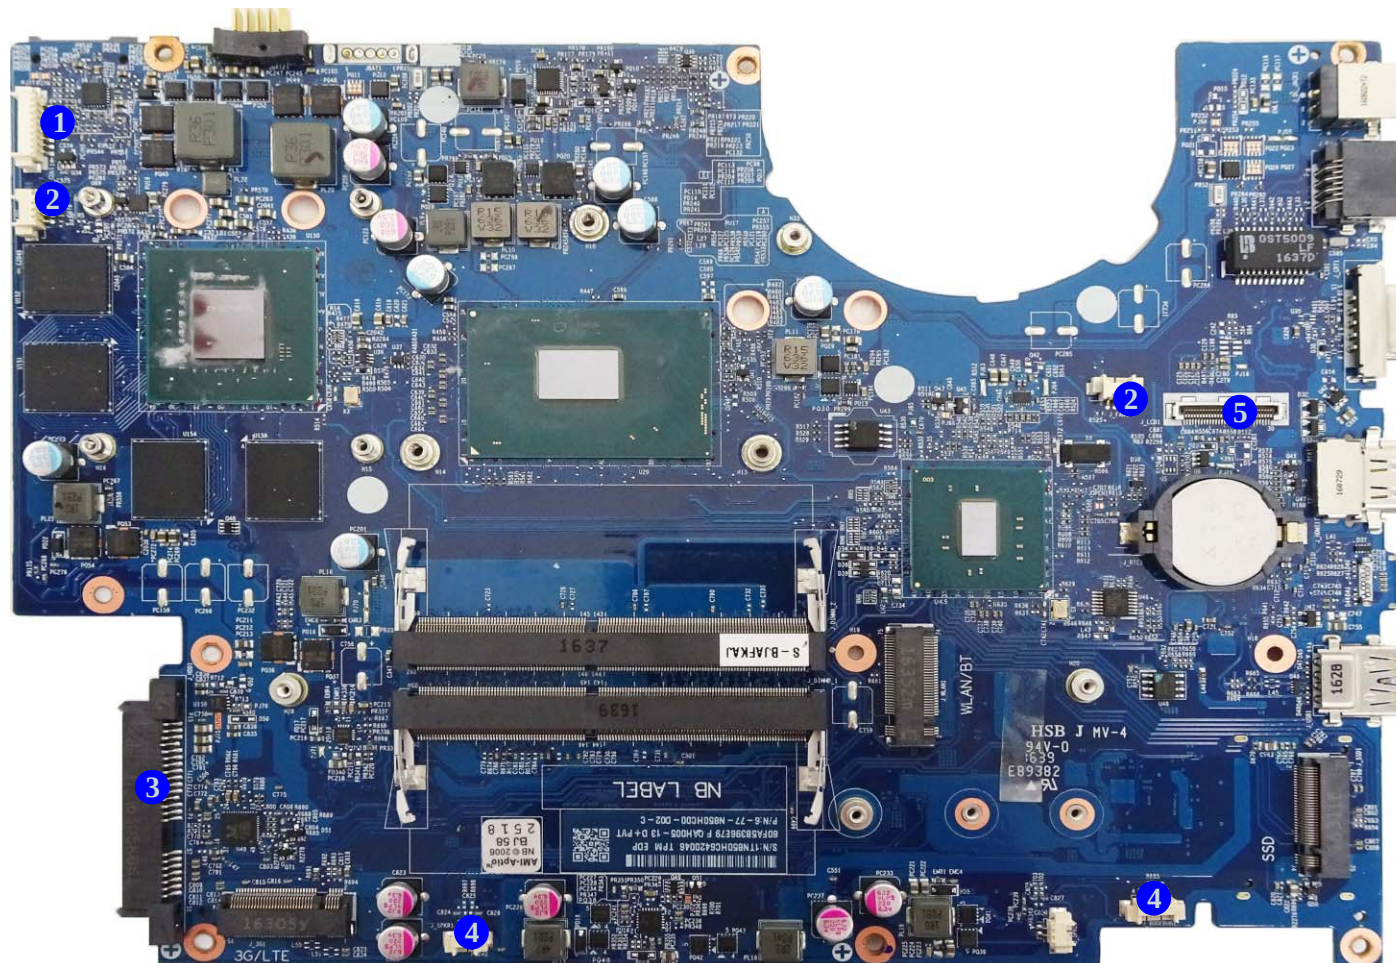

Chapter 2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling the *N855HC* series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

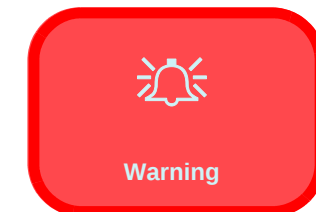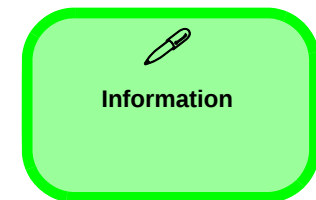

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery [page 2 - 5](#)

To remove the Keyboard:

1. Remove the keyboard [page 2 - 6](#)

To remove the HDD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 7](#)

To remove the System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 7](#)
3. Remove the system memory [page 2 - 9](#)

To remove the M.2 SSD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 7](#)
3. Remove the SSD [page 2 - 10](#)

To remove the Wireless LAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 7](#)
3. Remove the WLAN [page 2 - 11](#)

To remove the 3G Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 7](#)
3. Remove the 3G [page 2 - 13](#)

To remove the Heatsink:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 7](#)
3. Remove the Heatsink [page 2 - 14](#)


To remove the CCD Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 7](#)
3. Remove the CCD module [page 2 - 15](#)

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow.
4. While holding the latch **2**, lift the battery **3** (*Figure 1b*) out of the compartment (*Figure 1c*).

a.

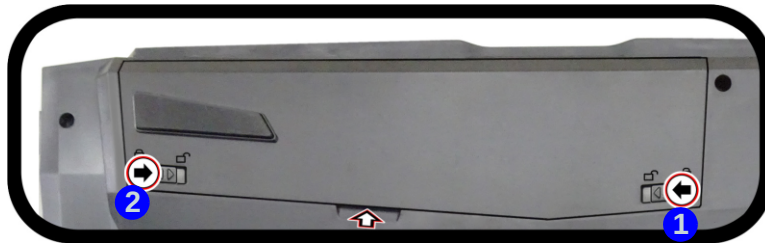

b.



c.

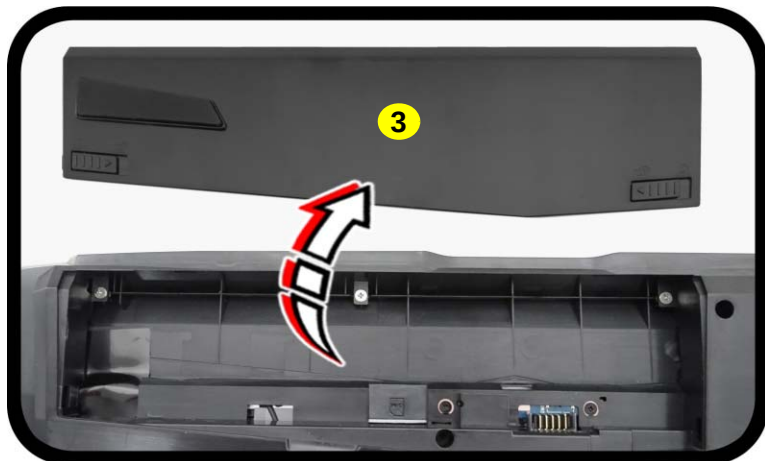


Figure 1
Battery Removal

- a. Slide the latch **1** in the direction of the arrow, and slide the latch **2** in the direction of the arrow.
- b. Lift the battery.
- c. Remove the battery.



3. Battery

Disassembly

Figure 2

Keyboard Removal

- a. Remove the screws from the bottom of the computer and then eject the keyboard using a special eject stick to push the keyboard out while releasing the keyboard as shown.
- b. Lift the keyboard up and disconnect the keyboard ribbon cable from the locking collar socket.
- c. Remove the keyboard.



Re-inserting the Keyboard

When re-inserting the keyboard firstly, align the keyboard tabs at the bottom of the keyboard with the slots in the case.





4. Eject Stick
6. Keyboard

- 2 Screws

Removing the Keyboard

1. Turn **off** the computer, turn it over.
2. Remove screws **1** - **2** from the bottom of the computer.
3. Open it up with the LCD on a flat surface before pressing at point **3** to release the keyboard module (use the special eject stick **4** to do this) while releasing the keyboard in the direction of the arrow **5** as shown (**Figure 2a**).
4. Carefully lift the keyboard **6** up, being careful not to bend the keyboard ribbon cable **7**. Disconnect the keyboard ribbon cable **7** from the locking collar socket by using a flat-head screwdriver to pry the locking collar pins **8** away from the base (**Figure 2b**).
5. Carefully lift the keyboard **6** off the computer (**Figure 2c**).

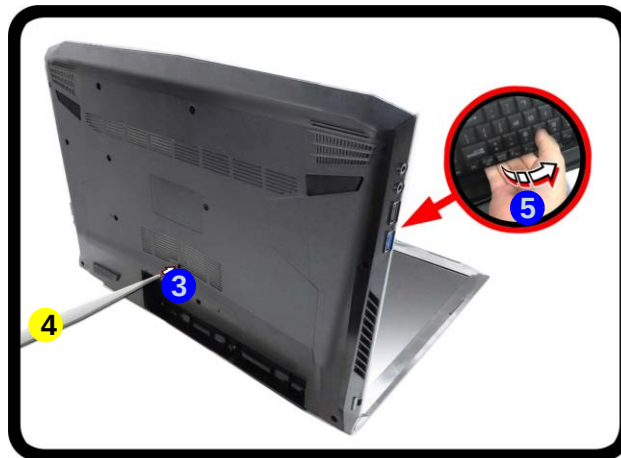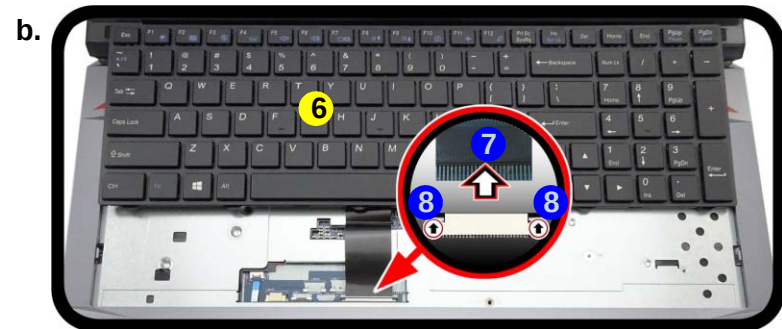

Removing the Hard Disk Drive


The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm or 7mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Disassembly Process

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Remove the SD card cover **1** and screws **2** - **17** ([Figure 3a](#)).
3. Carefully lift the bottom case **18** up from point **19** and remove it ([Figure 3b](#)).
4. The HDD will be visible at point **20** on the mainboard ([Figure 3c](#)).

Figure 3
HDD Assembly Removal

- a. Remove the SD card cover and screws.
- b. Remove the bottom case.
- c. Locate the HDD.

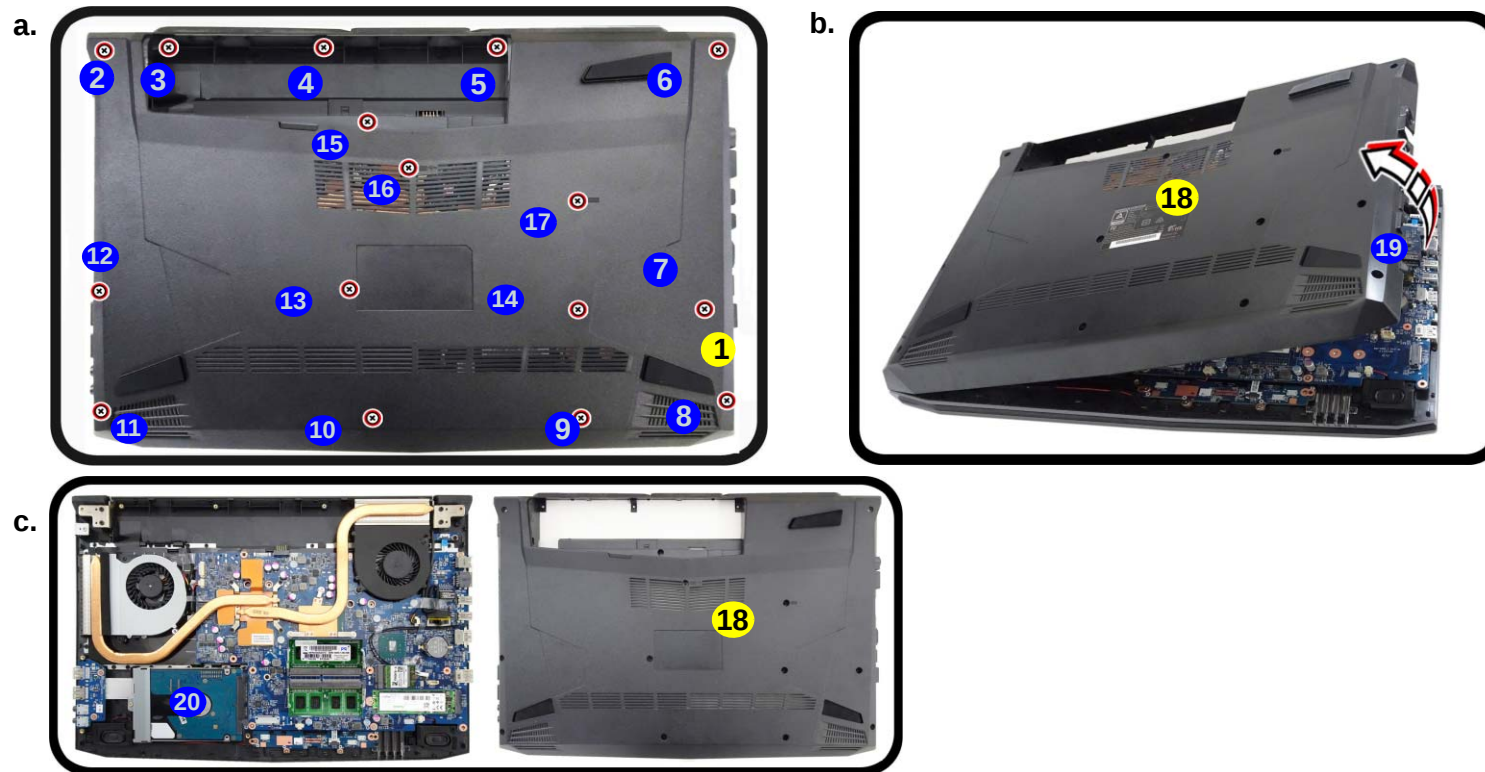




20. Hard Disk
- 16 Screws

Disassembly

Figure 4
**HDD Assembly
Removal (cont'd.)**

- d. Remove the screws.
- e. Slightly lift and pull the HDD in the direction of the arrow.
- f. Lift the HDD assembly out of the bay.
- g. Remove the screws and bracket from the HDD.

5. screws ② from the HDD assembly (*Figure 4b*).
6. Slightly lift and pull the hard disk assembly in the direction of arrow ③ (*Figure 4c*).
7. Lift the hard disk assembly ④ out of the bay ⑤ (*Figure 4d*).
8. Remove screws ⑥ - ⑦ and bracket ⑧ from the hard disk ⑨ (*Figure 4e*).
9. Reverse the process to install a new hard disk (do not forget to replace the screws).

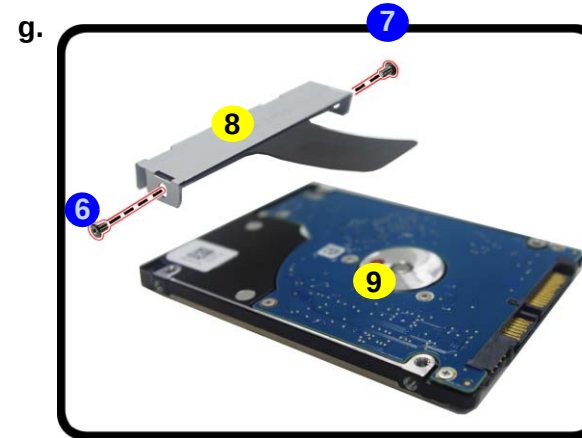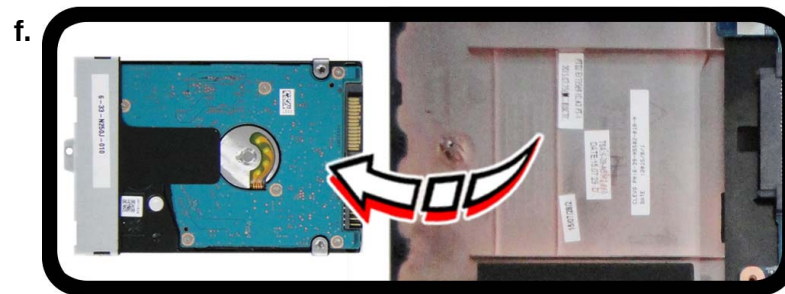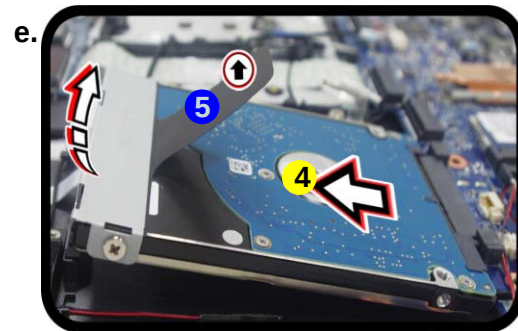

HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

- 4. HDD Assembly
- 8. Bracket
- 9. HDD
- 2 Screws

Removing the System Memory (RAM)

The computer has two memory sockets for 204 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR3L up to 1600 MHz. The main memory can be expanded up to 16GB. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 5](#)).
2. The RAM-2 modules will be visible at point **1** on the mainboard ([Figure 5a](#)).
3. Gently pull the two release latches (**2** & **3**) on the sides of the memory socket in the direction indicated by the arrows ([Figure 5b](#)). The RAM module **4** will pop-up ([Figure 5c](#)), and you can then remove it.
4. Pull the latches to release the second module if necessary.
5. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
6. The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE IT**; it should fit without much pressure.
7. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
8. Replace the bottom cover and the screws (see [page 2 - 7](#)).
9. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

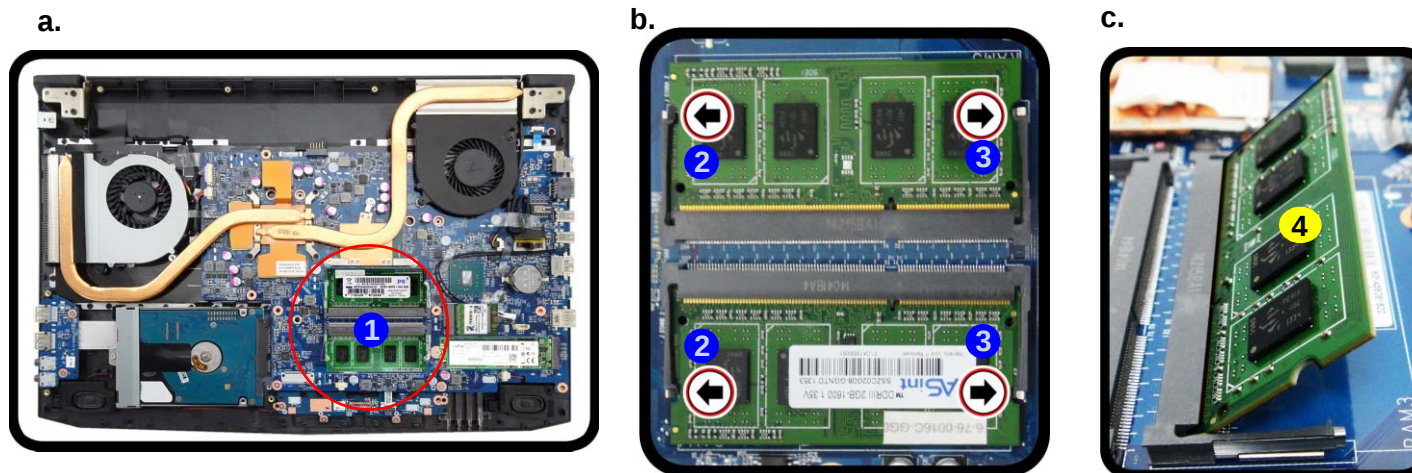


Figure 5
RAM Module Removal

- a. The RAM modules will be visible at point **1** on the mainboard.
- b. Pull the release latches.
- c. Remove the module.



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.




4. RAM Module

Disassembly

Figure 6
M.2 SSD Module Removal

- a. Locate the M.2 SSD.
 - b. Remove the screw.
 - c. The M.2 SSD module will pop up.
1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 5](#)).
 2. The M.2 SSD module will be visible at point **1** on the mainboard ([Figure 6a](#)).
 3. Remove the screw **2** ([Figure 6b](#)).
 4. The M.2 SSD module **3** ([Figure 6c](#)) will pop-up, and you can remove it from the computer.

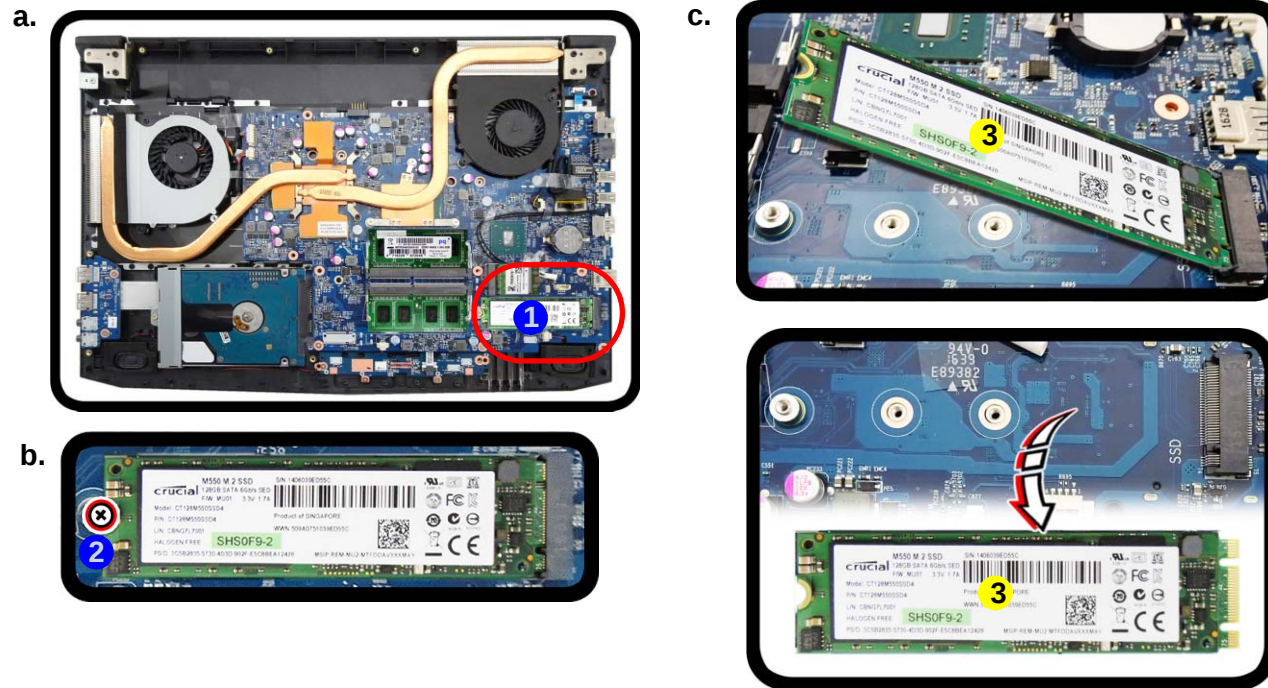

3.M2 SSD Module

- 1 Screw

Removing the Wireless LAN Module

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 5](#)).
2. The Wireless LAN module will be visible at point **1** on the mainboard ([Figure 7a](#)).
3. Carefully disconnect the cables **2** & **3**, and then remove the screw **4** ([Figure 7b](#)).
4. The Wireless LAN module **5** ([Figure 7c](#)) will pop-up, and you can remove it from the computer.



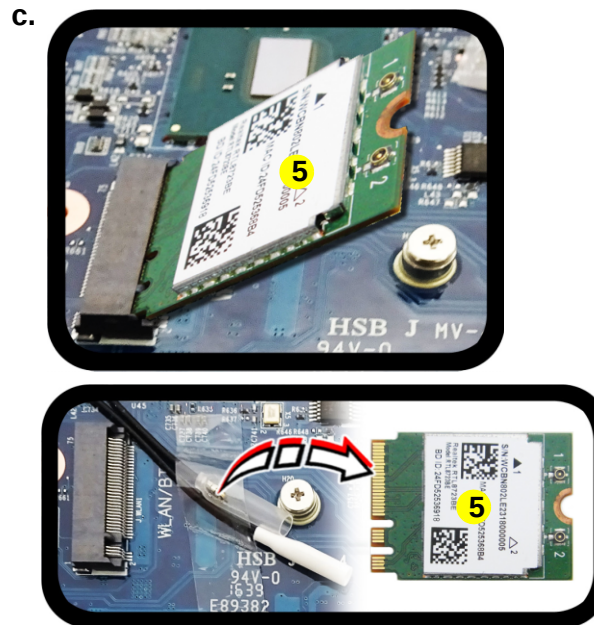


Figure 7
**Wireless LAN
Module Removal**

- Locate the WLAN.
- Disconnect the cables and remove the screw.
- The WLAN module will pop up.

Note: Make sure you reconnect the antenna cable to the “1 + 2” socket ([Figure 7b](#)).

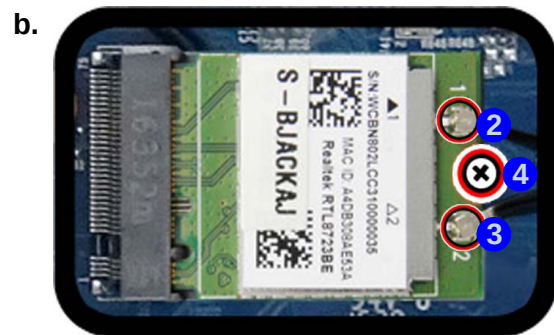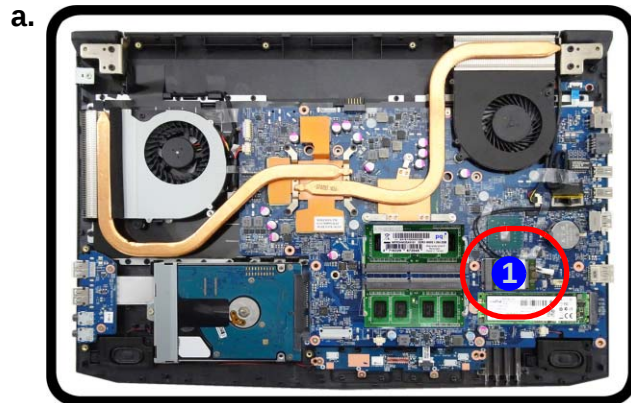

5. Wireless LAN Module

- 1 Screw

Disassembly

Wireless LAN, Combo, 3G & LTE Module Cables

Note that the cables for connecting to the antennae on WLAN, WLAN & Bluetooth Combo, 3G and LTE modules are not labelled. The cables/covers (each cable will have either a black or transparent cable cover) are color coded for identification as outlined in the table below.

Module Type	Antenna Type	Cable Color	Cable Cover Type
WLAN/WLAN & Bluetooth Combo	WM 1	Black	Transparent
	WM 2	Gray	
	WM 3	White	
LTE Broadband	LTE 1	Black	Black
	LTE 2	Gray	
3G Broadband	3G 1	Black	Black
	3G 2	Gray	

Cable 1 is usually connected to antenna 1 (Main) on the module, and cable 2 to antenna 2 (Aux).

Removing the 3G Module

3G Module Removal Procedure

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)).
2. Locate the module, it is visible at point **1** ([Figure 8a](#)).
3. Carefully disconnect the cables **2** & **3**, and then remove the screw **4** from the module ([Figure 8b](#)).
4. The module **5** will pop-up ([Figure 8c](#)).
5. Lift the module **5** up and off the computer ([Figure 8d](#)).

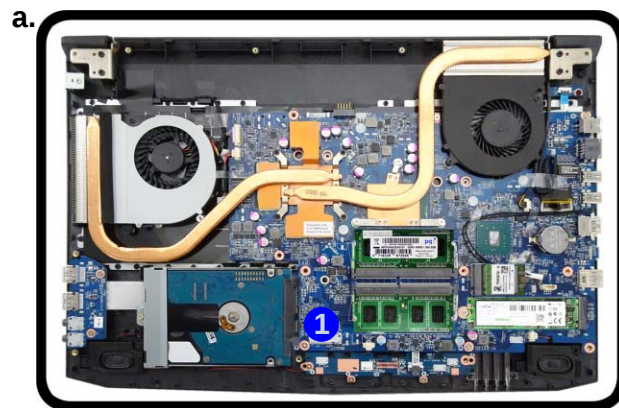


Figure 8
3G Module Removal

- Locate the module.
- Disconnect the cables and remove the screw.
- The module will pop-up.
- Lift the module up off the socket.



5. 3G Module

- 1 Screw

Disassembly


Figure 9
Heat Sink Removal

Removing the CPU Heat Sink




Heat Sink Removal Procedure

- Remove the screws.
 - Carefully remove the heat sink unit.
- Turn **off** the computer, turn it over, remove the battery ([page 2 - 5](#)) and the bottom cover ([page 2 - 7](#)).
 - Loosen the CPU heat sink screws in the order **7**, **6**, **5**, **4**, **3**, **2** & **1** (the reverse order as indicated [Figure 9a](#)).
 - Apply pressure to point **A** & **B** to lift carefully (it may be hot) the heat sink **C** off the mainboard ([Figure 9b](#)).

a.

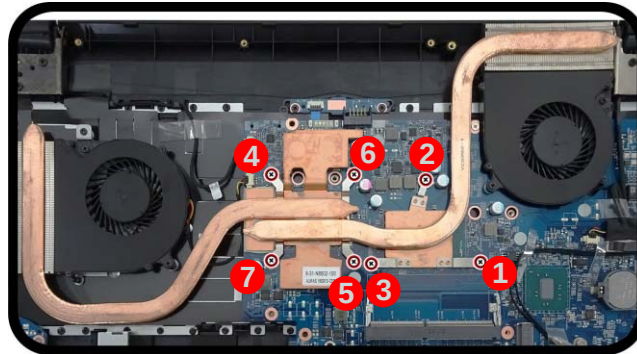

b.

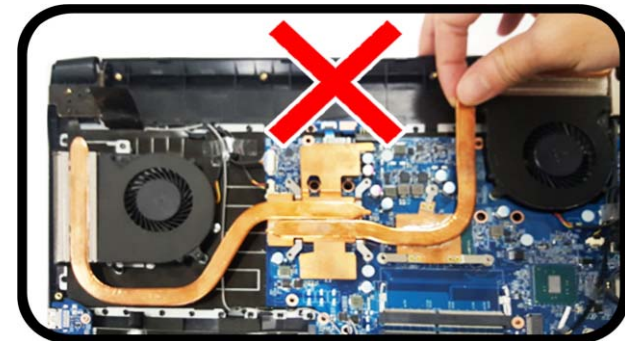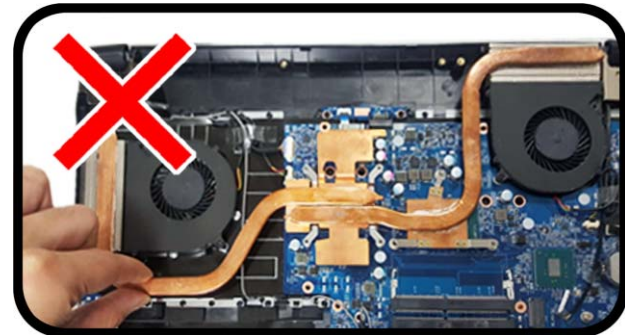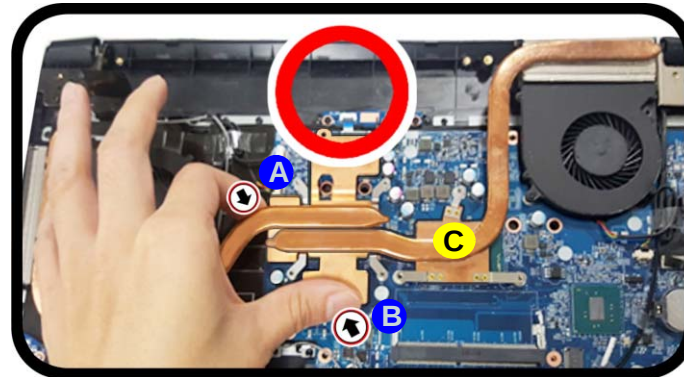

C. Heat Sink

- 7 Screws

Removing the CCD

1. Turn **off** the computer, turn it over to remove the battery ([page 2 - 5](#)).
2. Lay the computer down on a flat surface with the top case up forming a 90 degree angle. Carefully remove the rubber covers **1** - **2** and screws **3** - **4**.
3. Run your fingers around the inner frame of the LCD panel to lift at the upper point **5** as indicated by the arrows. Lift the outer frame at the middle points **6** - **7** as indicated by the arrows, and then run your fingers around the inner frame at the lower point **8** as indicated by the arrows ([Figure 10a](#)).
4. Remove the LCD front cover **9** ([Figure 10b](#)).

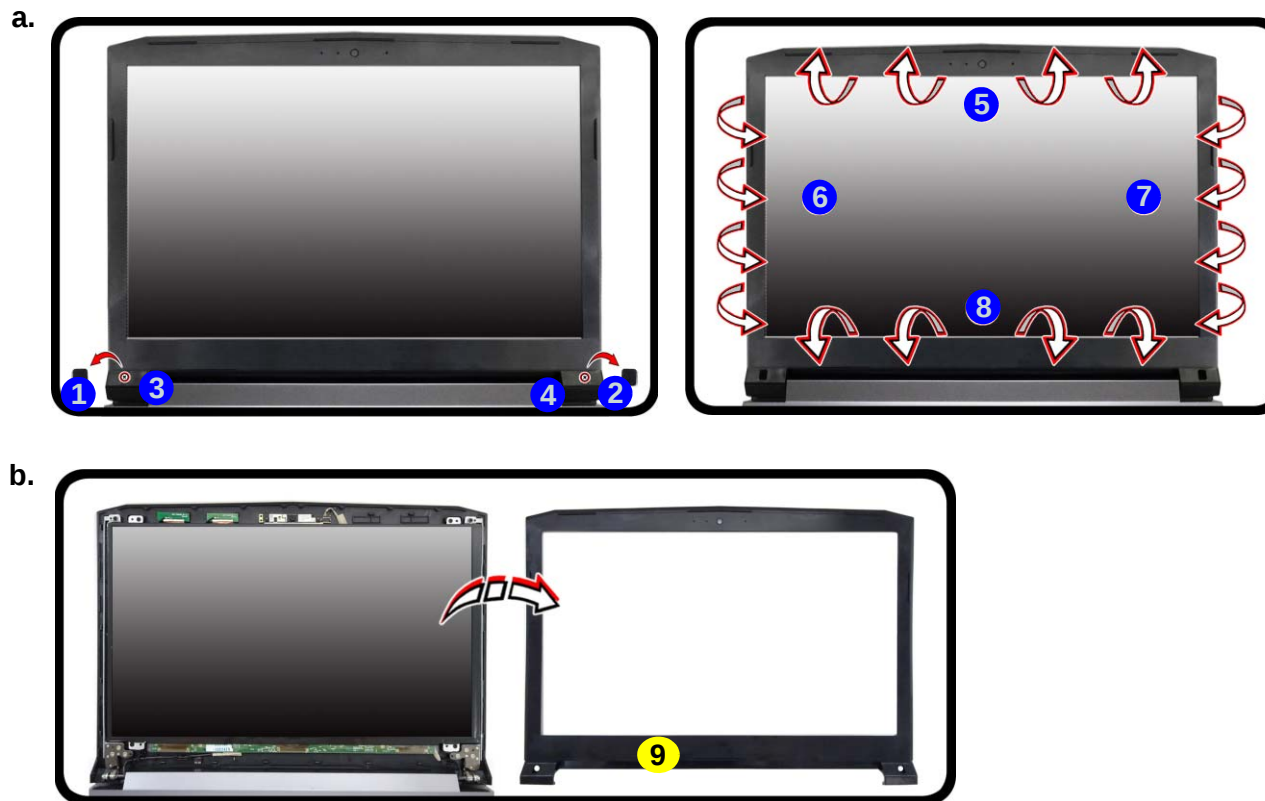


Figure 10
CCD Removal

- a. Remove rubber and screws. Then carefully release the inner frame of the LCD panel at the points indicated by the arrows.
- b. Remove the LCD front cover.



9. LCD Front Cover



- 2 Screws

Disassembly

Figure 11
**CCD Removal
(cont'd)**

- c. Disconnect the cable.
- d. Remove the CCD module.

- 5. Disconnect the cable **10** (*Figure 11c*).
- 6. Remove the CCD module **11** (*Figure 11d*).
- 7. Reverse the process to install a new CCD module.

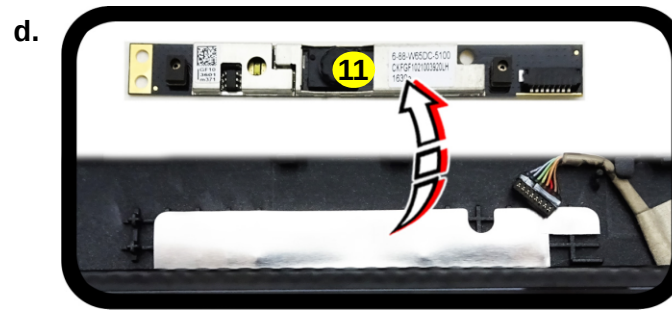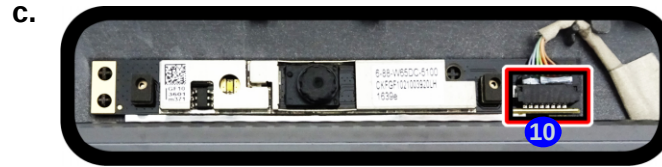

11. CCD Module

Appendix A:Part Lists

This appendix breaks down the *N855HC* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.


Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	
Top	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
Main Board	<i>page A - 5</i>
HDD	<i>page A - 6</i>
LCD	<i>page A - 7</i>

Top

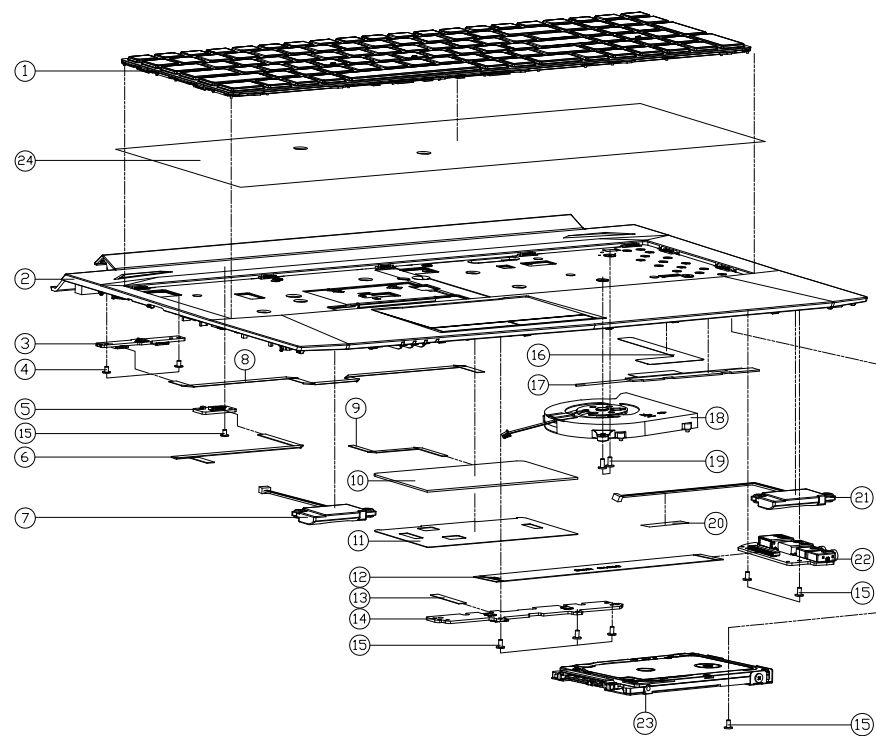


ITEM	PART NAME	PART NO	REMARK
1	WHITE IL TO USA CM52303-430 N250U BLACK ISOLATION WITH VINO KEY + VIB FRAME	6-80-N7500-012-1	
1	KB USA CM52303-430 N250U BLACK ISOLATION WITH VINO KEY	6-80-N25J0-011-1	
2	TOP CASE MODULE N855HC	6-39-N8552-022	
3	POWER SW BOARD V3.0 N855HC	6-77-N850S-D03-A	
4	SCREW M2*3L KI BZ ICT NY (DD=04.5,DT=0.4)	6-35-B6120-3RD	
5	HALL SENSOR BOARD V4.0 N850HC	6-77-N8501-D04	
6	FFC HALL TO MB 156MM 60V 4P (HT) N855HC	6-43-N8550-021-1	
7	SPEAKER L 20MM 15W 47.5MM 16-204-M-16-16 (HT) N250U AND RUBBER	6-23-5N250-0L2	
8	FFC POWER TO MB 253MM 60V 4P (HT) N855HC	6-43-N8550-011-1	
9	FFC CABLE TP TO MB L=78MM 3V 6PIN N850HC (HT)	6-43-N8500-011-1	
10	TOUCH PAD SYNAPTICS PTP TM-4089-002 (000*55MM) W650C	6-49-W65D3-010	
11	TOP TP MYLAR PET N250LU	6-40-N2502-040	
12	FFC CABLE AUDIO TO MB L=159MM 5V 40PIN N850HC(HT)	6-43-N8500-041-1	
13	FFC CABLE POWER-CLICK TO MB L=40MM 3V 4PIN N850HC(HT)	6-43-N8500-021-1	
14	CLICK BOARD V4.0A N850HC	6-77-N8502-D04A	
15	SCREW M2*5L KI NI ICT NY (DD=04.5,DT=0.4)	6-35-B1120-4RE	
16	AL FOIL (73*37*0.1) N850HC	6-47-N8502-010	
17	ANTENNA PER LITE V4112 PER IL 06045/05045/06045/06045 LITE - 15MM N250U	6-23-7N350-021	
18	CPU FAN MODULE (FORCECON) N550RC	6-31-N5502-102	
19	SCREW M2*5L KI(CT=0.8 D=4.0) BK/Z ICT NY	6-35-B6120-5R0	
20	TAPE MYLAR (C),MYLAR M550J	6-40-M55J2-030	
21	SPEAKER R 20MM 15W 47.5MM 16-204-M-16-16 (HT) N250U AND RUBBER	6-23-5N250-0R2	
22	AUDIO BOARD V3.0 N850HC	6-77-N8508-D03	
23	W/O HDD ASS'Y N850HC	6-79-N850HC0J-010	
23	W/ HDD ASS'Y N850HC	6-79-N850HC0J-020	
24	MYLAR+CR4382 (340.95*105.6*0.41)FDR KB N850HC	6-40-N8502-060	

Figure A - 1
Top


Bottom

Figure A - 2
Bottom

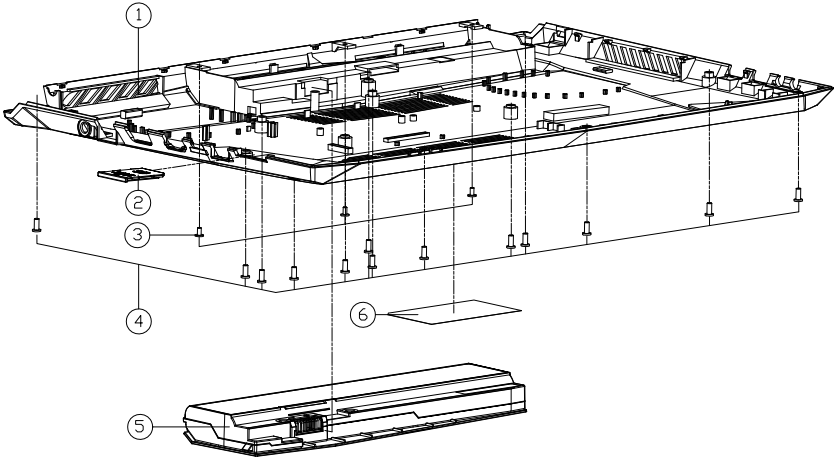

ITEM	PART NAME	PART NO	REMARK
1	BOTTOM CASE MODULE N855HC	6-39-N8553-012	
2	DUMMY SD PUSH TYPE PC+ABS (C7230P-7010E) W970S1W	6-42-W9708-011	
3	SCREW M2*4L KI NI ICT NY (DD=04.5,DT=0.4)	6-35-B1120-4RE	
4	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
5	DATP S LI 110V/50HZ/2W 32P SMPALG (TEXTURE) CAC (GRD)CS 9801/0259F NESMC	6-87-N850S-6E71	
5	DATP S LI 110V/50HZ/2W 32P SMPALG (TEXTURE) PSLAC/CAC (GRD)CS 9801/0259F NESMC	6-87-N850S-4C41	
5	DATP S LI 110V/50HZ/2W 32P GETAC/SMD (TEXTURE) CAC S4C30860002 NESMC	6-87-N850S-6U71	
5	DATP S LI 110V/50HZ/2W 32P GETAC/SMD (TEXTURE) PSLAC/CAC S4C30860001 NESMC	6-87-N850S-4U41	
6	PRODUCT LABEL FDR N855HC	6-45-N855HC03-010	

Main Board

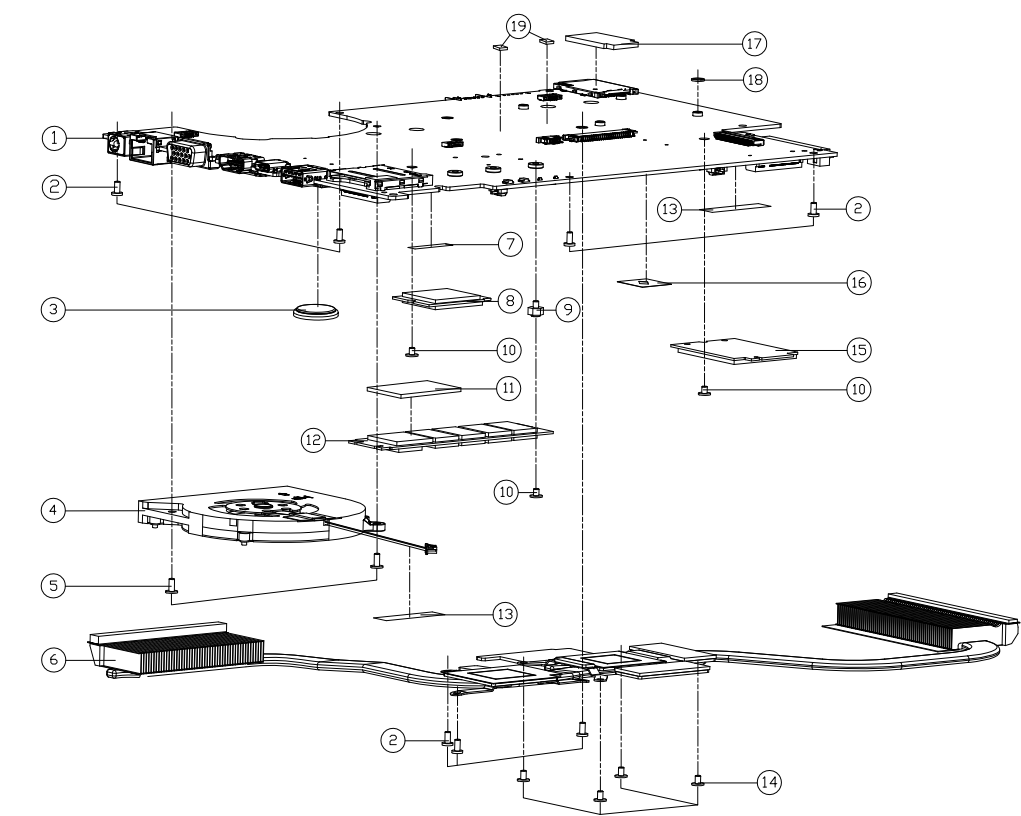



ITEM	PART NAME	PART NO	REMARK
1	MAIN BOARD(CPU-V5-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HC00-D02-D	
1	MAIN BOARD(CPU-V3-7000/350 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HC00-D02-E	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HC00-D02-2C	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HC00-D02-4C	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HC00-D02-6C	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HC00-D02-8C	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HC00-D02-15E	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HN00-D02-15E	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HN00-D02-7D	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HN00-D02-D	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HN00-D02-4C	
1	MAIN BOARD(CPU-V7-7000/250 V28 CPU/V4/PMU/TEJUSSED MESMC	6-77-NB50HN00-D02-10C	
2	SCREW M2.5*4L KI NI ICT NY	6-35-21125-4R0	
3	BATTERY 3V 220MA BBBR2032B (KTS)	6-23-6A2B2-030	
4	CPU FAN MODULE (FORCECOOL) N550RC	6-31-N5502-102	
5	SCREW M2*5L KI(T=0.8 D=4.0) BK/Z ICT NY	6-35-B6120-5R0	
6	CPU & GPU HEATSINK MODULE (OMP) NB50HC	6-31-NB502-102	
7	TOP CASE MYLAR FRB3 25*7*0.05 P180HM	6-40-W25P3-010	
8	WALLET CARD HUB AND INTEL SMART FAN 3000W IN 100V 100V 100V 100V	6-88-P65SF-4210	OPTION
8	WALLET CARD HUB AND INTEL SMART FAN 3000W IN 100V 100V 100V 100V	6-88-P65SF-4200	OPTION
8	WALLET CARD HUB AND INTEL SMART FAN 3000W IN 100V 100V 100V 100V	6-88-N240F-4200	OPTION
9	SCREW M2*5L 0#25 B-50 STEEL ICT NY FOR MFF CARDS/CHASSIS	6-35-ZA120-2R5-1	
10	SCREW M2*5L KI NI ICT NY (DD=45 T=0.5)	6-35-B1120-2R0	
11	THERMAL PAD 10300 CONDUCTIVITY 100W FOR M2 SSD MESMC	6-48-NB50S-010	
12	SSD M2 2280 SATA 300MBPS REVERSE/CHAMP 10000 PCE 100V 100V	6-85-D515B-S05	OPTION
12	SSD M2 2280 SATA 300MBPS REVERSE/CHAMP 10000 PCE 100V 100V	6-85-D515B-H01	OPTION
12	SSD M2 2280 SATA 300MBPS REVERSE/CHAMP 10000 PCE 100V 100V	6-85-D515B-Z00	OPTION
12	SSD M2 2280 SATA 300MBPS REVERSE/CHAMP 10000 PCE 100V 100V	6-85-D51R0-100	OPTION
13	TAPE MYLAR (C)MYLAR M550J	6-40-M55J2-030	
14	SCREW M2*4L KI NI ICT NY (DD=44.5,DT=0.4)	6-35-B1120-4RE	
15	WALLET CARD HUB AND INTEL SMART FAN 3000W IN 100V 100V 100V 100V	6-88-S210V-8810	
15	WALLET CARD HUB AND INTEL SMART FAN 3000W IN 100V 100V 100V 100V	6-88-W3306-8841	
15	WALLET CARD HUB AND INTEL SMART FAN 3000W IN 100V 100V 100V 100V	6-88-W3306-8830	
16	VGA CHIP MYLAR 30*30D N80P-EE2 M850TU (H=1.8)	6-40-M860S-091	FOR N85XHC
16	CPU MYLAR CONDUCTIVITY 100W FOR M55-G1 W500	6-40-V650S-020	FOR N850HN
17	SIM RUBBER (SILICONE RUBBER-METTON SIL4) N850JU-V	6-47-N25J2-071-V	FOR V/D 30/L/TEL 100V
18	WASHER Ø7.2*4.0*1.4T RUBBER N850HN	6-37-02000-701	FOR N850HN
19	RUBBER SILICONE 6*6*2.3T N855HC	6-47-N8552-010	ONLY FOR N855HC

Figure A - 3
Main Board

A.Part Lists


HDD

Figure A - 4
HDD

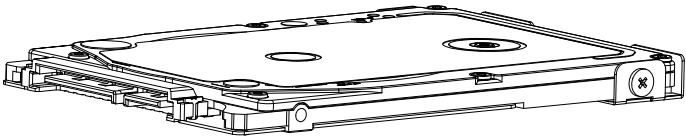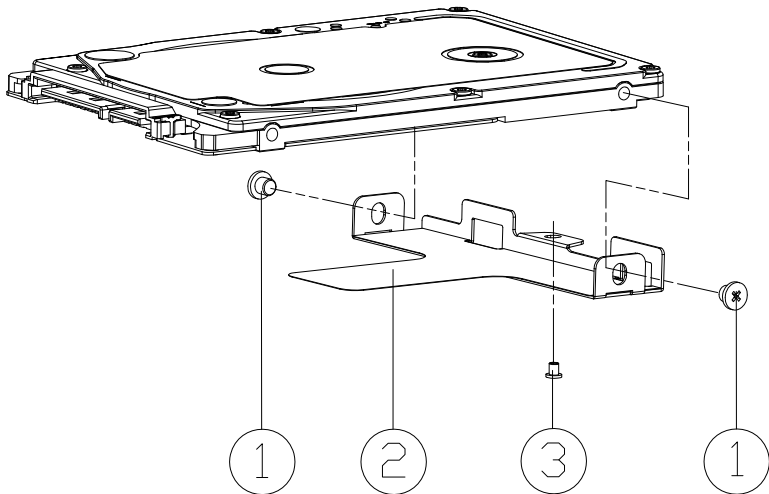

ITEM	PART NAME	PART NO	REMARK
1	SCREW M3*2.5L KI NI ICT NY	6-35-B1130-2R5	
2	HDD BKT 7MM SECC T=0.5 N250LU	6-33-N250J-011	
3	.SCREW M2*4L KI NI ICT NY (DD=Ø4.5,DT=0.4)	6-35-B1120-4RE	

LCD

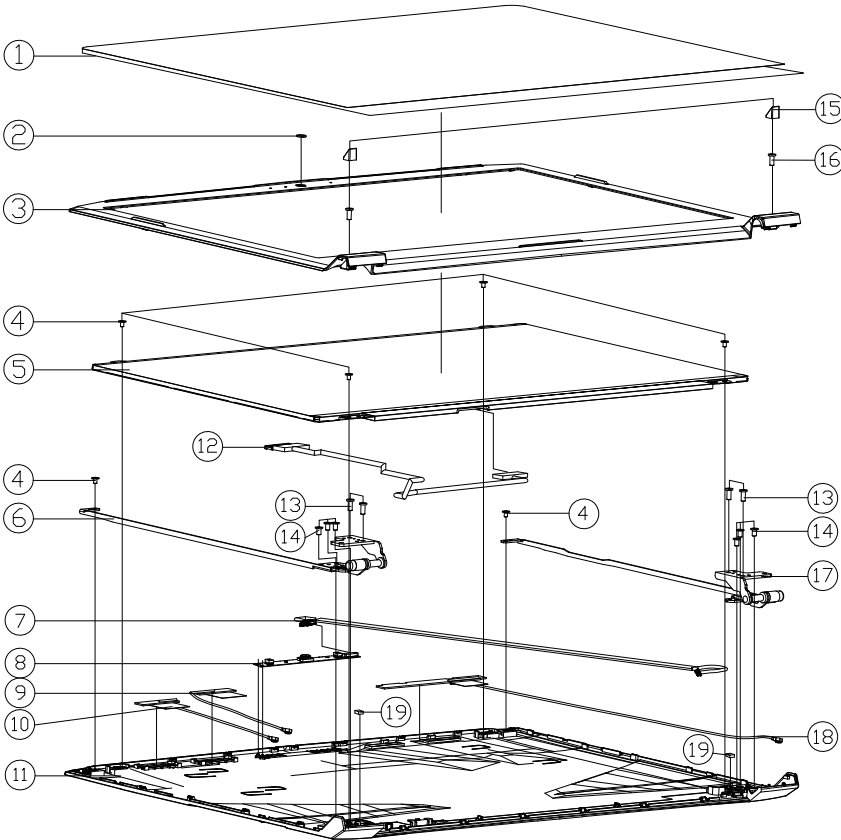

ITEM	PART NAME	PART NO	REMARK
1	LCD PROTECT MYLAR BOPP N650DU	6-40-N6508-040	
2	CCD LENS (VIEWING AREA 4MMX6MM)W940TU	6-42-W9401-020	
3	FRONT COVER MODULE N855HC	6-39-N8551-012	
4	SCREW M2*3L KI BZ ICT NY (DD=04.5,DT=0.4)	6-35-B6120-3RD	
5	LCD 15.6" FHD/IPS/EDP LG LP156WF6-SPK3 0N4 QLED 32MM	6-50-LB232-L08	
5	LCD 15.6" FHD/IPS/EDP LG LP156WF6-SPK3 0N4 QLED 32MM	6-50-LB232-L04	
5	LCD 15.6" HD (EDP) AU B156XTN03.5 32MM LED	6-50-L8132-G03	
5	LCD 15.6" FHD (EDP) INNOLOX N656AE-EAB 4/4 UPGATED LED 32 MM	6-50-LB232-V02	
5	LCD 15.6" HD (EDP) LG LP156W4U-TPB1 QLED 32 MM	6-50-L8132-L01	
6	HINGE L (SGCC) SNR N855HC	6-33-N8551-0L1	
7	WIRE CABLE FOR CCD B-MIC 500MM 3.3V BP 04L N250TU	6-43-N250T-011	
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-W65DC-5110	OPTION
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-N850C-5100	OPTION
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-N850C-4900	OPTION
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-W51PC-5100	OPTION
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-N650C-4910	OPTION
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-W65DC-5100	OPTION
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-P775C-5100	OPTION
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-P775C-4900	OPTION
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-W51PC-5110	OPTION
8	IVC CAMERA CORD FOR OPTIC/VIDEO/IR IN FHD D20PM N850C FIBER WHITE-LED W/4-MIC	6-88-N650C-4900	OPTION
9	ANTENNA IPXA WLAN WGT V4.1 PCB AL 24G/5G W4.1-45MM N850C	6-23-7N850-011	
10	ANTENNA IPXA WLAN WGT V4.2 PCB AL 24G/5G W4.2-45MM N850C	6-23-7N850-020	
11	BACK COVER MODULE N855HC	6-39-N8551-022	
12	WIRE CABLE FOR EDP FHD 300MM 10 PIN 30PIN 04L V COM V303P-202-H7 N850U	6-43-N85H1-020-1N	
13	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
14	SCREW M2.5*4L KI NI ICT NY	6-35-21125-4R0	
15	FRONT SCREW RUBBER N855HC	6-47-N8551-050	
16	SCREW M2*4L KI NI ICT NY (DD=04.5,DT=0.4)	6-35-B1120-4RE	
17	HINGE R (SGCC+SK7) SNR N855HC	6-33-N8551-0R1	
18	ANTENNA IPXA WLAN WGT V4.1 PCB AL 24G/5G W4.1-45MM N850C	6-23-7N250-010	
19	RUBBER 5*4*5T FOR P655RP6	6-47-00120-540	

Figure A - 5
LCD

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *N855HC* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>PCH 3/9 - Page B - 25</i>	<i>1.0DX_VCCSTG/VCCSFR_OC, 3.3VA - Page B - 48</i>
<i>Processor 1/6 - Page B - 3</i>	<i>PCH 4/9 - Page B - 26</i>	<i>VCCSA - Page B - 49</i>
<i>Processor 2/6 - Page B - 4</i>	<i>PCH 5/9 - Page B - 27</i>	<i>AC_In, Charger - Page B - 50</i>
<i>Processor 3/6 - Page B - 5</i>	<i>PCH 6/9 - Page B - 28</i>	<i>NVVD - Page B - 51</i>
<i>Processor 4/6 - Page B - 6</i>	<i>PCH 7/9 - Page B - 29</i>	<i>FBVDDQ - Page B - 52</i>
<i>Processor 5/6 - Page B - 7</i>	<i>PCH 8/9 - Page B - 30</i>	<i>PEX_VDD/3V3 - Page B - 53</i>
<i>Processor 6/6 - Page B - 8</i>	<i>PCH 9/9 - Page B - 31</i>	<i>Audio Board - Page B - 54</i>
<i>DDR4 CHA SO-DIMM - Page B - 9</i>	<i>M.2 3G Card - Page B - 32</i>	<i>Power Switch Board - Page B - 55</i>
<i>DDR4 CHB SO-DIMM - Page B - 10</i>	<i>M.2 WLAN+BT, SSD - Page B - 33</i>	<i>Hall Sensor Board - Page B - 56</i>
<i>VGA PCI-E Interface - Page B - 11</i>	<i>ASM 1142 & 2142 - Page B - 34</i>	<i>Click Board - Page B - 57</i>
<i>VGA Frame Buffer Interface - Page B - 12</i>	<i>ASM Power - Page B - 35</i>	<i>LED Board - Page B - 58</i>
<i>VGA Frame Buffer A - Page B - 13</i>	<i>USB, Charger - Page B - 36</i>	<i>Power Sequence - Page B - 59</i>
<i>VGA Frame Buffer A - Page B - 14</i>	<i>Card Reader / LAN RTL8411B - Page B - 37</i>	
<i>VGA Frame Buffer B - Page B - 15</i>	<i>HDD, Click TP, Audio, Hall Con.. - Page B - 38</i>	
<i>VGA Frame Buffer B - Page B - 16</i>	<i>LED, CCD, TPM, Power SW Con. - Page B - 39</i>	
<i>VGA I/O - Page B - 17</i>	<i>Audio Codec ALC269 VC2 - Page B - 40</i>	
<i>VGA NVVD Coupling - Page B - 18</i>	<i>KBC-ITE IT8587 - Page B - 41</i>	
<i>PS8625 - Page B - 19</i>	<i>5V, 5VS, 3.3V, 3.3VS, 3.3VA - Page B - 42</i>	
<i>Panel, Inverter - Page B - 20</i>	<i>VDD1.0, VCCIO - Page B - 43</i>	
<i>CRT - Page B - 21</i>	<i>VDD3, VDD5 - Page B - 44</i>	
<i>HDMI - Page B - 22</i>	<i>DDR 1.2V/0.6VS, 2.5V - Page B - 45</i>	
<i>PCH 1/9 - Page B - 23</i>	<i>VCore, VCCGT Output Stage - Page B - 46</i>	
<i>PCH 2/9 - Page B - 24</i>	<i>VCC_Core, VCCGT - Page B - 47</i>	


Table B - 1
SCHEMATIC
DIAGRAMS




Version Note

The schematic diagrams in this chapter are based upon version 6-7P-N8506-004. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

Sheet 1 of 58
System Block
Diagram

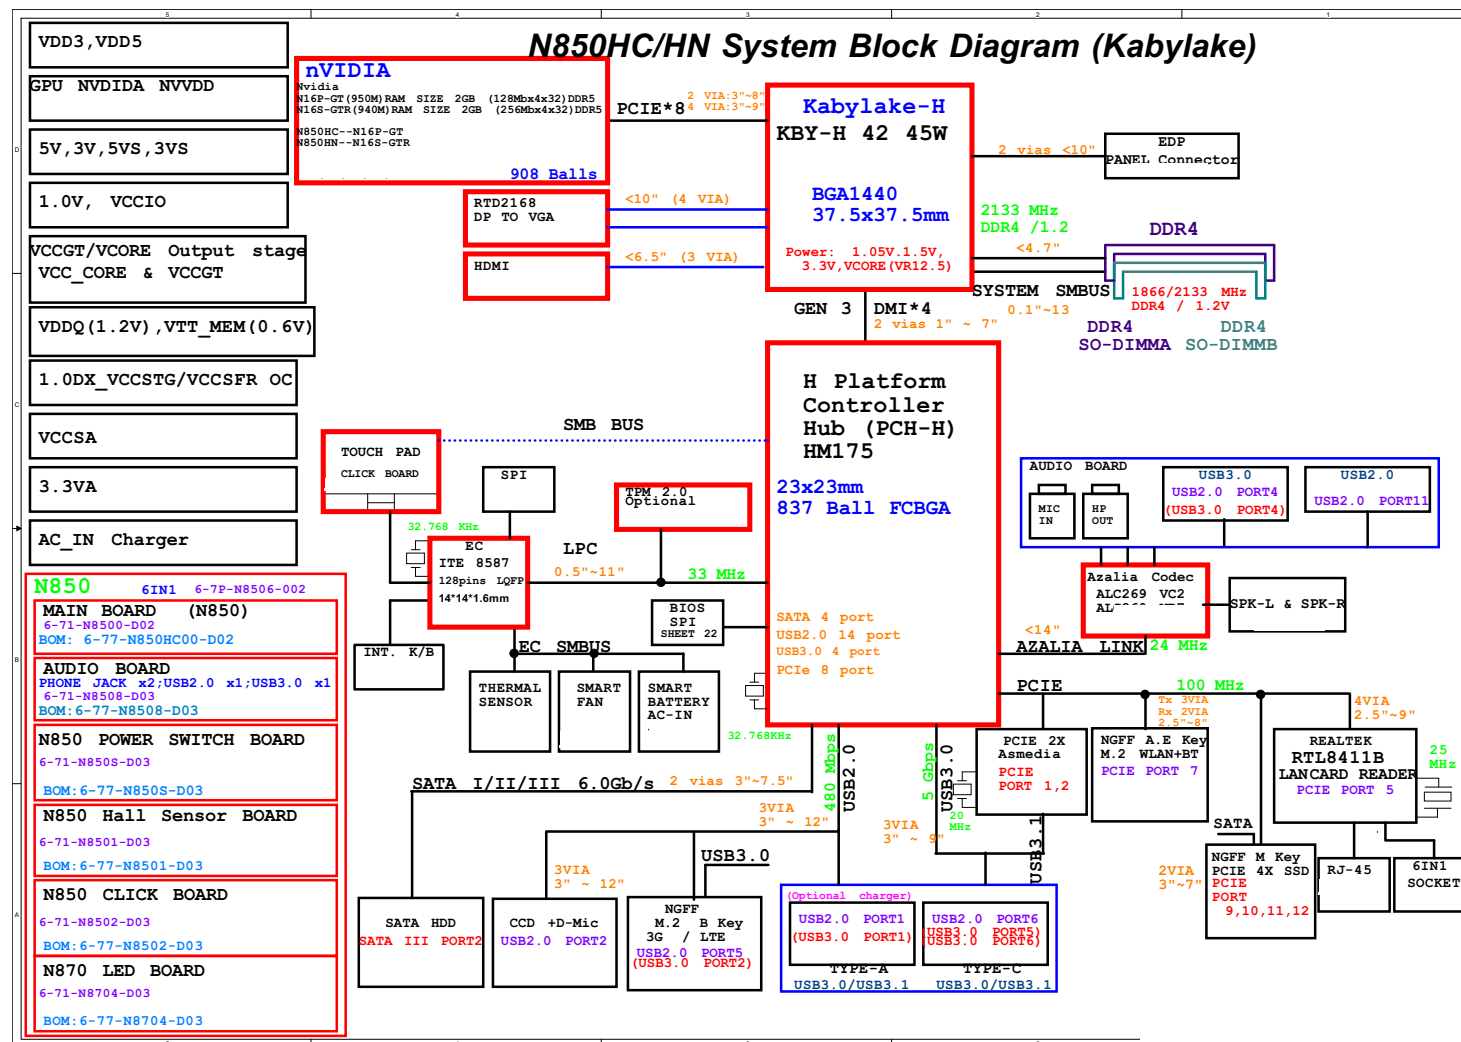



Processor 1/6

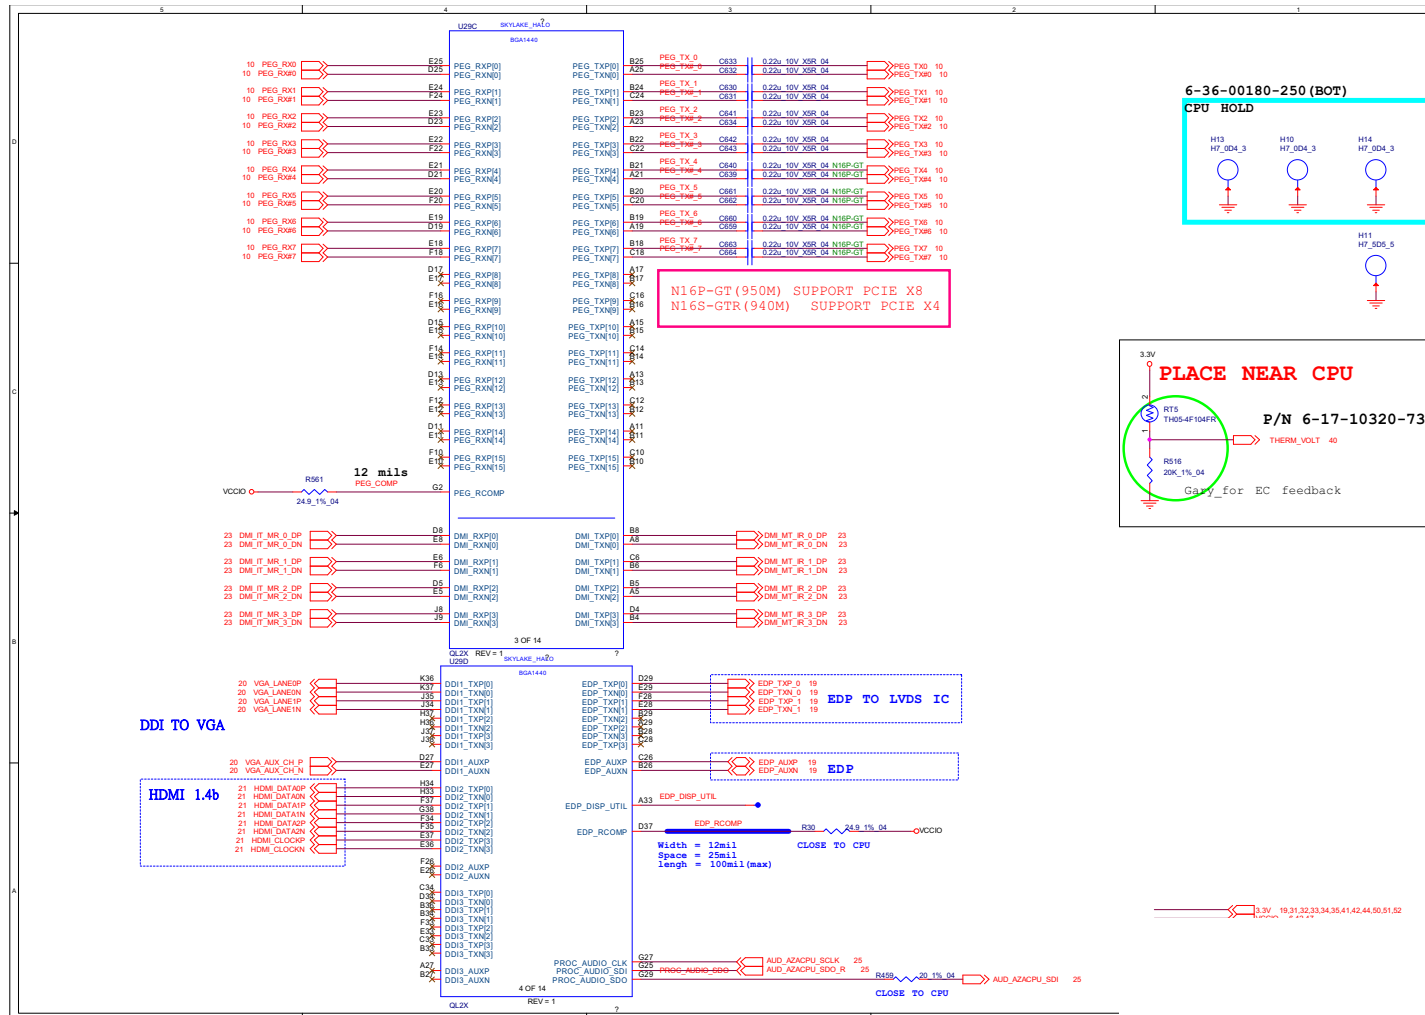

Sheet 2 of 58
Processor 1/6


Processor 2/6

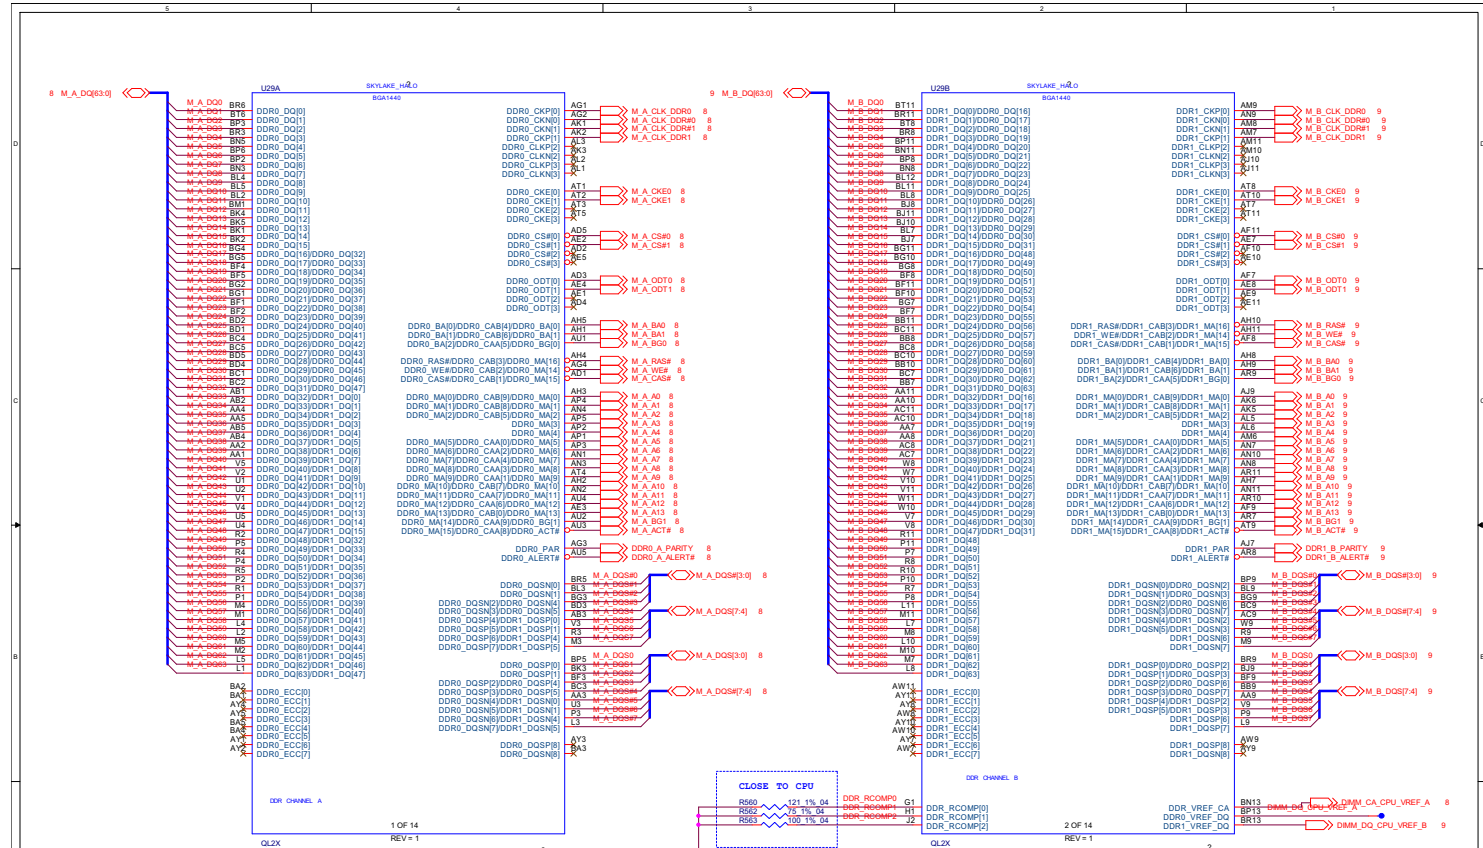

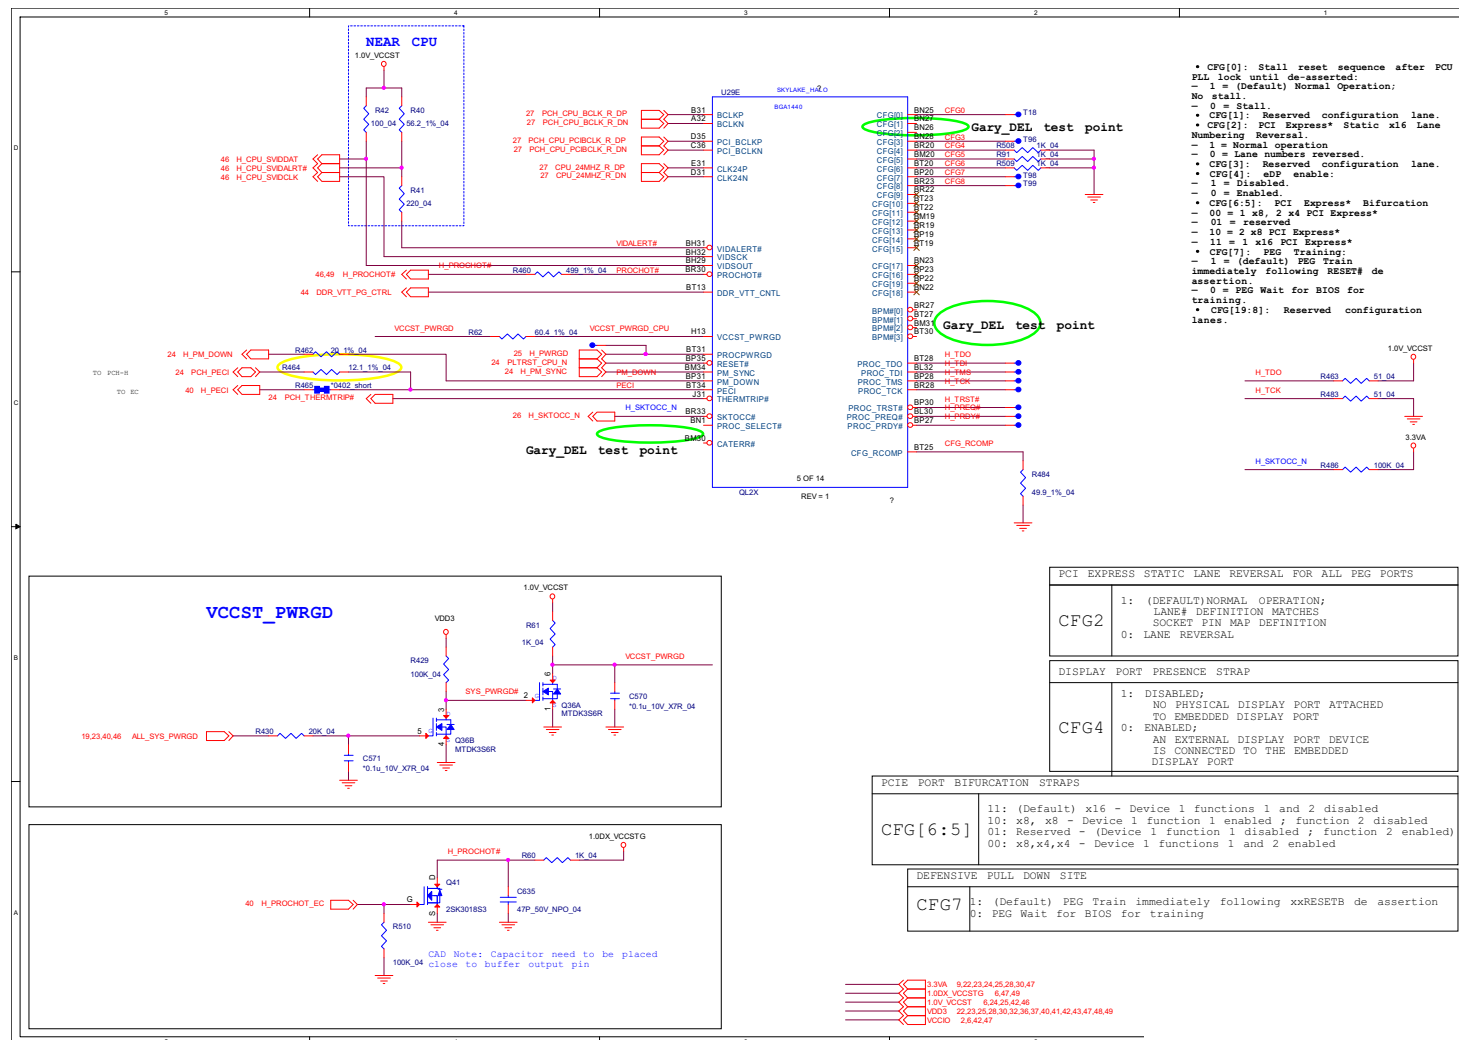


Processor 4/6

Sheet 5 of 58
Processor 4/6

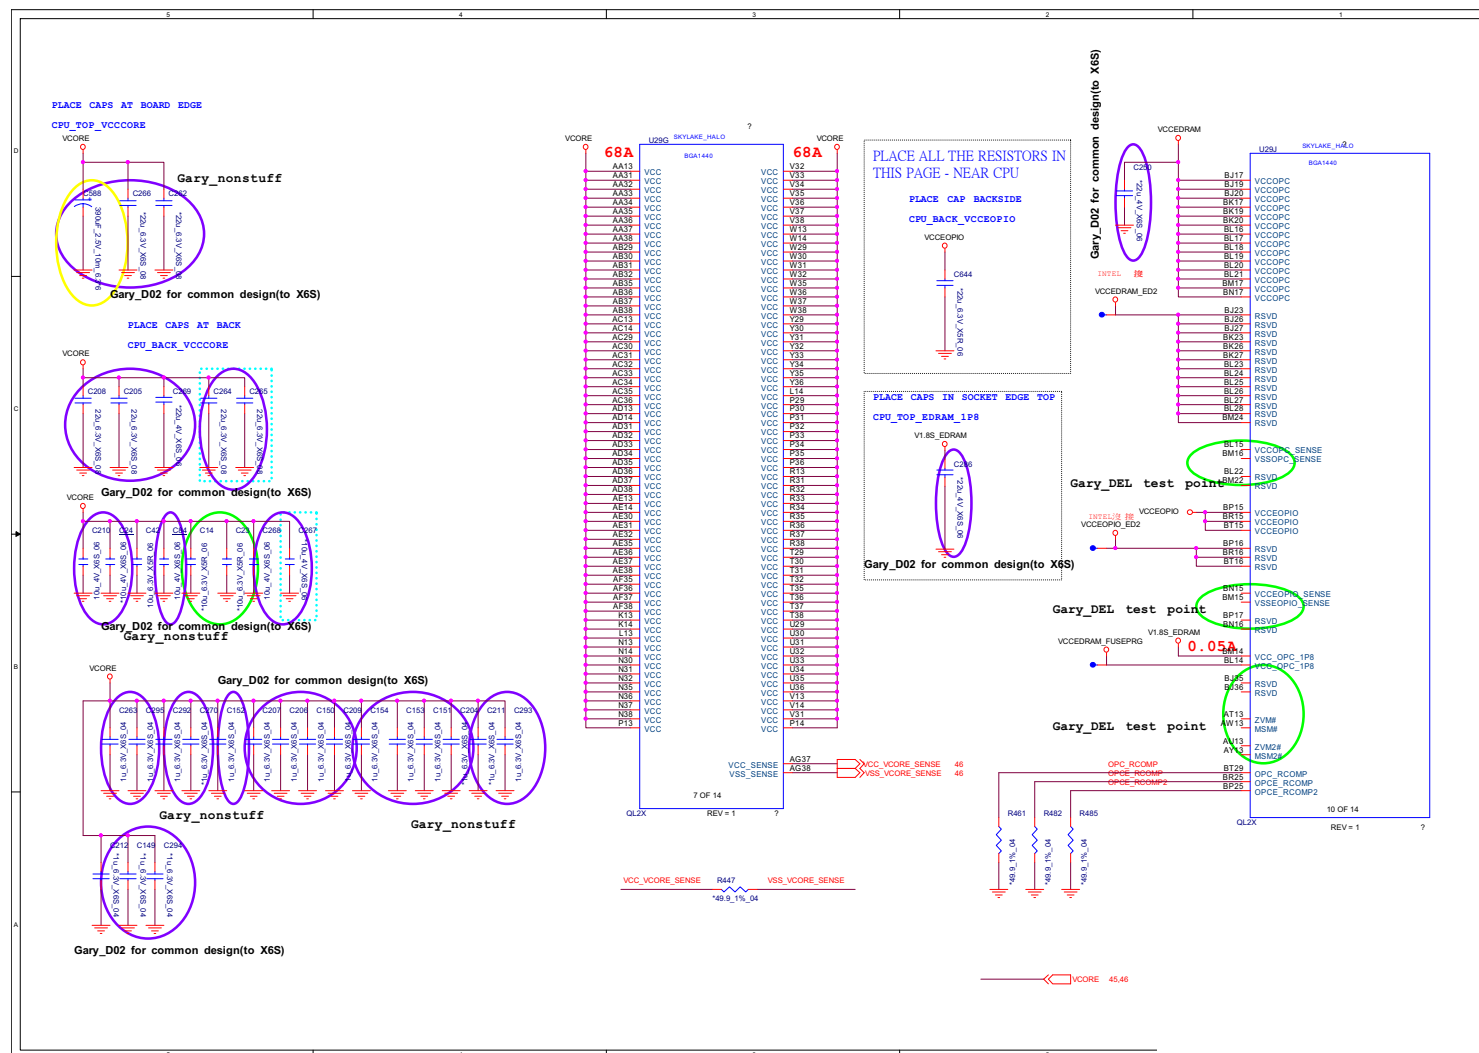

Processor 5/6

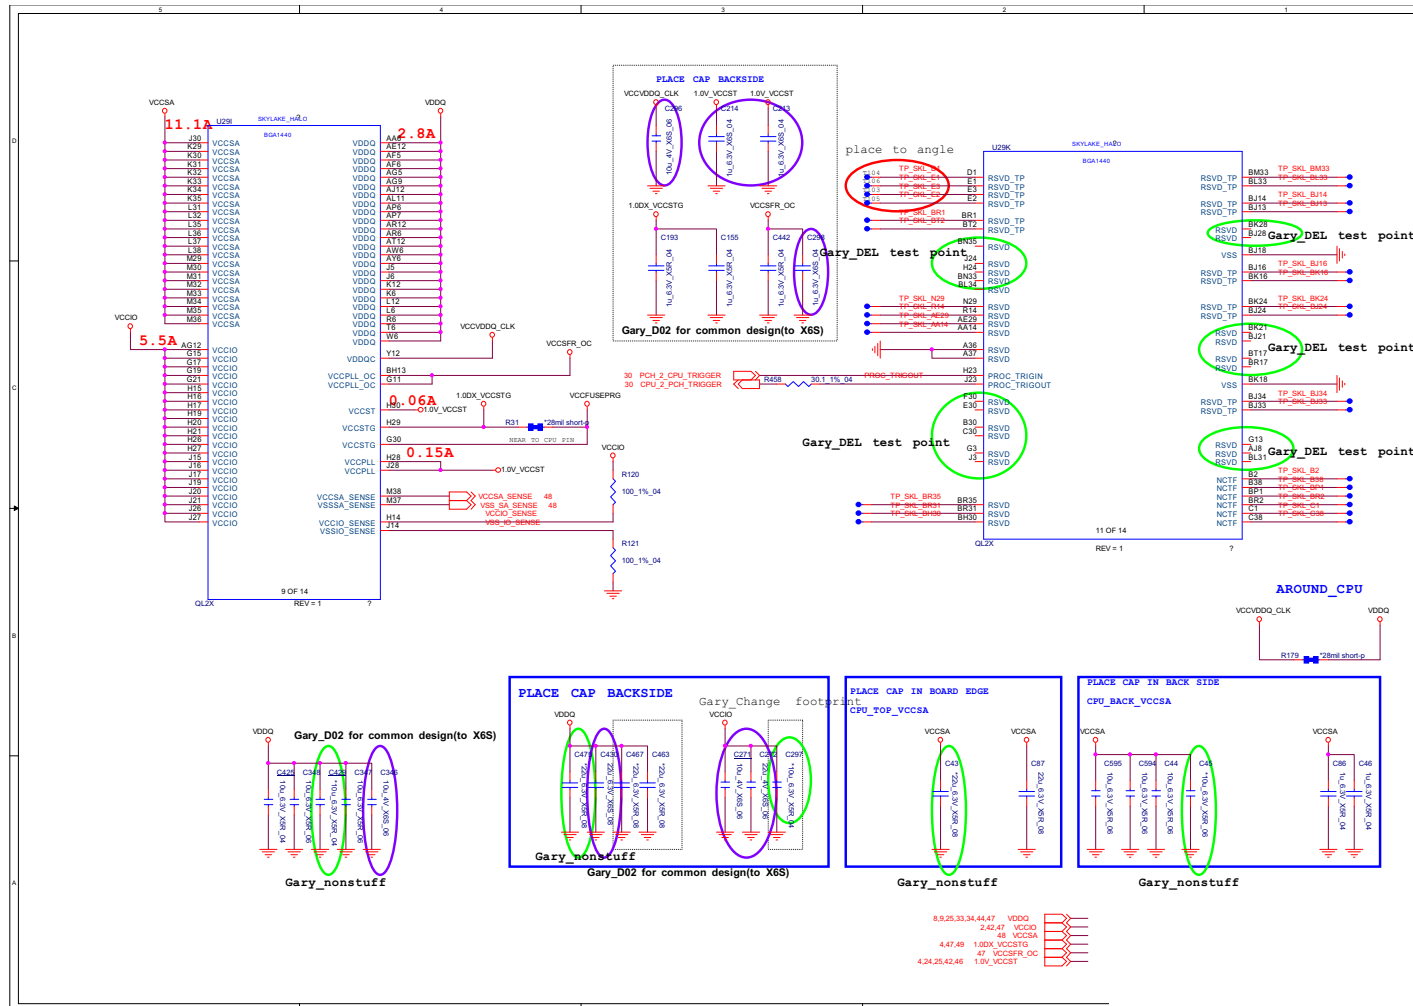
Sheet 6 of 58
Processor 5/6

Schematic Diagrams

Processor 6/6

B.Schematic Diagrams


Sheet 7 of 58
Processor 6/6

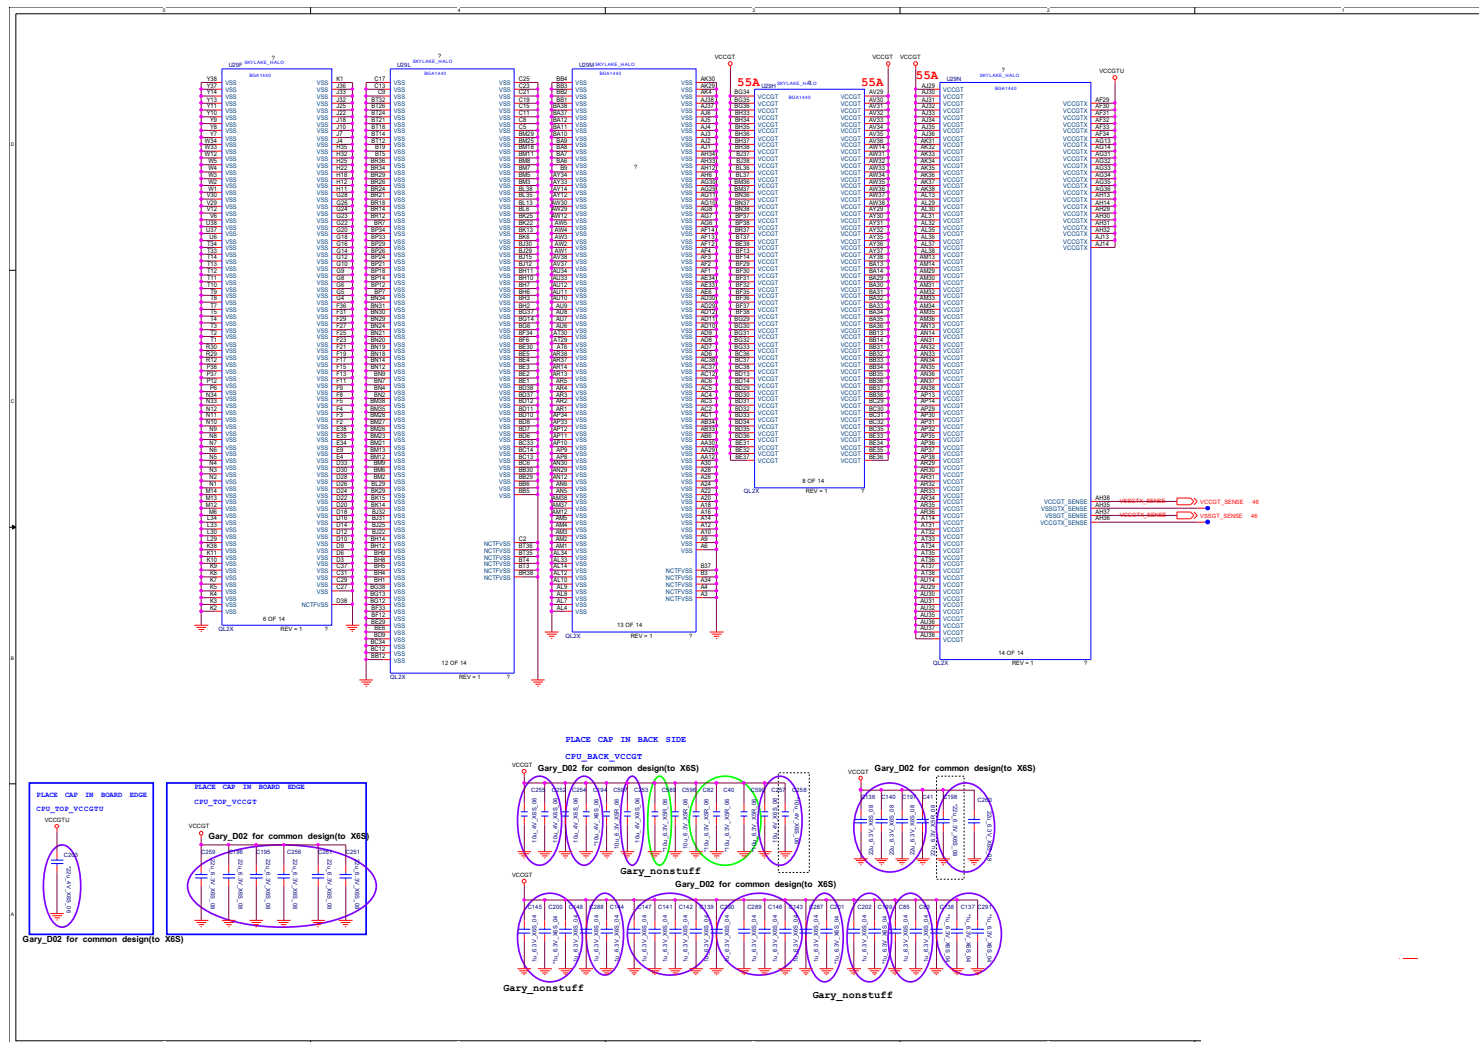

DDR4 CHB SO-DIMM

B. Schematic Diagrams

Sheet 9 of 58
DDR4 CHB SO-
DIMM

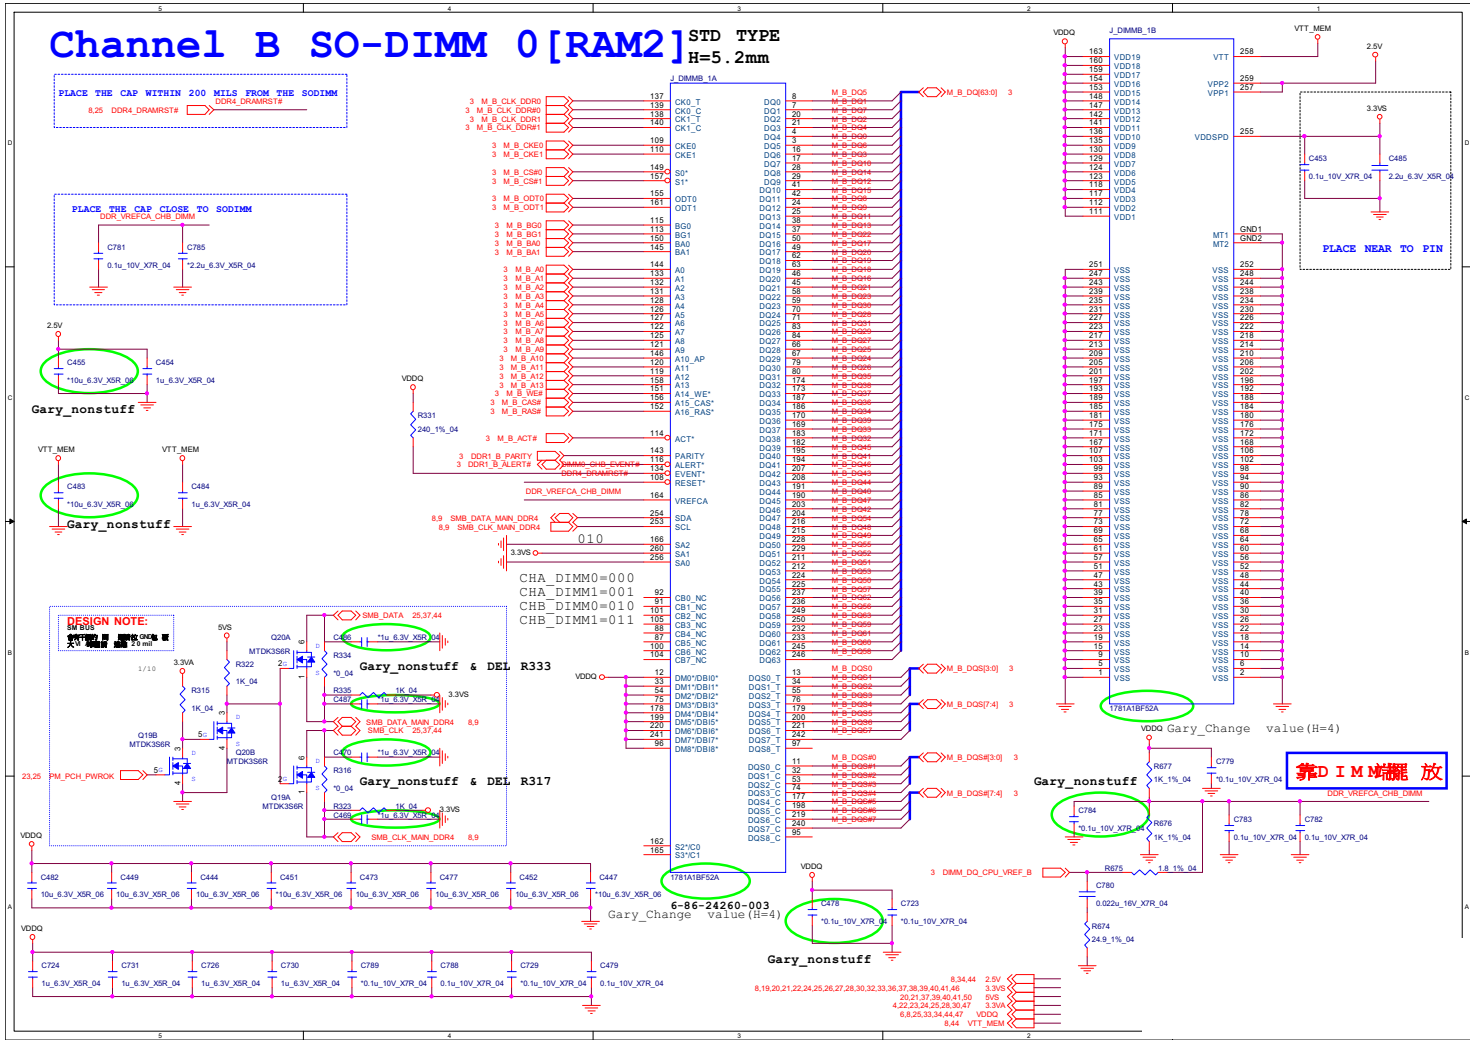


Sheet 10 of 58
VGA PCI-E
Interface




VGA Frame Buffer Interface

Sheet 11 of 58
VGA Frame Buffer
Interface

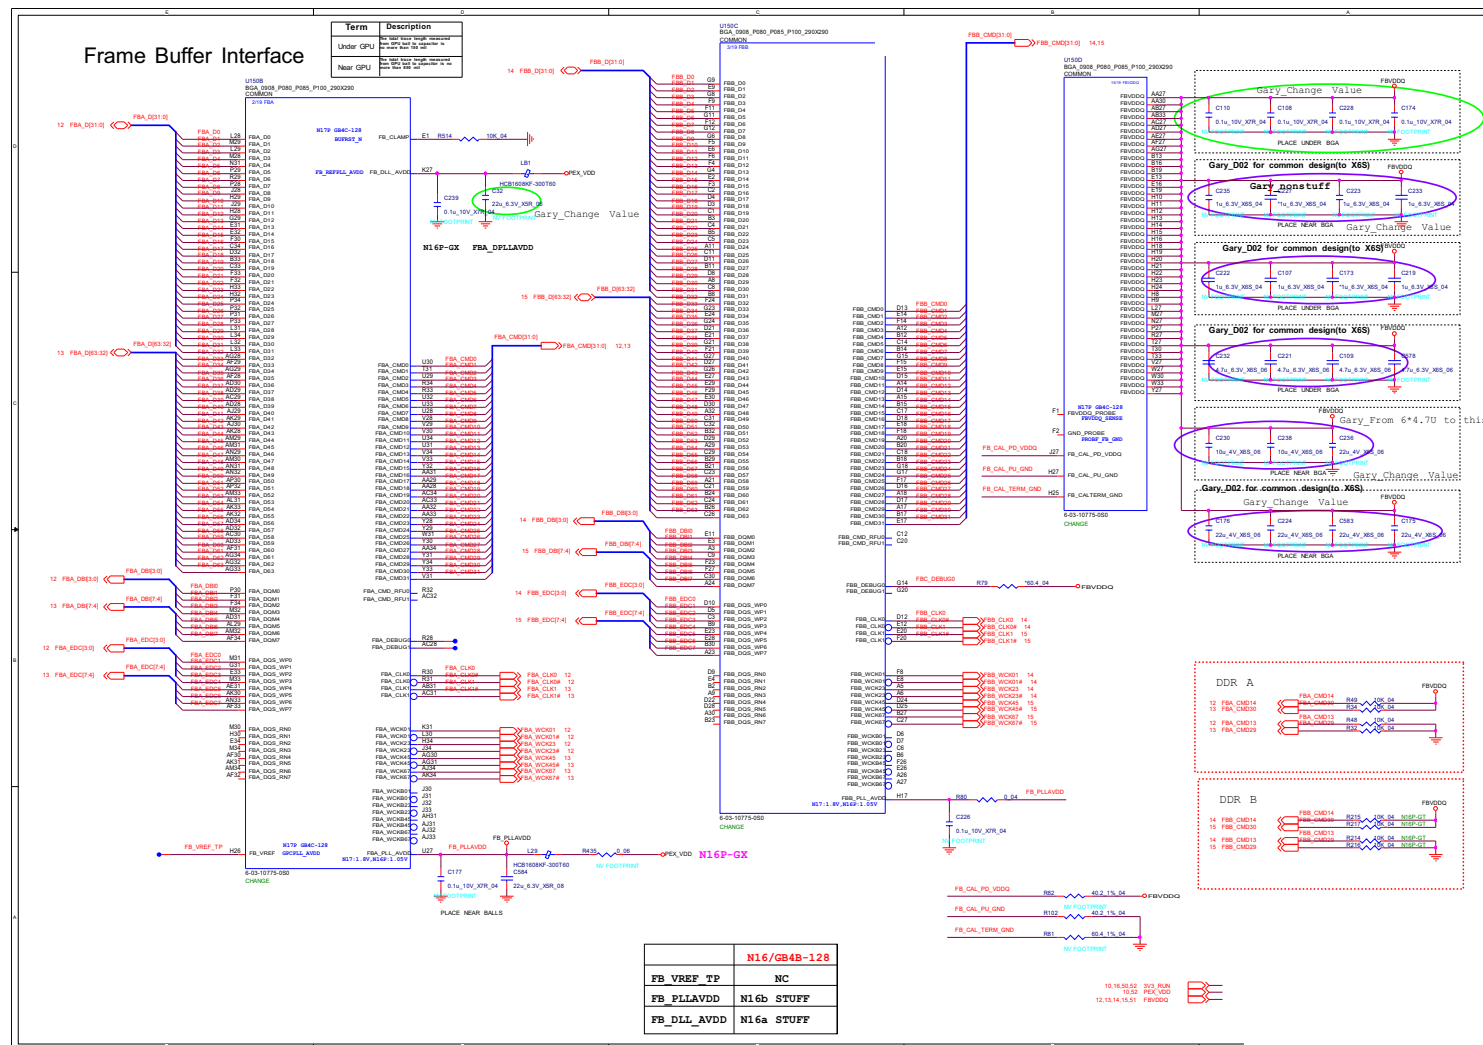


Sheet 12 of 58
VGA Frame Buffer
A

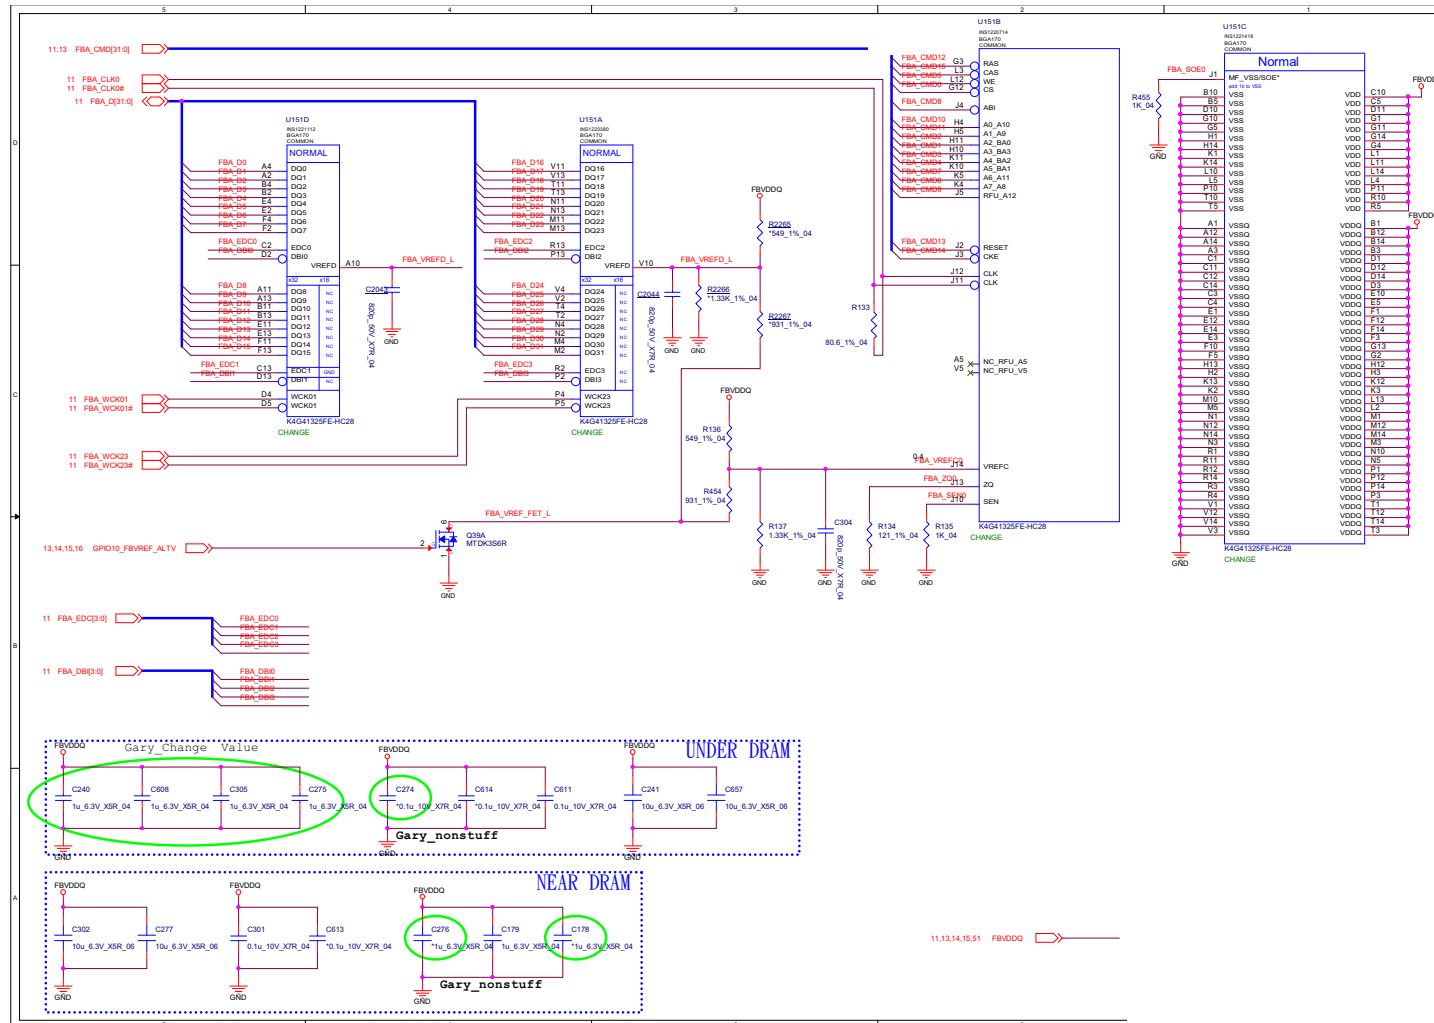

VGA Frame Buffer A


B.Schematic Diagrams

Sheet 13 of 58
VGA Frame Buffer
A

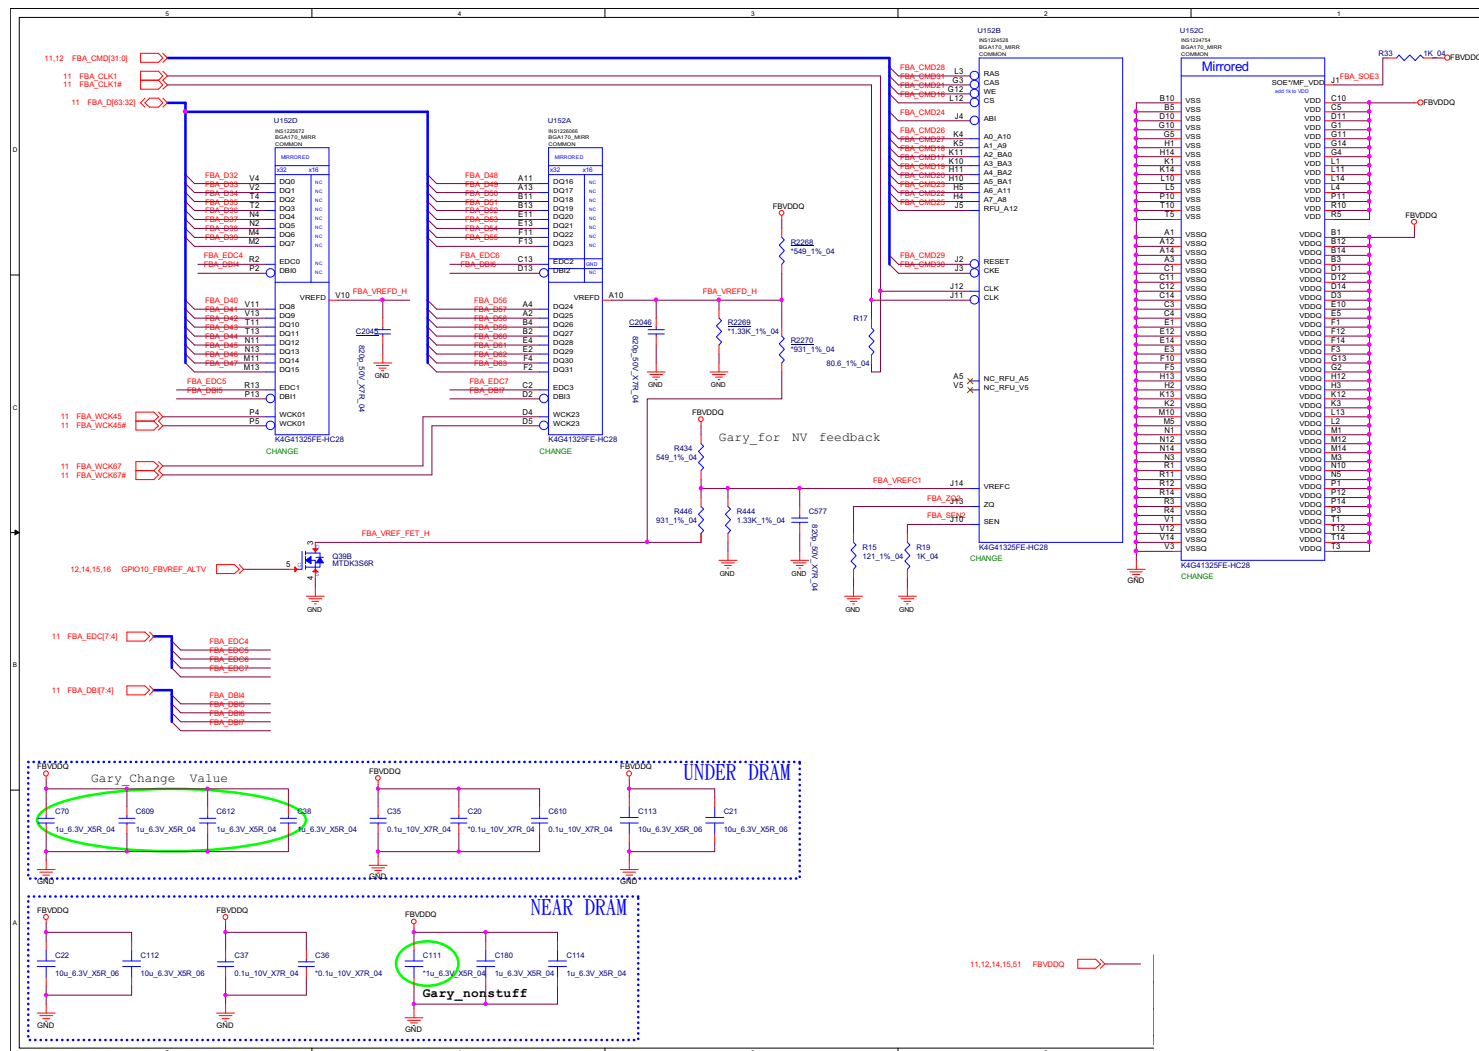

Schematic Diagrams

VGA Frame Buffer B

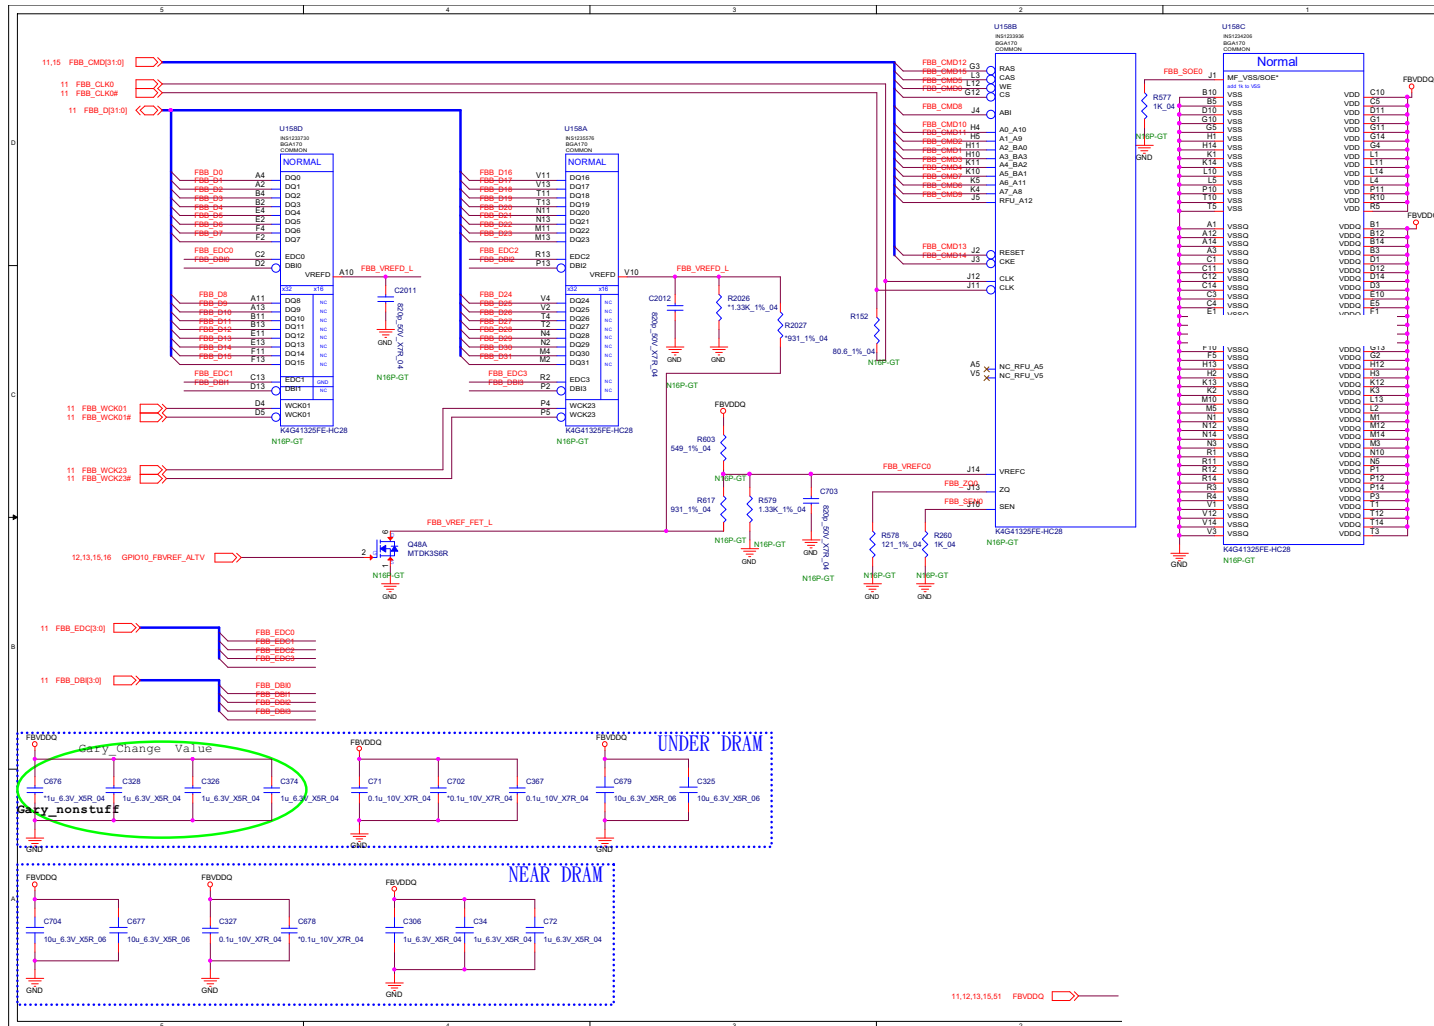


Sheet 14 of 58
VGA Frame Buffer
B

B.Schematic Diagrams

VGA Frame Buffer B


B. Schematic Diagrams

Sheet 15 of 58
VGA Frame Buffer
B

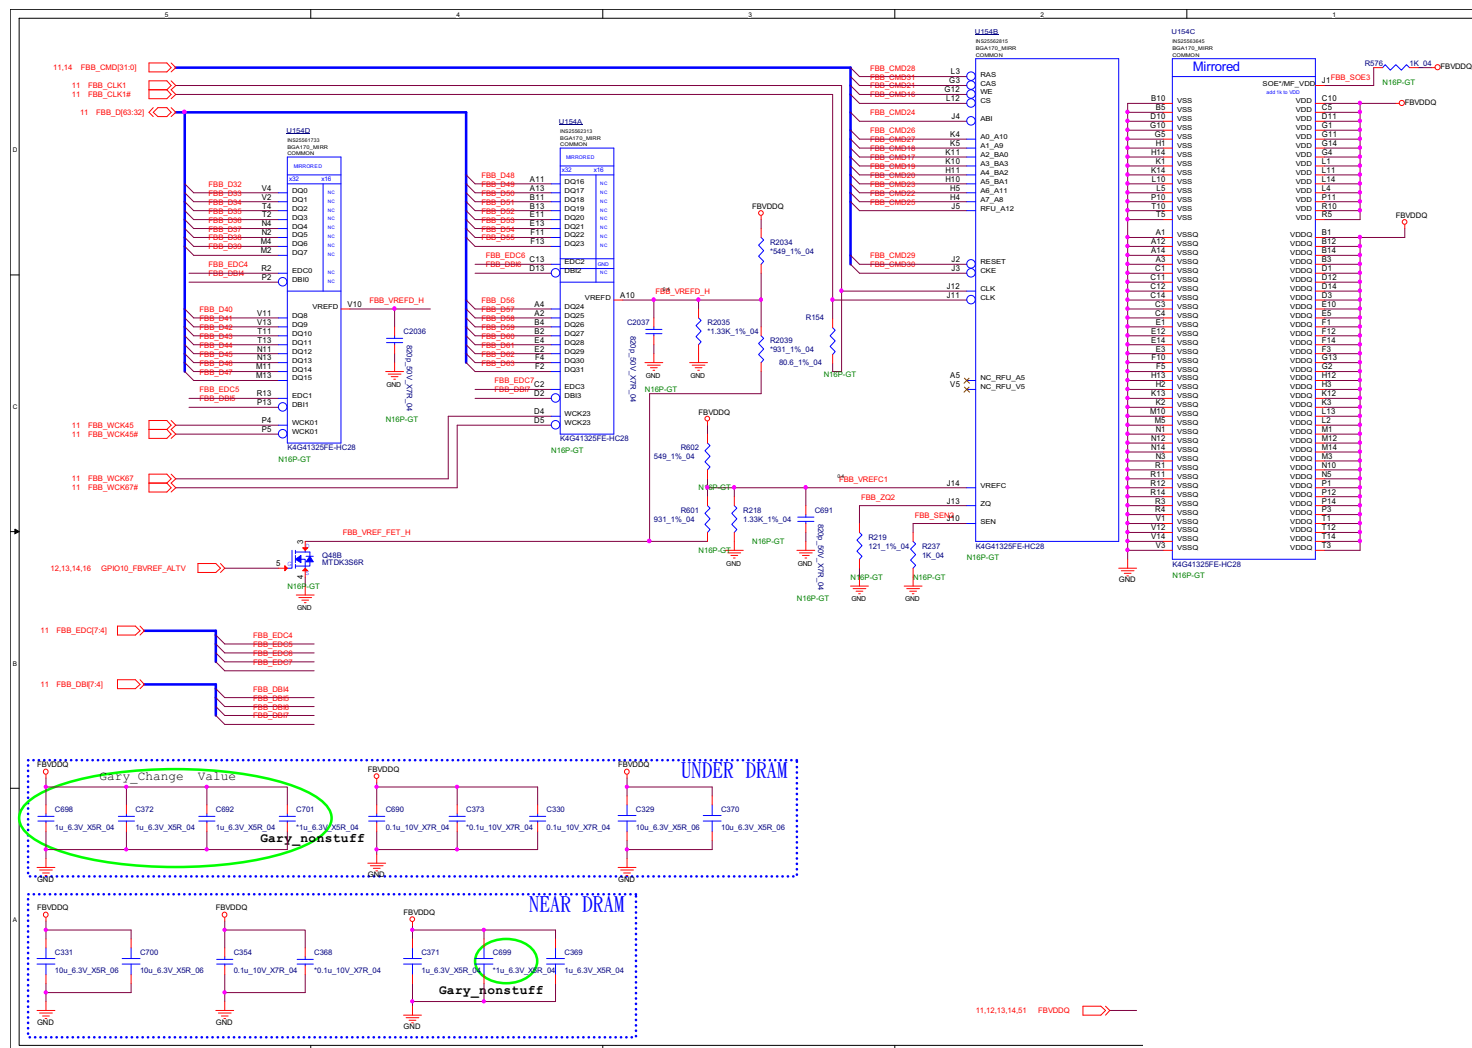


Schematic Diagrams

VGA I/O

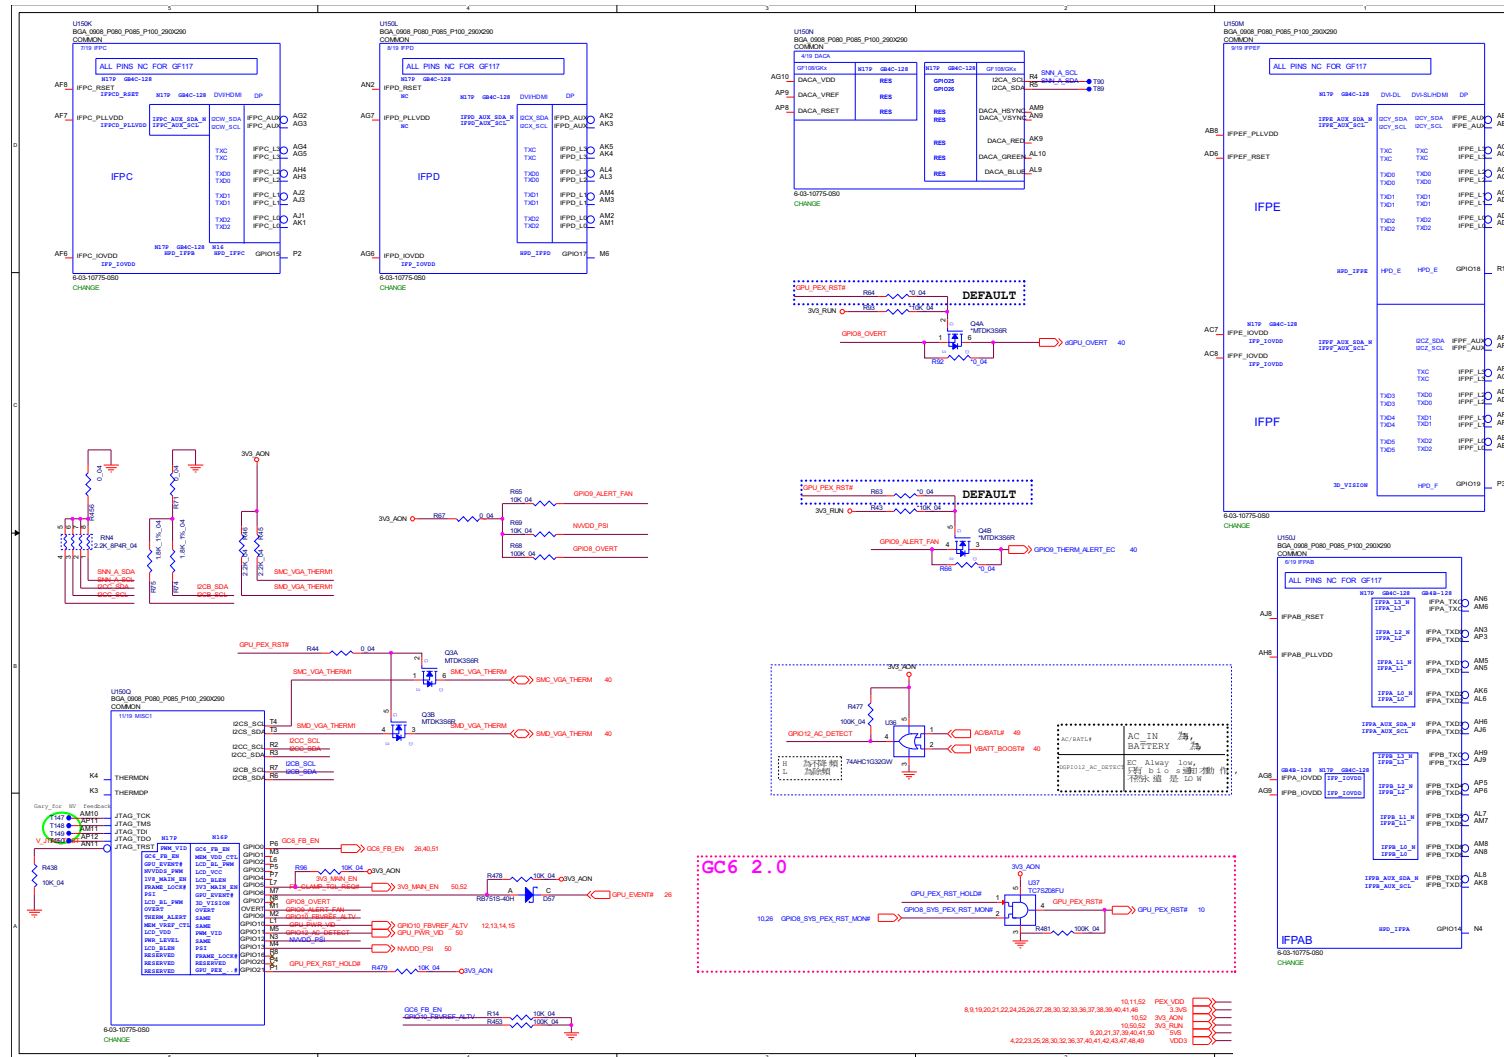


VGA NVVDD Coupling

Sheet 17 of 58
VGA NVVDD
Coupling

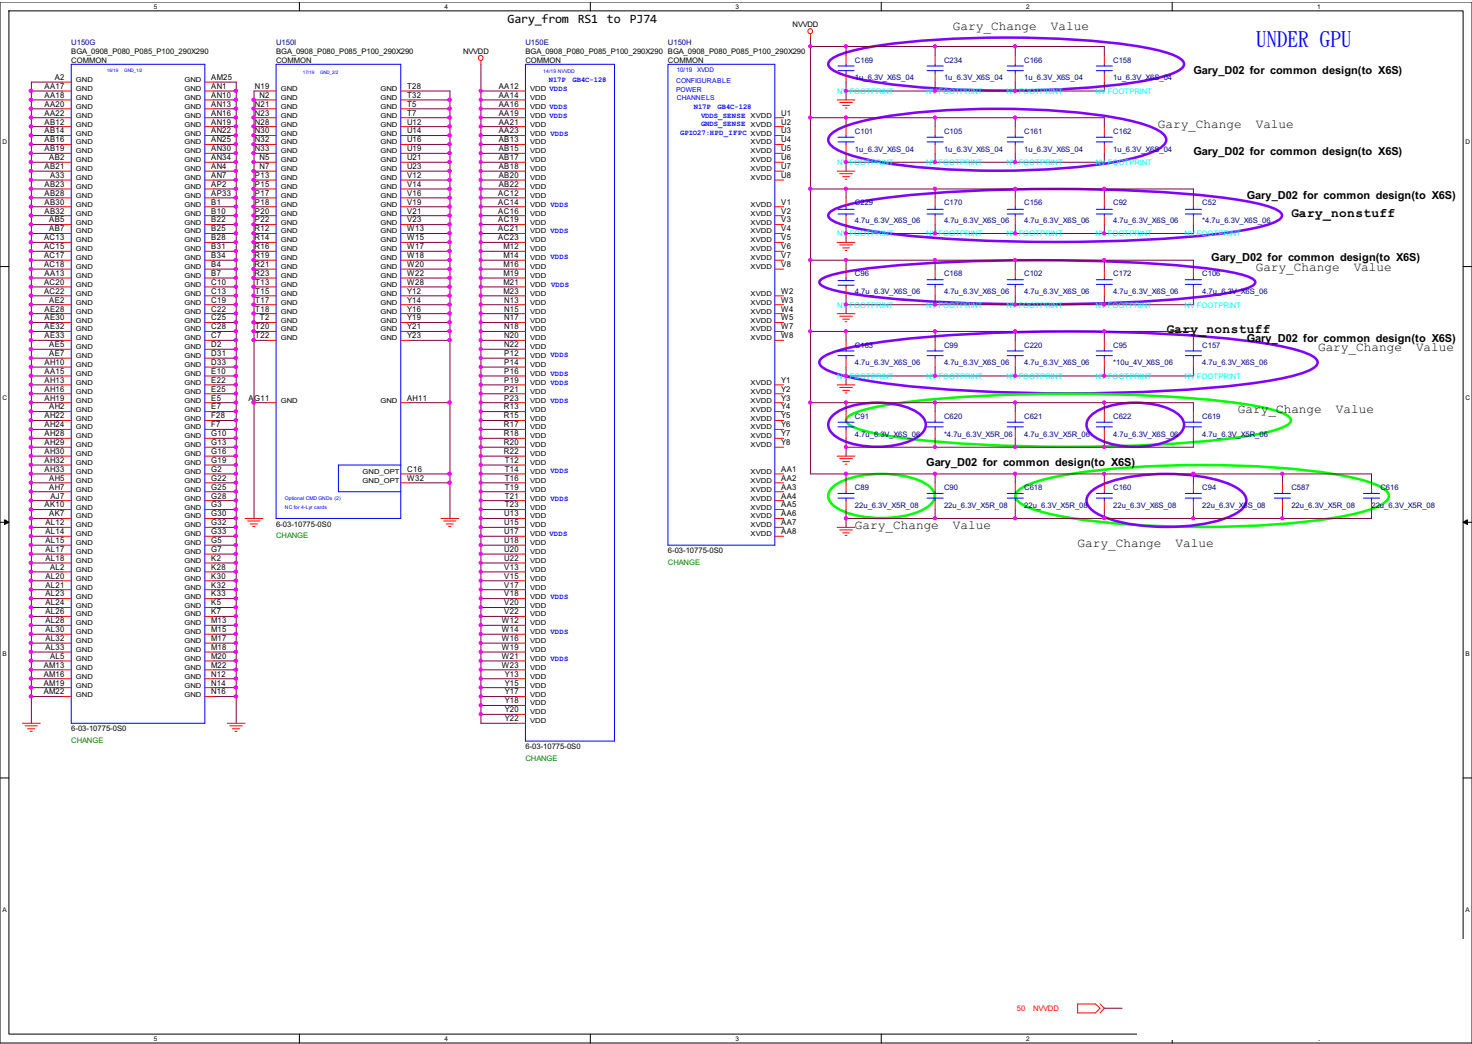

PS8625

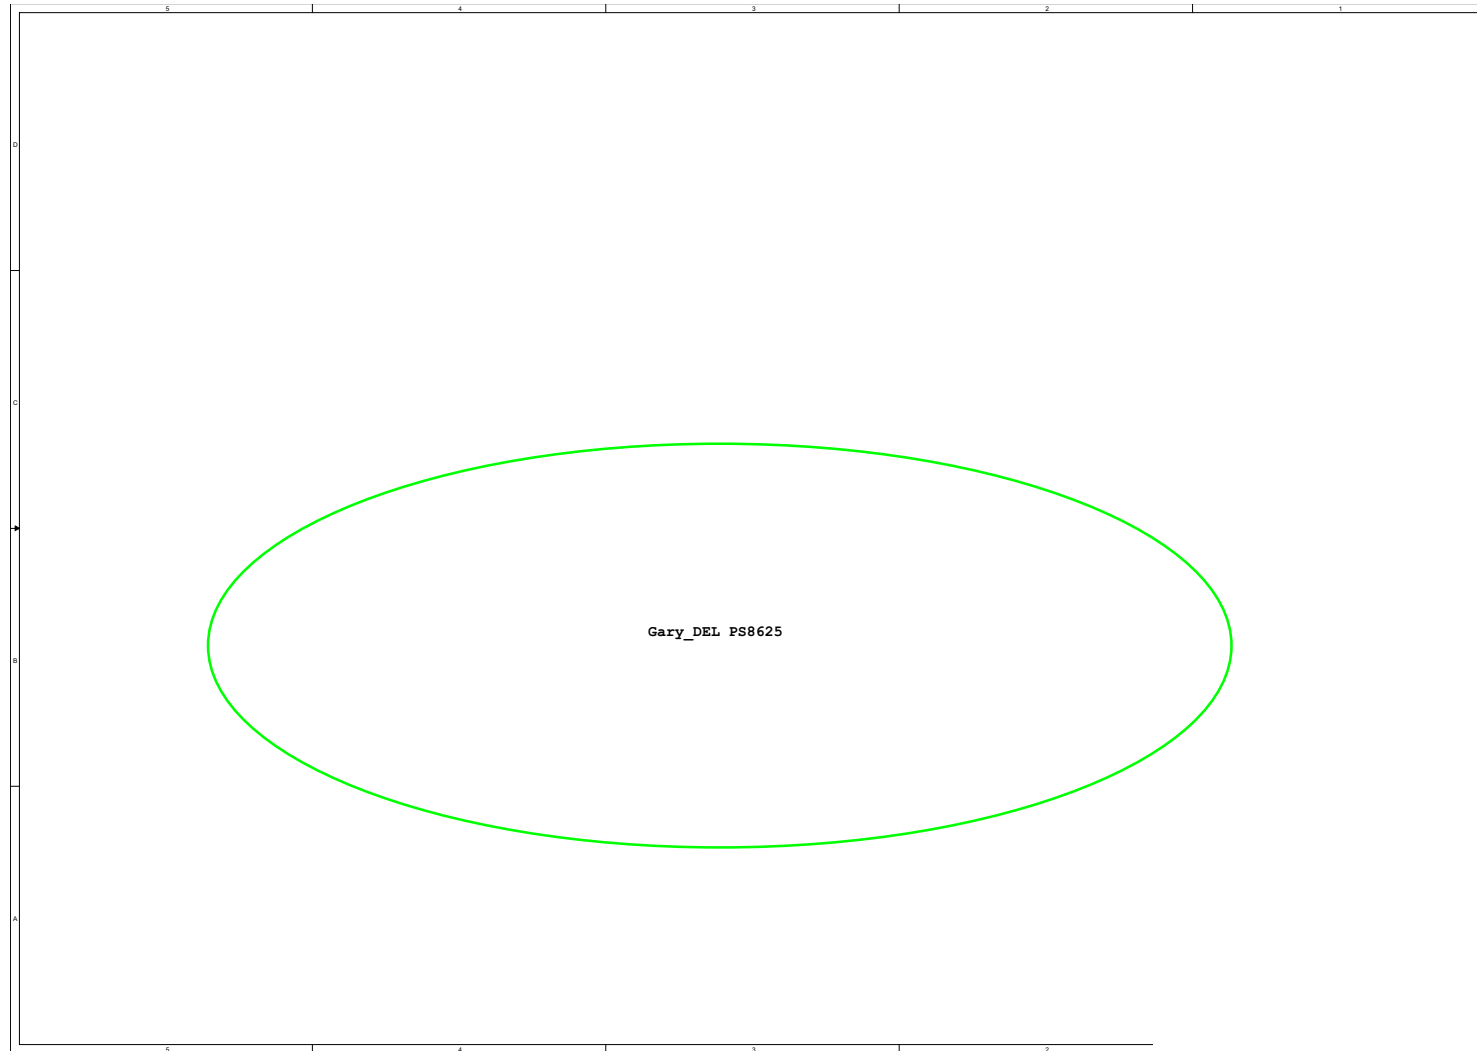


Sheet 18 of 58
PS8625


Schematic Diagrams

Panel, Inverter

Sheet 19 of 58
Panel, Inverter

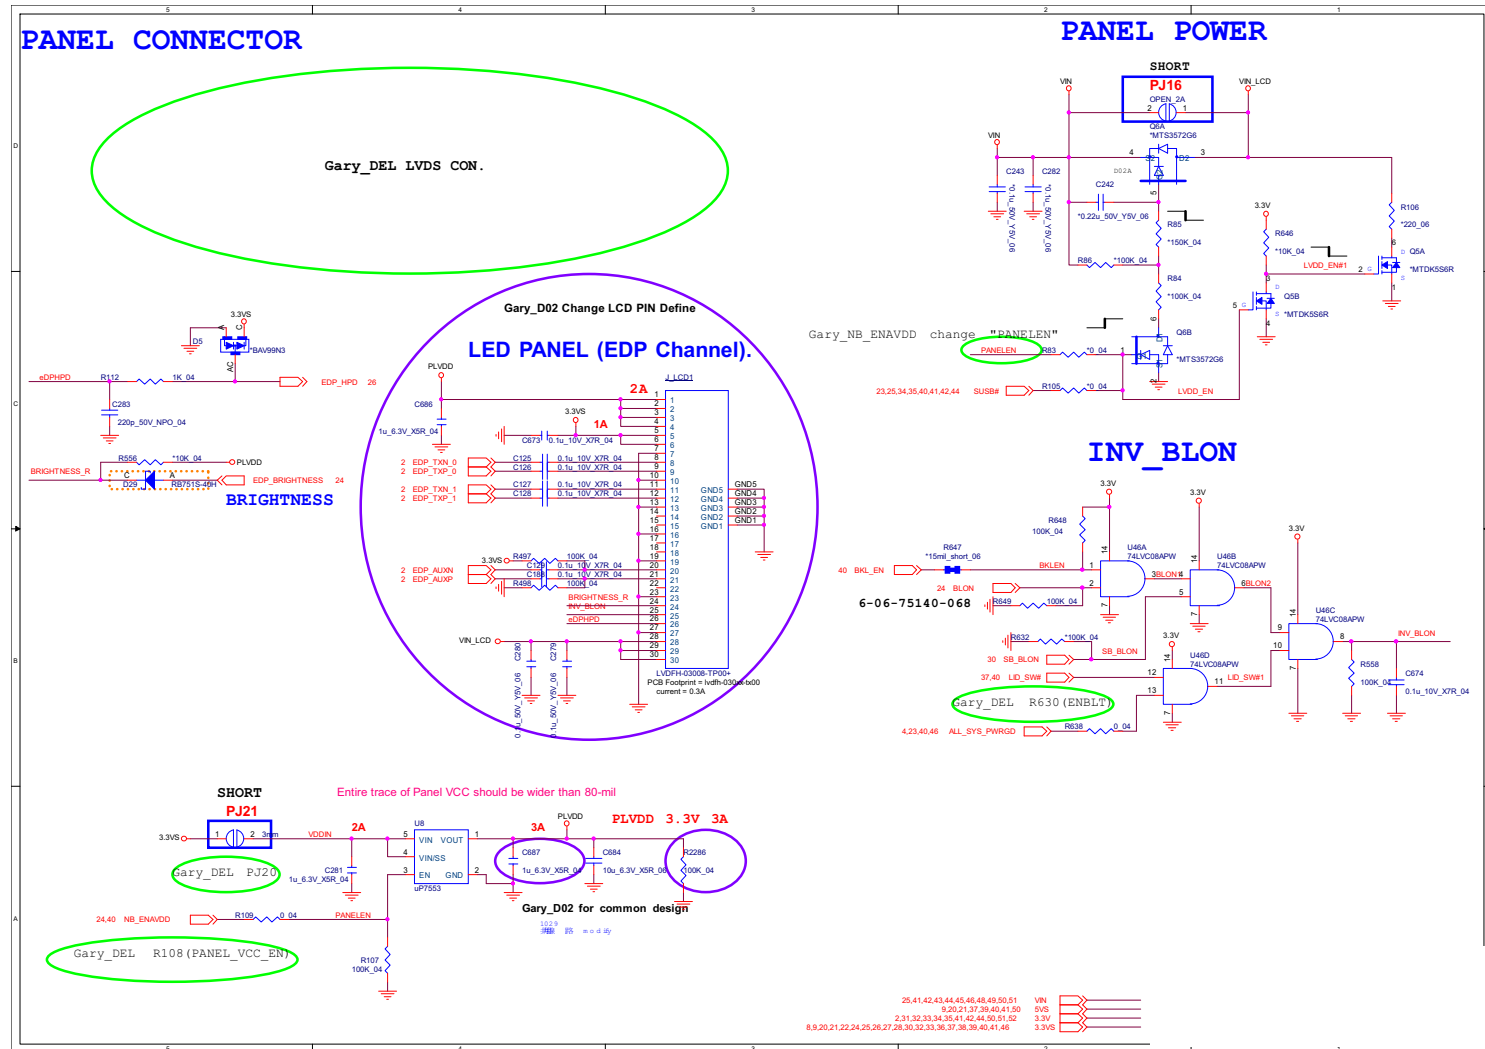


CRT

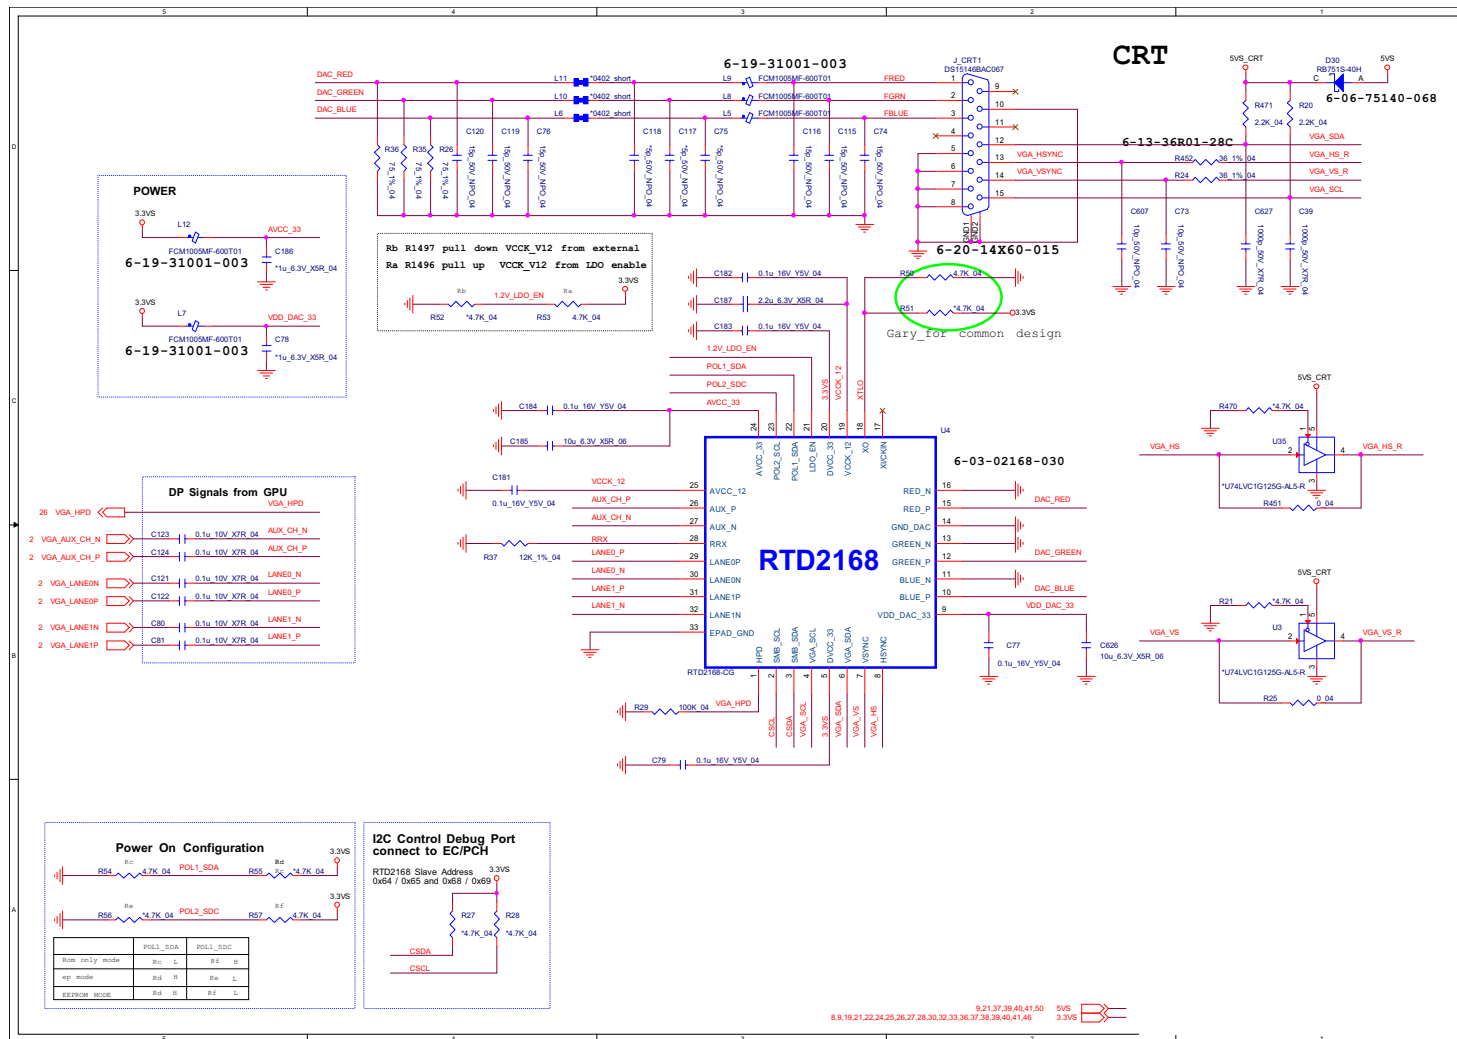Sheet 20 of 58
CRT


CRT B - 21

HDMI

Sheet 21 of 58
HDMI

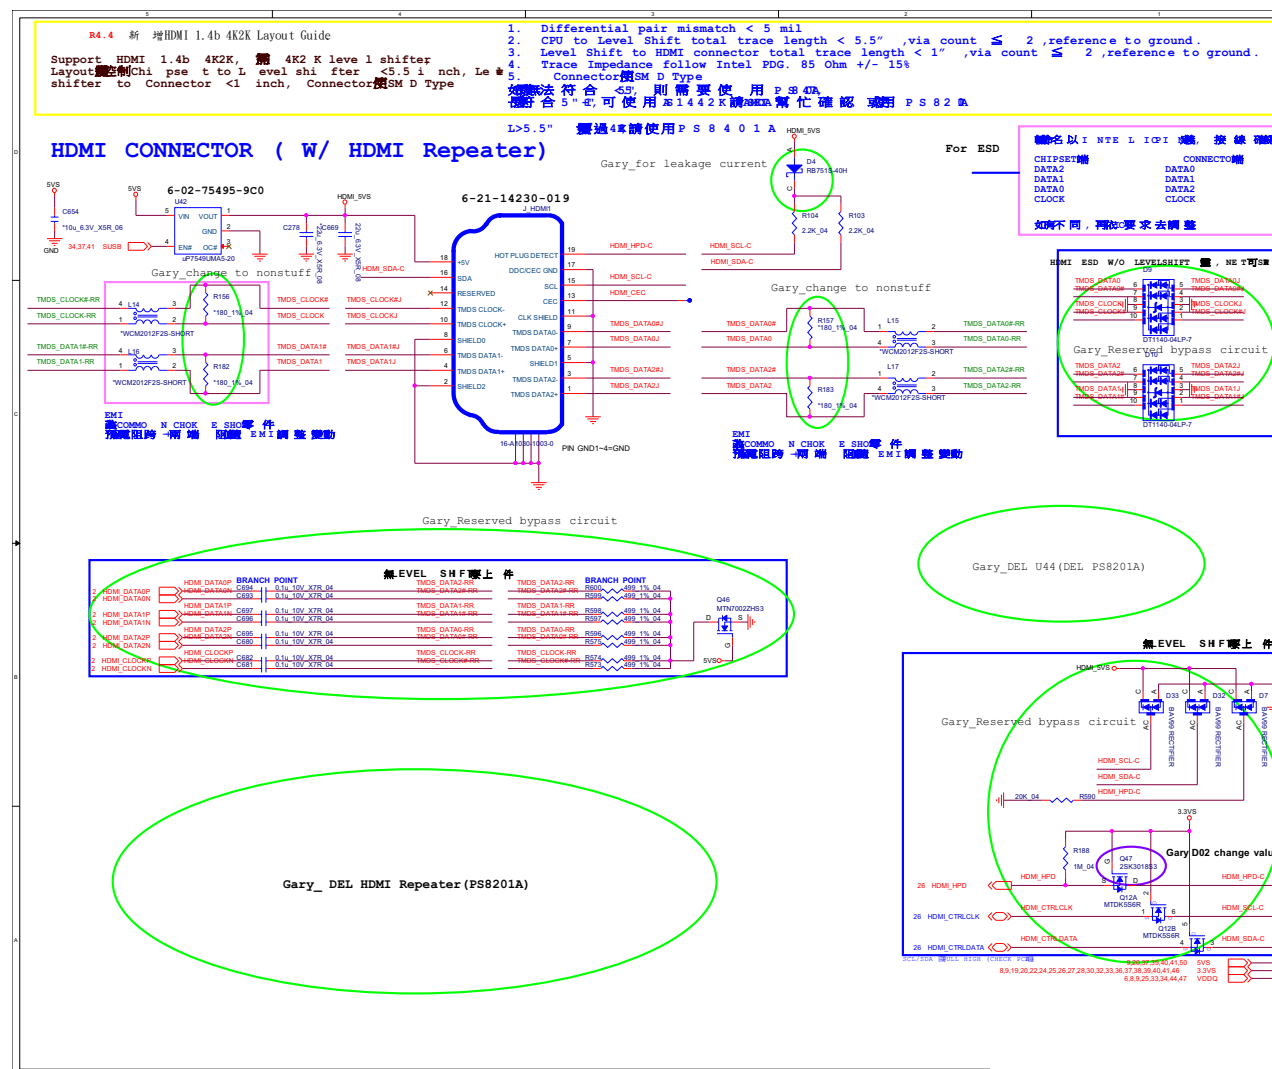

PCH 1/9 B - 23

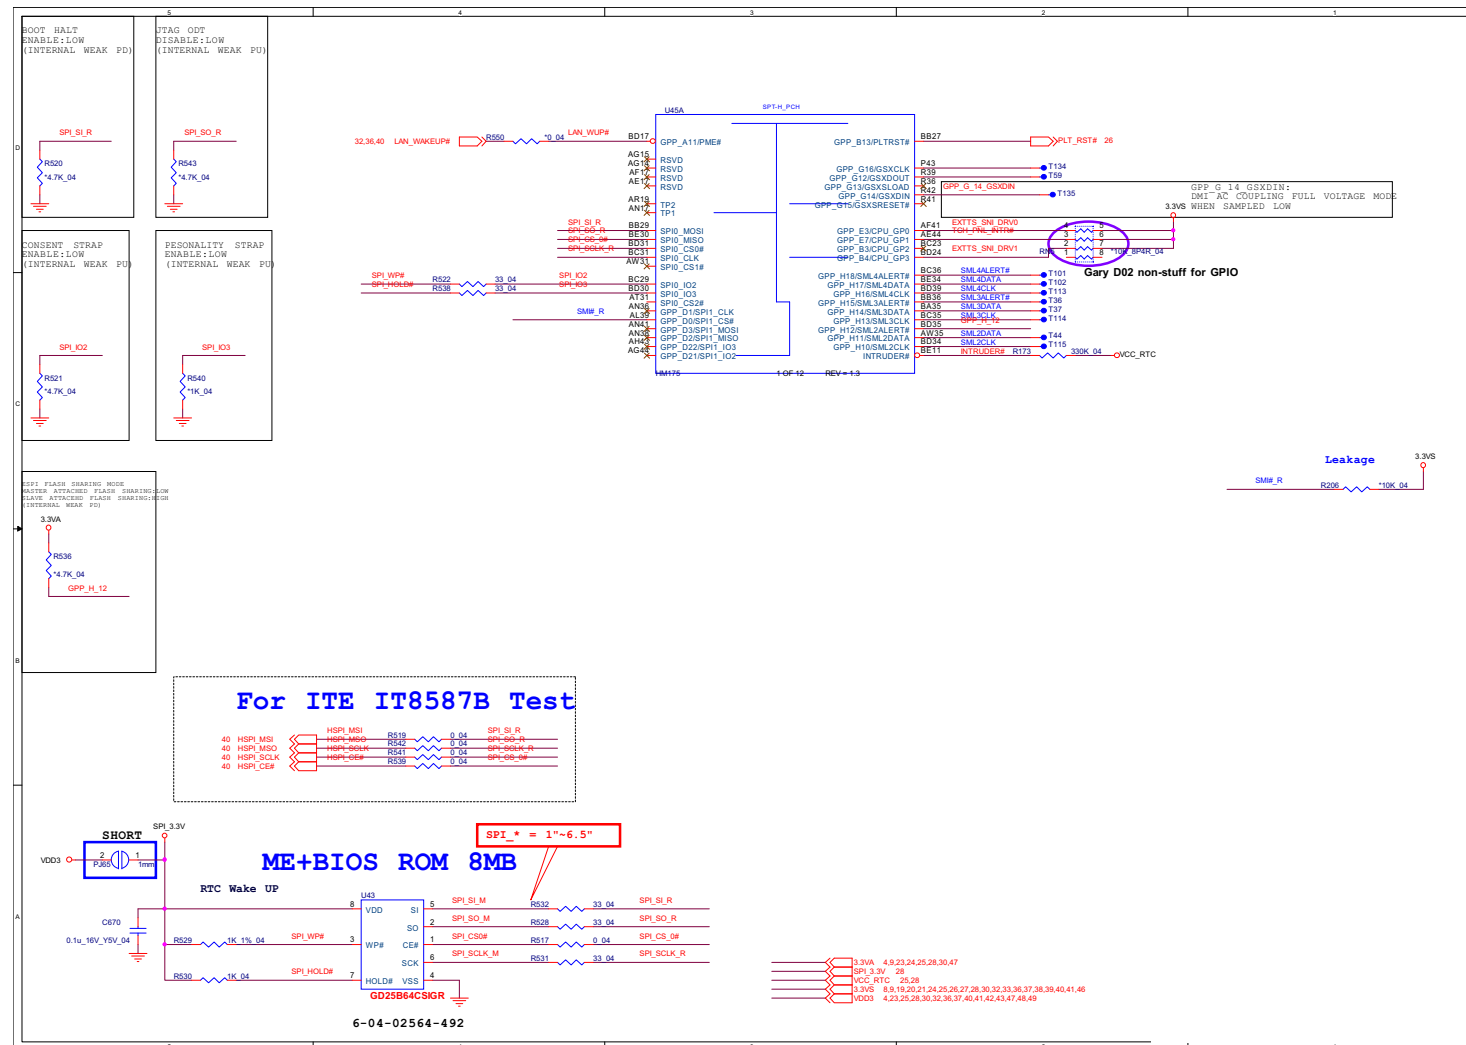

PCH 2/9

B. Schematic Diagrams

USB 3.0 Controller Board Schematic

Legend:


- 1- USB3 Port 1 Charger
- 2- CCD
- 3- BT
- 4- Port 4 Audio USB3.0 Con.
- 5- 3G
- 6- Type-C

Table 1: Component Values


Ref	Value	Ref	Value
C10	0.1u 10V X7R 04	C10	0.1u 10V X7R 04
C11	0.1u 10V X7R 04	C11	0.1u 10V X7R 04
C12	0.1u 10V X7R 04	C12	0.1u 10V X7R 04
C13	0.1u 10V X7R 04	C13	0.1u 10V X7R 04
C14	0.1u 10V X7R 04	C14	0.1u 10V X7R 04
C15	0.1u 10V X7R 04	C15	0.1u 10V X7R 04
C16	0.1u 10V X7R 04	C16	0.1u 10V X7R 04
C17	0.1u 10V X7R 04	C17	0.1u 10V X7R 04
C18	0.1u 10V X7R 04	C18	0.1u 10V X7R 04
C19	0.1u 10V X7R 04	C19	0.1u 10V X7R 04
C20	0.1u 10V X7R 04	C20	0.1u 10V X7R 04
C21	0.1u 10V X7R 04	C21	0.1u 10V X7R 04
C22	0.1u 10V X7R 04	C22	0.1u 10V X7R 04
C23	0.1u 10V X7R 04	C23	0.1u 10V X7R 04
C24	0.1u 10V X7R 04	C24	0.1u 10V X7R 04
C25	0.1u 10V X7R 04	C25	0.1u 10V X7R 04
C26	0.1u 10V X7R 04	C26	0.1u 10V X7R 04
C27	0.1u 10V X7R 04	C27	0.1u 10V X7R 04
C28	0.1u 10V X7R 04	C28	0.1u 10V X7R 04
C29	0.1u 10V X7R 04	C29	0.1u 10V X7R 04
C30	0.1u 10V X7R 04	C30	0.1u 10V X7R 04
C31	0.1u 10V X7R 04	C31	0.1u 10V X7R 04
C32	0.1u 10V X7R 04	C32	0.1u 10V X7R 04
C33	0.1u 10V X7R 04	C33	0.1u 10V X7R 04
C34	0.1u 10V X7R 04	C34	0.1u 10V X7R 04
C35	0.1u 10V X7R 04	C35	0.1u 10V X7R 04
C36	0.1u 10V X7R 04	C36	0.1u 10V X7R 04
C37	0.1u 10V X7R 04	C37	0.1u 10V X7R 04
C38	0.1u 10V X7R 04	C38	0.1u 10V X7R 04
C39	0.1u 10V X7R 04	C39	0.1u 10V X7R 04
C40	0.1u 10V X7R 04	C40	0.1u 10V X7R 04
C41	0.1u 10V X7R 04	C41	0.1u 10V X7R 04
C42	0.1u 10V X7R 04	C42	0.1u 10V X7R 04
C43	0.1u 10V X7R 04	C43	0.1u 10V X7R 04
C44	0.1u 10V X7R 04	C44	0.1u 10V X7R 04
C45	0.1u 10V X7R 04	C45	0.1u 10V X7R 04
C46	0.1u 10V X7R 04	C46	0.1u 10V X7R 04
C47	0.1u 10V X7R 04	C47	0.1u 10V X7R 04
C48	0.1u 10V X7R 04	C48	0.1u 10V X7R 04
C49	0.1u 10V X7R 04	C49	0.1u 10V X7R 04
C50	0.1u 10V X7R 04	C50	0.1u 10V X7R 04
C51	0.1u 10V X7R 04	C51	0.1u 10V X7R 04
C52	0.1u 10V X7R 04	C52	0.1u 10V X7R 04
C53	0.1u 10V X7R 04	C53	0.1u 10V X7R 04
C54	0.1u 10V X7R 04	C54	0.1u 10V X7R 04
C55	0.1u 10V X7R 04	C55	0.1u 10V X7R 04
C56	0.1u 10V X7R 04	C56	0.1u 10V X7R 04
C57	0.1u 10V X7R 04	C57	0.1u 10V X7R 04
C58	0.1u 10V X7R 04	C58	0.1u 10V X7R 04
C59	0.1u 10V X7R 04	C59	0.1u 10V X7R 04
C60	0.1u 10V X7R 04	C60	0.1u 10V X7R 04
C61	0.1u 10V X7R 04	C61	0.1u 10V X7R 04
C62	0.1u 10V X7R 04	C62	0.1u 10V X7R 04
C63	0.1u 10V X7R 04	C63	0.1u 10V X7R 04
C64	0.1u 10V X7R 04	C64	0.1u 10V X7R 04
C65	0.1u 10V X7R 04	C65	0.1u 10V X7R 04
C66	0.1u 10V X7R 04	C66	0.1u 10V X7R 04
C67	0.1u 10V X7R 04	C67	0.1u 10V X7R 04
C68	0.1u 10V X7R 04	C68	0.1u 10V X7R 04
C69	0.1u 10V X7R 04	C69	0.1u 10V X7R 04
C70	0.1u 10V X7R 04	C70	0.1u 10V X7R

PCH 4/9


B. Schematic Diagrams

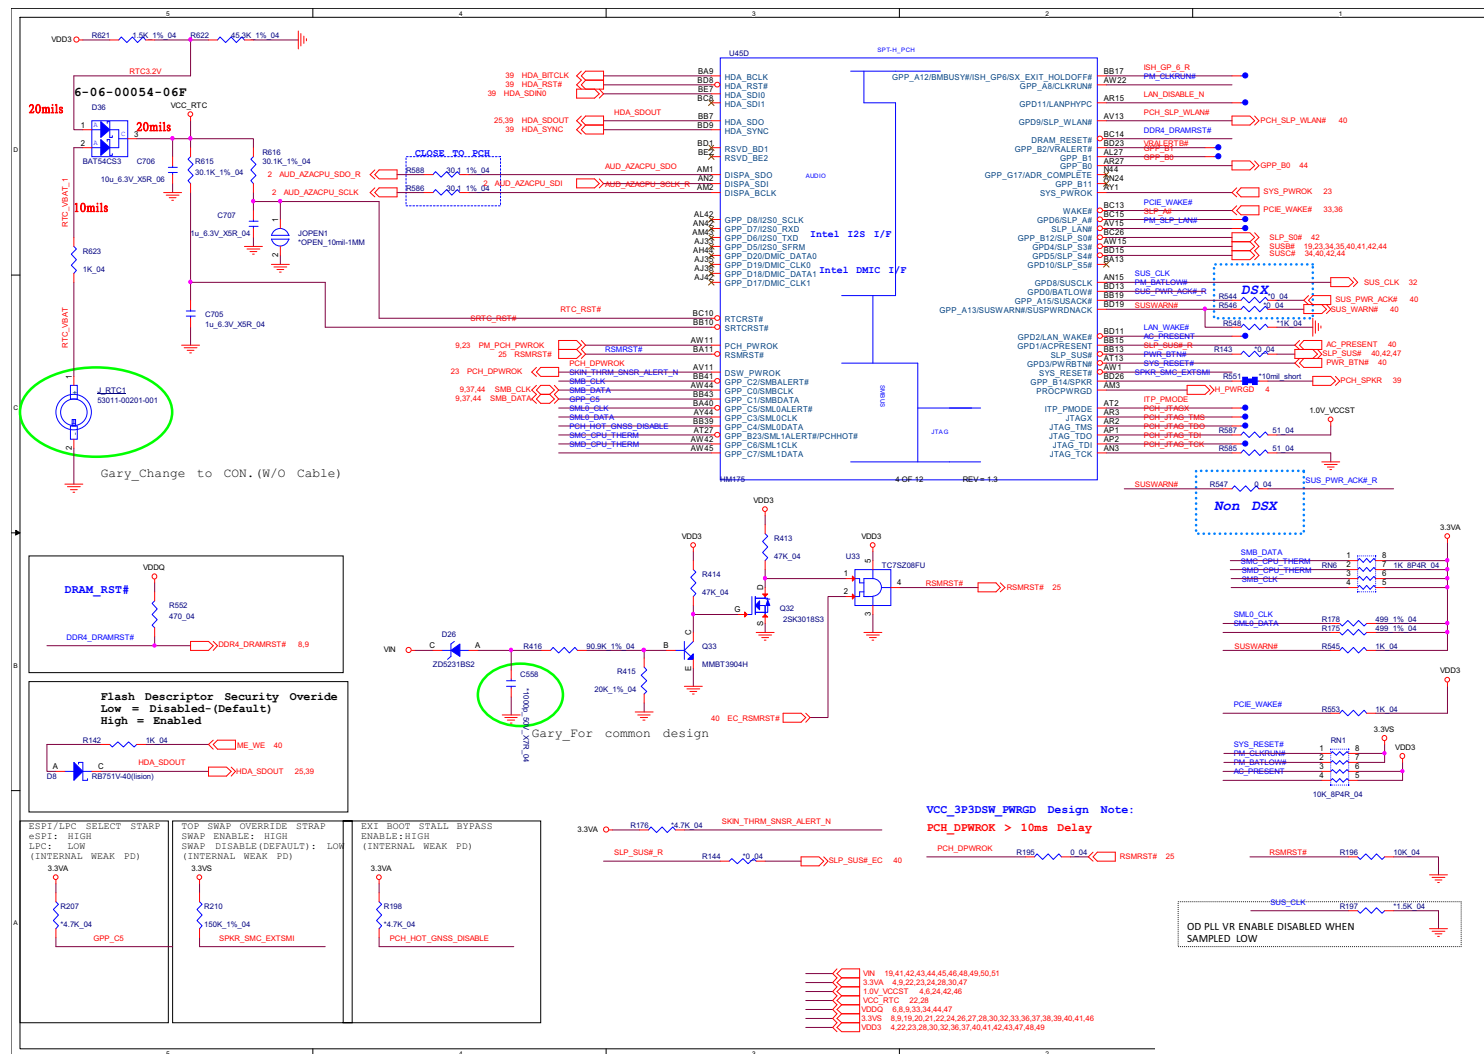

PCH 6/9

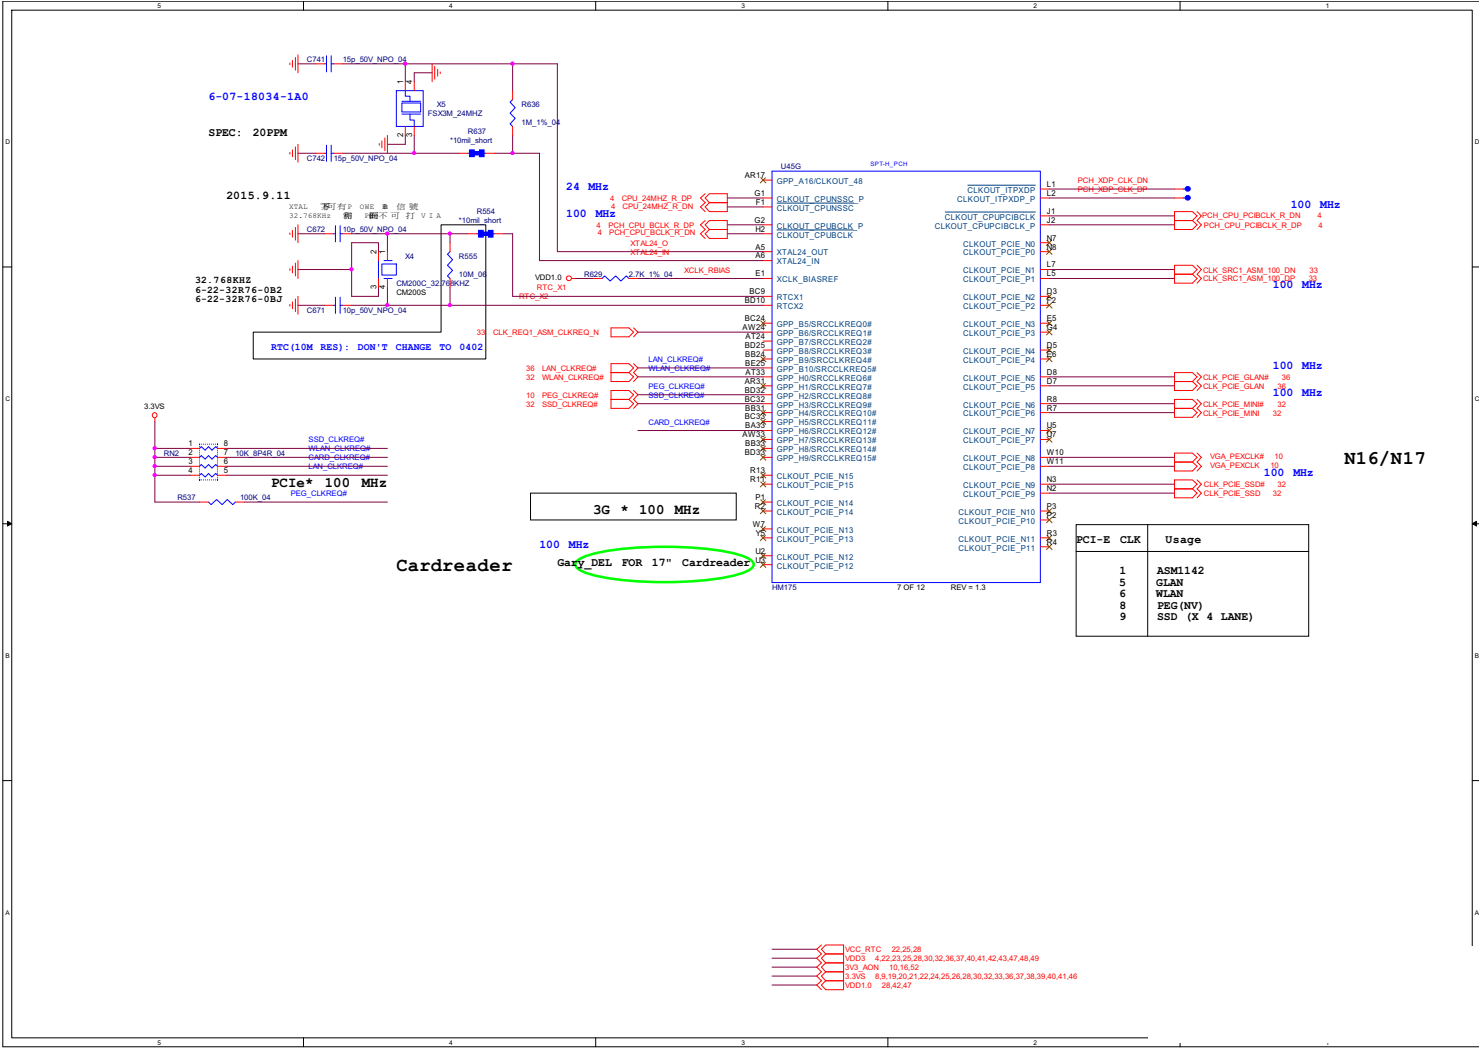


PCH 7/9 B - 29

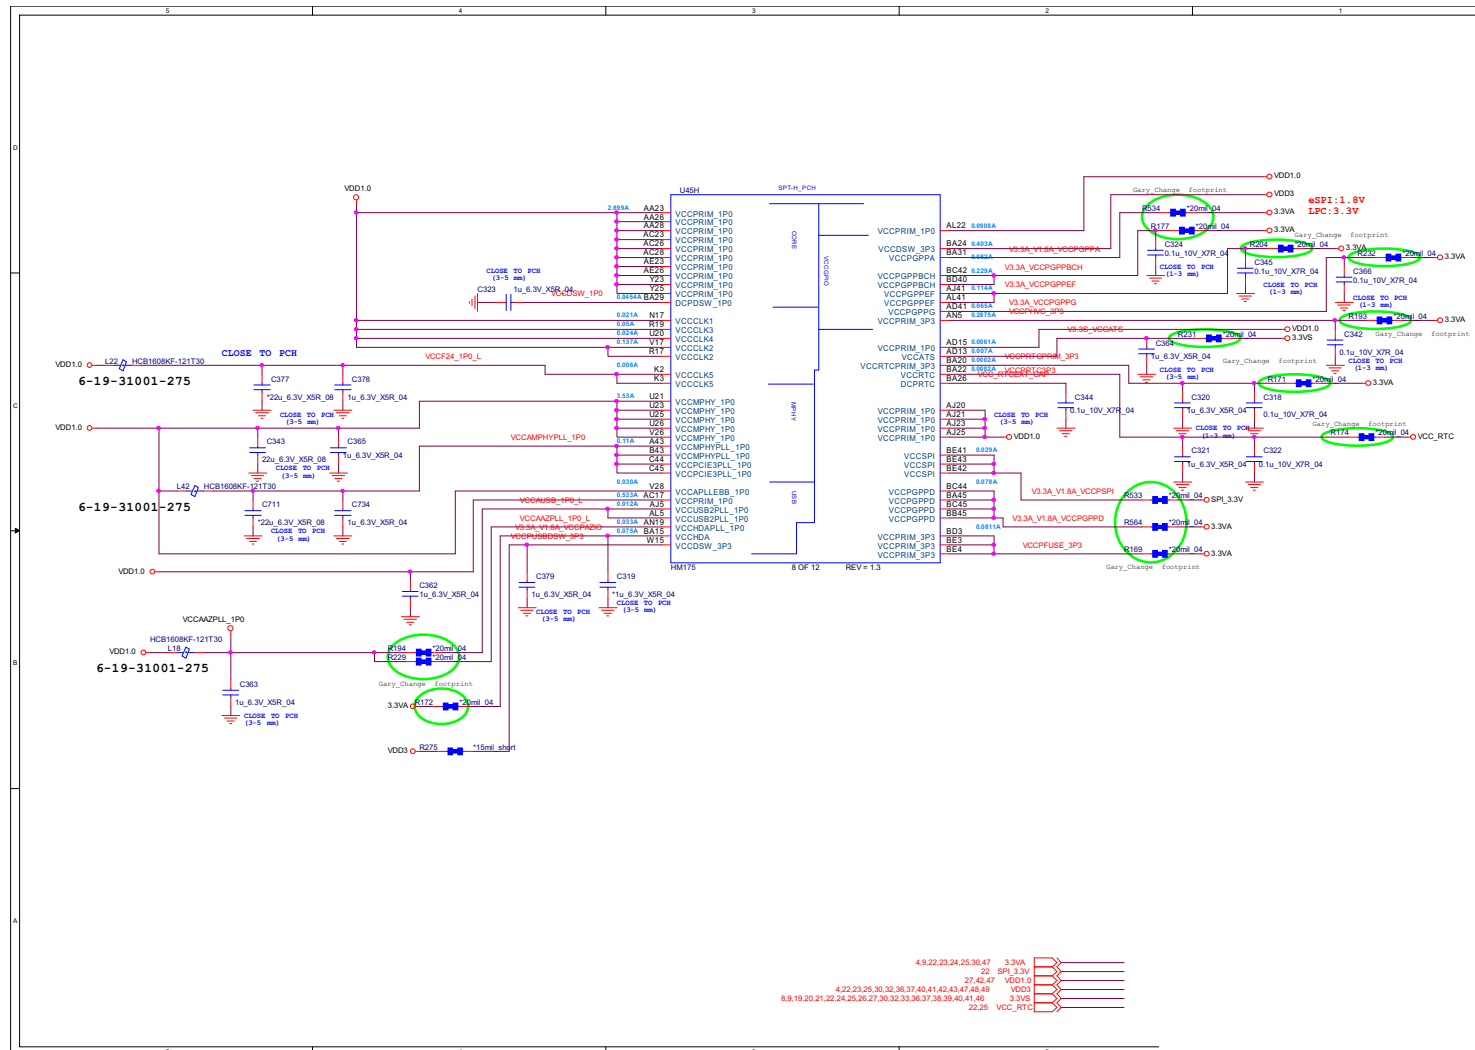

PCH 8/9


Sheet 29 of 58
PCH 8/9

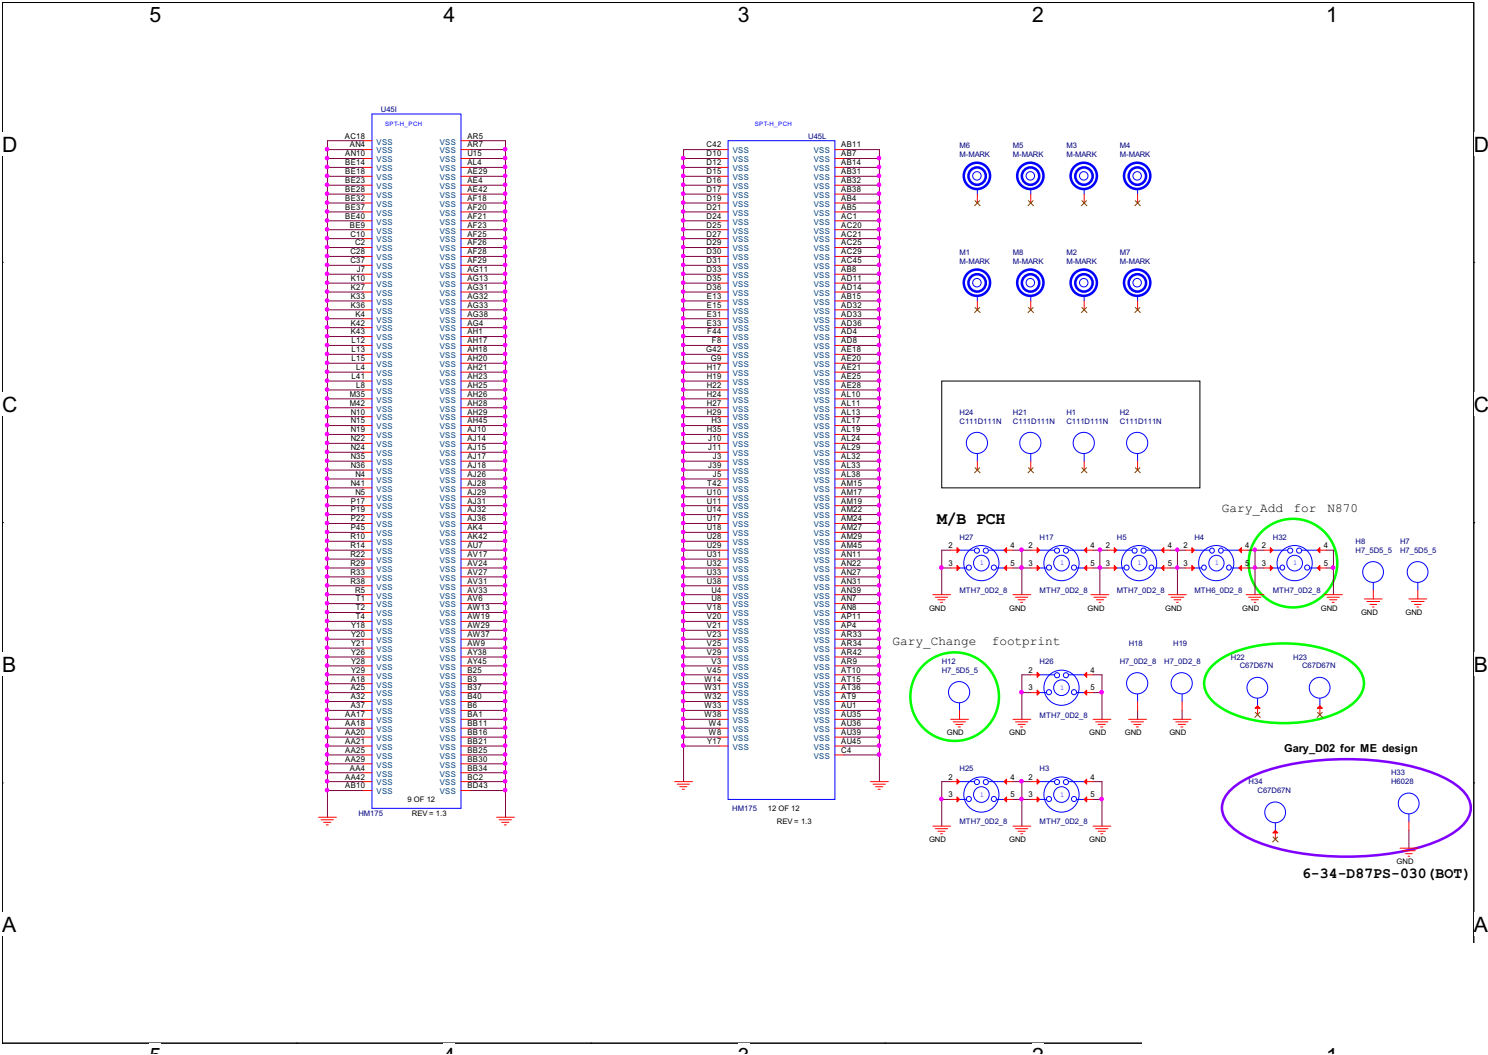


Sheet 30 of 58
PCH 9/9

M.2 3G Card

Sheet 31 of 58
M.2 3G Card

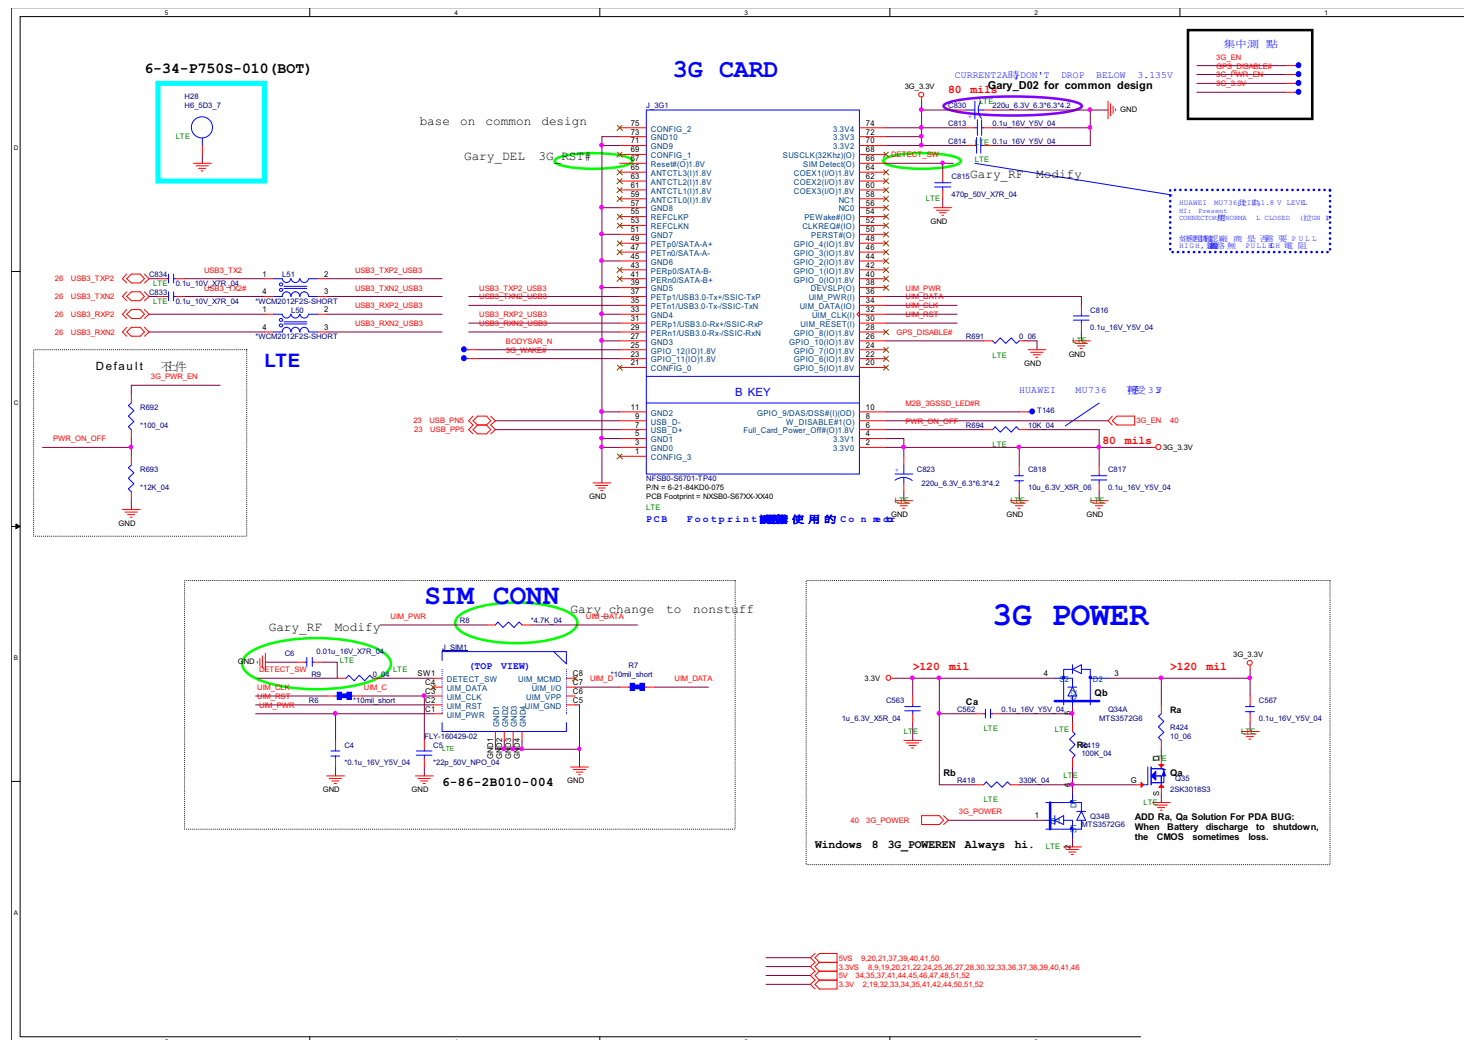


M.2 WLAN+BT, SSD

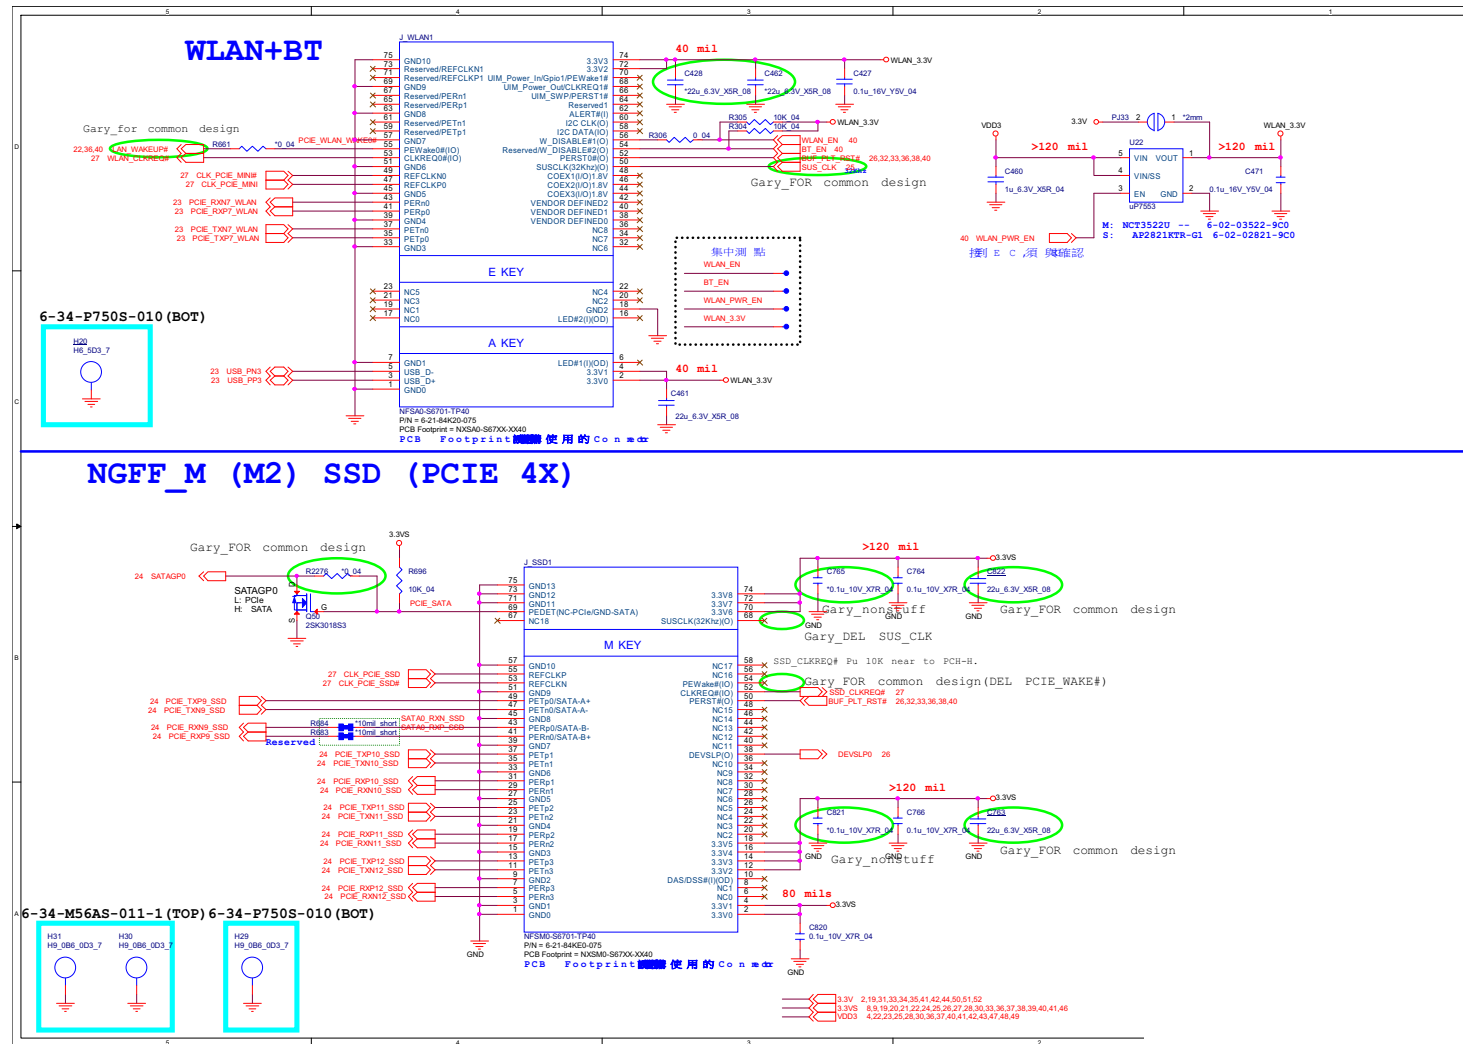


Sheet 32 of 58
M.2 WLAN+BT,
SSD

ASM 1142 & 2142

Sheet 33 of 58
ASM 1142 & 2142

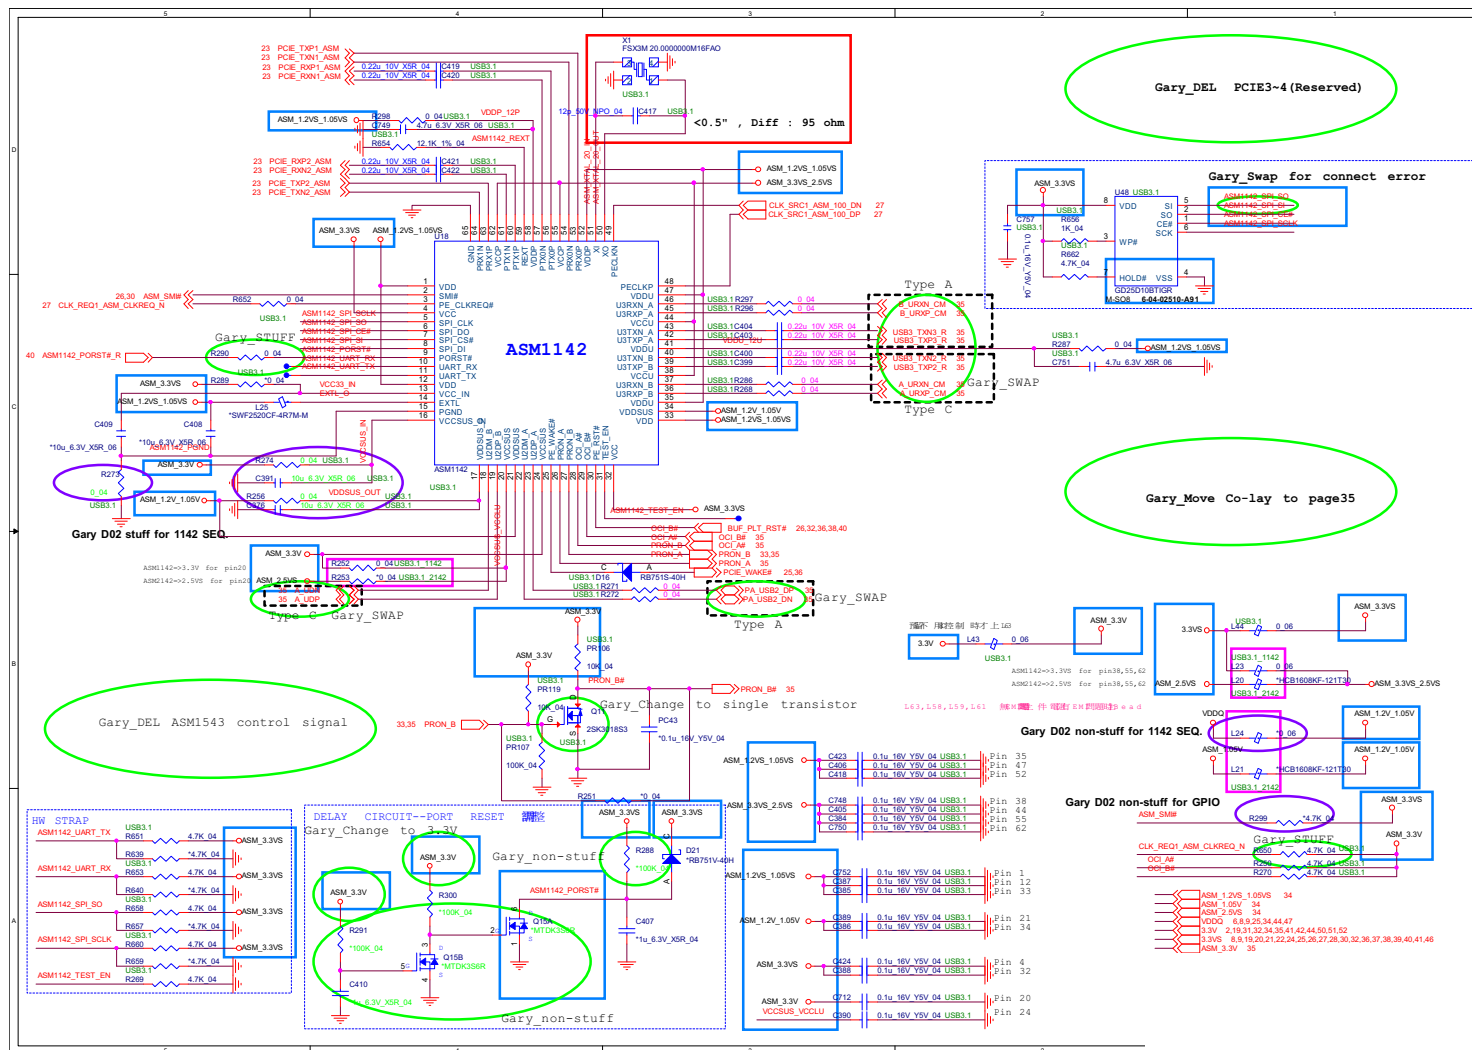

ASM Power

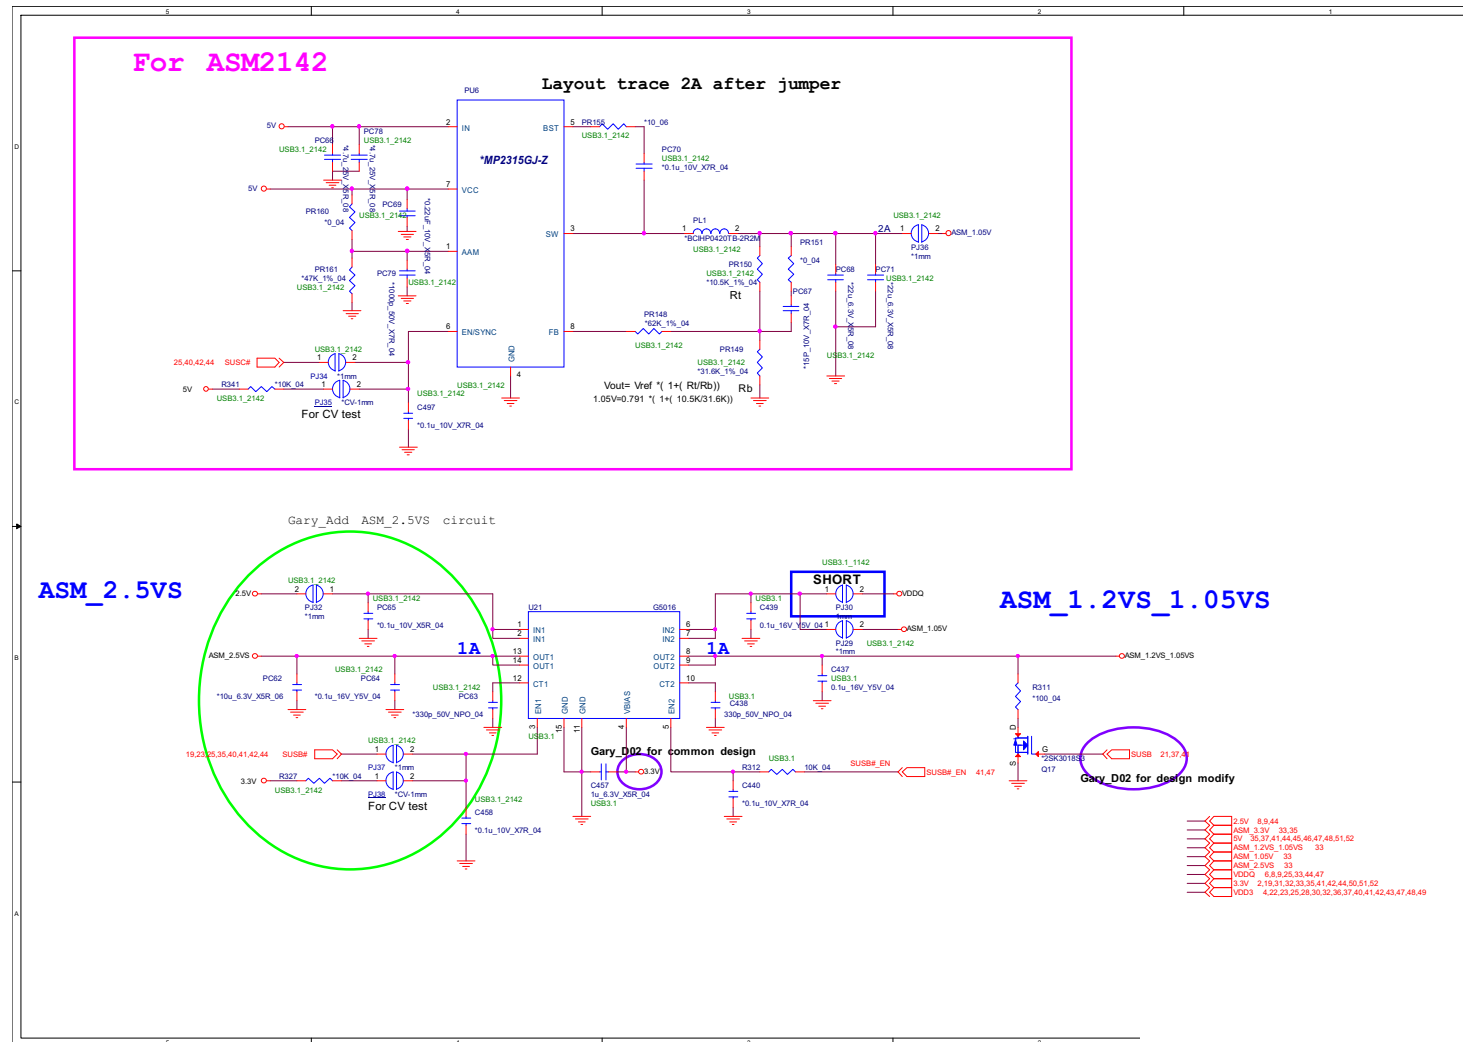


Sheet 34 of 58
ASM Power

Schematic Diagrams

USB, Charger

Sheet 35 of 58
USB, Charger

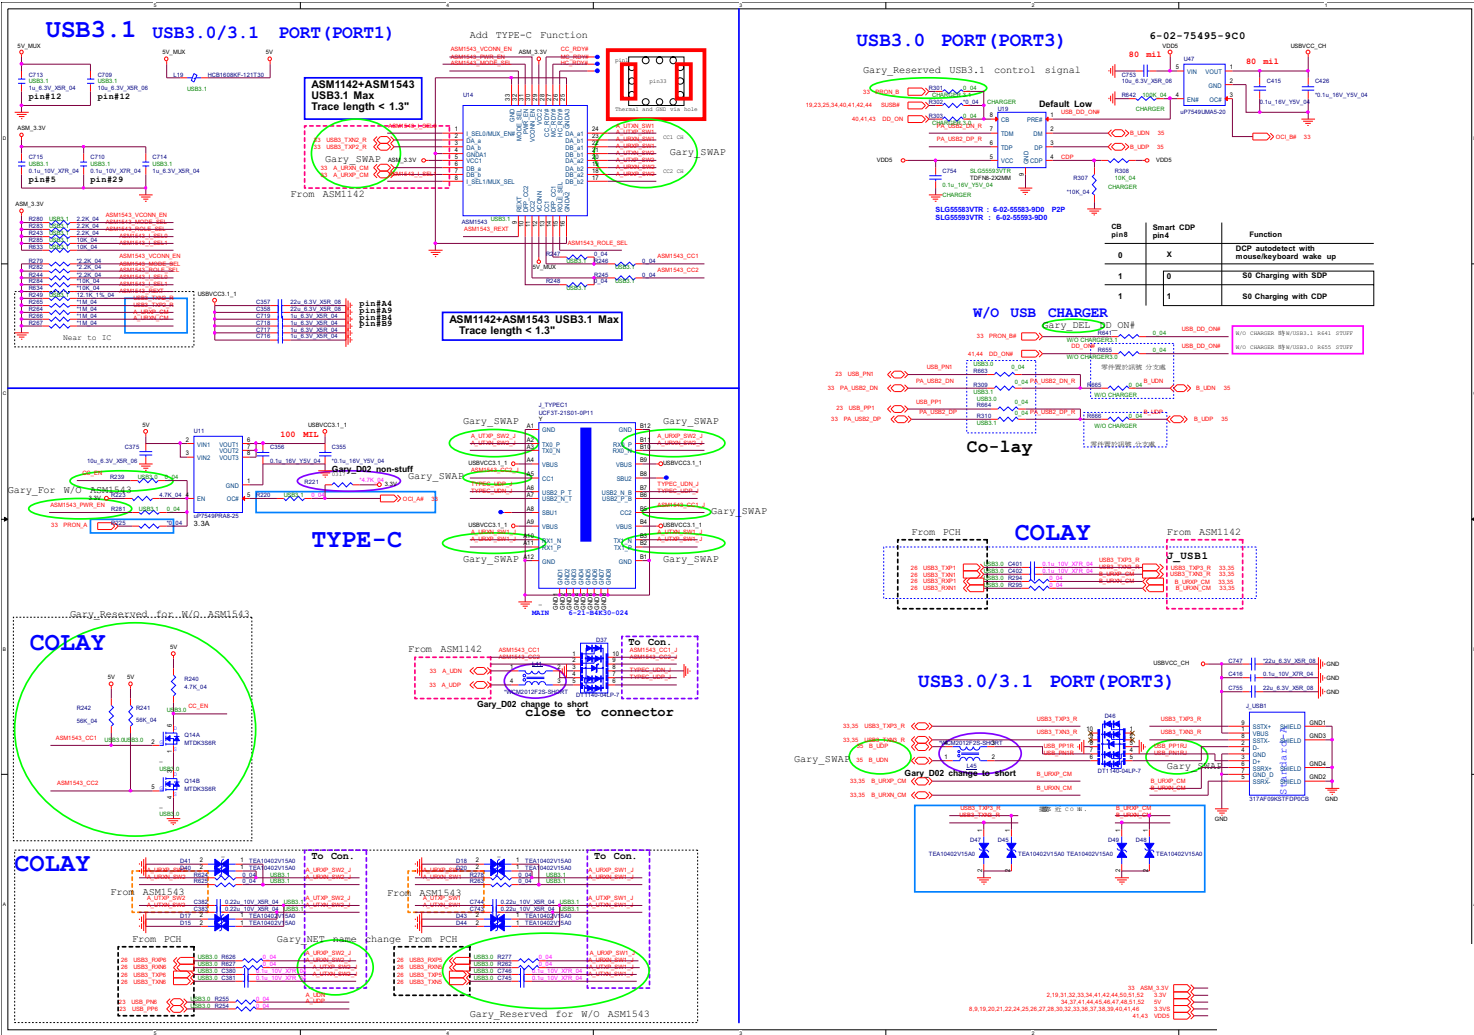


[illegible]

HDD, Click TP, Audio, Hall Con..

B. Schematic Diagrams

Sheet 37 of 58
HDD, Click TP,
Audio, Hall Con.

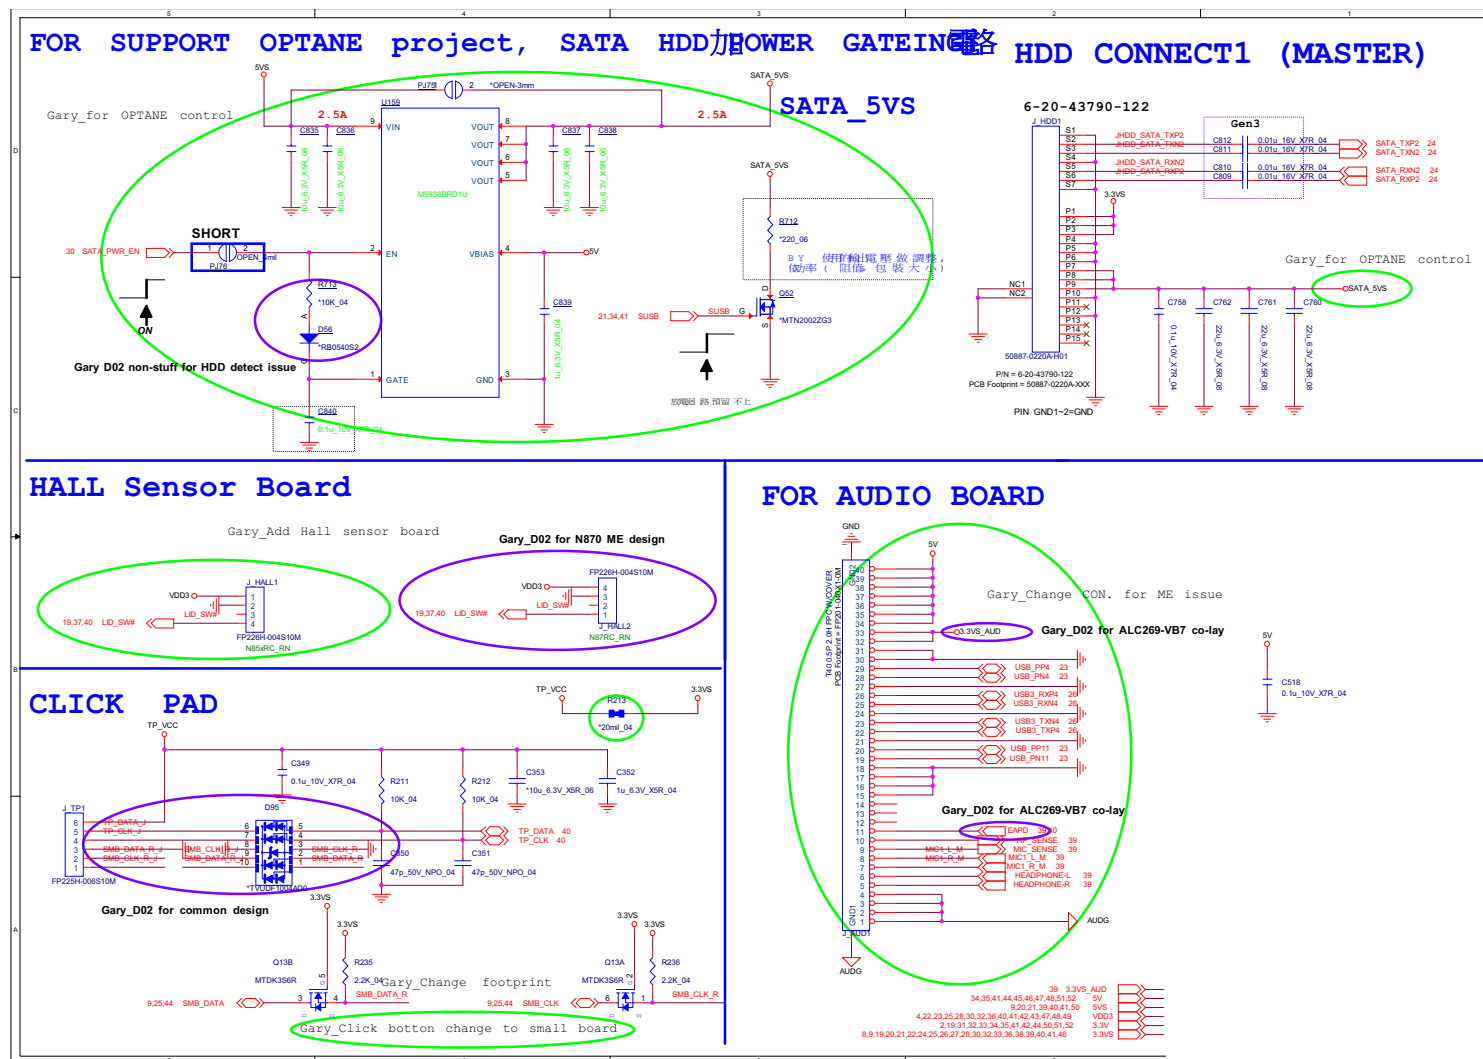

LED NGFF B & M KEY

如CIE SSD LED動作時，請用此線路

LED動作時，透過 A 按鈕 B XS 在 告知 做出動作

	WLAN ON	WLAN LED
Windows 7	WLAN OFF	不亮
Windows 8	Airplane ON	亮
	Airplane OFF	不亮

Gary_DEL LED board(LED move to MB)

6-52-55001-021

GREEN YELLOW

HDD LED

Airplane mode

6-52-55001-021

BAT LED

POWER ON LED

Gary D02 EDS change to TVUDF1004AD0

TPM 2.0 (SLB9665TT)

U54	SLB9665TT
R673	4.7K 04
C885	0.1u 16V Y5V 04
C889	0.1u 16V Y5V 04
C884	0.1u 16V Y5V 04
C887	1u 6.3V X5R 04
R669	0_04

Gary_D02 for common design

Asserted before entering S4

LPC reset timing

LPCPD# inactive to LRST# inactive 32-96us

TPM_PP

HE ACCESS

LOW: NORMAL (Internal PD)

CCD+DMIC

D-MIC:	mount L35 & L36
C630 & C631	=> 47p_50V_NPO_04

A-MIC: mount R414

C630 => 100p_50V_NPO_04

N87Hx LED BOARD

LED Board	Status
LED_HDD#	亮
LED_BAT_FULL	亮
LED_BAT_CHG	亮
LED_PWR	亮
LED_AIRPLANE	亮

Gary_D02 for N870 ME design


POWER SWITCH BOARD


Gary_Power Switch Board DEL LED

Audio Codec ALC269 VC2

B.Schematic Diagrams

Sheet 39 of 58
Audio Codec
ALC269 VC2

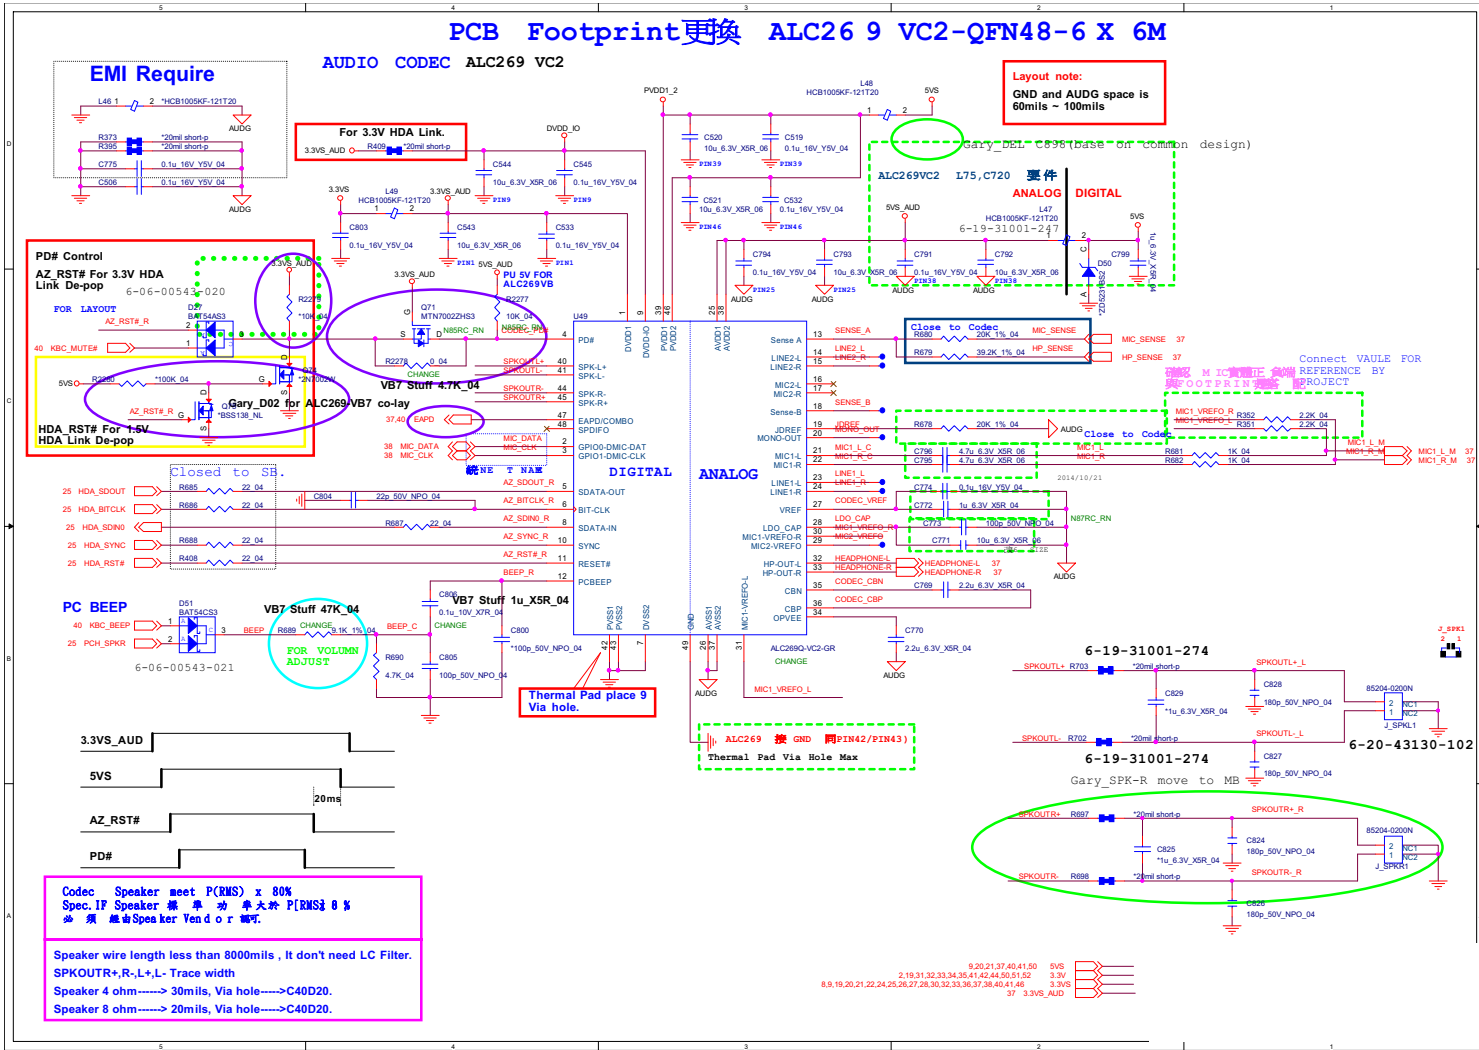

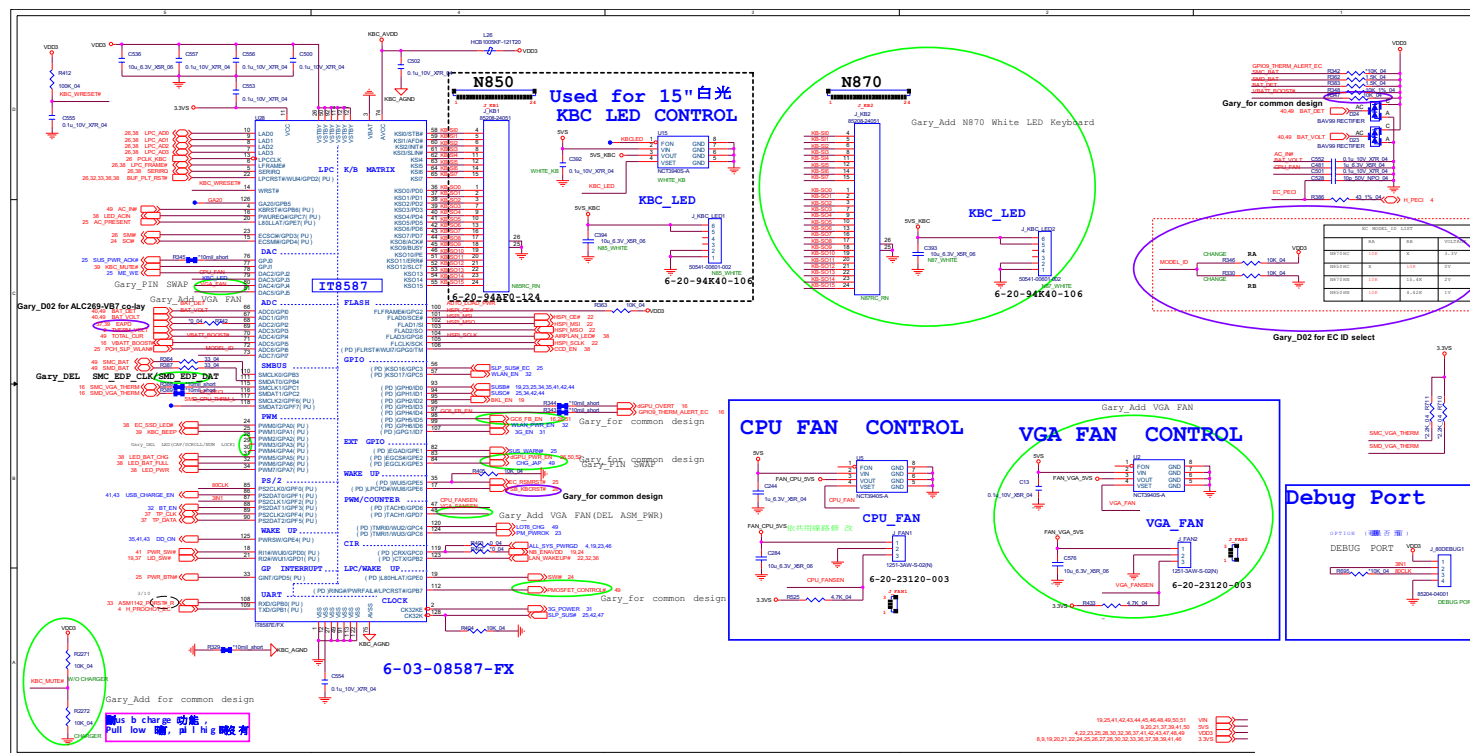


B.Schematic Diagrams


Schematic Diagrams

5V, 5VS, 3.3V, 3.3VS, 3.3VA

Sheet 41 of 58
5V, 5VS, 3.3V,
3.3VS, 3.3VA

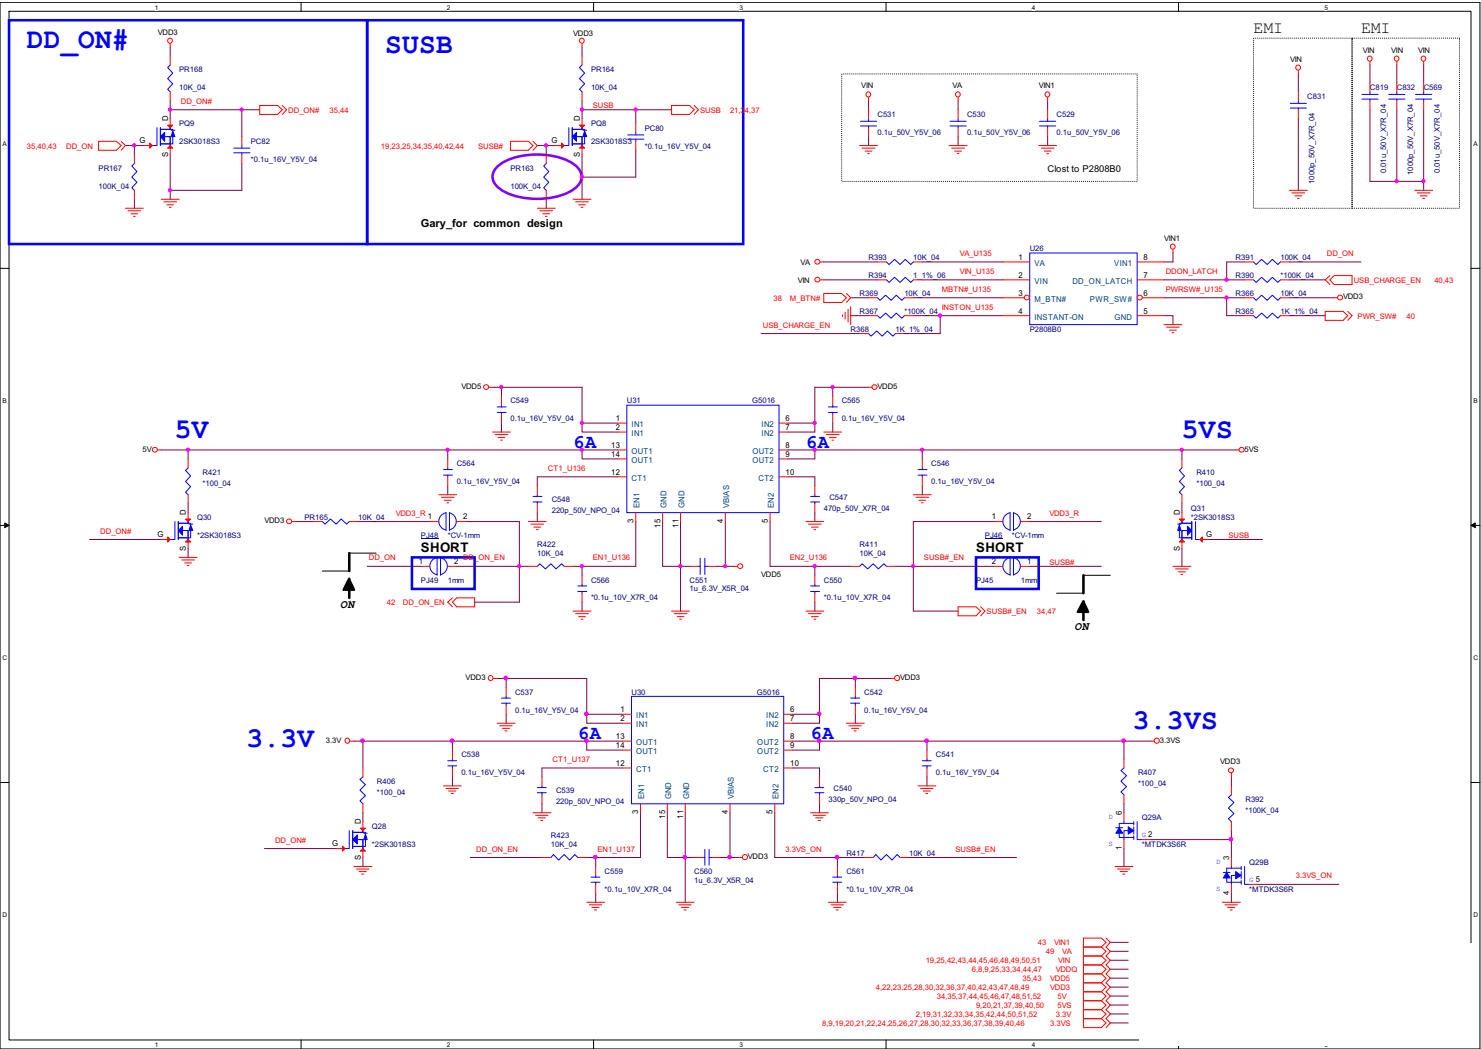


VDD1.0, VCCIO B - 43

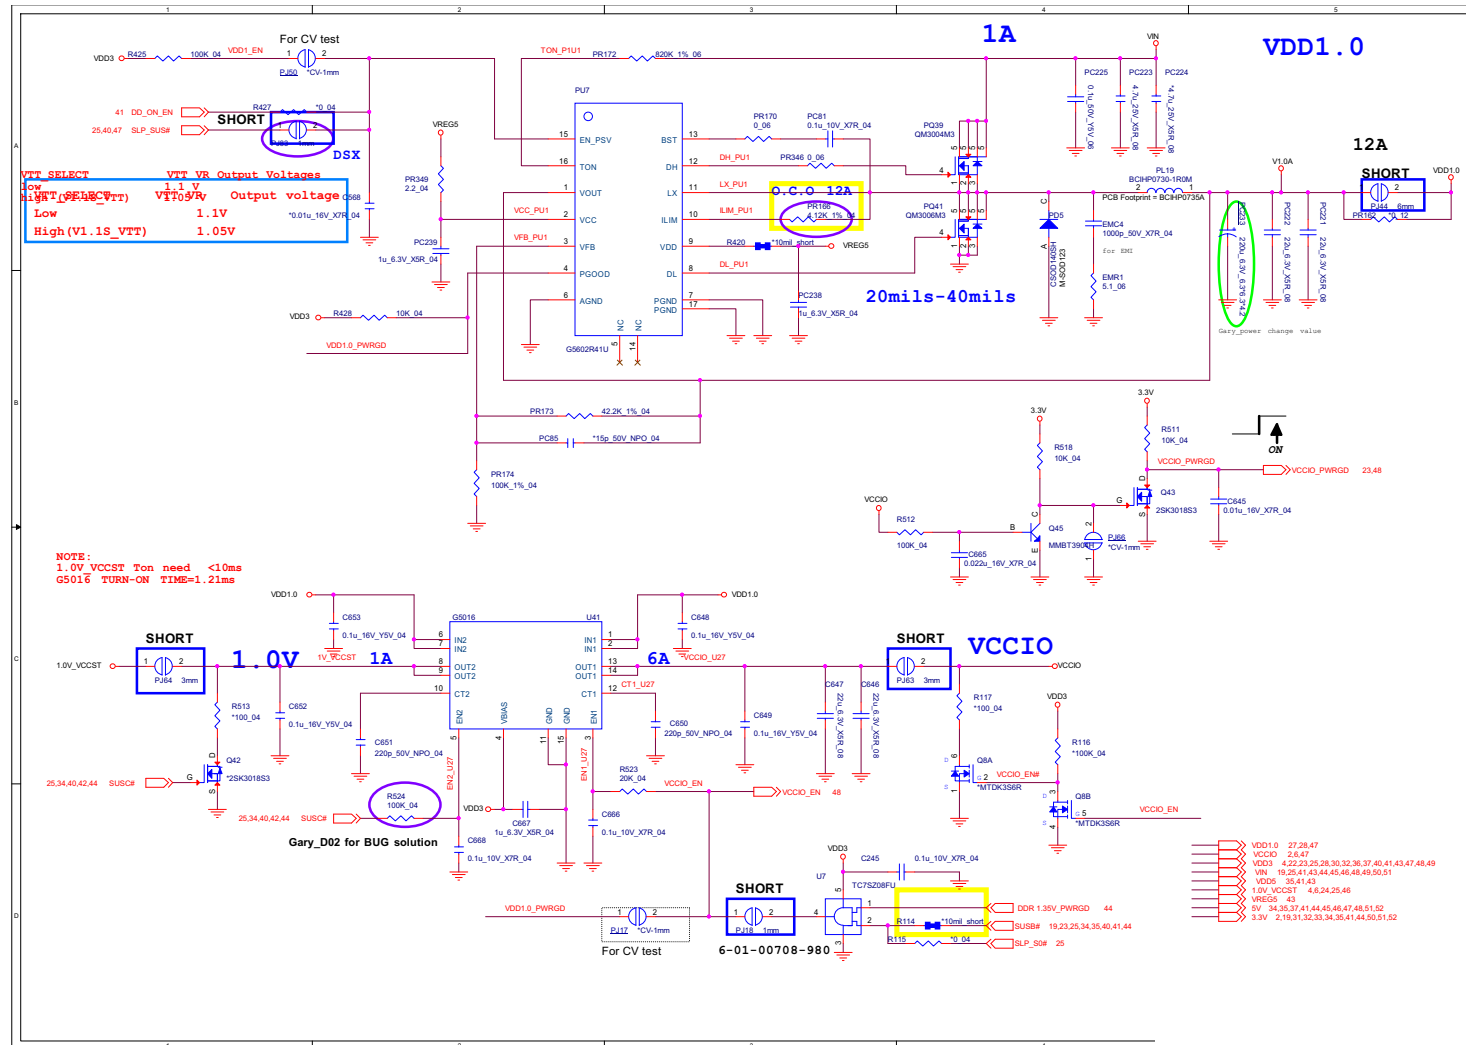


VDD3, VDD5

B.Schematic Diagrams

Sheet 43 of 58
VDD3, VDD5

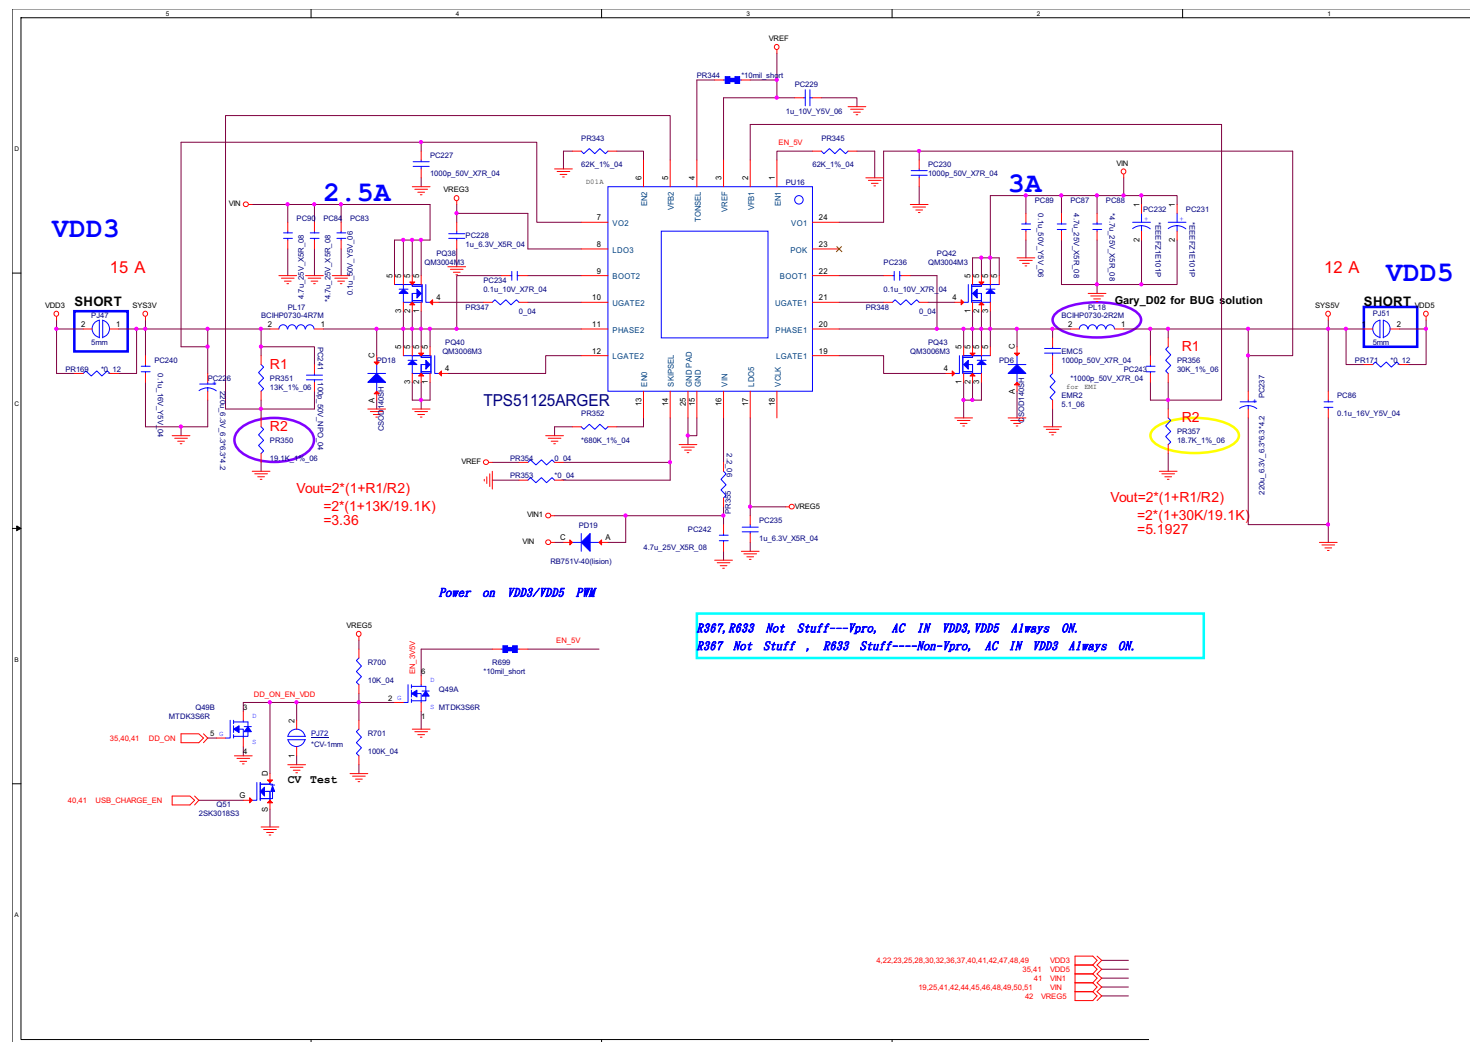

DDR 1.2V/0.6VS, 2.5V

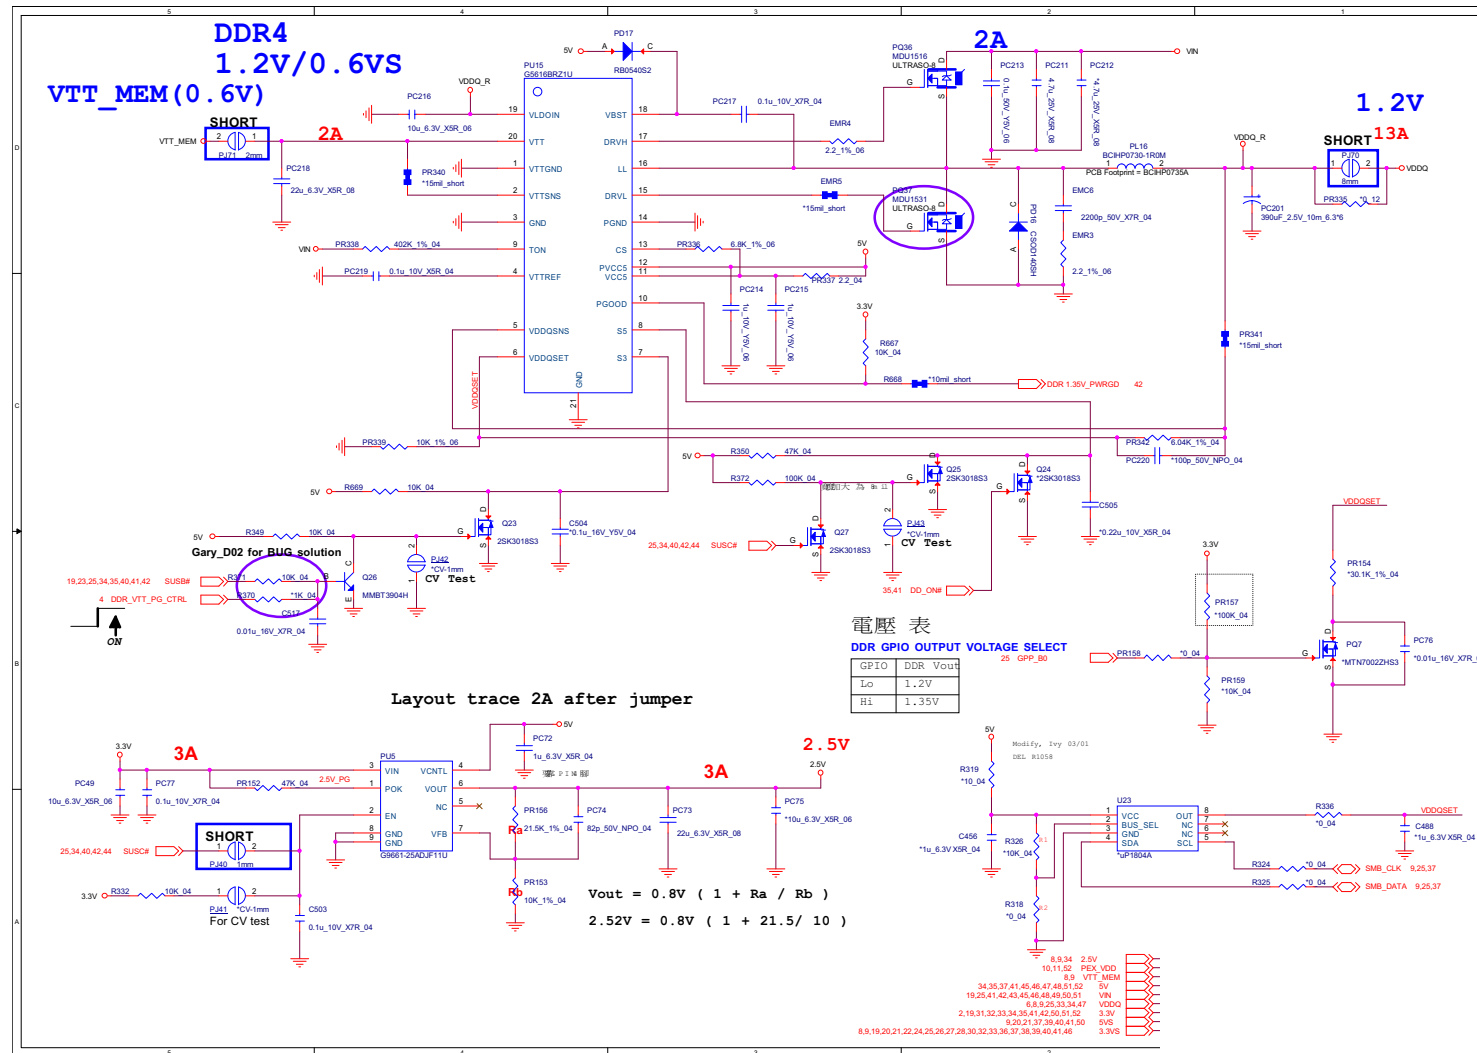


Sheet 44 of 58
DDR 1.2V/0.6VS,
2.5V


Schematic Diagrams

VCore, VCCGT Output Stage

Sheet 45 of 58
VCore, VCCGT
Output Stage

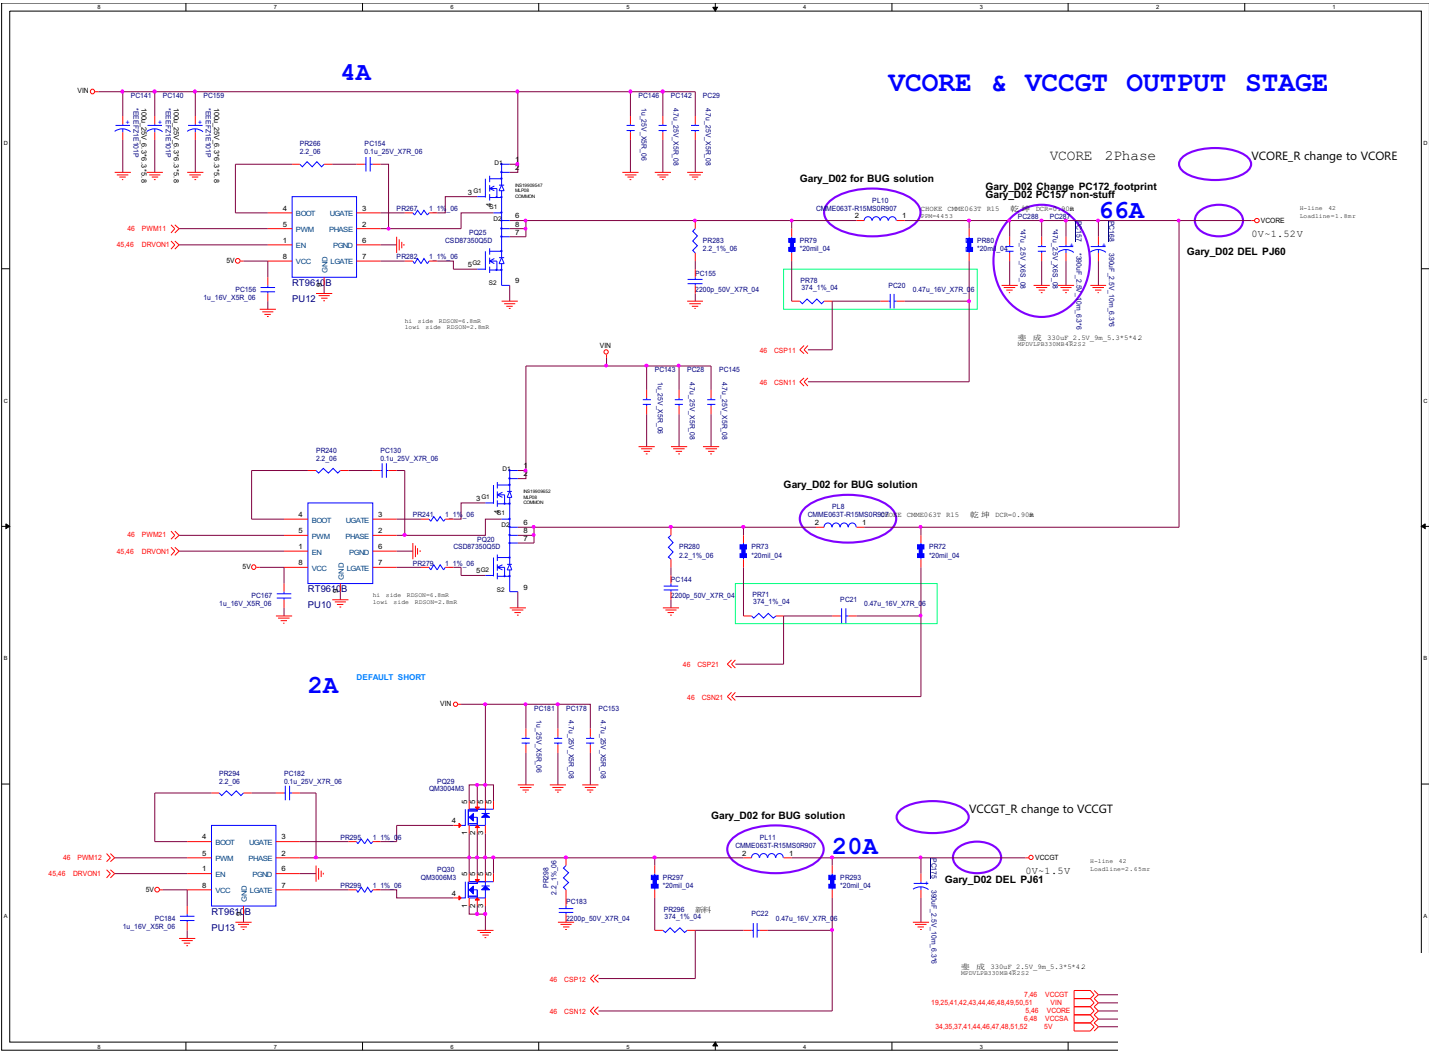


VCC_Core, VCCGT B - 47

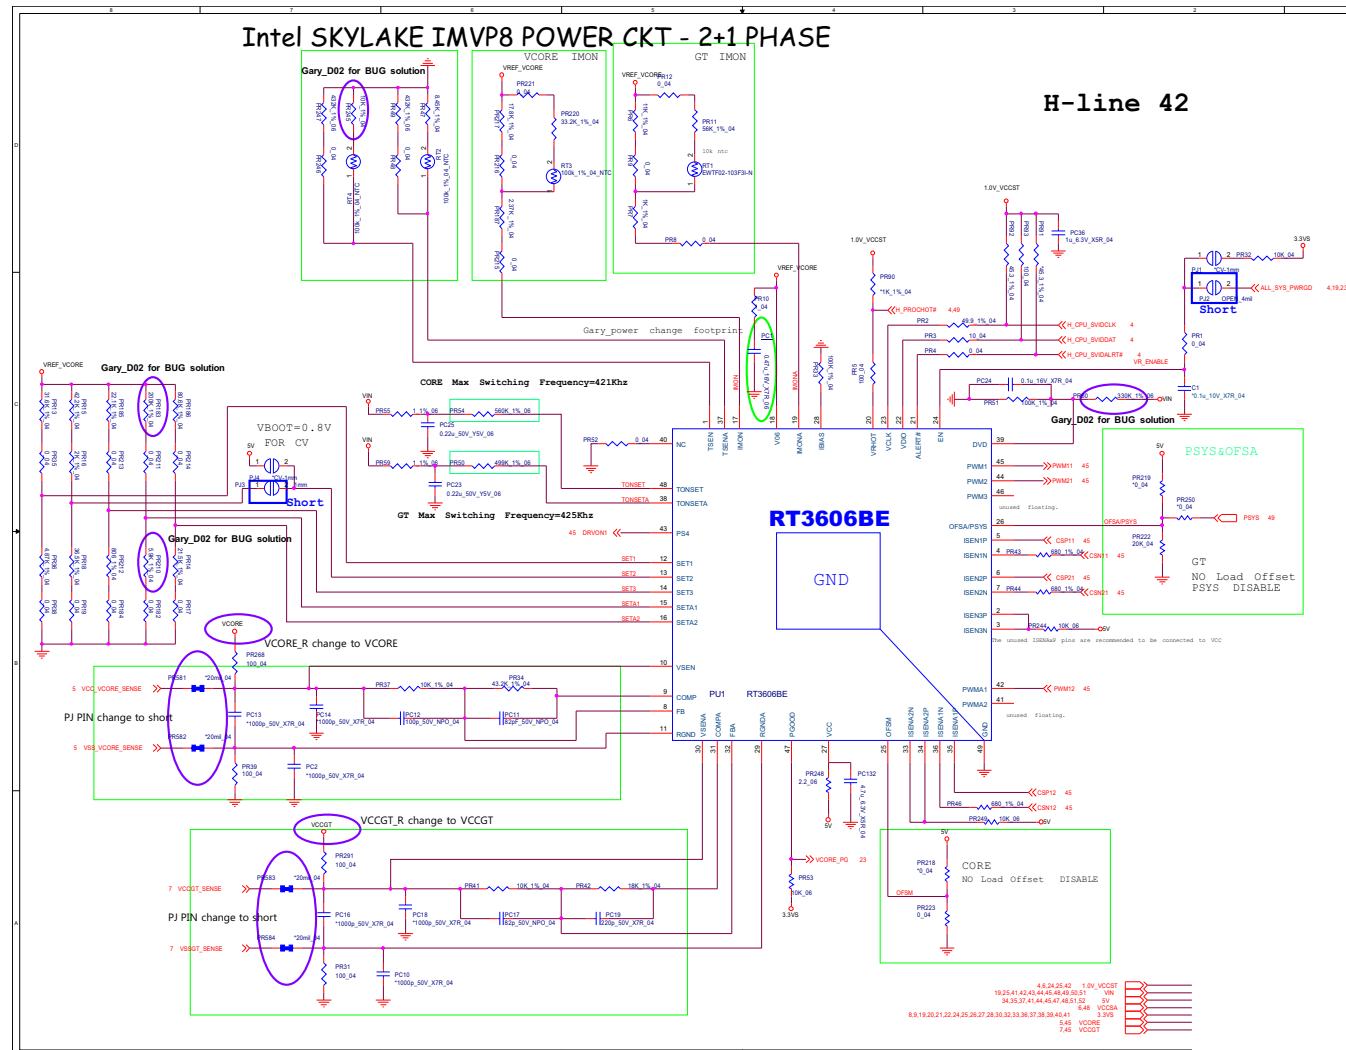


B. Schematic Diagrams

Sheet 47 of 58
1.0DX_VCCSTG/
VCCSFR_OC,
3.3VA

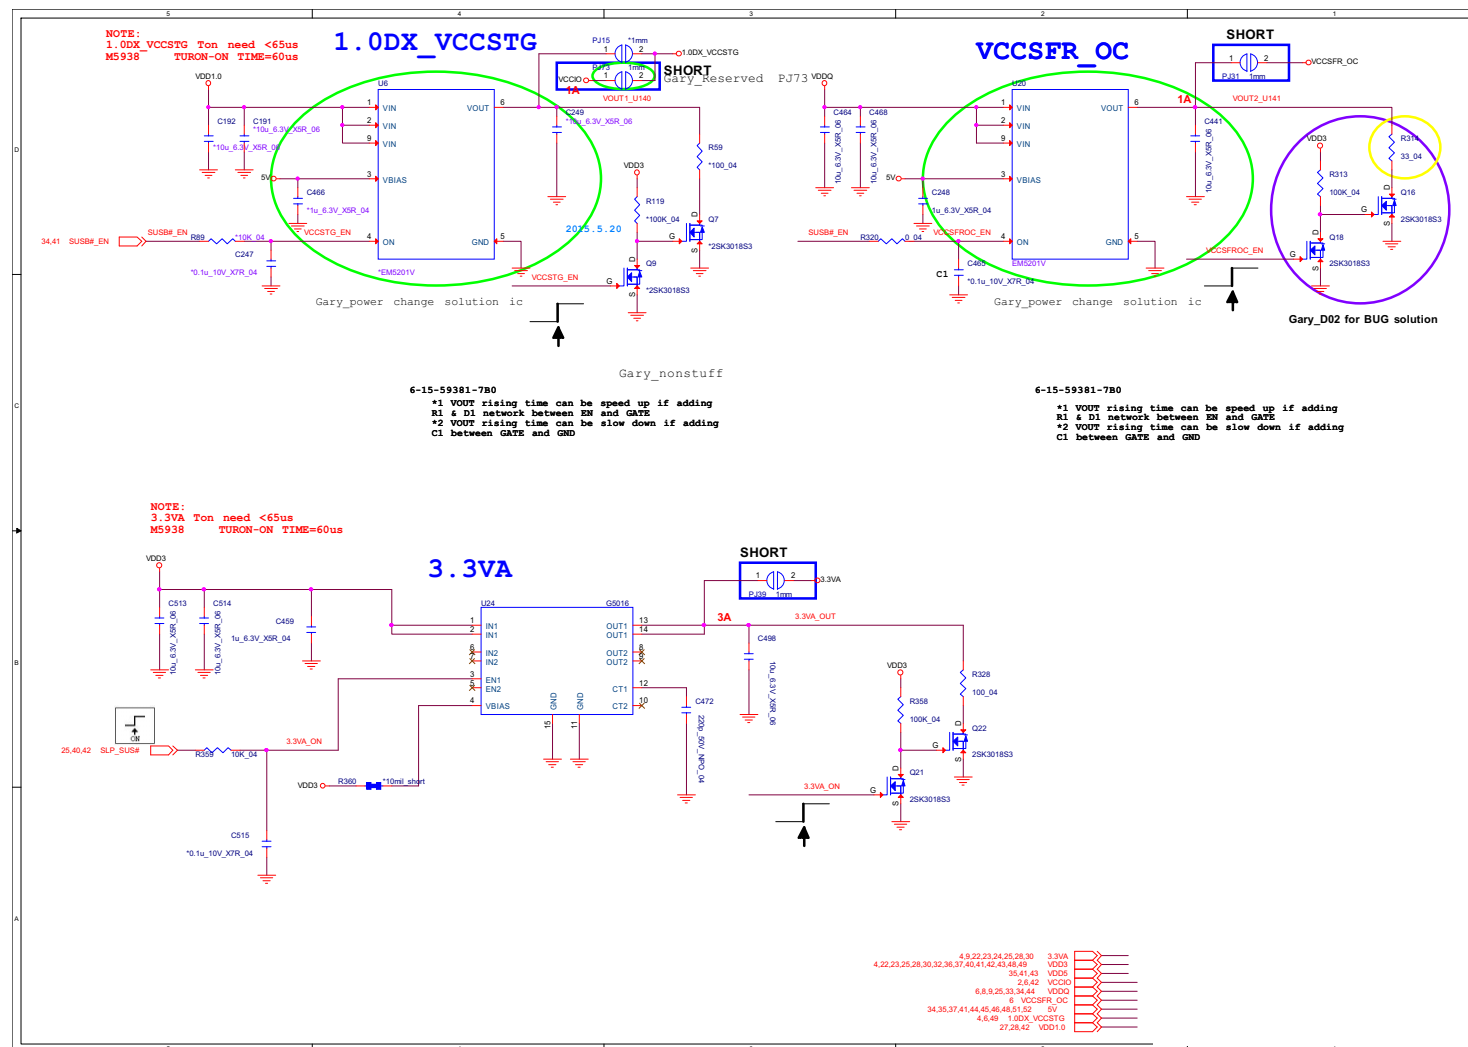


VCCSA

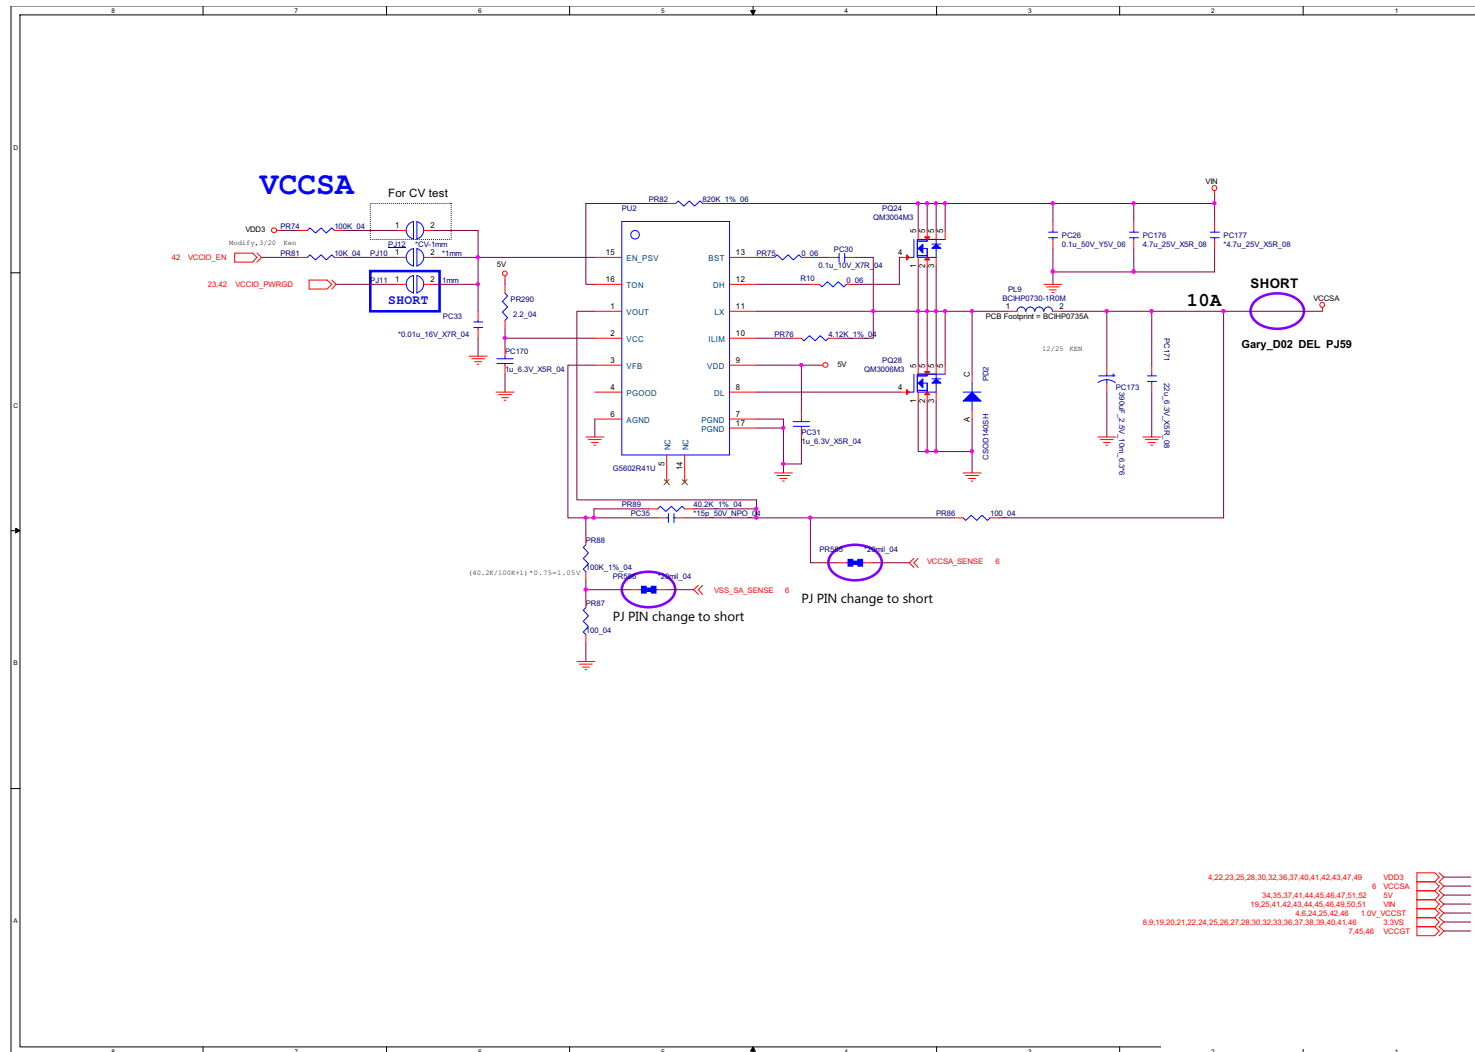Sheet 48 of 58
VCCSA


AC_In, Charger

B.Schematic Diagrams

Sheet 49 of 58
AC_In, Charger

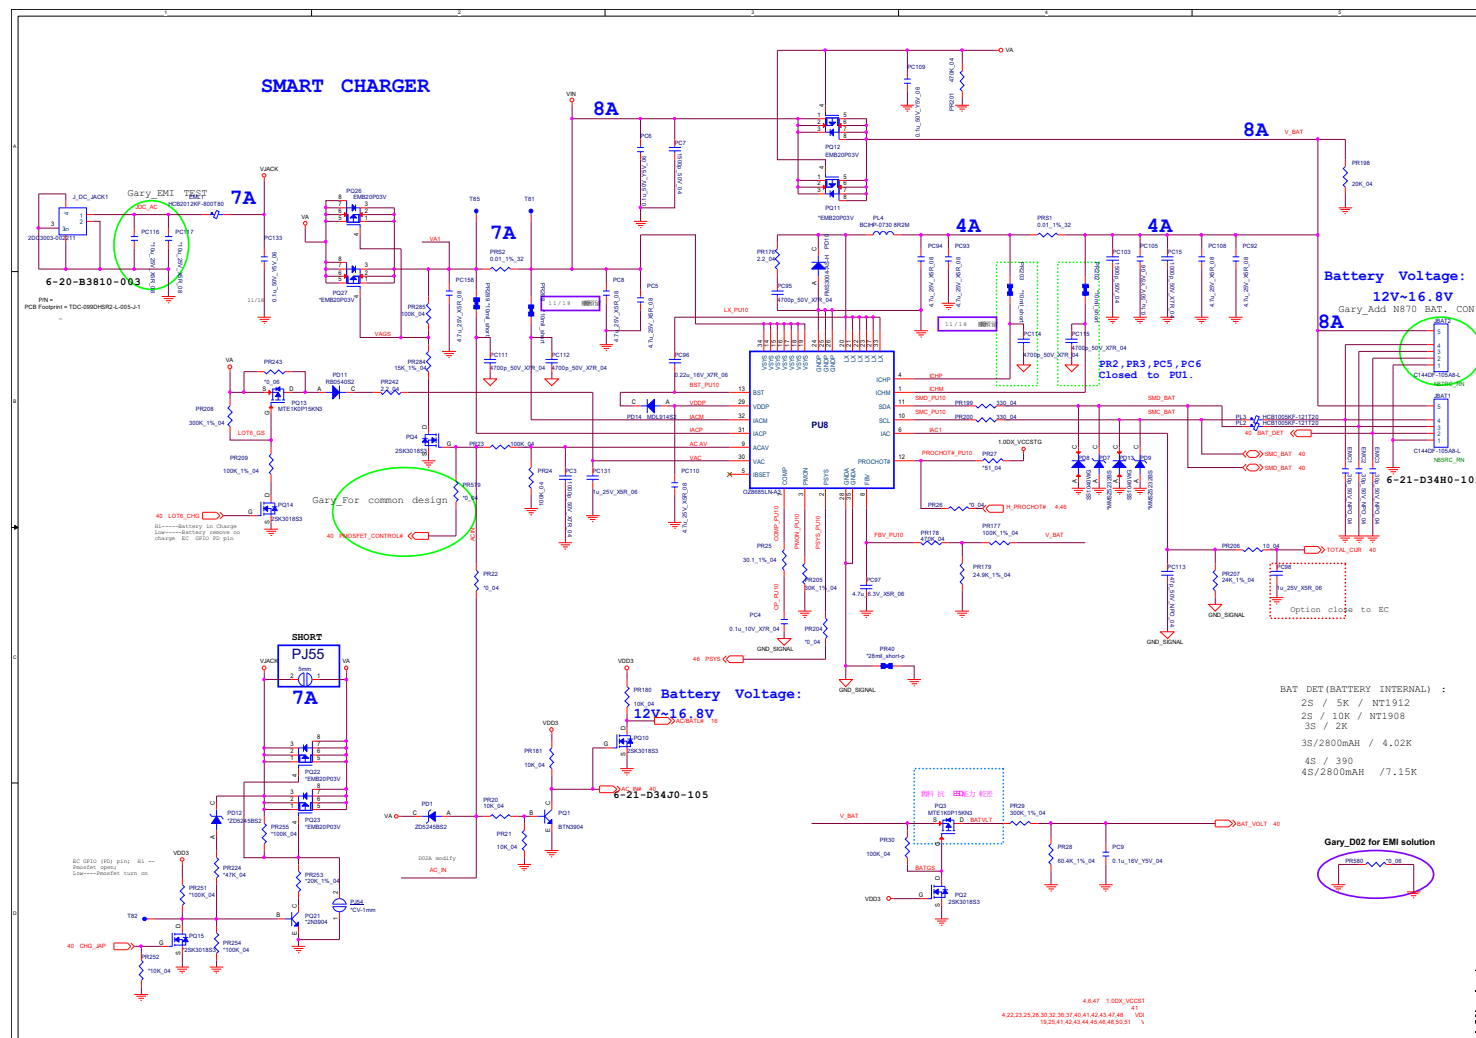


NVVDD

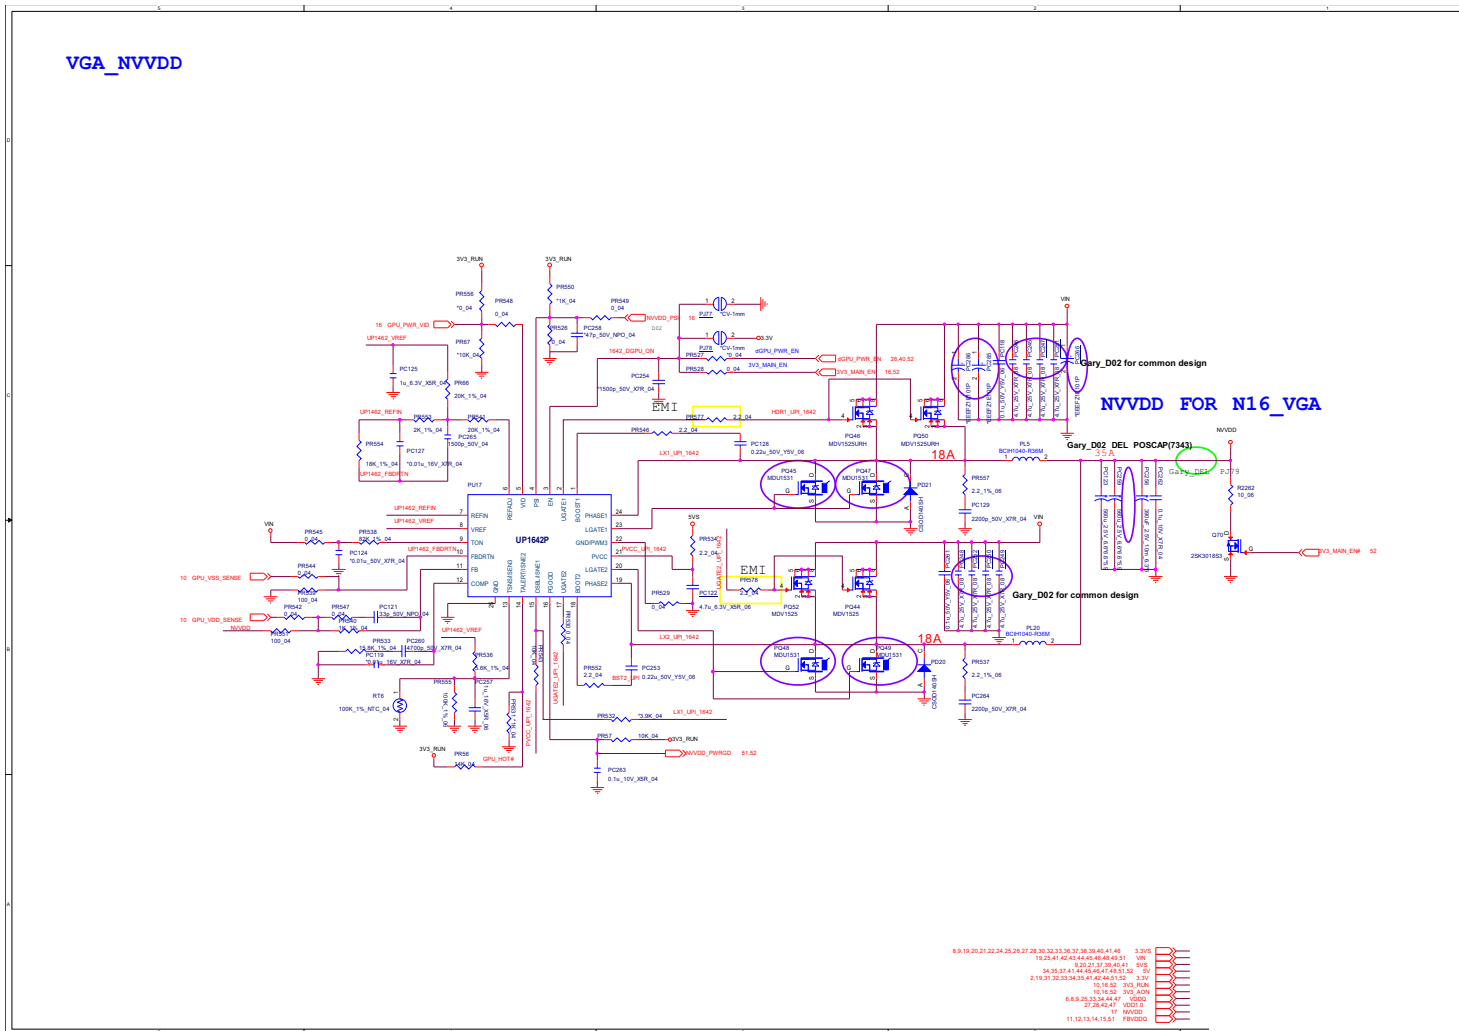

Sheet 50 of 58
NVVDD

FBVDDQ

Sheet 51 of 58
FBVDDQ

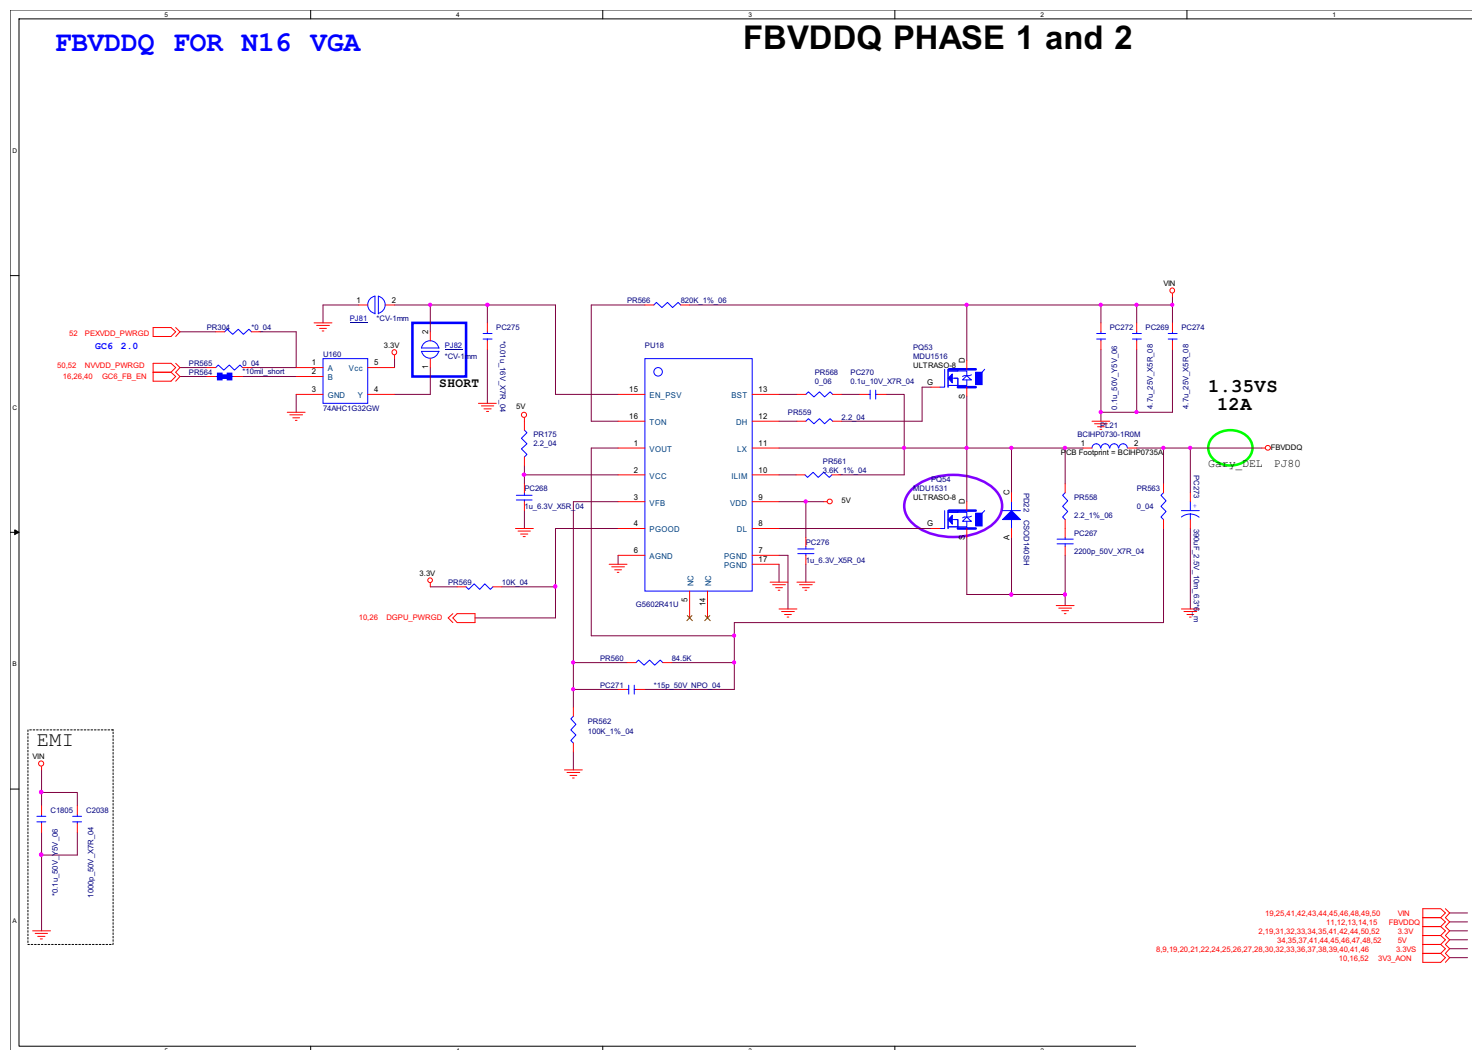


PEX_VDD/3V3 B - 53




Audio Board

B. Schematic Diagrams


Sheet 53 of 58
Audio Board

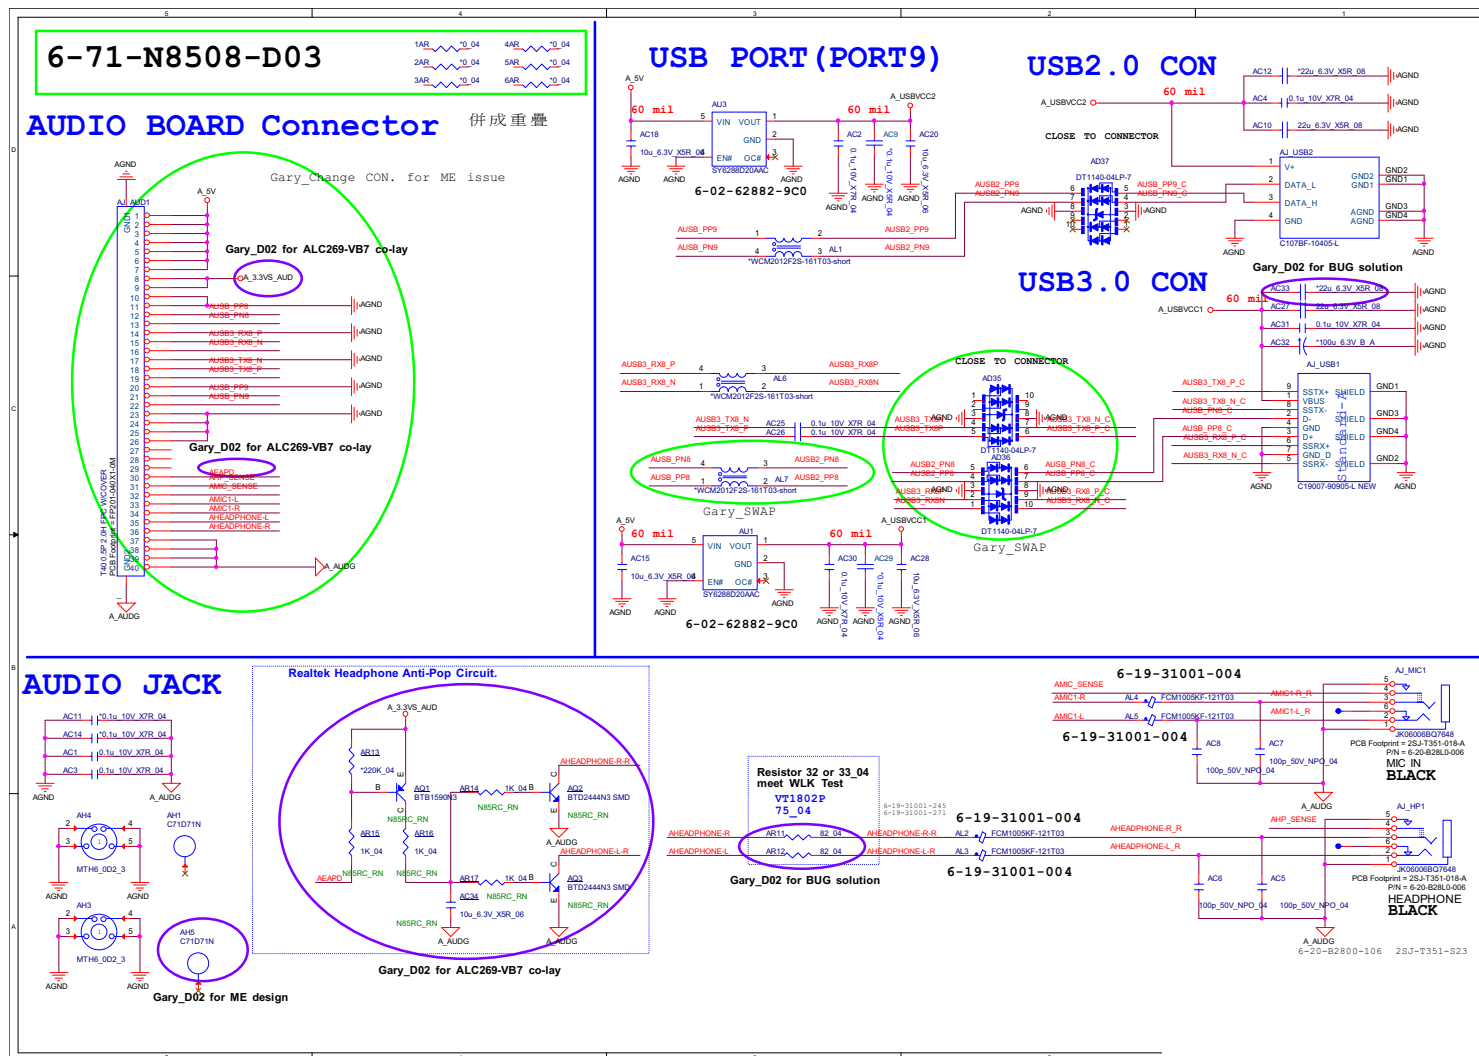


Power Switch Board

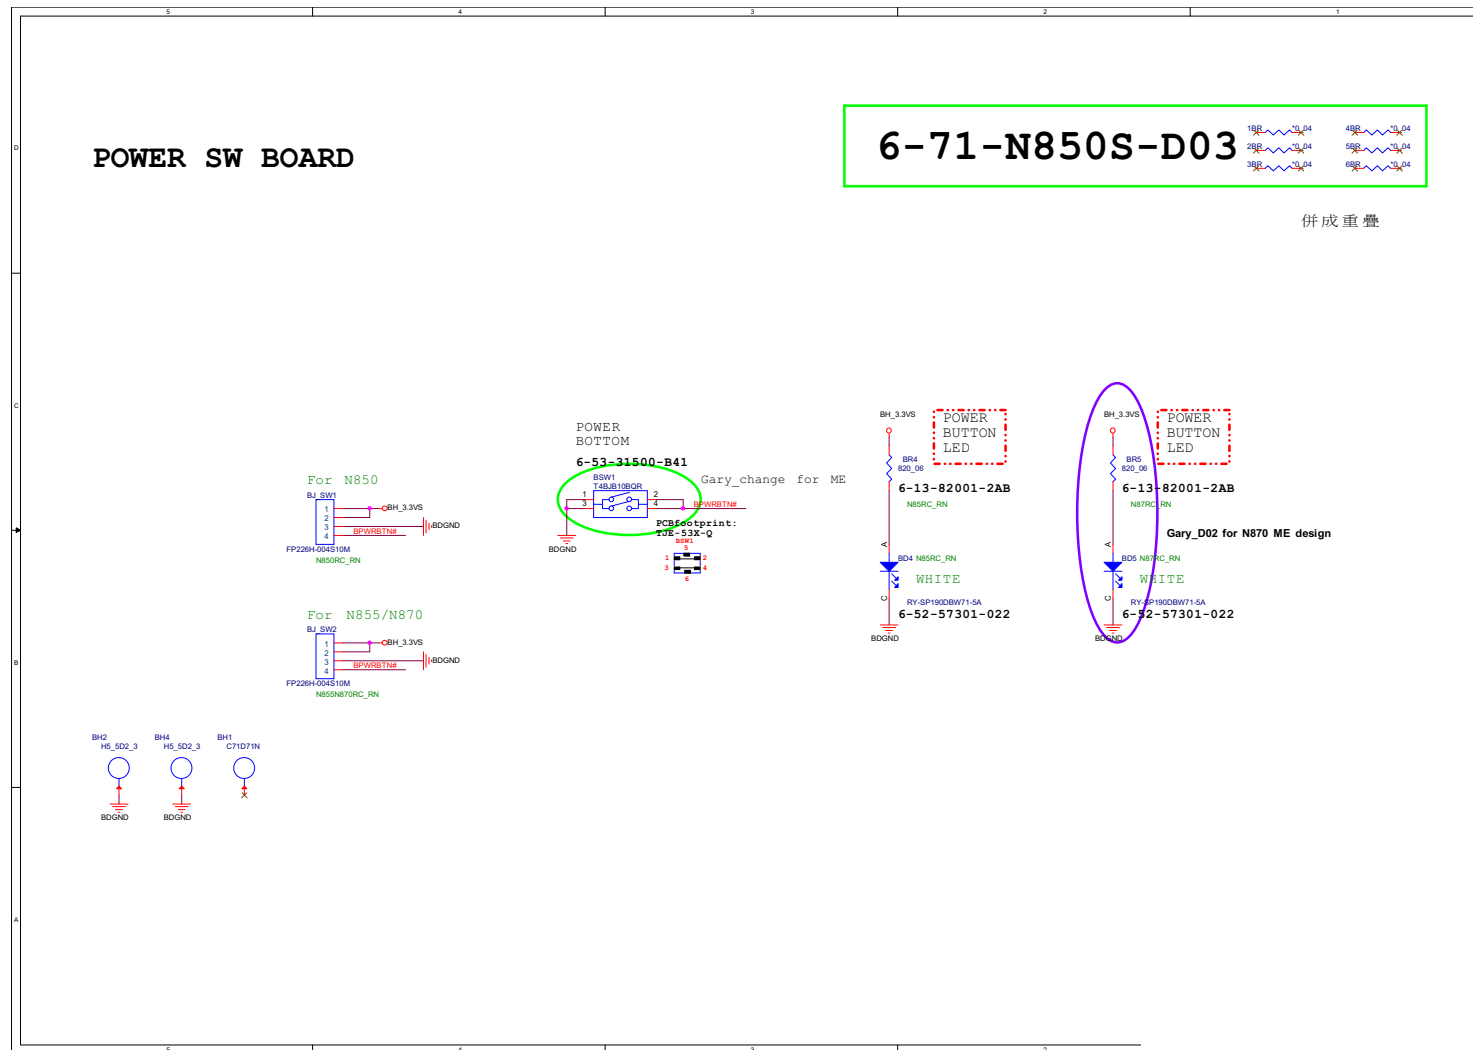Sheet 54 of 58
Power Switch
Board

HALL Sensor Board

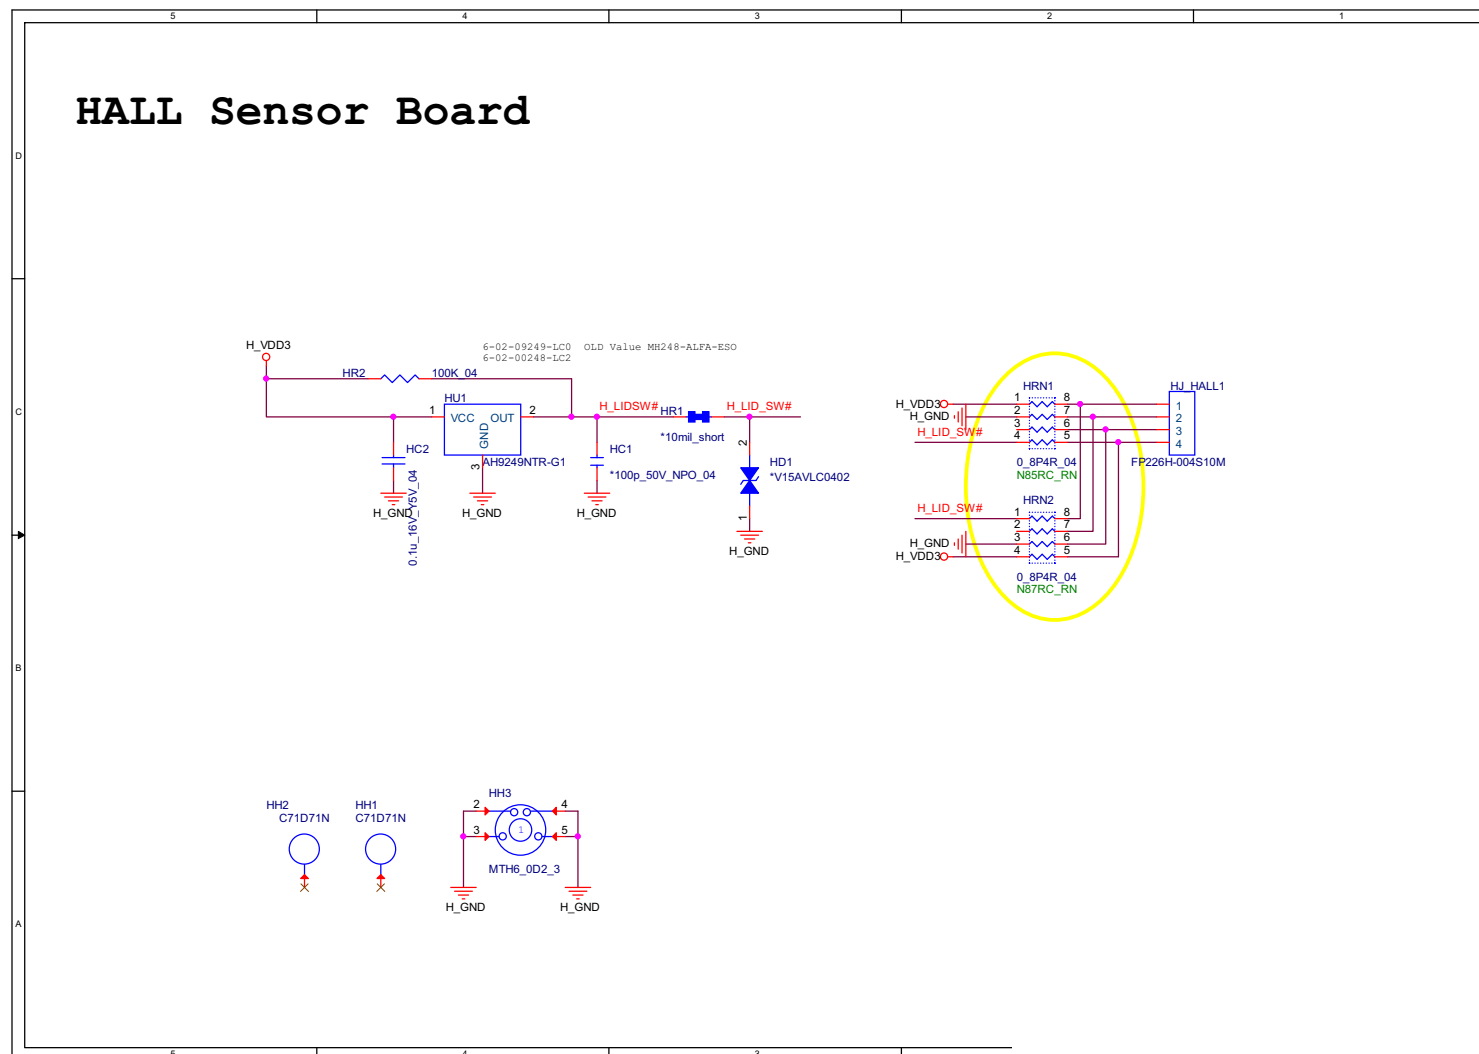


Click Board

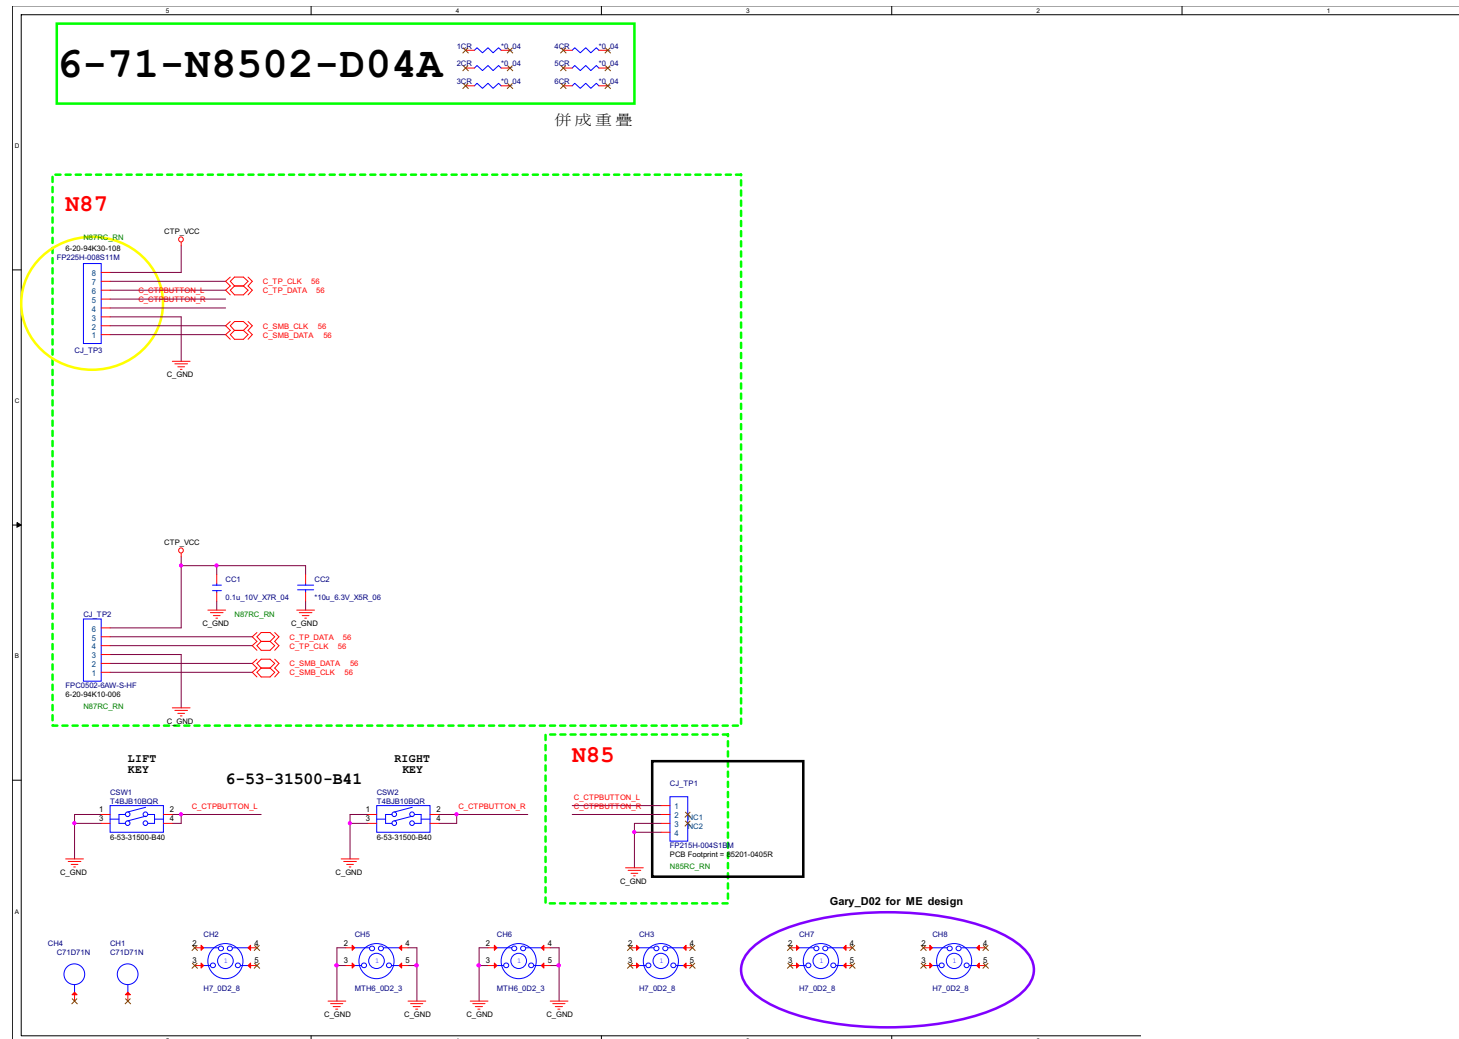

Sheet 56 of 58
Click Board


LED Board

Sheet 57 of 58
LED Board

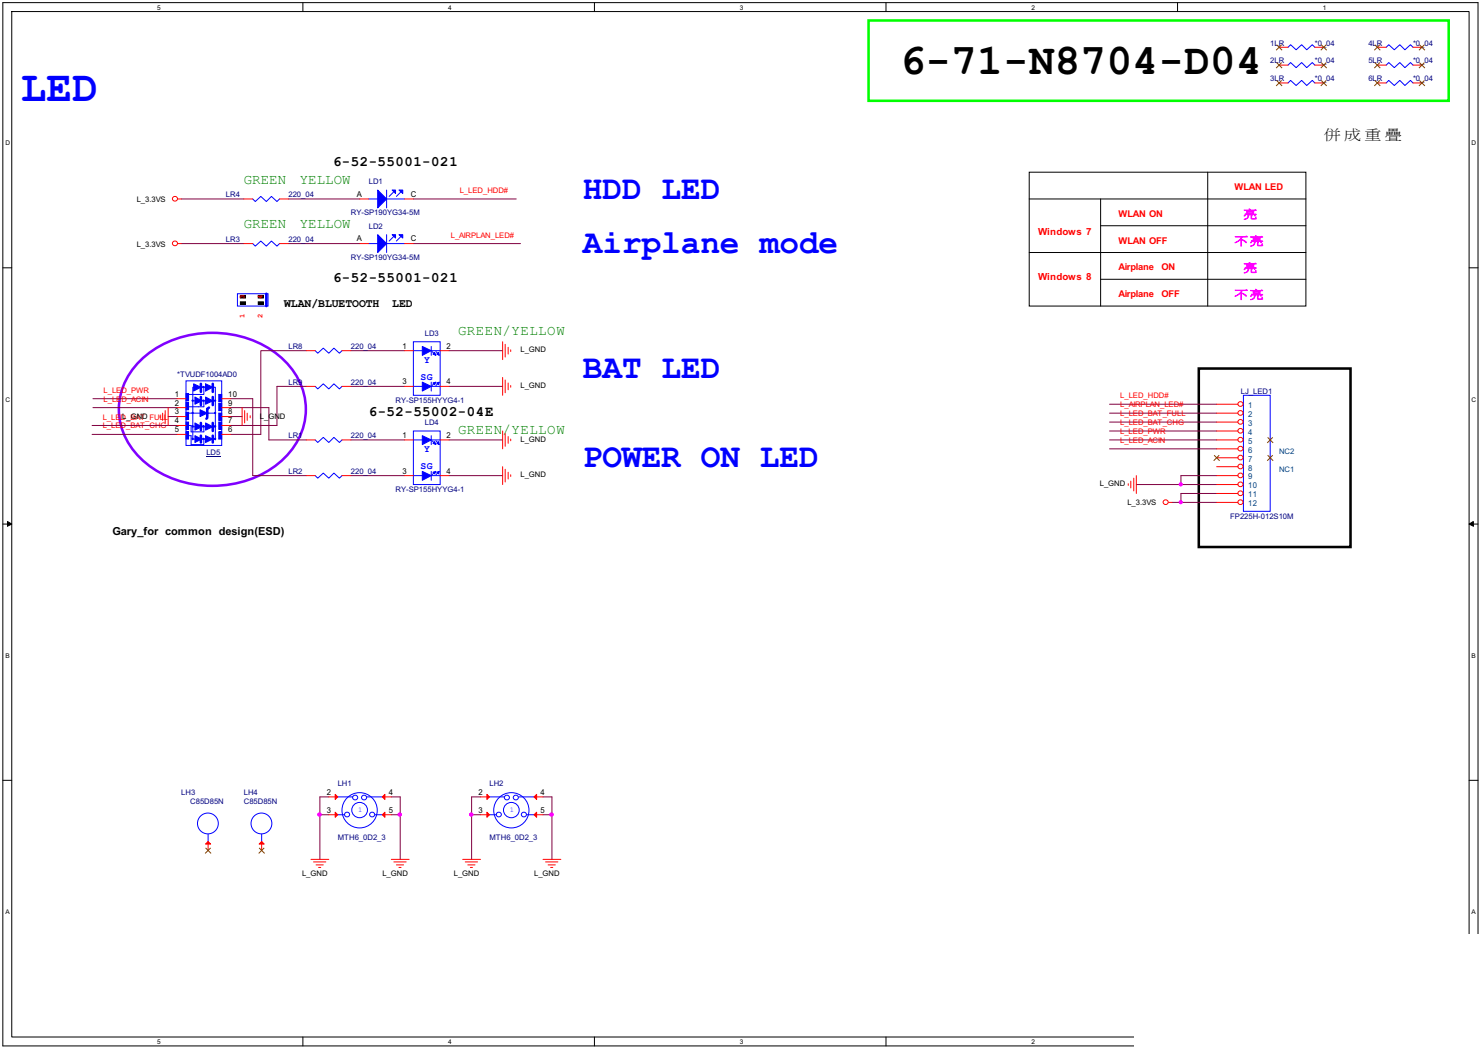

Power Sequence

POWER ON SEQUENCE

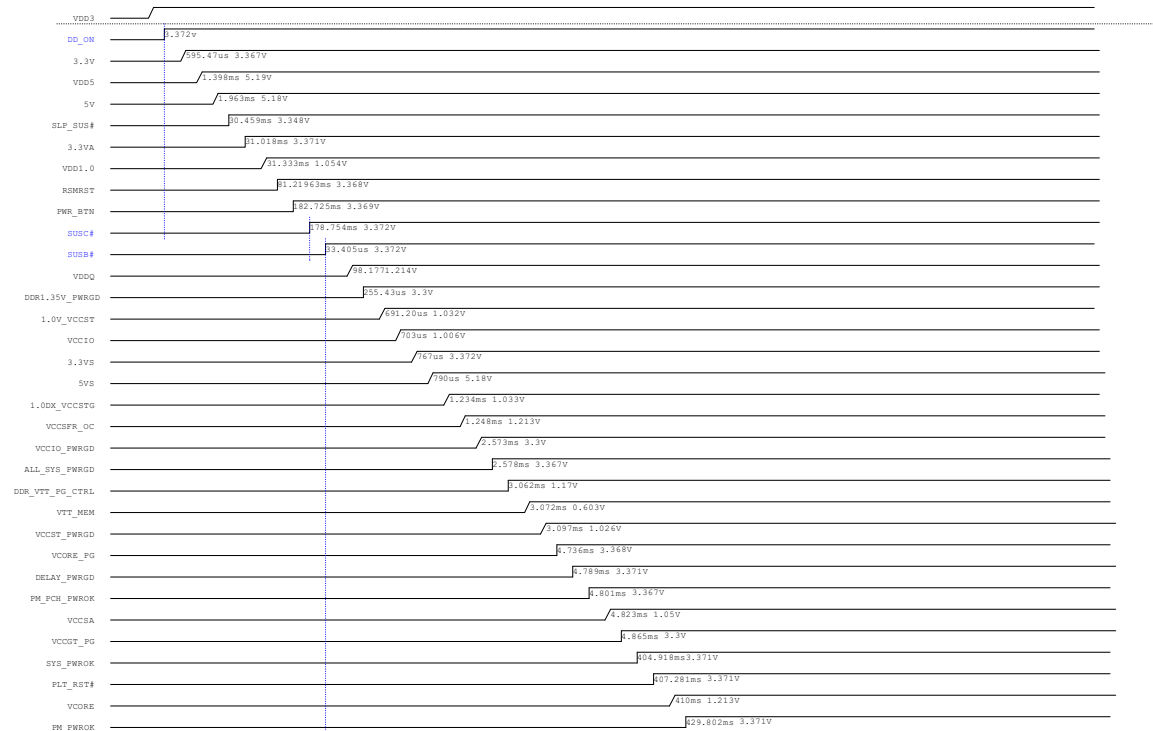

Sheet 58 of 58
Power Sequence

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are V1.0X.XX or higher as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.0X.05, you **MAY NOT** then go back and flash the BIOS to ver 1.0X.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**EFI Shell**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by EFI Shell. Choose “**N**” for any memory management programs.
2. You should now see **DISK fsX:\>** (X is the designated drive number for the CD/DVD drive/USB flash drive).
3. **Type the following command:**

fsX:\> Flash.nsh

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.