

notebook



P170SM SERVICE MANUAL

Notebook Computer

P170SM

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.1
May 2013

Trademarks

Intel and **Intel Core** are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the **P170SM** series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

Preface

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19.5V, 11.8A (**230** Watts) minimum AC/DC Adapter.

CAUTION

This Computer's Optical Device is a Laser Class 1 Product


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

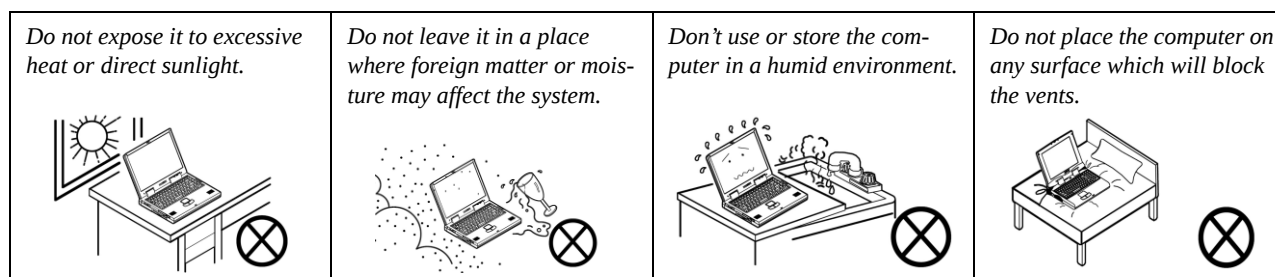

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

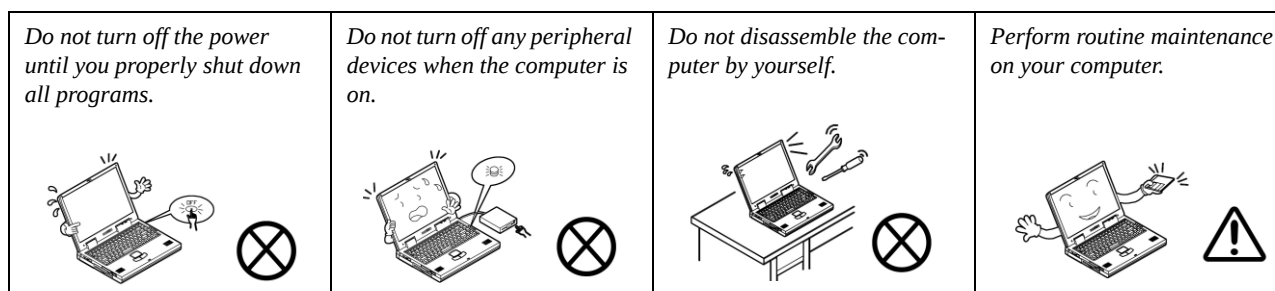

Preface



Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before restoring power to the system.

Also note the following when the cover is removed:


- Hazardous moving parts.
- Keep away from moving fan blades

Power Safety Warning


Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). You must also remove your battery in order to prevent accidentally turning the machine on.

4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

Use only approved brands of peripherals.

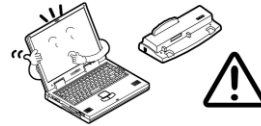

Unplug the power cord before attaching peripheral devices.

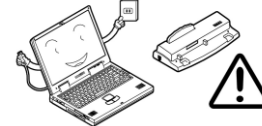

Power Safety


The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.


Do not plug in the power cord if you are wet.



Do not use the power cord if it is broken.

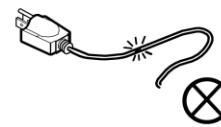

Do not place heavy objects on the power cord.

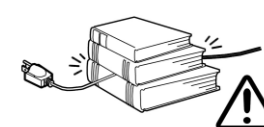

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.



Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Preface

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on Disc

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and tighten the screws.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not to exceed **130** degrees); use the other hand (as illustrated in [Figure 1](#)) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

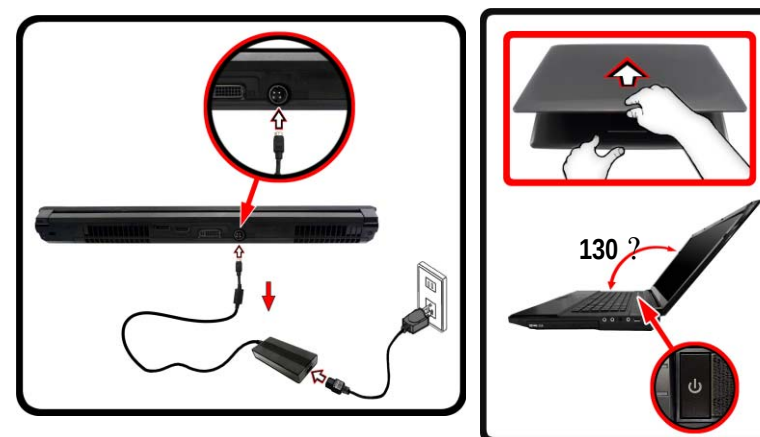


Figure 1
**Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In**

Contents

Introduction1-1

Overview	1-1
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Hard Disk Drive	2-6
Removing the SSD	2-9
Removing the Optical (CD/DVD) Device	2-10
Removing the Hard Disk from the Secondary HDD Bay	2-12
Removing the Primary System Memory (RAM)	2-14
Removing the Secondary System Memory (RAM)	2-16
Removing the Wireless LAN Module	2-18
Removing the MSATA Module	2-19
Removing and Installing the Processor	2-20
Removing and Installing the Video Card	2-23
Removing the CCD	2-26
Removing the Top Cover	2-27

Part ListsA-1

Part List Illustration Location	A-2
Top with Fingerprint	A-3
Top without Fingerprint	A-4
Bottom (N14E-GS)	A-5
Bottom (N14E-GTX)	A-6
LCD	A-7
COMBO	A-8
DVD-Dual Drive	A-9

Schematic Diagrams.....B-1

System Block Diagram	B-2
Processor 1/7	B-3
Processor 2/7	B-4
Processor 3/7	B-5
Processor 4/7	B-6
Processor 5/7	B-7
Processor 6/7	B-8
Processor 7/7	B-9
DDRIII CHA SO-DIMM_0	B-10
DDRIII CHA SO-DIMM_1	B-11
DDRIII CHB SO-DIMM_1	B-12
DDRIII CHB SO-DIMM_0	B-13
MXM PCI-E	B-14
Panel, CRT	B-15
PS8625	B-16
1394a_XIO2221	B-17
Display Port	B-18
HDMI	B-19
PCH 1/9 - RTC, HDA, SATA, JTAG	B-20

Preface

PCH 2/9 - LPC, SMBUS SPI, C-LI	B-21
PCH3/9 - DMI, FDI, PWRGD	B-22
PCH 4/9 - CRT, Display, PCI	B-23
PCH 5/9 - PCIe, USB	B-24
PCH 6/9 - GPIO, CPU	B-25
PCH 7/9 - Power	B-26
PCH 8/9 - Power	B-27
PCH 9/9 - CLK, GND	B-28
USB+eSATA, USB Charging	B-29
USB 2.0, CCD, Mini PCIE, LID	B-30
LED, Hotkey, LID SW, Fan	B-31
RJ 45	B-32
Codec Realtek ALC892	B-33
APA2607-TPA2008D2	B-34
KBC-ITE IT8587B	B-35
Backlight Keyboard	B-36
mSATA, FAN, TP, FP, MULTI-CON	B-37
Card Reader RTL8411	B-38
USB 3.0	B-39
DDR 1.35V/0.75VS PCH 1.5V	B-40
VDD3, VDD5	B-41
5VS, 3.3VS, 1.5VS	B-42
Power 1.05VS	B-43
Power V-Core 1	B-44
AC_In, Charger	B-45
TPM	B-46
Audio Board	B-47
P150/151 ODD Board	B-48
P150/151 Click Board	B-49
P150/170SM LED 1 Board	B-50
P151 LED 2 Board	B-51
P151 LED 3 Board	B-52

P170 HDD & ODD Board	B-53
P170 LED Board	B-54
P170 Click Board	B-55
P170 Fingerprint Board	B-56
P150 HDD Board	B-57
P150 LED Board_L	B-58
P150 LED Board_R	B-59
mSATA Board	B-60
Power on Sequence	B-61

Updating the FLASH ROM BIOS..... C-1

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **P170SM** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in *User's Manual*. That manual is shipped with the computer.

Operating systems (e.g. *Windows 8*, etc.) have their own manuals as do application software (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **P170SM** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please note the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

Intel® Core™ i7 Processor

i7-4930XM (3.00GHz)

8MB L3 Cache, 22nm, DDR3L-1600MHz, TDP 57W

Intel® Core™ i7 Processor

i7-4900MQ (2.80GHz)

8MB L3 Cache, 22nm, DDR3L-1600MHz, TDP 47W

i7-4800MQ (2.70GHz), i7-4700MQ (2.40GHz)

6MB L3 Cache, 22nm, DDR3L-1600MHz, TDP 37W

LCD

17.3" (43.94cm) FHD LCD

Memory

Four 204 Pin SO-DIMM Sockets Supporting **DDR3L 1600MHz** Memory

(The real memory operating frequency depends on the FSB of the processor.)

Memory Expandable up to 16GB/32GB

Note: Four SO-DIMMs are only supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum

Core Logic

Intel® HM87 Express Chipset

BIOS

AMI BIOS (48Mb SPI Flash-ROM)

Security

Security (Kensington® Type) Lock Slot

BIOS Password

(**Factory Option**) Fingerprint Reader Module

Storage

(**Factory Option**) One 12.7mm(h) Optical Device Type Drive (Super Multi Drive/Blu-Ray Combo Drive/Blu-Ray Writer Drive)

Two Changeable 2.5" (h) SATA (Serial) Hard Disk Drives (HDDs)/SSDs supporting RAID Level 0/1

(**Factory Option**) Two mSATA Solid State Drives (SSD) supporting RAID Level 0/1

Video Adapter

Intel® Integrated GPU and NVIDIA® Discrete GPU

Supports NVIDIA® Optimus Technology

Intel Integrated GPU

Intel HD Graphics 4600

Dynamic Frequency (Intel Dynamic Video Memory Technology for up to **1.7GB**)

Microsoft DirectX® 11 Compatible

NVIDIA® Discrete GPU

NVIDIA® GeForce GTX 780M PCIe Video Card

4GB GDDR5 Video RAM on board

Microsoft DirectX® 11.1 Compatible

NVIDIA® GeForce GTX 770M PCIe Video Card

3GB GDDR5 Video RAM on board

Microsoft DirectX® 11.1 Compatible

nVIDIA® GeForce GTX 765M PCIe Video Card

2GB GDDR5 Video RAM on board

Microsoft DirectX® 11.1 Compatible

Pointing Device

Built-in Touchpad (scrolling key functionality integrated)

Keyboard

Illuminated Full-size "WinKey" keyboard (with numeric keypad)

Audio

High Definition Audio Compliant Interface
S/PDIF Digital Output
Two Speakers
One Sub Woofer
Built-In Microphone
Sound Blaster Audio

Mini-Card Slots

Slot 1 for **WLAN** Module or **Combo WLAN and Bluetooth** Module
Slots 2 & 3 for mSATA SSD

Card Reader

Embedded Multi-In-1 Push-Push Card Reader
MMC (MultiMedia Card) / RS MMC
SD (Secure Digital) / Mini SD / SDHC/ SDXC
MS (Memory Stick) / MS Pro / MS Duo

Interface

Three USB 3.0 Ports (Including one AC/DC Powered USB port)
One USB 2.0 Port
One eSATA Port (USB 3.0 Port Combined)
One HDMI-Out Port
One DisplayPort (1.1a)
One Mini DisplayPort
One S/PDIF Out Jack
One Headphone/Speaker-Out Jack
One Microphone-In Jack
One Line-In Jack
One Mini-IEEE1394a Port
One RJ-45 LAN Jack
One DC-In Jack

Note: External 7.1CH Audio Output Supported by Headphone, Microphone, Line-In and S/PDIF Out Jacks

Communication

Built-In Giga Base-TX Ethernet LAN
2M FHD PC Camera Module

WLAN/ Bluetooth Half Mini-Card Modules:

(**Factory Option**) Intel® Centrino® Ultimate-N 6300 Wireless LAN (802.11a/g/n)
(**Factory Option**) Intel® Centrino® Advanced-N 6235 Wireless LAN (802.11a/g/n) + Bluetooth 4.0
(**Factory Option**) Intel® Centrino® Wireless-N 2230 Wireless LAN (802.11b/g/n) + Bluetooth 4.0
(**Factory Option**) Wireless LAN (802.11b/g/n) + Bluetooth 4.0

Environmental Spec**Temperature**

Operating: 5°C - 35°C
Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%
Non-Operating: 10% - 90%

Power

Removable 8-cell Smart Lithium-Ion Battery Pack

Full Range AC/DC Adapter
AC Input: 100 - 240V, 50 - 60Hz
DC Output: 19.5V, 11.8A (**230W**)


Dimensions & Weight

412mm (w) * 276mm (d) * 45.4 - 41.8mm (h)
Around 3.9kg with Battery and ODD

Introduction


Figure 1
Top View

1. Built-In PC Camera
2. PC Camera LED
3. Built-In Microphone
4. LCD
5. Speakers
6. LED Indicators
7. Power Button
8. Illuminated Keyboard
9. TouchPad and Buttons
10. Fingerprint Reader (Optional)

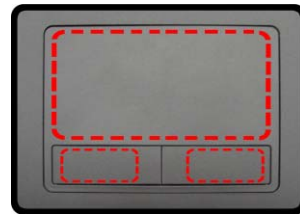

Note that the Touchpad and Buttons has a valid operational area indicated within the red dotted lines above.

External Locator - Top View with LCD Panel Open

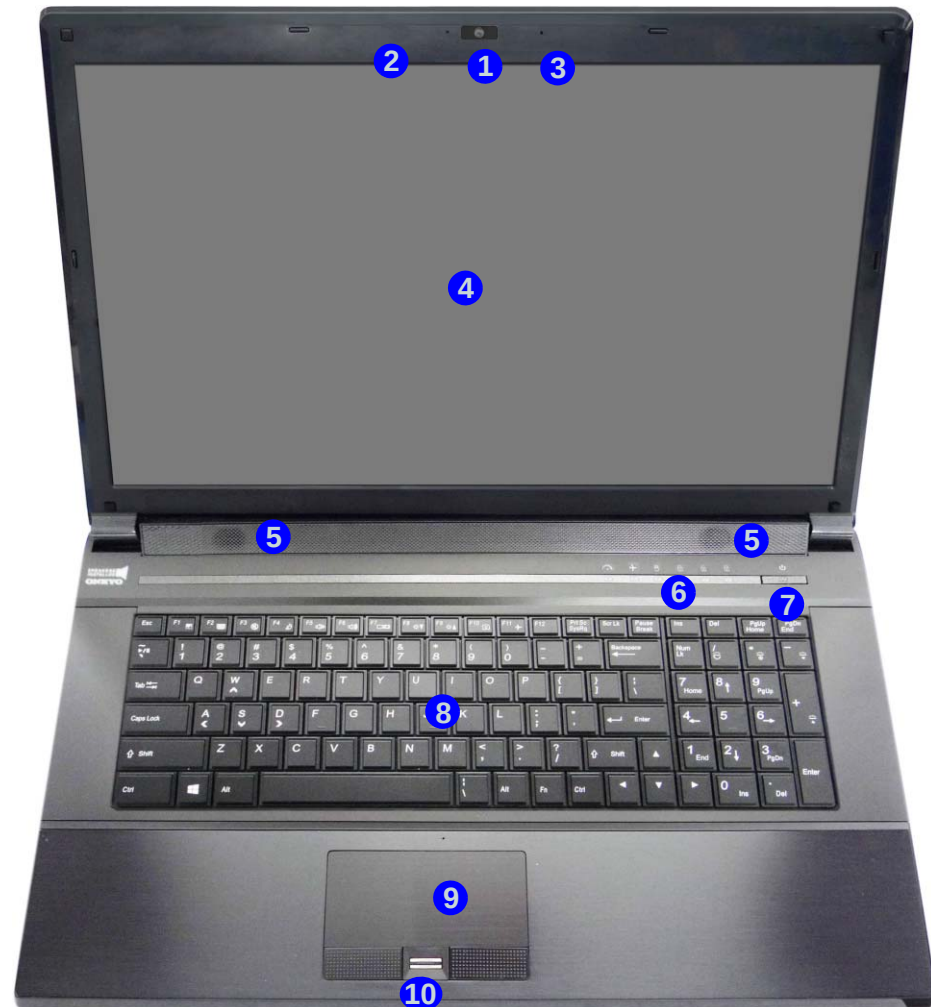

External Locator - Front & Right side Views



Figure 2
Front Views

1. LED Power Indicators



Figure 3
Right Side Views

1. Optical Device Drive Bay
2. Emergency Eject Hole
3. Headphone Jack
4. Microphone Jack
5. S/PDIF-Out Jack
6. Line-In Jack
7. USB 2.0 Port

Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. Mini-IEEE 1394a Port
2. RJ-45 LAN Jack
3. USB 3.0 Port / USB Charge
4. USB 3.0 Port
5. Combined eSATA/ Powered USB 3.0 Port
6. Multi-in-1 Card Reader



Figure 5
Rear View

1. Vent/Fan Intake
2. Display Port
3. HDMI-Out Port
4. Mini Display Port
5. DC-In Jack
6. Security Lock Slot



External Locator - Bottom View

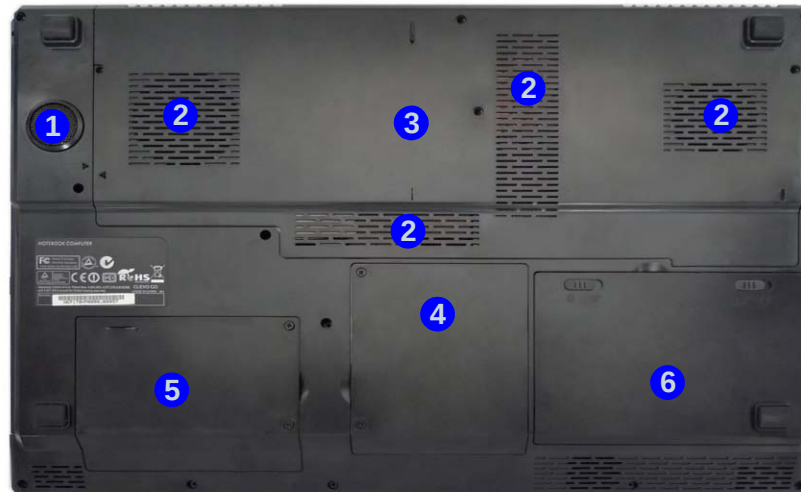


Figure 6
Bottom View

1. Sub Woofer
2. Fan Outlet/Intake
3. Component Bay Cover
4. Primary HDD Bay
5. Secondary HDD Bay
6. Battery




Overheating

To prevent your computer from overheating make sure nothing blocks the vent/fan intakes while the computer is in use.

Figure 7
Mainboard Top
Key Parts

1. Platform
Controller Hub
2. Audio Codec
3. KBC ITE IT8587


Mainboard Overview - Top (Key Parts)

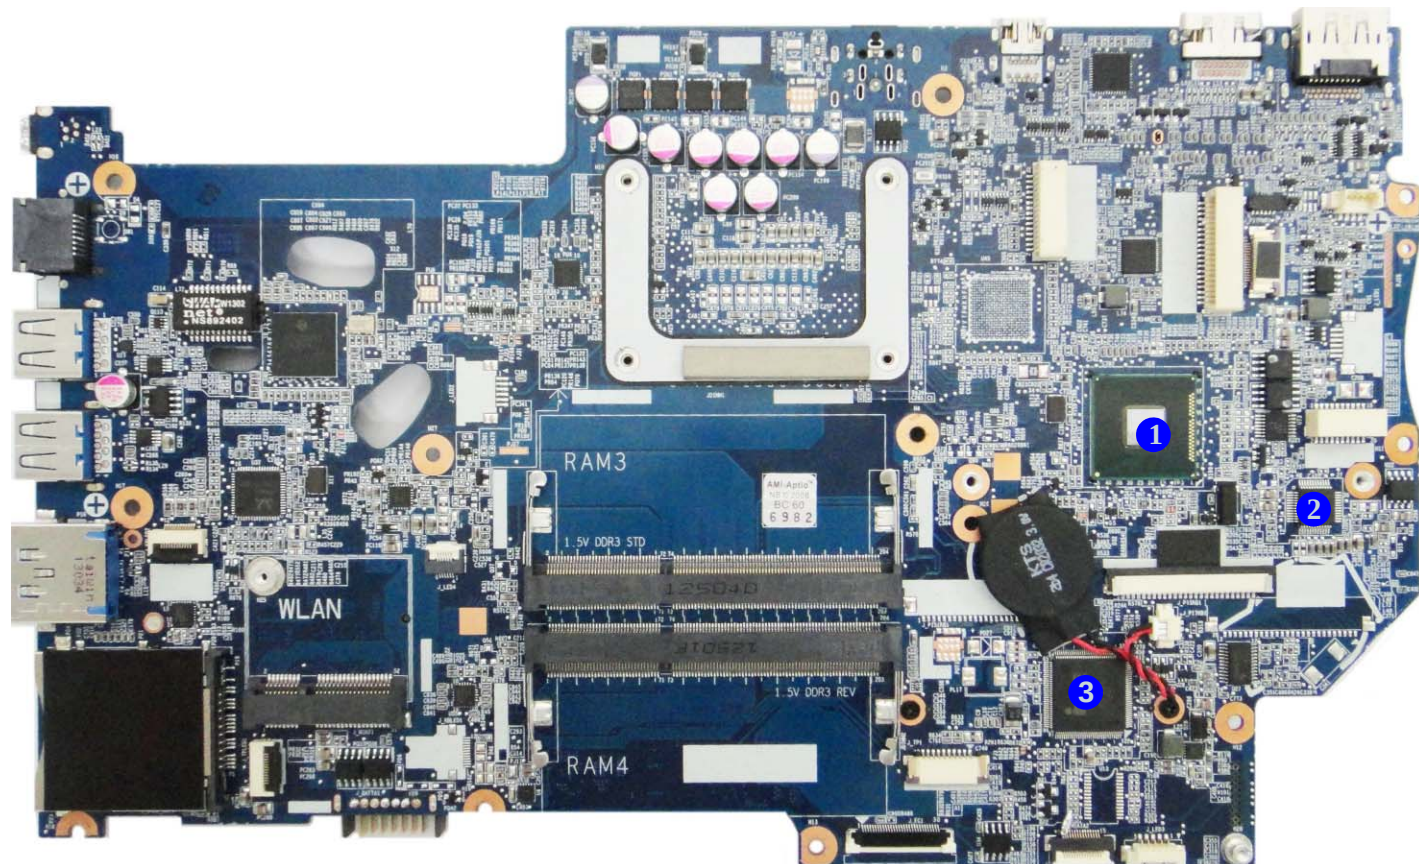

Mainboard Overview - Bottom (Key Parts)

Figure 8
**Mainboard Bottom
Key Parts**

1. VGA-Card Connector
2. CPU Socket (no CPU installed)
3. Memory Slots
DDR3 SO-DIMM
(Primary)
4. Hard Disk
Connector
5. MSATA Connector

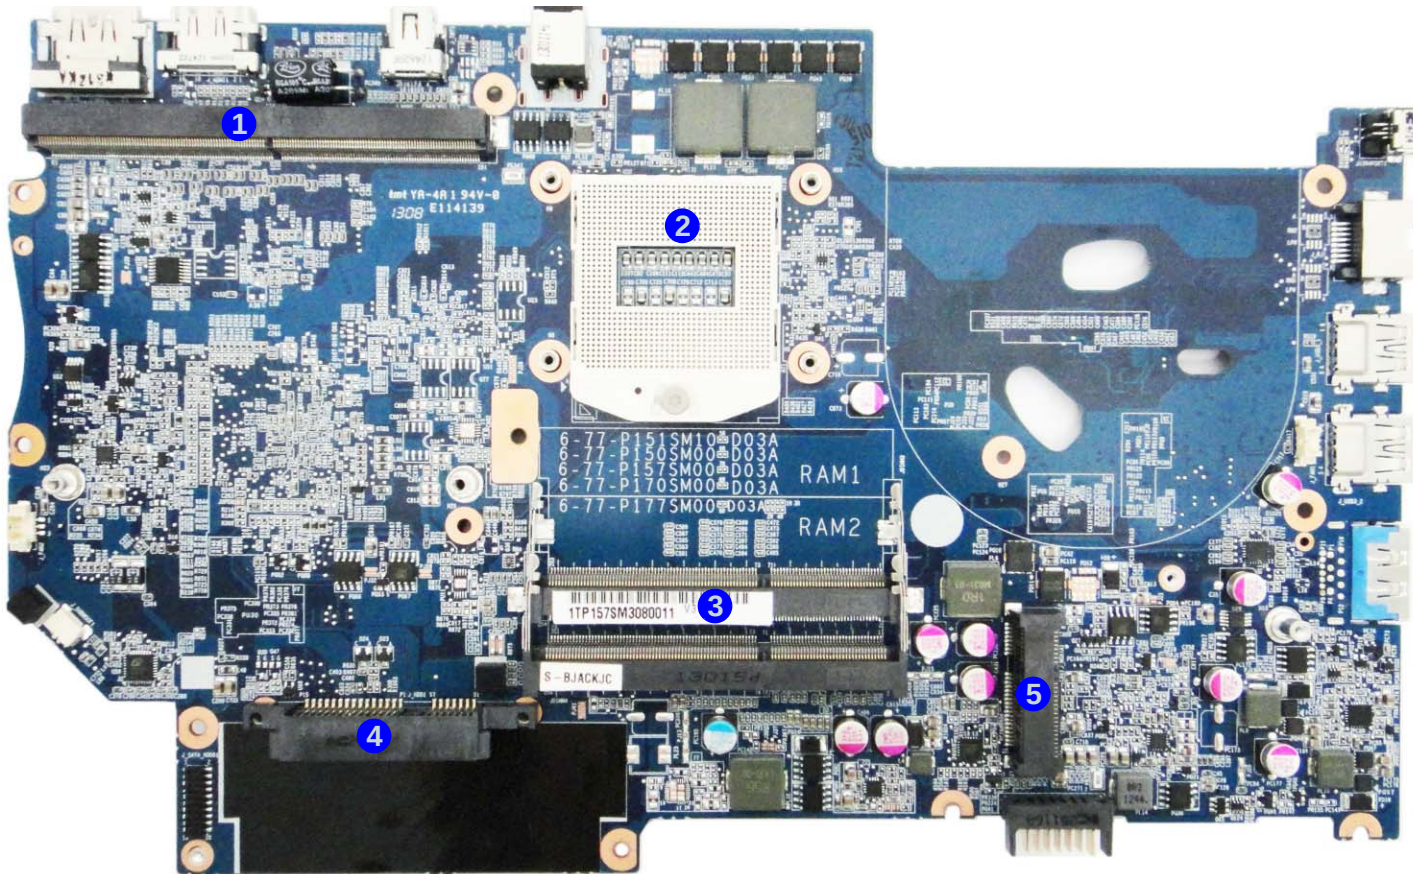


Introduction

Figure 9
**Mainboard Top
Connectors**


Mainboard Overview - Top (Connectors)

1. USB 3.0 Port / e-SATA
2. Multi-in-1 Card Reader
3. KB LED Connector
4. TP LED Cable Connector
5. LED 4 Cable Connector
6. TouchPad Cable Connector
7. MSATA Cable Connector
8. LED 3 Cable Connector
9. Keyboard Cable Connector
10. Audio Cable Connector
11. LCD Cable Connector
12. eDP Cable Connector

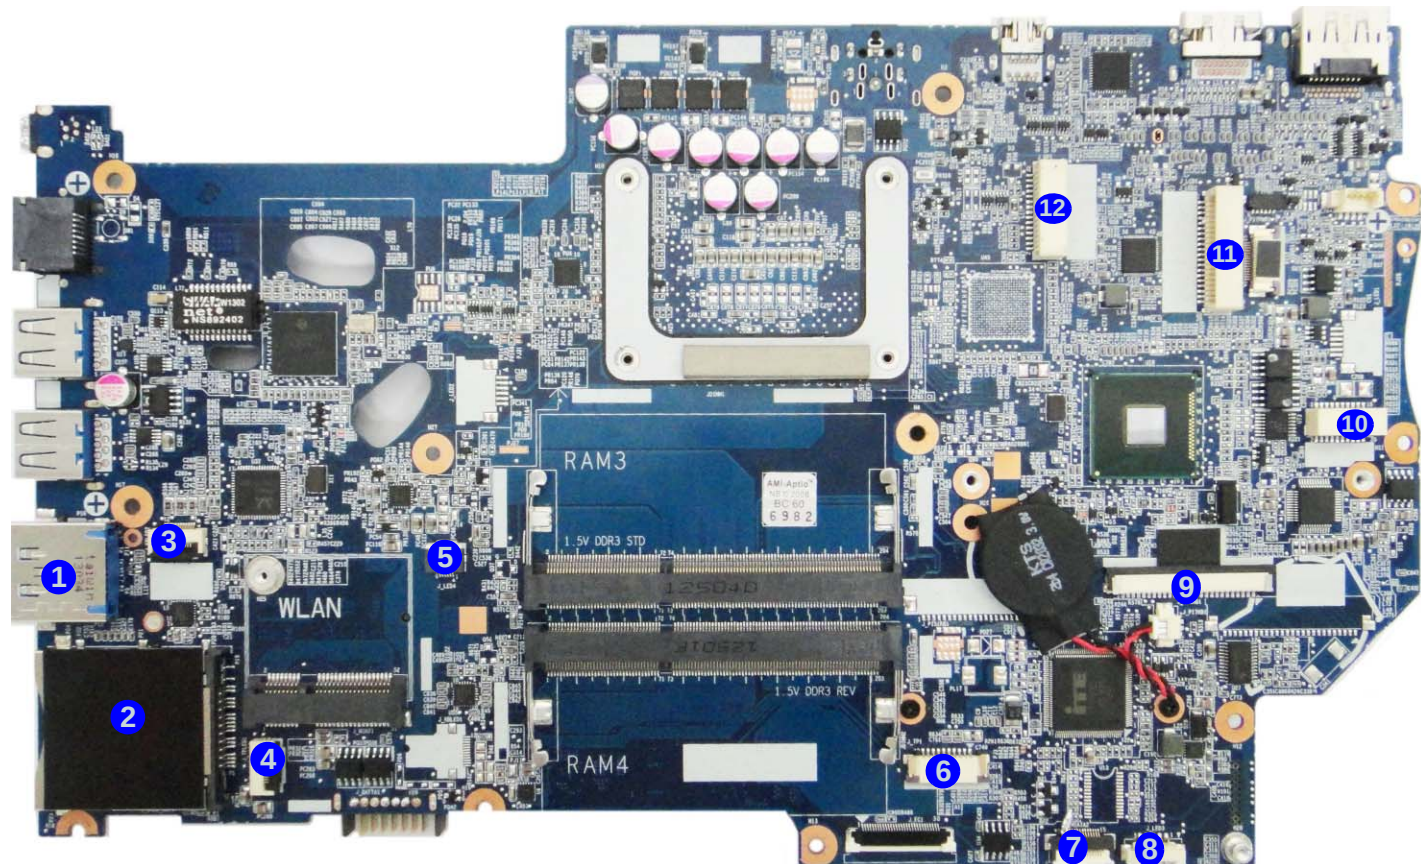

Mainboard Overview - Bottom (Connectors)

Figure 10
**Mainboard Bottom
Connectors**

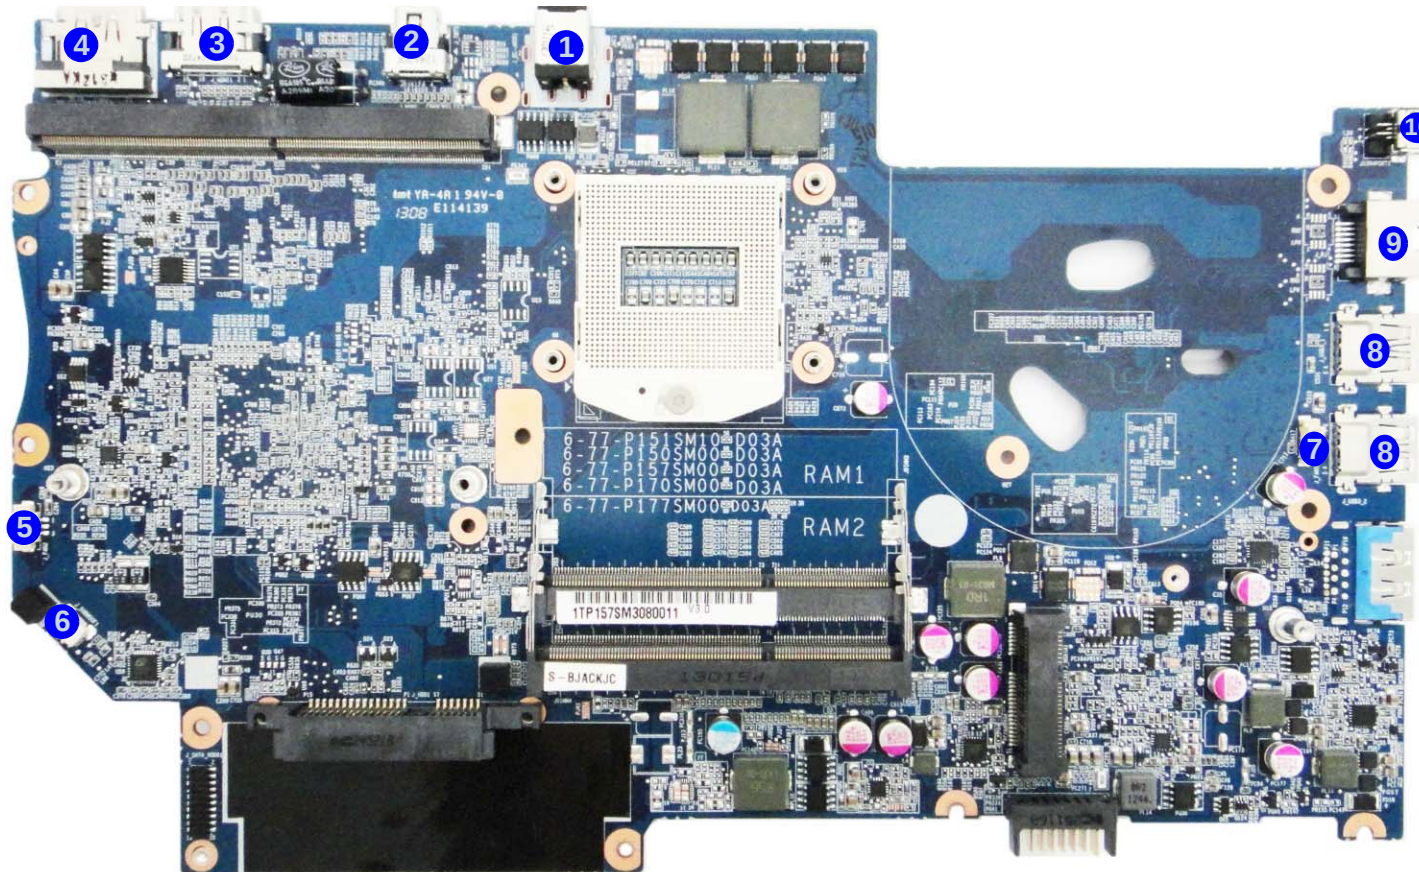

1. DC-In Jack
2. Mini Display Port
3. HDMI-Out Port
4. Display Port
5. VGA Fan Cable Connector
6. Sub Woofer Cable Connector
7. CPU Fan Cable Connector
8. USB 3.0 Ports
9. RJ-45 LAN Jack
10. Mini-IEEE 1394a Port

Chapter 2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling the **P170SM** series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).


We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

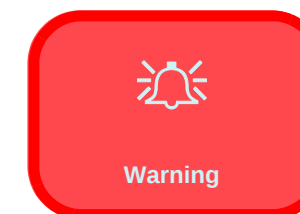

Disassembly

NOTE: All disassembly procedures assume that the system is tuned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). You must also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery [page 2 - 5](#)

To remove the HDD from the Primary Bay:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)

To remove the SSD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Remove the SSD [page 2 - 9](#)

To remove the Optical Device:

1. Remove the battery [page 2 - 5](#)
2. Remove the Optical device [page 2 - 10](#)

To remove the HDD from the Secondary Bay:

1. Remove the battery [page 2 - 5](#)
2. Remove the Optical device [page 2 - 10](#)
3. Remove the HDD [page 2 - 12](#)

To remove the Primary System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 14](#)

To remove the Secondary System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 16](#)
3. Remove the system memory [page 2 - 16](#)

To remove the WLAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 16](#)
3. Remove the wireless LAN [page 2 - 18](#)

To remove the MSATA Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the MSATA [page 2 - 19](#)

To remove and install a Processor:

1. Remove the battery [page 2 - 5](#)
2. Remove the processor [page 2 - 20](#)
3. Install the processor [page 2 - 22](#)

To remove and install a Video Card:

1. Remove the battery [page 2 - 5](#)
2. Remove the video card [page 2 - 23](#)
3. Install the video card [page 2 - 25](#)

To remove the CCD:

1. Remove the battery [page 2 - 5](#)
2. Remove the CCD [page 2 - 26](#)

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow, and hold it in place (*Figure 1a*).
4. The battery may be levered up at point **3** (*Figure 1b*).
5. Lift the battery **4** out of the compartment (*Figure 1c*).


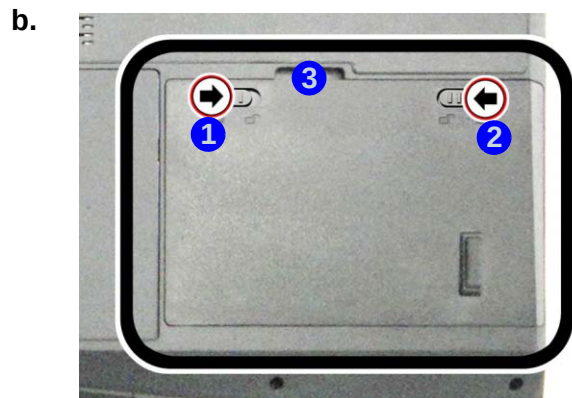


Figure 1
Battery Removal

- a. Slide the latch and hold in place.
- b. Slide the battery out in the direction of the arrow.
- c. Lift the battery out.

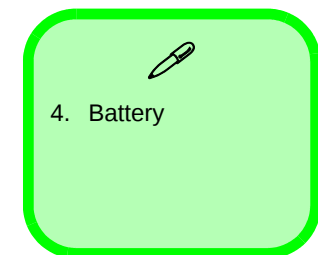

Disassembly

Figure 2
**HDD Assembly
Removal**


- Locate the HDD bay cover and remove the screws.
- Remove the hard disk bay cover by levering the cover at point ③.

Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Upgrade Process

- Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
- Locate the hard disk bay cover and remove screws ① - ② ([Figure 2a](#)).
- Remove the hard disk bay cover ④ by levering the cover at point ③ ([Figure 2b](#)).

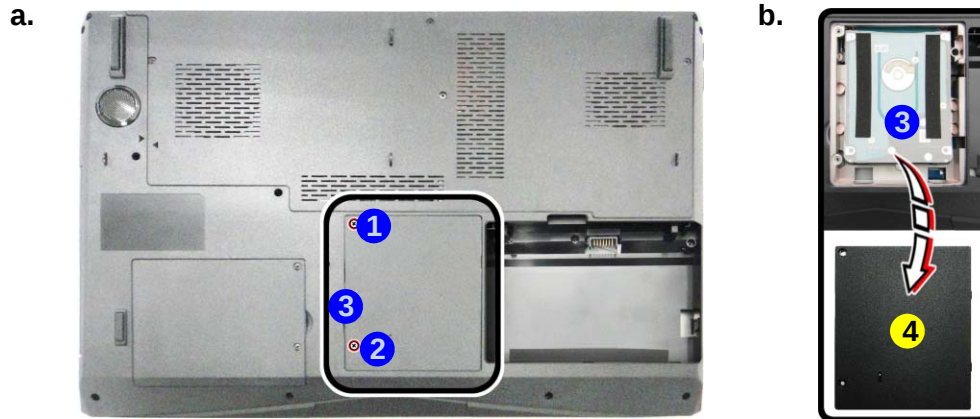

4.Hard Disk Bay Cover

- 2 screws



HDD System Warning


New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

4. Slide the HDD assembly in the direction of the arrow **4** (Figure 3c).
5. Remove the hard disk assembly **5** (Figure 3d).
6. Remove screws **6** & **7** and the insulation plate **8** (Figure 3e).
7. Reverse the process to install a new hard disk (do not forget to replace all the screws and covers).

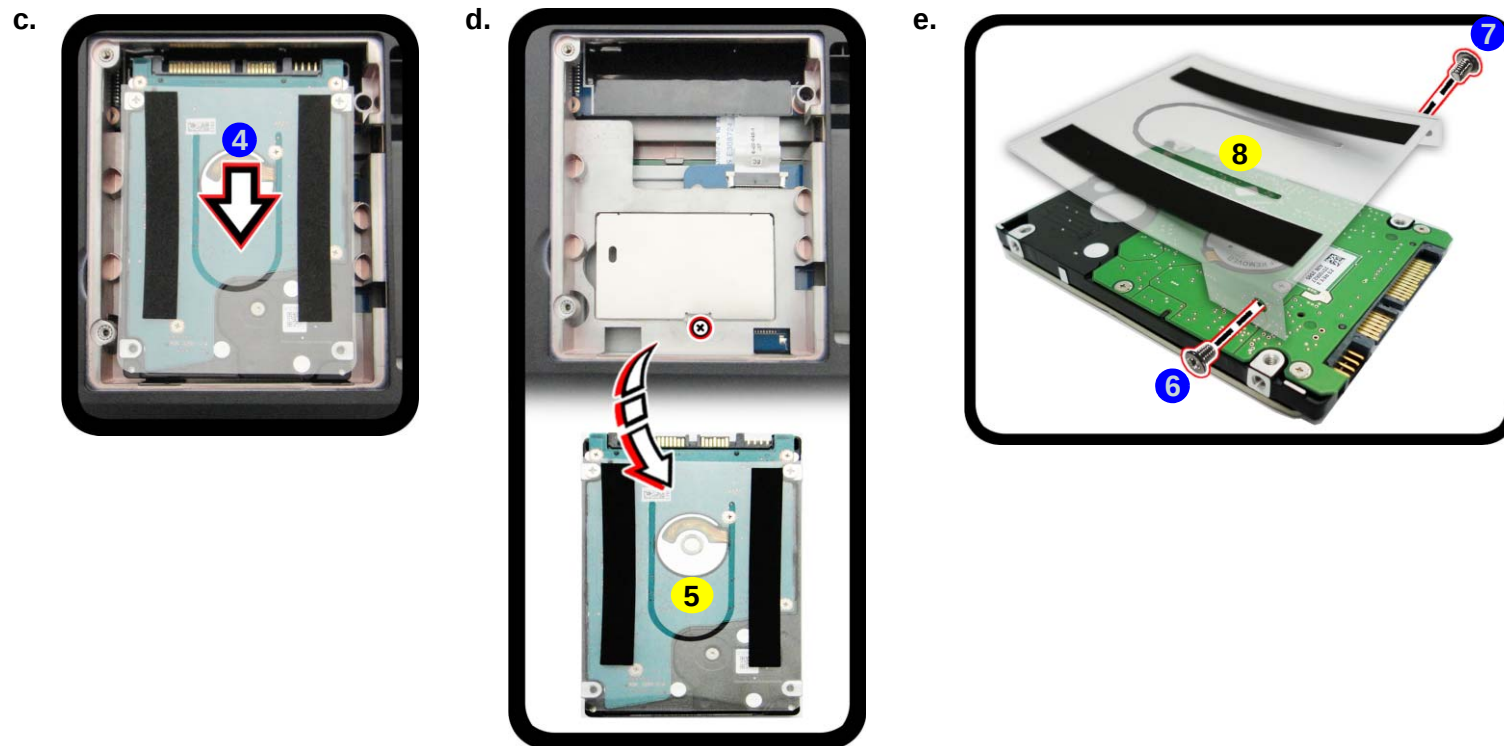

- c. Slide the HDD assembly in the direction of the arrow.
- d. Remove the hard disk assembly.
- e. Remove the screws and the insulation plate.



- 5. HDD
- 8. HDD Insulation Plate


- 2 screws

Disassembly

Hard Disk Size Note (Foam Rubber Insert)

Note that the hard disks pictured on the following pages are all 9.5mm(H) hard disk drives. In some cases 7mm(H) hard disk drives will be installed. For more information contact your distributor/supplier, and bear in mind your warranty terms.

Figure 4
**Foam Rubber
Insert for 7mm(H)
HDDs**

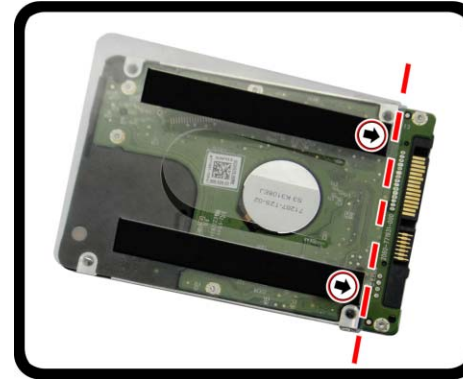

- If you are replacing a 9.5mm(H) HDD with a 7mm(H) HDD then insert the foam rubber insert (as shown above).
- If you are replacing a 7mm(H) HDD with a 9.5mm(H) HDD then remove the foam rubber insert.

Removing the SSD

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)) and hard disk ([page 2 - 9](#)).
2. Remove the screws **1** from the shielding plate ([Figure 5a](#)).
3. Remove the SSD shielding plate **2** and remove the screw **3** from the SSD ([Figure 5b](#)).
4. The SSD module **4** will pop-up and you can remove it from the computer ([Figure 5c](#)).
5. Reverse the process to install a new SSD.

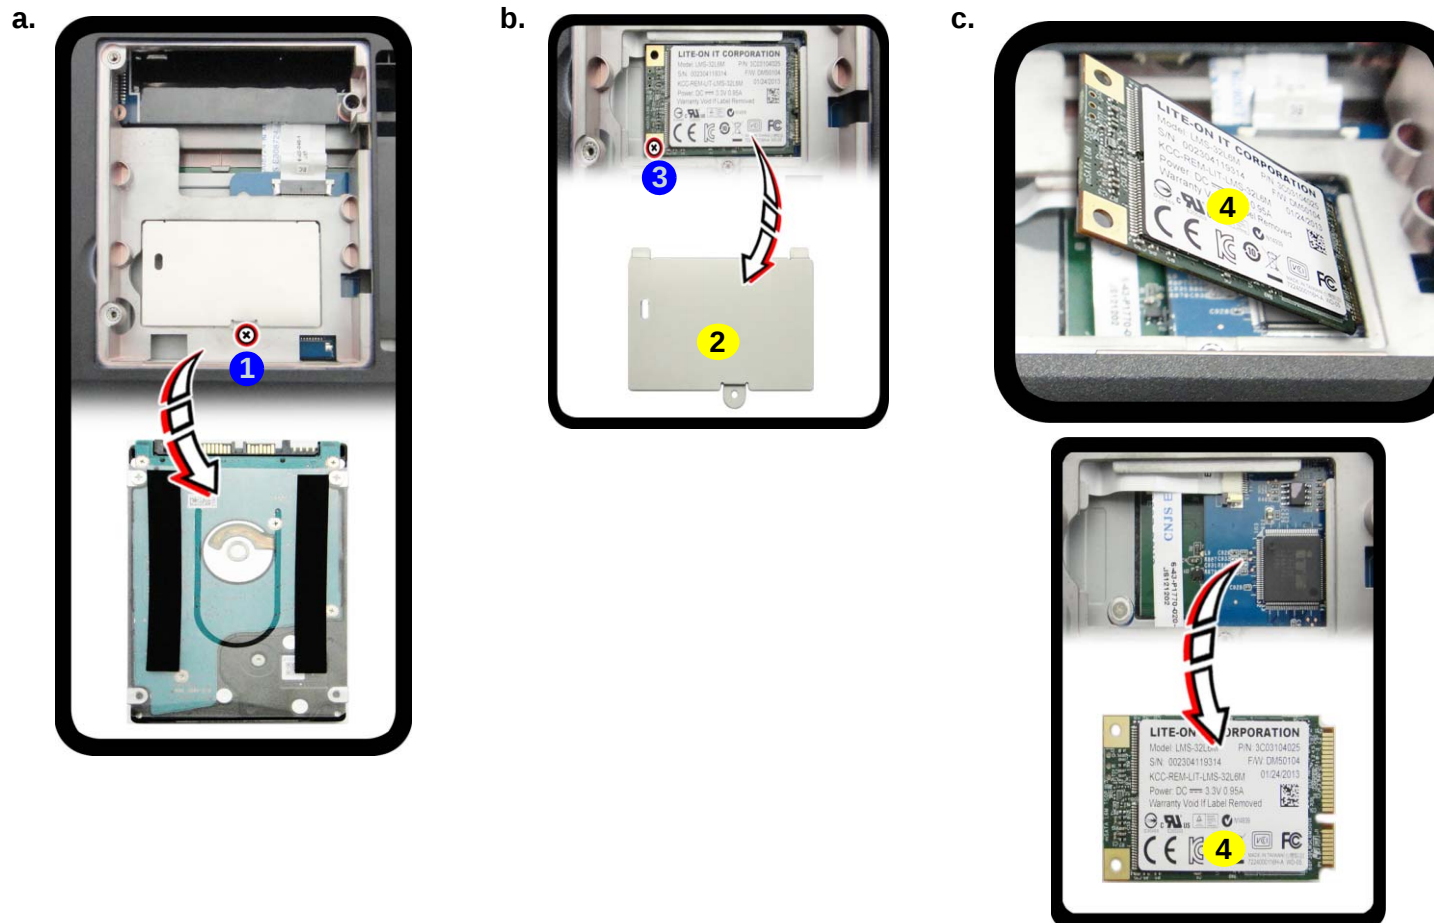


Figure 5
SSD Removal

- a. Remove the screws.
- b. Remove the shielding plate and screw.
- c. Remove the SSD module.



2. SSD Shielding Plate
4. SSD Module

- 2 screws

Disassembly


Figure 6
**Optical Device
Removal**

- Locate the secondary hard disk bay cover and remove the screws.
- Remove the cover and screw.
- Push the optical device out off the computer at point 6.


Removing the Optical (CD/DVD) Device

- Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
- Locate the **secondary** hard disk bay cover and remove screws **1** & **2** ([Figure 6a](#)).
- Remove the hard disk bay cover **3** and screw at point **4** ([Figure 6b](#)).
- Use a screwdriver to carefully push out the optical device **5** out of the bay at point **6** ([Figure 6d](#)).
- Reverse the process to install any new optical (CD/DVD) device.


a.

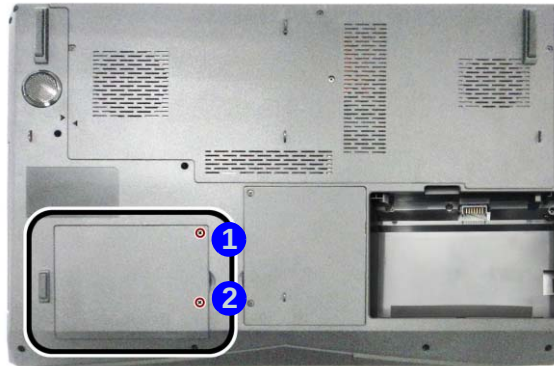

c.

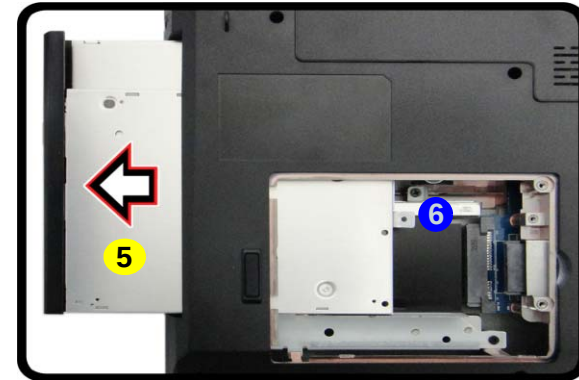

b.

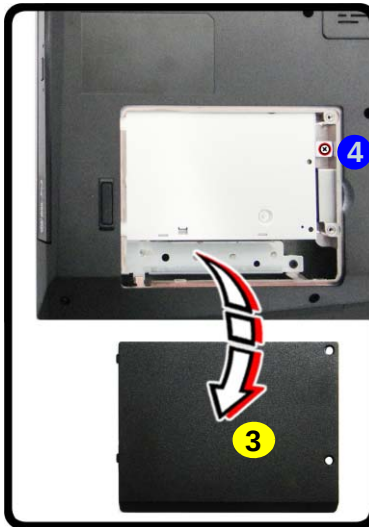

- 3. Secondary HDD Bay Cover
- 5. Optical Device
- 3 Screws

6. Carefully pry the bezel **8** off the optical device at point **7** (*Figure 7d*).
7. Separate the bezel **8** and the optical device.
8. Reverse the process to attach the front bezel **8** with the new optical device at point **9** (*Figure 7f*).
9. Insert the new device and carefully slide it into the computer (the device only fits one way. DO NOT FORCE IT; The screw holes should line up).
10. Replace the component bay cover and tighten the screws.
11. Restart the computer to allow it to automatically detect the new device.

Figure 7
Optical Device Removal (cont'd.)

- d. Pry the bezel off the optical device.
- e. Separate the bezel and optical device
- f. Install the front bezel.




8. Bezel Cover

- 1 screw

Disassembly

Figure 8
**Secondary HDD
 Assembly Removal**

- Remove the screws from the secondary HDD assembly.
- Slide the secondary HDD assembly in the direction of the arrow.
- Lift the secondary HDD assembly up and out of the bay.


5. Hard Disk Assembly
- 3 Screws

Removing the Hard Disk from the Secondary HDD Bay


Note that the **secondary** hard disk (if installed) is located under the optical device bay (CD/DVD).

- Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)) and optical device ([page 2 - 10](#)).
- Remove screws ① - ③ from the secondary HDD assembly ([Figure 8a](#)).
- Slide the secondary HDD assembly in the direction of the arrow ④ (it will not move fully out of the bay [Figure 8a](#)).
- Lift the secondary HDD assembly ⑤ up and out of the bay (in the reverse direction of the arrow ④ [Figure 8c](#)).


a.

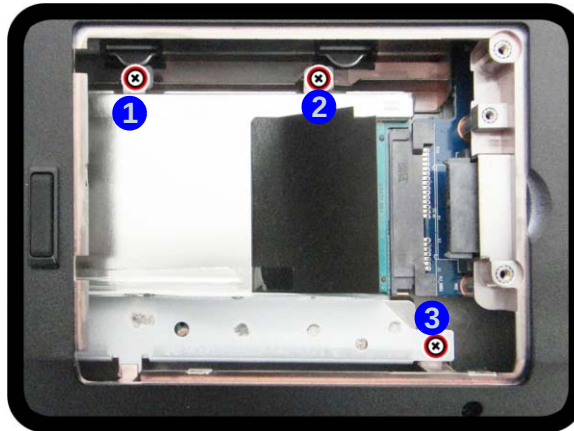

b.

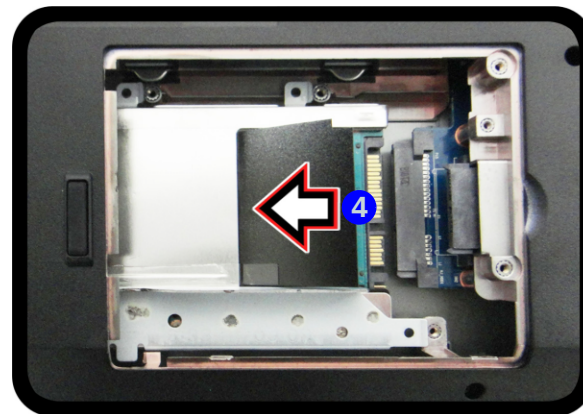

c.

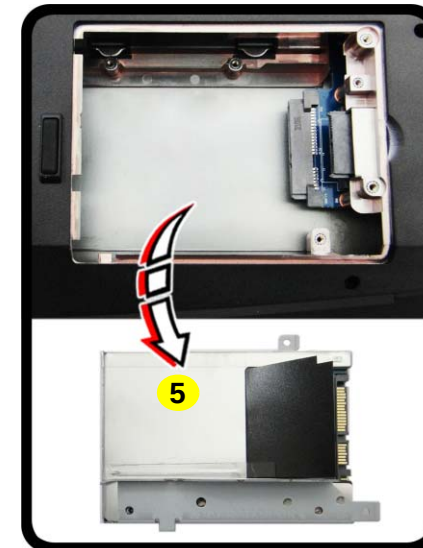

5. Remove screws ⑥ - ⑨ and the insulation plate ⑩ from the hard disk ⑪ (*Figure 9d*).


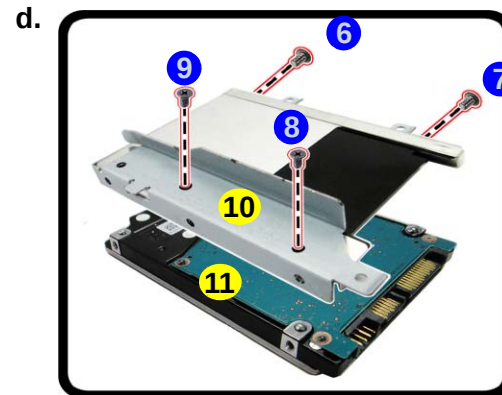


Figure 9
**Secondary HDD
Assembly Removal**

- d. Remove the screws and the insulation plate.

6. Reverse the process to install a new disk (make sure you install the insulation plate).
7. Slide the HDD assembly into the bay at an angle as illustrated.
8. Make sure the insulation plate slides under the HDD bay guide at point ⑫.
9. Slide the assembly in the direction of the arrow ⑬ and secure the assembly with the screws.

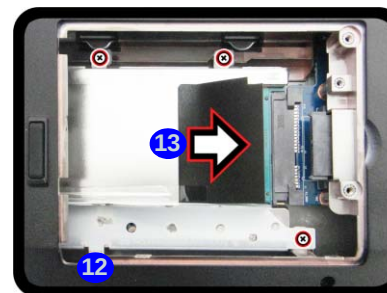

10. HDD Insulation Plate
11. HDD

- 4 screws

Disassembly

Figure 10
RAM Module
Removal

- Remove the screws.
- Remove the screws at the rear of the computer
- Slide the bottom cover until the cover and case indicators are aligned.

Removing the Primary System Memory (RAM)

The computer has **four** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR III (DDR3)** type memory modules (see *“Memory” on page 1 - 2*). The total memory size is automatically detected by the POST routine once you turn on your computer.


Note that **four** SO-DIMMs are **only** supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum (see *“Memory” on page 1 - 2* for full details).

Two primary memory sockets are located under component bay cover (the bottom case cover), and two secondary memory sockets are located under the keyboard (not user upgradable). If you are installing only two RAM modules then they should be installed in the primary memory sockets under the component bay cover.

Note that the RAM located under the keyboard is not user upgradable. Contact your service center for more information if you wish to upgrade the memory in the secondary memory sockets.

Memory Upgrade Process

- Turn **off** the computer, and turn it over, remove the battery (*page 2 - 5*).
- Remove screws **1** - **4** at the bottom of the computer (*Figure 10a*).
- Remove screws **5** - **6** at the rear of the computer (*Figure 10b*).
- Slide the bottom cover in the direction of the arrow **7** until the cover & case indicators **8** are aligned (*Figure 10c*).


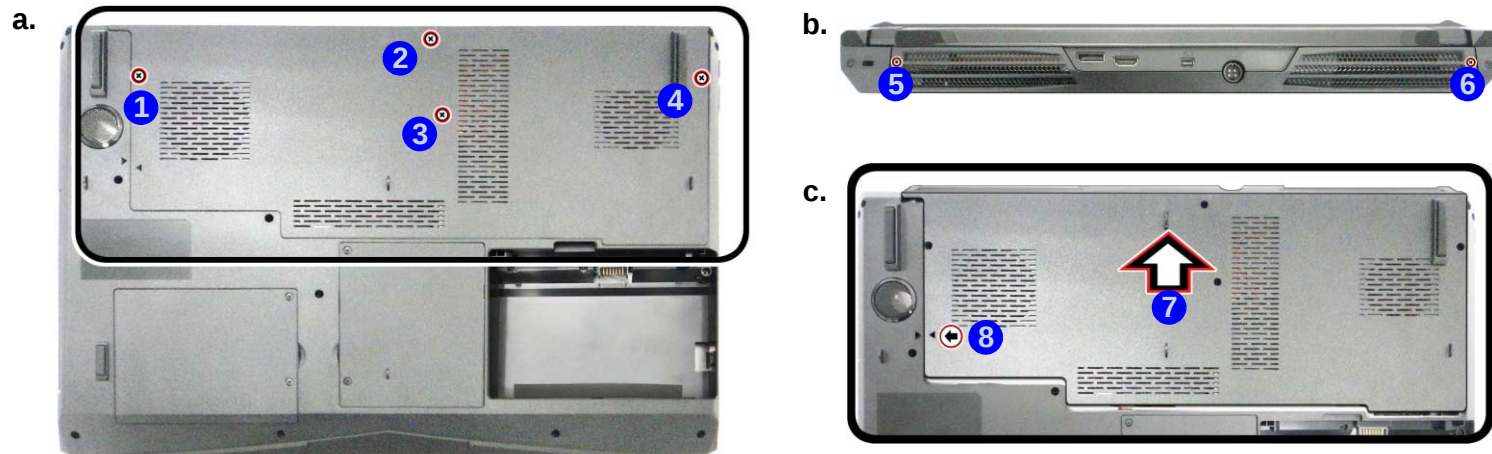


- 6 screws

Figure 11
RAM Module
Removal (cont'd.)

- d. Lift the component bay cover off the computer case. The modules will be visible at point 10.
- e. Gently pull the two release latches on the sides of the memory socket(s) in the direction indicated below.
- f. The RAM module will pop-up, and you can remove it.

- 5. Lift the component bay cover 9 off the computer case. The modules will be visible at point 10 (Figure 11d).
- 6. Gently pull the two release latches (11 & 12) on the sides of the memory socket(s) in the direction indicated below (Figure 11e).
- 7. The RAM module 13 will pop-up, and you can remove it (Figure 11f).
- 8. Pull the latches to release the second module if necessary.
- 9. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
- 10. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE the module; it should fit without much pressure.
- 11. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
- 12. Replace the bay cover and screws.
- 13. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

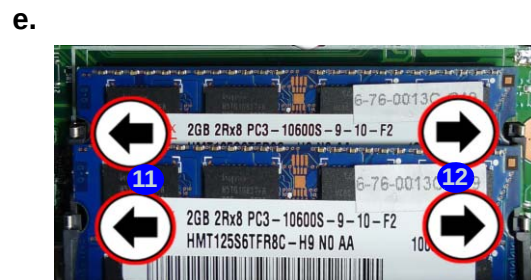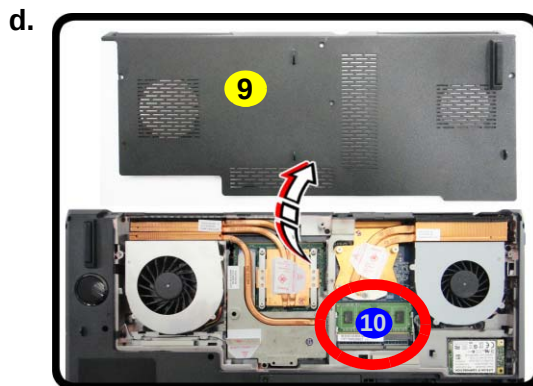

Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



9. Component Bay Cover
13. RAM Module

Disassembly


Figure 12
**RAM Module
Removal**

- a. Remove the top cover module.
 - b. Remove the screws.
 - c. Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable.
1. Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 14](#)).
 2. Remove the top cover module **A** ([Figure 12a](#)).
 3. Remove screws **1 - 5** ([Figure 12a](#)).
 4. Carefully lift the keyboard **B** up, being careful not to bend the keyboard ribbon cable **6** ([Figure 12c](#)).


a.



b.

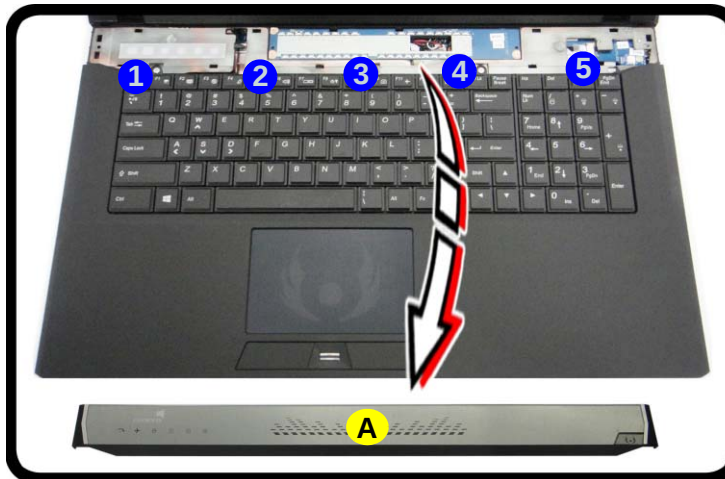

c.

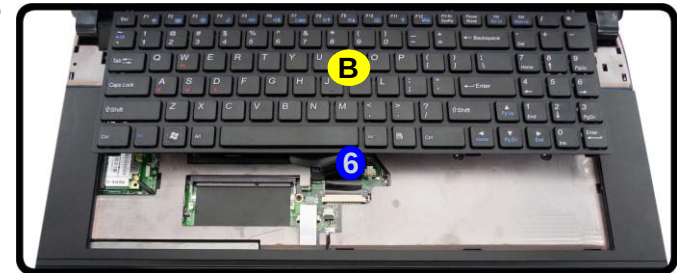


A. Top Cover Module
B. Keyboard


- 5 screws

5. Disconnect the keyboard ribbon cable **6** and LED ribbon cable **7** from the locking collar socket **8** & **9** by using a small flat-head screwdriver to pry the locking collar pins away from the base. (**Figure 13e**).
6. Remove the keyboard and the memory sockets **10** & **11** will be visible (**Figure 13f**).
7. Gently pull the two release latches (**12** & **13**) on the sides of the memory socket(s) in the direction indicated below (**Figure 13g**).
8. The RAM module **14** will pop-up, and you can remove it.
9. Pull the latches to release the second module if necessary.
10. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
11. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE the module; it should fit without much pressure.
12. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
13. Replace the bay cover and screws.
14. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.


e.

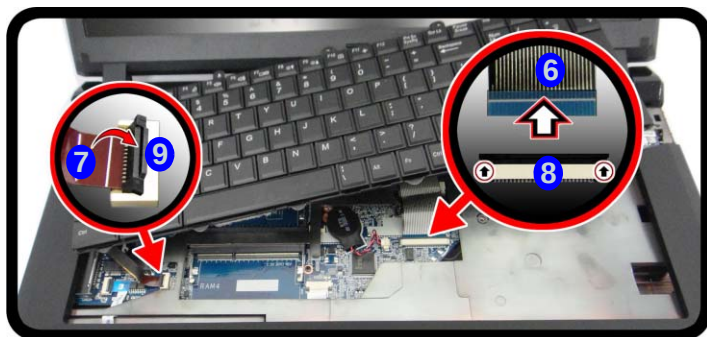

g.

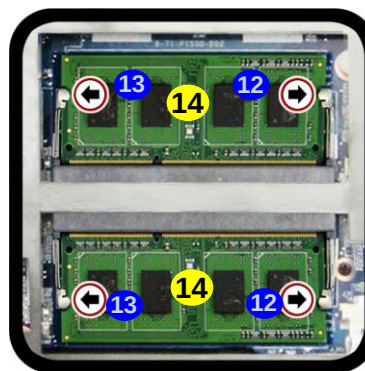

f.

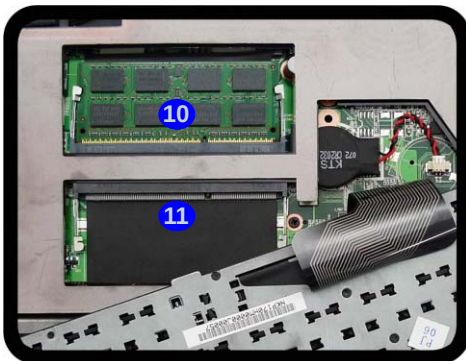

Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.



14. RAM Modules

Figure 13
RAM Module
Removal (cont'd.)

- e. Disconnect the keyboard ribbon cable and LED ribbon cable from the locking collar socket by using a small flat-head screwdriver to pry the locking collar pins away from the base.
- f. Remove the keyboard and the memory sockets will be visible.
- g. Gently pull the two release latches on the sides of the memory socket(s) in the direction indicated below.

Disassembly

Figure 14
Wireless LAN
Module Removal

- The Wireless LAN module will be visible at point ① under the keyboard.
- Disconnect the cables ② - ③, then remove screw ④ from the module socket (Figure 14b).
- The WLAN module will pop up.
- Lift the WLAN module out.

Removing the Wireless LAN Module

- Turn **off** the computer, remove the battery (page 2 - 5) and the keyboard (page 2 - 16).
- The Wireless LAN module will be visible at point ① under the keyboard (Figure 14a).
- Carefully disconnect cables ② - ③, then remove screw ④ from the module socket (Figure 14b).
- The Wireless LAN module ⑤ will pop-up (Figure 14c).
- Lift the Wireless LAN module (Figure 14d) up and off the computer.


a.




c.



b.

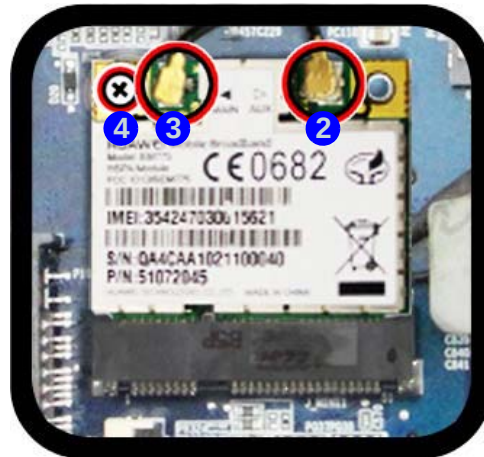

d.

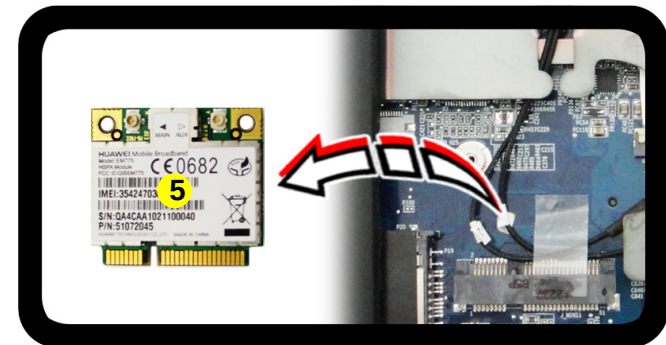


5. WLAN Module

- 1 screw

Removing the MSATA Module

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 14](#)).
2. Locate the module, it is visible at point **1** ([Figure 15a](#)).
3. Carefully remove the screw **2** from the module ([Figure 15b](#)).
4. Lift the module **3** up and off the computer ([Figure 15b](#)).

a.

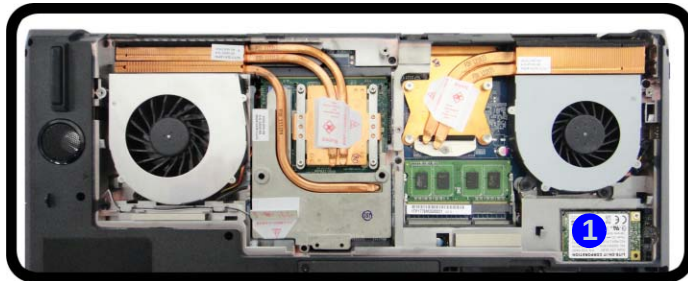

c.



b.



d.

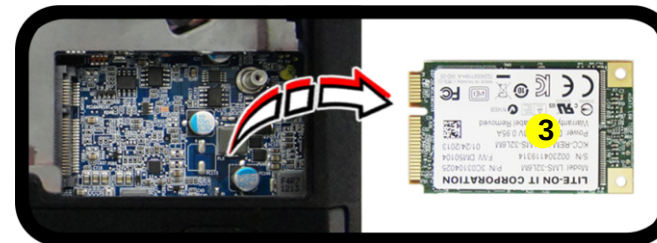


Figure 15
MSATA Module Removal

- a. Locate the module.
- b. Remove the screw.
- c. The module will pop-up.
- d. Lift the module up off the socket.



3. MSATA Module

- 1 screw

Disassembly

Figure 16
Processor Removal Procedure

- a. Remove the screws in the correct order.
- b. Carefully remove the heat sink unit.

CPU Warning

In order to prevent damaging the contact pins when removing the CPU, it is necessary to first remove the WLAN module from the computer.



5. Heat Sink Unit


- 4 screws

Removing and Installing the Processor

Processor Removal Procedure


1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 14](#)).
2. Remove screws **1** - **4** from the heat sink unit in the order indicated on the label (i.e screw 4 first through to screw 1 last [Figure 16a](#)).
3. Carefully (it may be hot) remove the heat sink unit **5** ([Figure 16b](#)).

a.

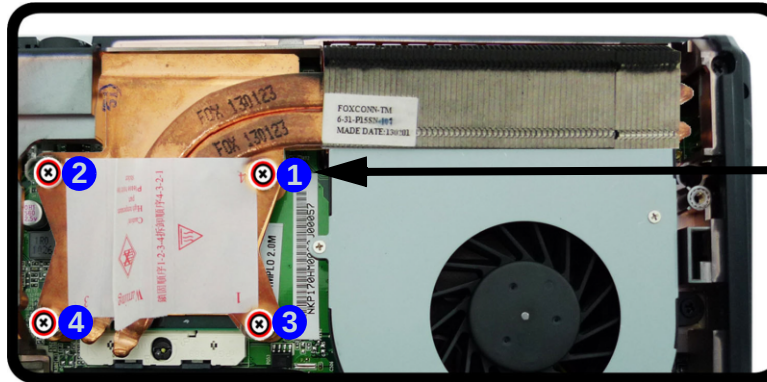


Note: Loosen the screws in the reverse order 4-3-2-1 as indicated on the label.

b.

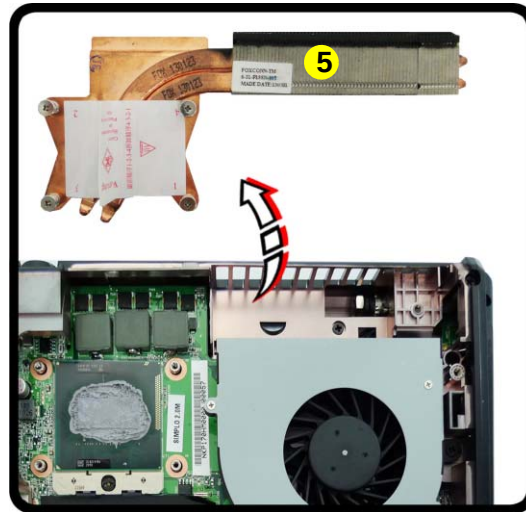

4. Turn the release latch **6** towards the unlock symbol , to release the CPU (**Figure 17c**).
5. Carefully (it may be hot) lift the CPU **A** up out of the socket (**Figure 17d**).
6. See **page 2 - 22** for information on inserting a new CPU.
7. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).

c.

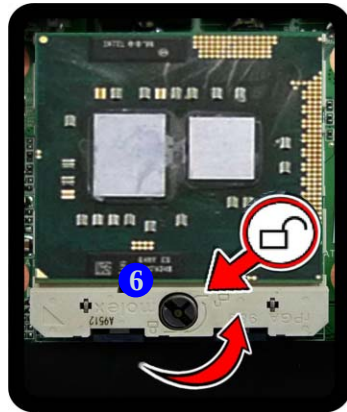


Unlock



Lock

d.

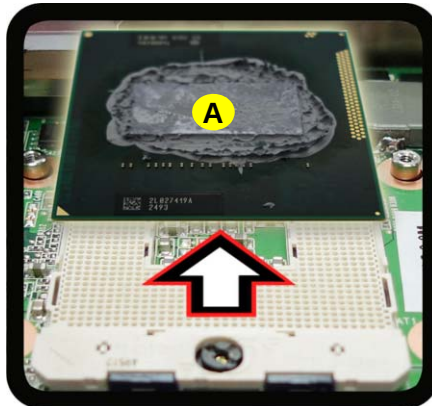

Caution

The heat sink, and CPU area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



A. CPU

Figure 17
Processor Removal (cont'd)

- c. Turn the release latch to unlock the CPU.
- d. Lift the CPU out of the socket.

Disassembly


Figure 18
Processor Installation

- Insert the CPU.
- Turn the release latch towards the lock symbol.
- Remove the sticker from the heat sink unit and insert the heat sink.
- Tighten the screws.


Processor Installation Procedure

- Insert the CPU **A**, pay careful attention to the pin alignment (**Figure 18a**), it will fit only one way (DO NOT FORCE IT!), and turn the release latch **B** towards the lock symbol  (**Figure 18b**).
- Remove the sticker C** (**Figure 18c**) from the heat sink unit (if it is a new unit).
- Insert the heat sink unit **D** as indicated in **Figure 18c**.
- Tighten the CPU heat sink screws in the order **1**, **2**, **3** & **4** (the order as indicated on the label and **Figure 18d**).
- Replace the CPU fan, component bay cover and tighten the screws (**page 2 - 20**).


a.

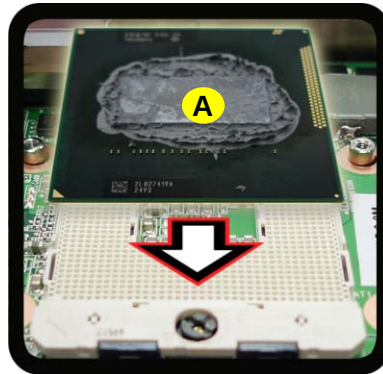


c.

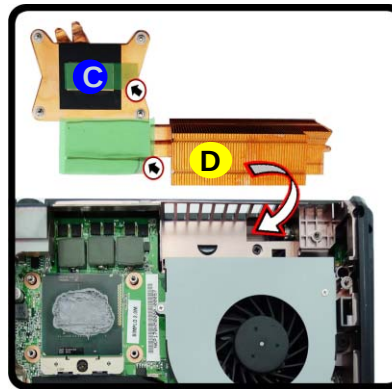

b.

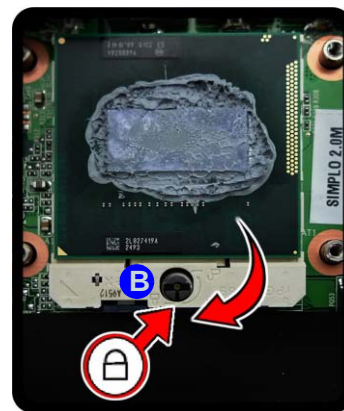

d.

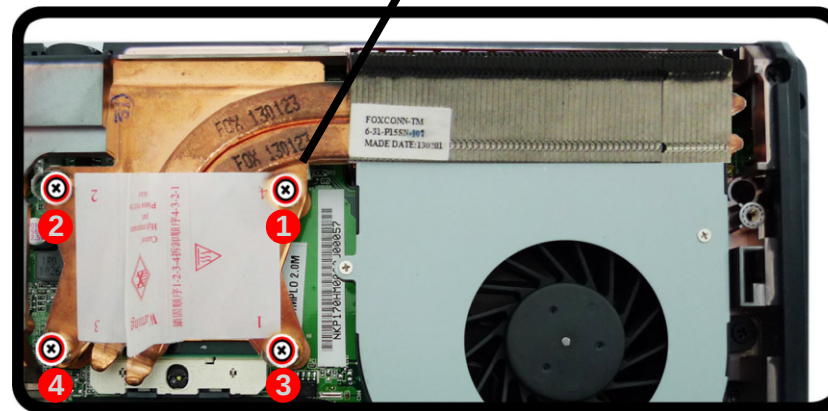

Note:




Tighten the screws in the order 1-2-3-4 as indicated on the label.

- 
- A. CPU
D. Heat Sink
- 4 screws

Removing and Installing the Video Card

Video Card Removal Procedure

1. Turn **off** the computer, turn it over and remove the battery ([page 2 - 5](#)) and component cover ([page 2 - 14](#)).
2. Remove screws **1** - **7** from the heat sink unit in the order indicated on the label (i.e screw **7** first through to screw **1** last) ([Figure 19a](#)).
3. Carefully (**they may be hot**) remove the heat sink unit **8** ([Figure 19b](#)).
4. Remove screws **9** & **10** from the video card and the video card **11** will pop up ([Figure 19c](#)).
5. Remove the video card **11** ([Figure 19d](#)).

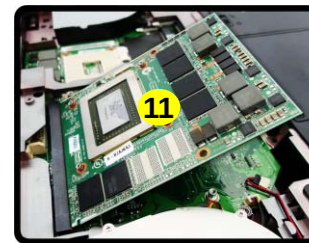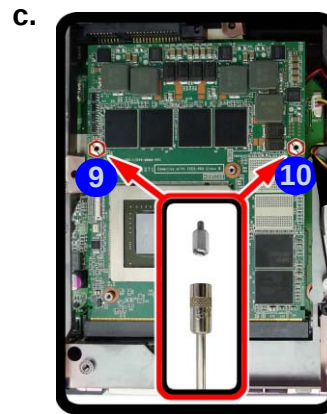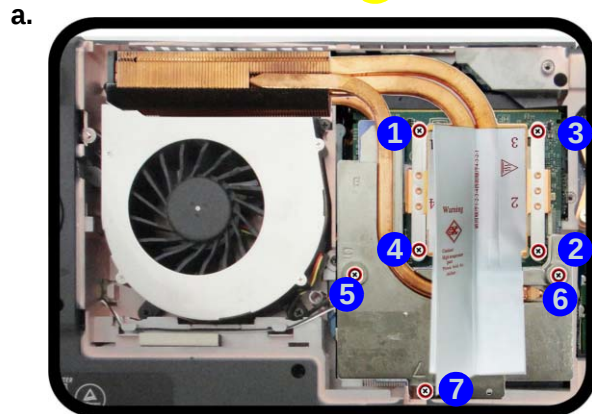

Note:

Please use a flat head screwdriver to remove screws **9** & **10**.



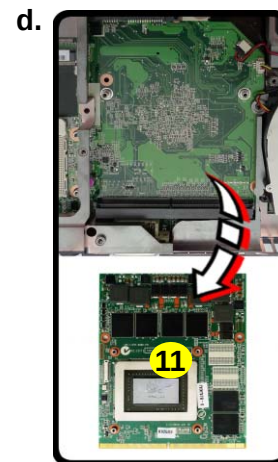


Figure 19
Video Card
Removal Procedure

- a. Remove the screws in the correct order.
- b. Carefully remove the heat sink units.
- c. Remove the video card screws. The video card will pop up.
- d. Remove the video card.

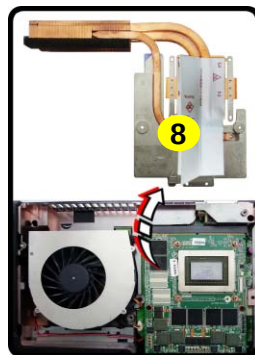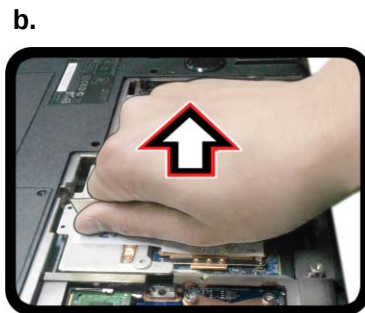

Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



Heat Sink Screw Removal and Insertion

Remove the screws from the heat sink in the order indicated here: **7-6-5-4-3-2-1**.

When tightening the screws, make sure that they are tightened in the order: **1-2-3-4-5-6-7**.



8. Heat Sink Unit
11. Video Card

- 9 screws

Disassembly


Figure 20
**Video Card
Removal Procedure
(cont'd.)**

- e. Remove the screws.
f. Separate shielding plate and video card.


For video card (N14E-GTX) additional removal procedure

6. Remove screws **12** - **15** from the video card assembly (*Figure 20e*).
7. Separate the shielding plate **16** from the video card **11** (*Figure 19d*).

e.

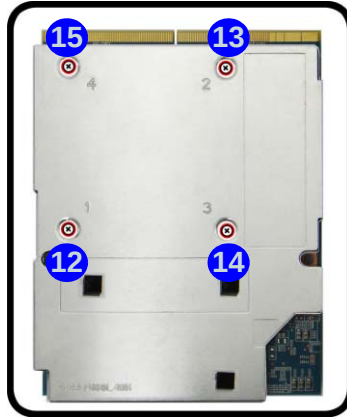

f.

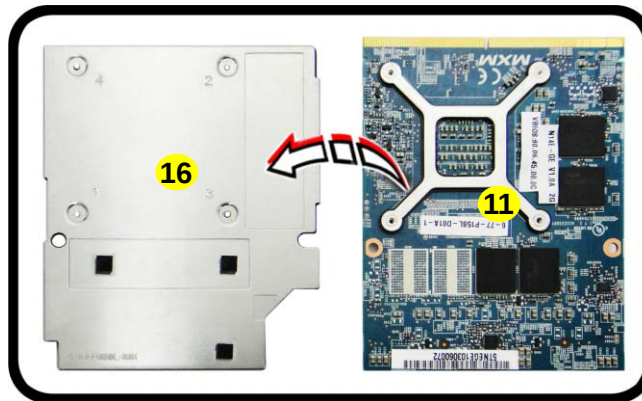

11. Video Card
16. Shielding Plate


- 4 screws

Installing a New Video Card

1. Prepare to fit the video card **11** into the slot by holding it at about a 30° angle (**Figure 21e**).
2. The card needs to be fully into the slot, and the video card and socket have a guide-key and pin which align to allow the card to fit securely (**Figure 21f**).
3. Fit the connectors firmly into the socket, straight and evenly.

Figure 21
Installing a New Video Card

- e. Insert the video card at a 30 degree angle.
- f. Fit the connectors straight and even.

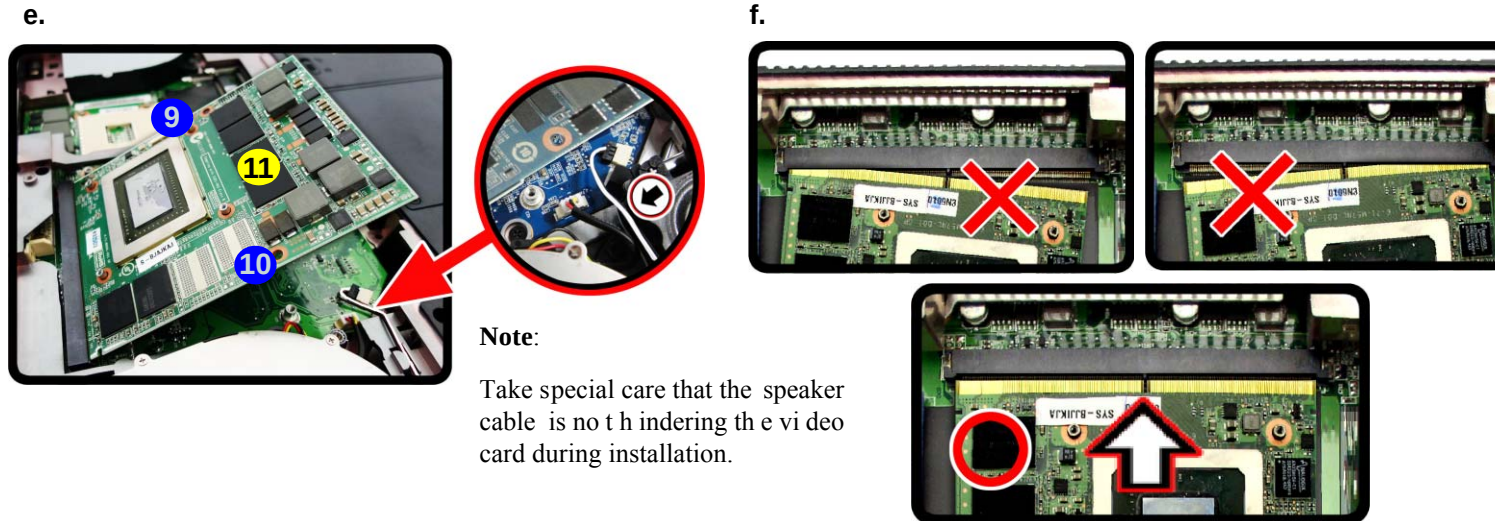

4. DO NOT attempt to push one end of the card in ahead of the other.
5. The card's pin alignment will allow it to only fit one way. **Make sure the module is seated as far into the socket as it will go** (none of the gold colored contact should be showing). DO NOT FORCE the card; it should fit without much pressure.
6. Secure the card with screws **9** & **10** (**Figure 21 on page 2 - 25**).
7. Place the heat sink back on the card, and secure the screws in the order indicated in **Figure 21 on page 2 - 25**.
8. Attach the video card fan and secure with the screws as indicated in **Figure 19 on page 2 - 23**.
9. Reinsert the component bay cover, and secure with the screws as indicated in **Figure 12 on page 2 - 16**.



Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



11. Video Card

- 2 screws



Disassembly

Figure 22
CCD Module Removal

- Remove the rubbers and screws.
- Run your fingers around the inner frame of the LCD panel at the points indicated by the arrow.
- Remove the LCD panel.
- Disconnect the cable.
- Remove the CCD module.

Removing the CCD

- Turn **off** the computer, remove the battery ([page 2 - 5](#)).
- Remove the rubbers and screws **1** - **6** ([Figure 22a](#)).
- Run your fingers around the inner frame of the LCD panel at the points indicated by the arrows **A** - **D** ([Figure 22b](#)).
- Carefully Remove the LCD panel **7** off ([Figure 22c](#)).
- Disconnect the cable **8** ([Figure 22d](#)).
- Remove the CCD module **9** off ([Figure 22e](#)).

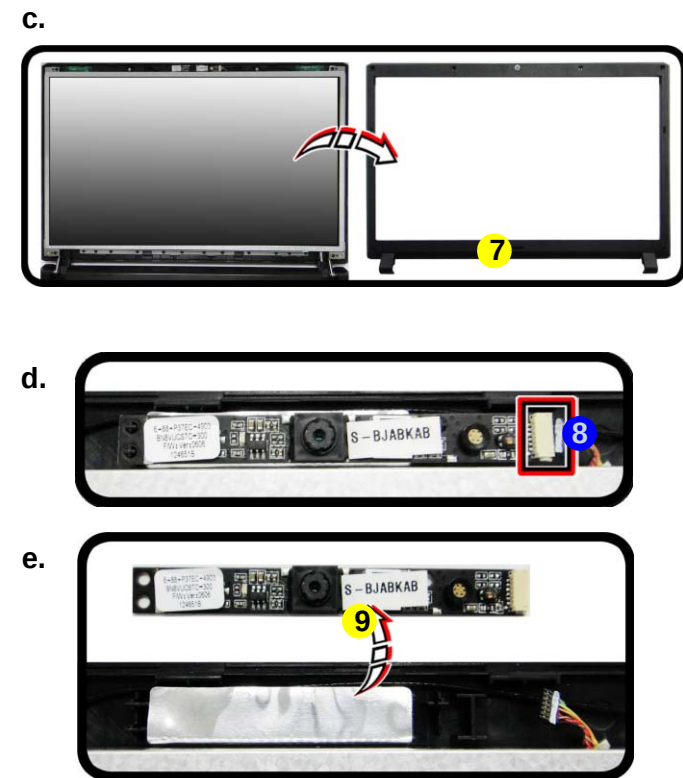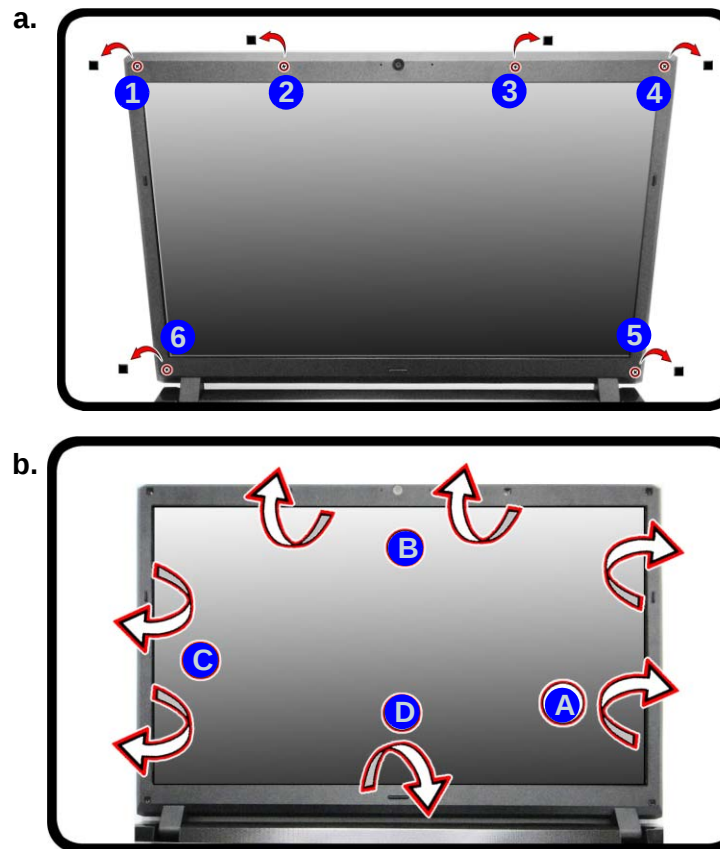

7. LCD Front Panel
9. CCD Module
- 6 Rubber and Screws

Removing the Top Cover

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), component bay cover ([page 2 - 14](#)), and keyboard ([page 2 - 16](#)).
2. Disconnect the cable connectors **1** - **3** and carefully lift the corresponding wires at the point **4** from the holder as indicated by the arrows **A** - **C** ([Figure 23a](#)).
3. Turn the computer over, remove the fan cables **5** & **6** and screws **7** - **13** ([Figure 22b](#)).
4. Remove the fan unit **14** off the computer ([Figure 22c](#)).

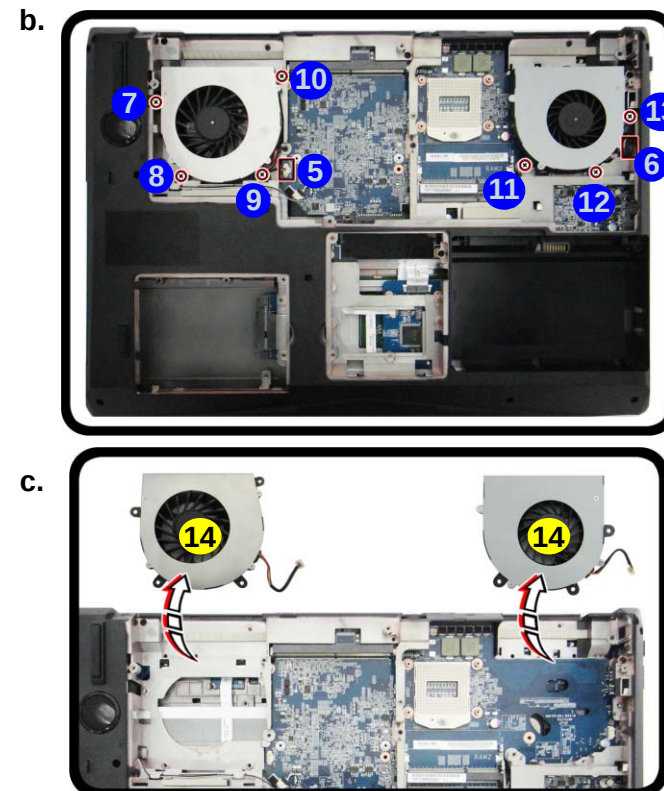
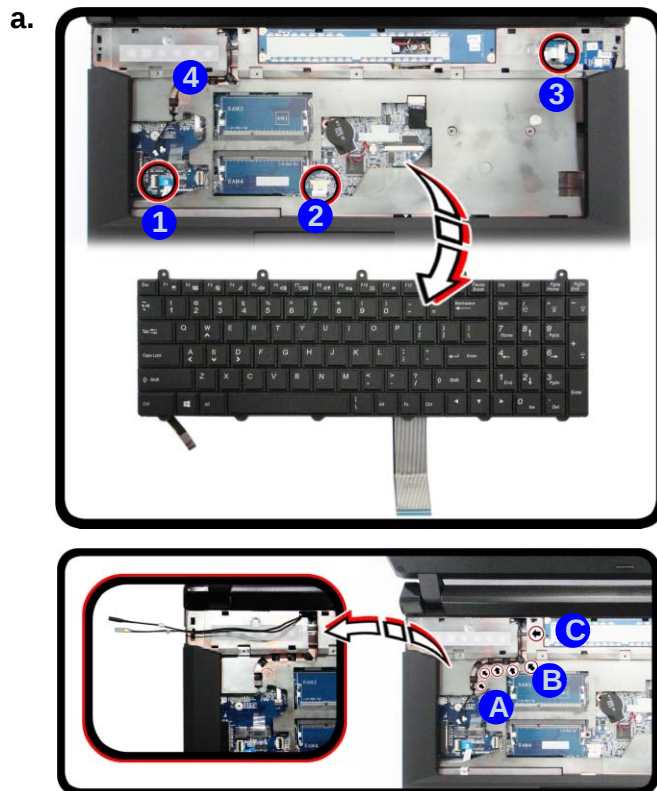


Figure 23
Top Cover Removal

- a. Disconnect the cable connectors and lift the wires from its holder.
- b. Disconnect the cables and remove the screws.
- c. Remove the fan unit.




14. Fan Unit
• 7 screws

Disassembly

Figure 24
**Top Cover Removal
(cont'd)**

- d. Remove the screws.
e. Lift the LCD panel.
f. Separate the top cover from the bottom case of the computer.

5. Remove screws 15 - 35 (Figure 24d).
6. Lift the top cover at point 36 (Figure 24e).
7. Carefully separate the top cover 37 from the bottom case 39 in the direction of the arrow at point 38. The hinge cover 40 will automatically be released from its holder (Figure 24f).
8. Reverse the process to install the top cover (do not forget to replace all the screws, hinge cover and bottom case).

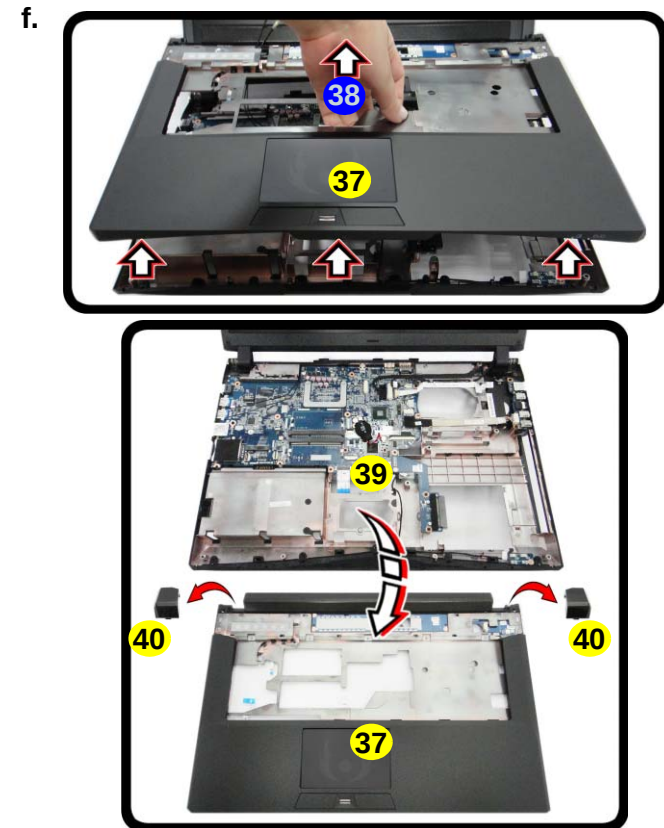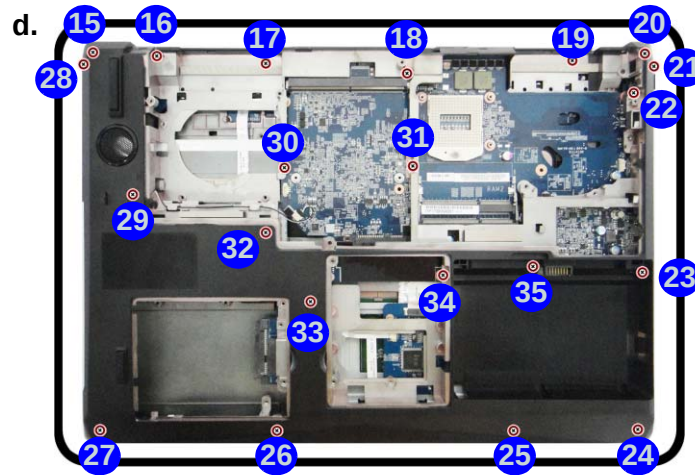

37. Top Cover
39. Bottom Case
40. Hinge Cover

- 21 screws

Appendix A: Part Lists

This appendix breaks down the **P170SM** series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A- 1
Part List Illustration
Location

Parts	
Top with Fingerprint	<i>page A - 3</i>
Top without Fingerprint	<i>page A - 4</i>
Bottom (N14E-GS)	<i>page A - 5</i>
Bottom (N14E-GTX)	<i>page A - 6</i>
LCD	<i>page A - 7</i>
COMBO	<i>page A - 8</i>
DVD-Dual Drive	<i>page A - 9</i>

Top with Fingerprint

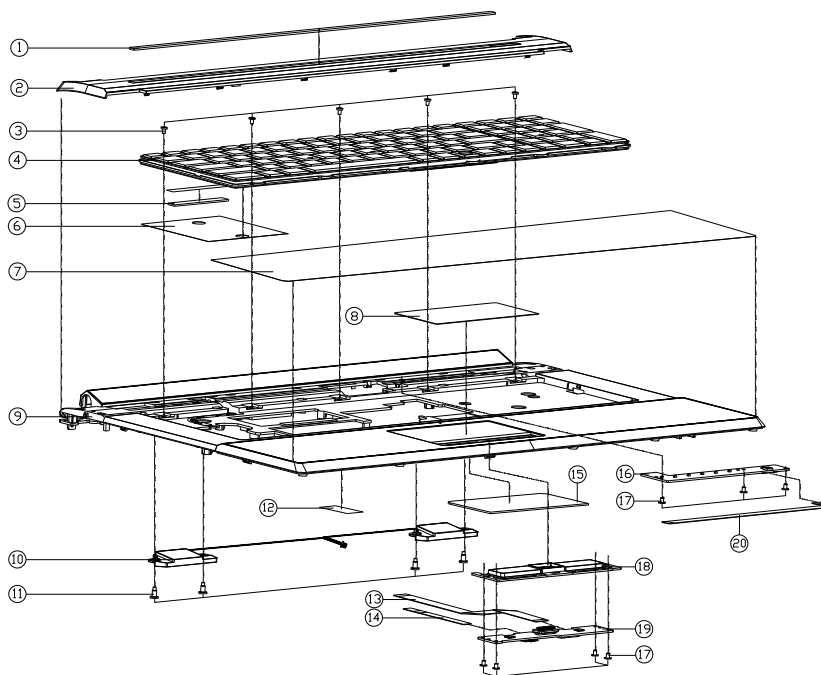
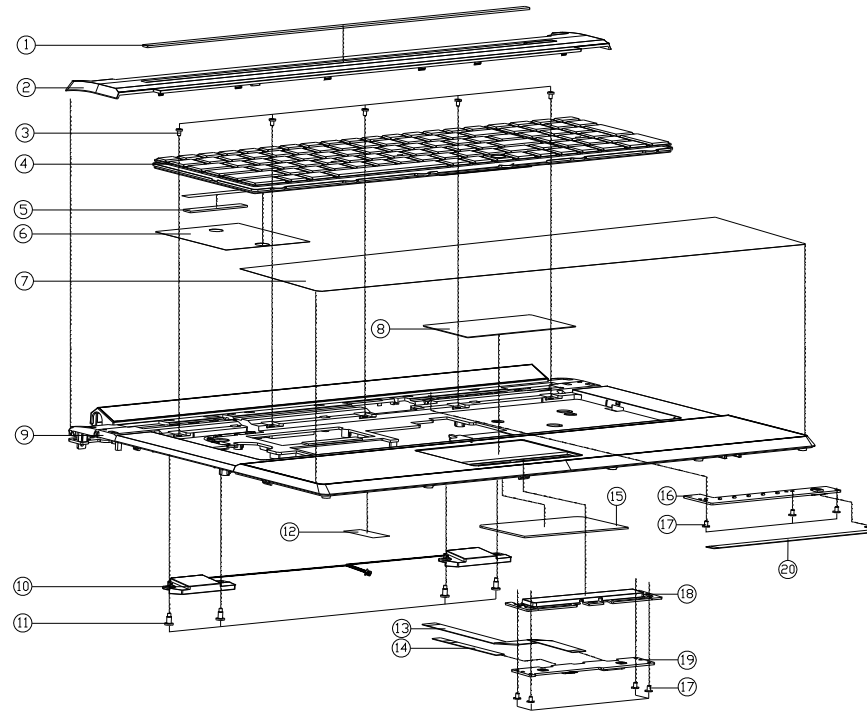


Figure A - 1
Top with
Fingerprint

ITEM	PART NO	PART NO	REMARK
1	TOP COSMETIC PLATE PMAA P170M	6-42-P1702-002	
2	COVER KNOB K406 G40P P170M	6-42-P1752-100-N	
3	SCREW HEX 3.5X 10 CT NY (30-4531-44)	6-35-B1120-3R	
4	WASHER 3.5X 10 CT NY (30-4531-44)	6-80-P1750-010-3	
5	SPONGE CR 45x6x0.51 P170EM	6-47-0019A-007	
6	KEYBOARD MYLAR (75470MED) P170M	6-40-P17E2-010	
7	TOP CASE PROTECT W/SHUTTER/3000 P170M	6-40-P17E2-020	
8	TP MYLAR P170M	6-40-P17E2-030	
9	TABLE CASE TOP CASE MIDDLE ASSY P170M	6-79-P1750M-010	
10	SPRING TONER VIL SPRING 3.5 CT NY (30-4531-44)	6-23-P1750-010	
11	SCREW HEX 3.5X 10 CT NY (30-4531-44)	6-35-B1120-6R2	
12	WASHER 3.5X 10 CT NY (30-4531-44)	6-80-P1750-010-3	
13	FEEL CABLE FOR TOUCH PAD 4P4M (NCSH634M)	6-43-P1700-002-2	
14	FEEL CABLE FOR TOUCH PAD 4P4M (NCSH634M)	6-43-C4502-010-2	
15	TOUCH PAD 4P4M (NCSH634M) M11-2	6-49-C4802-010	
16	POWER SWITCH AND LED BOARD P170M	6-77-P1753-D03	
17	SCREW HEX 3.5X 10 CT NY (30-4531-44)	6-35-B1120-4A4	
18	CLICK MECHANISM W/ P (NPI) P170EM	6-42-P17E2-202	
19	CLICK BOARD 3X 4P4P (NCSH634M) BOARD 3X 4P4P P170M	6-77-P175A-010-2	
20	FEEL CABLE FOR TOUCH PAD 4P4M (NCSH634M)	6-43-P1700-012-2	


Part Lists

Top without Fingerprint

Figure A - 2
Top without
Fingerprint

ITEM	PART NAME	PART NO	REMARK
1	TOP COSMETIC PLATE PMMA P170HM	6-42-P1702-022	
2	CENTER COVER MODULE (HAPOR PRINT) (C010) P170SM	6-42-P17S2-100-N	
3	SCREW M2x4L KI NI ICT NY (C00-045,01-04)	6-35-B1120-3RE	
4	KEY BOARD VESINGO-LE HAPOR PRINT (C010) (C010) (C010)	6-80-P17S0-010-3	
5	SPONGE CR 45*6*0.5T P170EM	6-47-0019A-007	
6	KEYBOARD MYLAR (75*70*0.1) P170EM	6-40-P17E2-010	
7	TOP CASE PROTECT MYLAR(PET+36691S) P170HM	6-40-P1702-020	
8	TP MYLAR P170HM	6-40-P1702-030	
9	TOILE 24H TOP CASE MODULE ASS'Y P170SM	6-79-P170SM02-010	
10	SPEAKER FRONT R/L SHOR TS2 20W 4T (C010) P170SM	6-23-5P15E-0S1	
11	SCREW M2x6.2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
12	AL FOIL (40*15*0.25T) P170HM	6-47-P1702-010	
13	TTC CABLE FOR CLICK IN TO KEY TOPA P170HM (C010) (C010)	6-43-P1700-022-2	
14	TTC CABLE FOR TOUCH PAD 6PIN (HENGSHANG)	6-43-C4502-010-2	
15	TOUCH PAD SYNAPTICS TM-01046-003 MULTI-GE5	6-49-C4802-010	
16	POWER SWITCH AND LED BOARD V30 P170SM	6-77-P17SS-003	
17	SCREW M2x4L KI NI ICT NY (C00-040,01-05)	6-35-B1120-4RA	
18	CLICK BUTTON WD-FP MODULE P170HM	6-42-P1702-102	
19	CLICK BOARD V30 (W/D FP) P170SM	6-77-P17S2-003-1	
20	TTC CABLE FOR POWER IN TO KEY TOPA P170HM (C010) (C010)	6-43-P1700-012-2	

Bottom (N14E-GS)

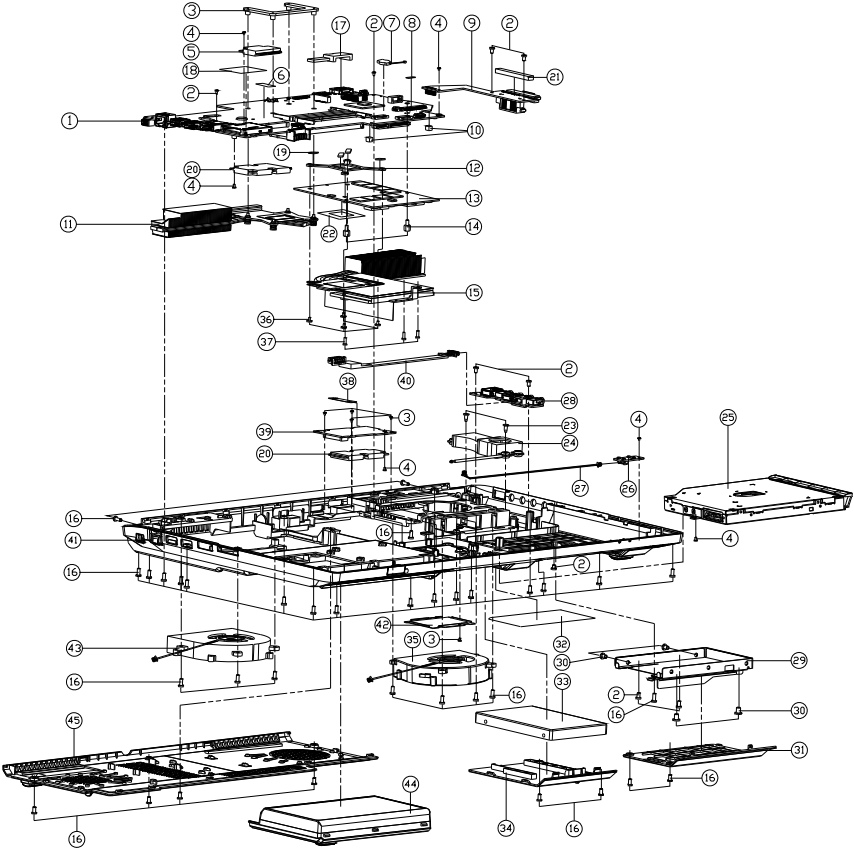


ITEM	PART NAME	PART NO	REMARK
1	MAIN BOARD V3.0A P170SM	6-77-P170SM00-003A	
2	SCREW M2.5x4L KI BK/D ICT NY	6-35-B4125-4RA	
3	CPU SUPPORT BRACKET SECC 1x15 P150AM	6-33-X510S-011	
4	SCREW M2x4L KI NY ICT NY (80-445.31-64)	6-35-B1120-3RE	
5	LED BOARD V2.0 P150SM	6-88-M772C-4200	(OPTION)
5	LED BOARD V2.0 P150SM	6-88-V245F-9400	(OPTION)
5	LED BOARD V2.0 P150SM	6-88-V245F-7000	(OPTION)
5	LED BOARD V2.0 P150SM	6-88-P17EF-4200	(OPTION)
5	LED BOARD V2.0 P150SM	6-88-W255F-4200	(OPTION)
6	WIRE HARNESS TRANSPARENT (OPTION) P150AM	6-40-P1803-020	
7	WIRE HARNESS TRANSPARENT (OPTION) P150AM	6-23-22015-TC0	
8	W/B KEYBOARD W/LAR PET HOUS	6-40-M810S-011	
9	HDD/ODD BOARD V1.0 P170SM	6-77-P17S-J-001	
10	VGA SUPPORT RUBBER B SILICONE P150AM	6-47-X510S-010	
11	CPU HEATSINK MODULE 1 W/D THERMAL PAD P170SM	6-31-P17SN-101	
12	VGA SUPPORTER SUS430 X7000	6-33-X720S-040	
13	W/B KEYBOARD W/LAR PET HOUS	6-77-P15SL-101A	
13	W/B KEYBOARD W/LAR PET HOUS	6-77-P15SL-201A	
13	W/B KEYBOARD W/LAR PET HOUS	6-77-P15SL-100A-1	
13	W/B KEYBOARD W/LAR PET HOUS	6-77-P15SL-200A-1	
14	SCREW M2.5x4L KI NY ICT NY FOR VGA CARD	6-35-Z1125-4RB-1	
15	VGA HEATSINK MODULE P150SM	6-31-P15SM-201	FOR N14E-GS
16	SCREW M2.5x6L K RZ ICT NY	6-35-B8125-6RA	
17	RUBBER FDR DP P170SM	6-47-P1772-020	
18	W/LAR 30x30x0.1 P170SM	6-40-P17EF-020	
19	W/LAR 30x30x0.1 P170SM	6-47-X510S-030	
20	W/LAR 30x30x0.1 P170SM	6-85-D4032-L02	
20	W/LAR 30x30x0.1 P170SM	6-85-D4040-Z00	
20	W/LAR 30x30x0.1 P170SM	6-85-D40C0-L01	
21	RUBBER 42x6x16 H80 P170SM	6-47-P1772-020	
22	W/B CPU W/LAR (OPTION) P170SM	6-40-P17SS-010	
23	SCREW M2.5x4L KI NY ICT NY FOR SPEAKER	6-35-Z1120-6RB	
24	SCREW M2.5x4L KI NY ICT NY FOR SPEAKER	6-23-SPISE-0W3	
25	W/D ODD ASS'Y P170HM	6-79-P170HM02-000	
25	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-P170MD0-010	
25	SATA BLU-RAY COMBO ASSY (OPTION)	6-79-P170MD0V-050	
25	SATA BLU-RAY WRITER ASSY (OPTION)	6-79-P170MD0V-030	
26	LED BOARD V2.0 P150SM	6-77-P15SA-D02	
27	WIRE CABLE FOR LED BOARD TO W/B SP P170M	6-43-P1700-041	
28	AUDIO BOARD V2.0 P150SM	6-77-P15SB-D02	
29	SCREW M2.5x4L KI NY ICT NY FOR W/LAR KEYBOARD	6-33-P170J-013	
30	SCREW M2.5x4L KI NY ICT NY	6-35-B1130-4RB	
31	SCREW M2.5x4L KI NY ICT NY	6-42-P170J-001	
32	PRODUCT LABEL FOR P170SM	6-45-P170SM03-010	
33	W/D HDD ASS'Y P170HM	6-79-P170HM0J-000	
33	W/D HDD ASS'Y P170HM	6-79-P170HM0J-010	
33	W/D 2ND HDD ASS'Y P170HM	6-79-P170HM0J-030	
33	W/D 2ND HDD ASS'Y P170HM	6-79-P170HM0J-040	
34	W/B CPU W/LAR (OPTION) P170SM	6-42-P170J-013	
35	W/B CPU W/LAR (OPTION) P170SM	6-31-X720S-101	
36	SCREW M2.5x4L KI NY ICT NY	6-35-B8116-3RB	
37	SCREW M2.5x4L KI NY ICT NY	6-35-B8120-6RB	
38	WIRE CABLE FOR W/B CPU W/LAR (OPTION) P170SM	6-43-P15S3-011	
39	2ND MSATA BOARD V2.0 P150SM	6-77-P15SM-D02	
40	WIRE CABLE FOR AUDIO BOARD TO W/B SP P170M	6-43-P1700-032	
41	BOTTOM CASE MODULE P170SM	6-39-P17S3-011	
42	METAL COVER FOR 2ND W-SATA P170SM	6-33-P17S3-010	
43	WIRE CABLE FOR W/B CPU W/LAR (OPTION) P170SM	6-23-AXS10-012	
44	WIRE CABLE FOR W/B CPU W/LAR (OPTION) P170SM	6-87-X710S-4273	(OPTION)
44	WIRE CABLE FOR W/B CPU W/LAR (OPTION) P170SM	6-87-X710S-4J72	(OPTION)
45	CPU COVER MODULE (OPTION) P170SM	6-42-P170B-106	

Figure A - 3
Bottom (N14E-GS)

Part Lists


Bottom (N14E-GTX)

Figure A - 4
Bottom
(N14E-GTX)

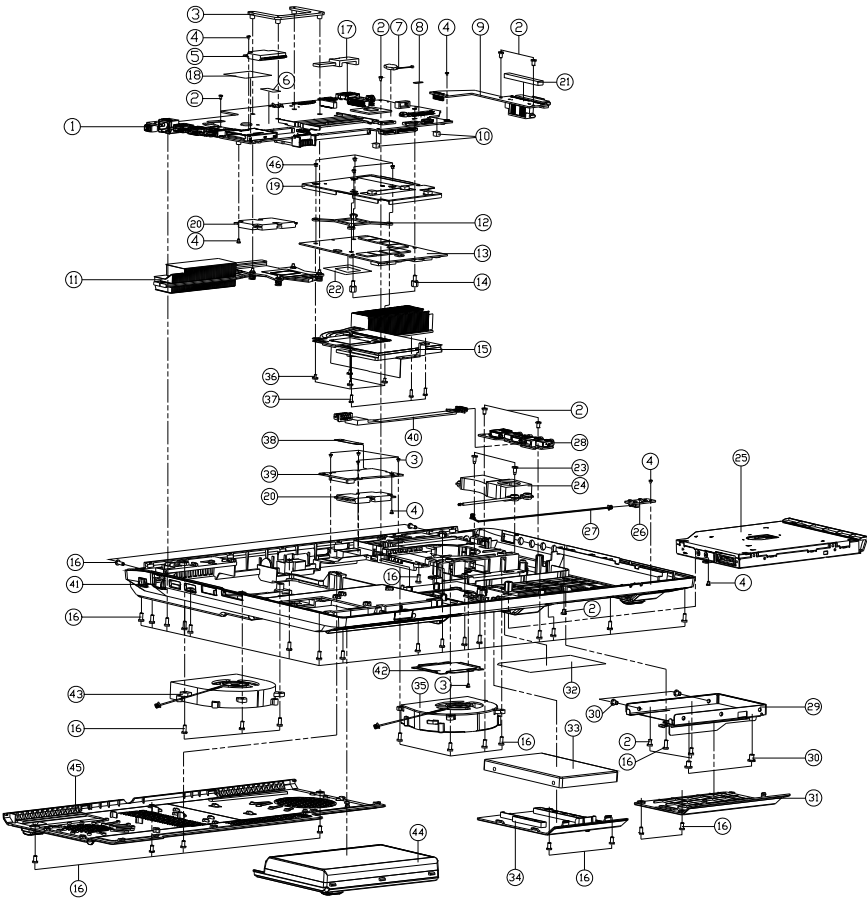


ITEM	PART NAME	PART NO	REMARK
1	MAIN BOARD V3.0A P170SM	6-77-P170SM00-800A	
2	SCREW M3x4L KI NI ICT NY (00-84537-04)	6-35-B4L25-40A	
3	CPU SUPPORT BRACKET SPEC THIS P170SM	6-33-X510S-011	
4	SCREW NYLON KI NI ICT NY (00-84537-04)	6-35-B1120-3RE	
5	SCREW NYLON KI NI ICT NY (00-84537-04)	6-88-W7C2-4220	(OPTION)
5	SCREW NYLON KI NI ICT NY (00-84537-04)	6-88-W345F-9400	(OPTION)
5	SCREW NYLON KI NI ICT NY (00-84537-04)	6-88-W345F-7000	(OPTION)
5	SCREW NYLON KI NI ICT NY (00-84537-04)	6-88-P17EY-4200	(OPTION)
5	SCREW NYLON KI NI ICT NY (00-84537-04)	6-88-W255F-4200	(OPTION)
6	BACK W/IRL THERMAL PASTE P170SM	6-40-P1803-020	
7	KEYBOARD W/IRL PET M010L	6-23-22015-TC0	
8	M/B KEYBOARD W/IRL PET M010L	6-40-MB10S-011	
9	HDD/ODD BOARD V1.0 P170SM	6-77-P175J-D01	
10	VGA SUPPORT RUBBER 8 SILICONE P170SM	6-47-X510S-010	
11	ODD BOARD V1.0 P170SM	6-31-P175N-101	
12	VGA SUPPORTER SUS304 X7200	6-33-X720S-040	
13	SCREW NYLON KI NI ICT NY (00-84537-04)	6-77-P370L-102	
13	SCREW NYLON KI NI ICT NY (00-84537-04)	6-77-P370L-202	
14	SCREW NYLON KI NI ICT NY (00-84537-04)	6-35-Z1125-4RB-1	
15	VGA HEATSINK MODULE P170SM	6-31-P155N-201	
16	SCREW M2x6L K BZ ICT NY	6-35-B2125-6RA	
17	RUBBER FOR DP P170SM	6-47-P173-070	
18	MYLAR 30x30x0.1 P170SM	6-40-P17E2-020	
19	VGA SHIELDING MODULE FOR N14E-GTX P170SM	6-33-P155L-101	
20	SCREW NYLON KI NI ICT NY (00-84537-04)	6-85-D4032-L02	
20	SCREW NYLON KI NI ICT NY (00-84537-04)	6-85-D4040-Z00	
20	SCREW NYLON KI NI ICT NY (00-84537-04)	6-85-D40C8-L01	
21	RUBBER 42x6x16 H80 P170SM	6-47-P17E2-020	
22	VGA CHIP W/IRL FOR N14E-GTX P170SM	6-40-P155S-020	FOR N14E-GTX
23	SCREW NYLON KI NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
24	PRODUCT LABEL FOR P170SM	6-23-SP15E-0W3	
25	W/O HDD ASS'Y P170H-M	6-79-P170H-M02-000	
25	SATA DVD SUPER MULTI ASS'Y (OPTION)	6-79-P170M-M00-010	
25	SATA BLU-RAY COMBO ASS'Y (OPTION)	6-79-P170M-M00-050	
25	SATA BLU-RAY WRITER ASS'Y (OPTION)	6-79-P170M-M00-030	
26	LED BOARD V2.0 P150SM	6-77-P1554-002	
27	WIRE CABLE FOR LED BOARD TO M/B P170SM	6-43-P1700-041	
28	AUDIO BOARD V2.0 P150SM	6-77-P1558-002	
29	SECOND HDD BRACKET FOR SPEAKER P170SM	6-33-P170J-013	
30	SCREW NYLON KI NI ICT NY (00-84537-04)	6-35-B1130-4R8	
31	SECOND HDD COVER SARK C220P-T00K P170SM	6-42-P170J-021	
32	PRODUCT LABEL FOR P170SM	6-45-P170M-M00-010	
33	W/O HDD ASS'Y P170H-M	6-79-P170H-M00-000	
33	W/O HDD ASS'Y P170H-M	6-79-P170H-M00-030	
33	W/O HDD ASS'Y P170H-M	6-79-P170H-M00-040	
34	W/O HDD ASS'Y P170H-M	6-42-P170J-013	
35	W/O HDD ASS'Y P170H-M	6-31-X720S-101	
36	SCREW NYLON KI NI ICT NY (00-84537-04)	6-35-B2116-3R5	
37	SCREW NYLON KI NI ICT NY (00-84537-04)	6-35-B6120-6R0	
38	WIRE CABLE FOR SATA DATA P170SM	6-43-P1553-011	
39	2ND MSATA BOARD V2.0 P150SM	6-77-P155M-002	
40	WIRE CABLE FOR SATA BOARD TO M/B P170SM	6-43-P1700-032	
41	BOTTOM CASE MODULE P170SM	6-39-P1753-011	
42	METAL COVER FOR 2ND M-SATA P170SM	6-33-P1753-010	
43	WIRE P170SM IN 2ND M-SATA P170SM	6-23-AX510-012	
44	WIRE P170SM IN 2ND M-SATA P170SM	6-87-X710S-4J72	(OPTION)
44	WIRE P170SM IN 2ND M-SATA P170SM	6-87-X710S-4J72	(OPTION)
45	CPU COVER MODULE MODIFY R01 P170SM	6-42-P1708-106	
46	SCREW NYLON KI NI ICT NY (00-84537-04)	6-35-B2116-1R8	

LCD

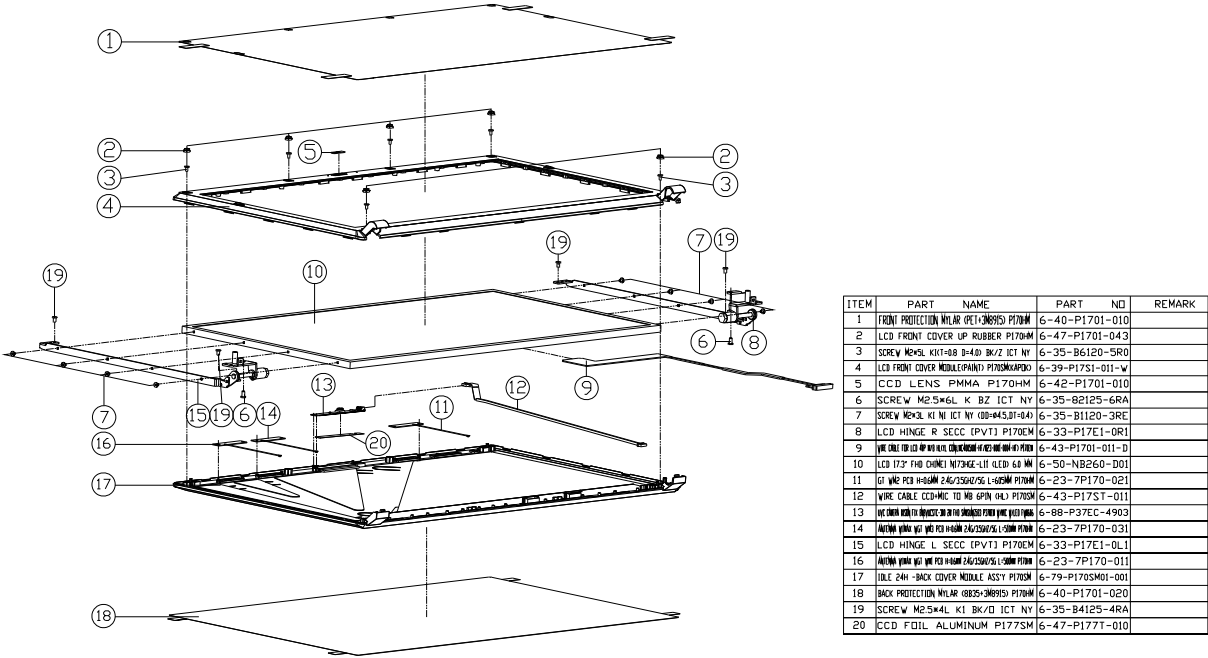

COMBO

Figure A - 6
COMBO

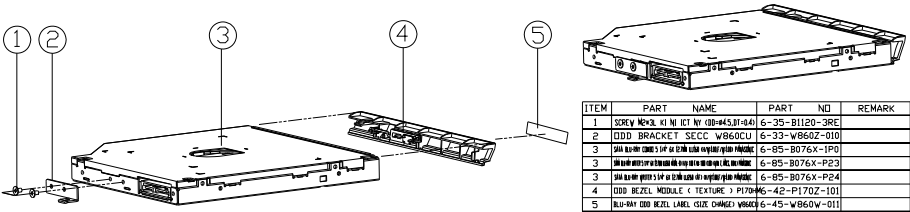

DVD-Dual Drive

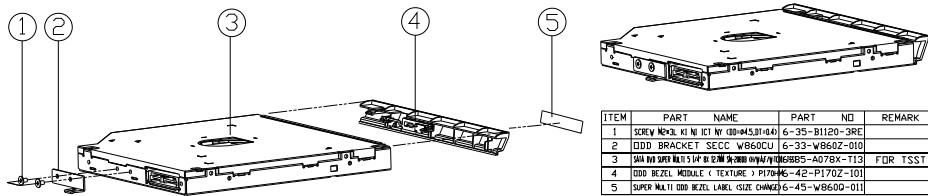


Figure A - 7
DVD-Dual Drive

Part Lists

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the **P150SM / P151SM1** notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
System Block Diagram - Page B - 2	PCH 4/9 - CRT, Display, PCI - Page B - 23	Power V-Core 1 - Page B - 44
Processor 1/7 - Page B - 3	PCH 5/9 - PCIe, USB - Page B - 24	AC_In, Charger - Page B - 45
Processor 2/7 - Page B - 4	PCH 6/9 - GPIO, CPU - Page B - 25	TPM - Page B - 46
Processor 3/7 - Page B - 5	PCH 7/9 - Power - Page B - 26	Audio Board - Page B - 47
Processor 4/7 - Page B - 6	PCH 8/9 - Power - Page B - 27	P150/151 ODD Board - Page B - 48
Processor 5/7 - Page B - 7	PCH 9/9 - CLK, GND - Page B - 28	P150/151 Click Board - Page B - 49
Processor 6/7 - Page B - 8	USB+eSATA, USB Charging - Page B - 29	P150/170SM LED 1 Board - Page B - 50
Processor 7/7 - Page B - 9	USB 2.0, CCD, Mini PCIE, LID - Page B - 30	P151 LED 2 Board - Page B - 51
DDRIII CHA SO-DIMM_0 - Page B - 10	LED, Hotkey, LID SW, Fan - Page B - 31	P151 LED 3 Board - Page B - 52
DDRIII CHA SO-DIMM_1 - Page B - 11	RJ 45 - Page B - 32	P170 HDD & ODD Board - Page B - 53
DDRIII CHB SO-DIMM_1 - Page B - 12	Codec Realtek ALC892 - Page B - 33	P170 LED Board - Page B - 54
DDRIII CHB SO-DIMM_0 - Page B - 13	APA2607-TPA2008D2 - Page B - 34	P170 Click Board - Page B - 55
MXM PCI-E - Page B - 14	KBC-ITE IT8587B - Page B - 35	P170 Fingerprint Board - Page B - 56
Panel, CRT - Page B - 15	Backlight Keyboard - Page B - 36	P150 HDD Board - Page B - 57
PS8625 - Page B - 16	mSATA, FAN, TP, FP, MULTI-CON - Page B - 37	P150 LED Board_L - Page B - 58
1394a_XIO2221 - Page B - 17	Card Reader RTL8411 - Page B - 38	P150 LED Board_R - Page B - 59
Display Port - Page B - 18	USB 3.0 - Page B - 39	mSATA Board - Page B - 60
HDMI - Page B - 19	DDR 1.35V/0.75VS PCH 1.5V - Page B - 40	Power on Sequence - Page B - 61
PCH 1/9 - RTC, HDA, SATA, JTAG - Page B - 20	VDD3, VDD5 - Page B - 41	
PCH 2/9 - LPC, SMBUS SPI, C-LI - Page B - 21	5VS, 3.3VS, 1.5VS - Page B - 42	
PCH3/9 - DMI, FDI, PWRGD - Page B - 22	Power 1.05VS - Page B - 43	

Table B - 1
Schematic
Diagrams





Version Note

The schematic diagrams in this chapter are based upon version 6-7P-P15SF-002. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).


System Block Diagram

Sheet 1 of 60
System Block
Diagram

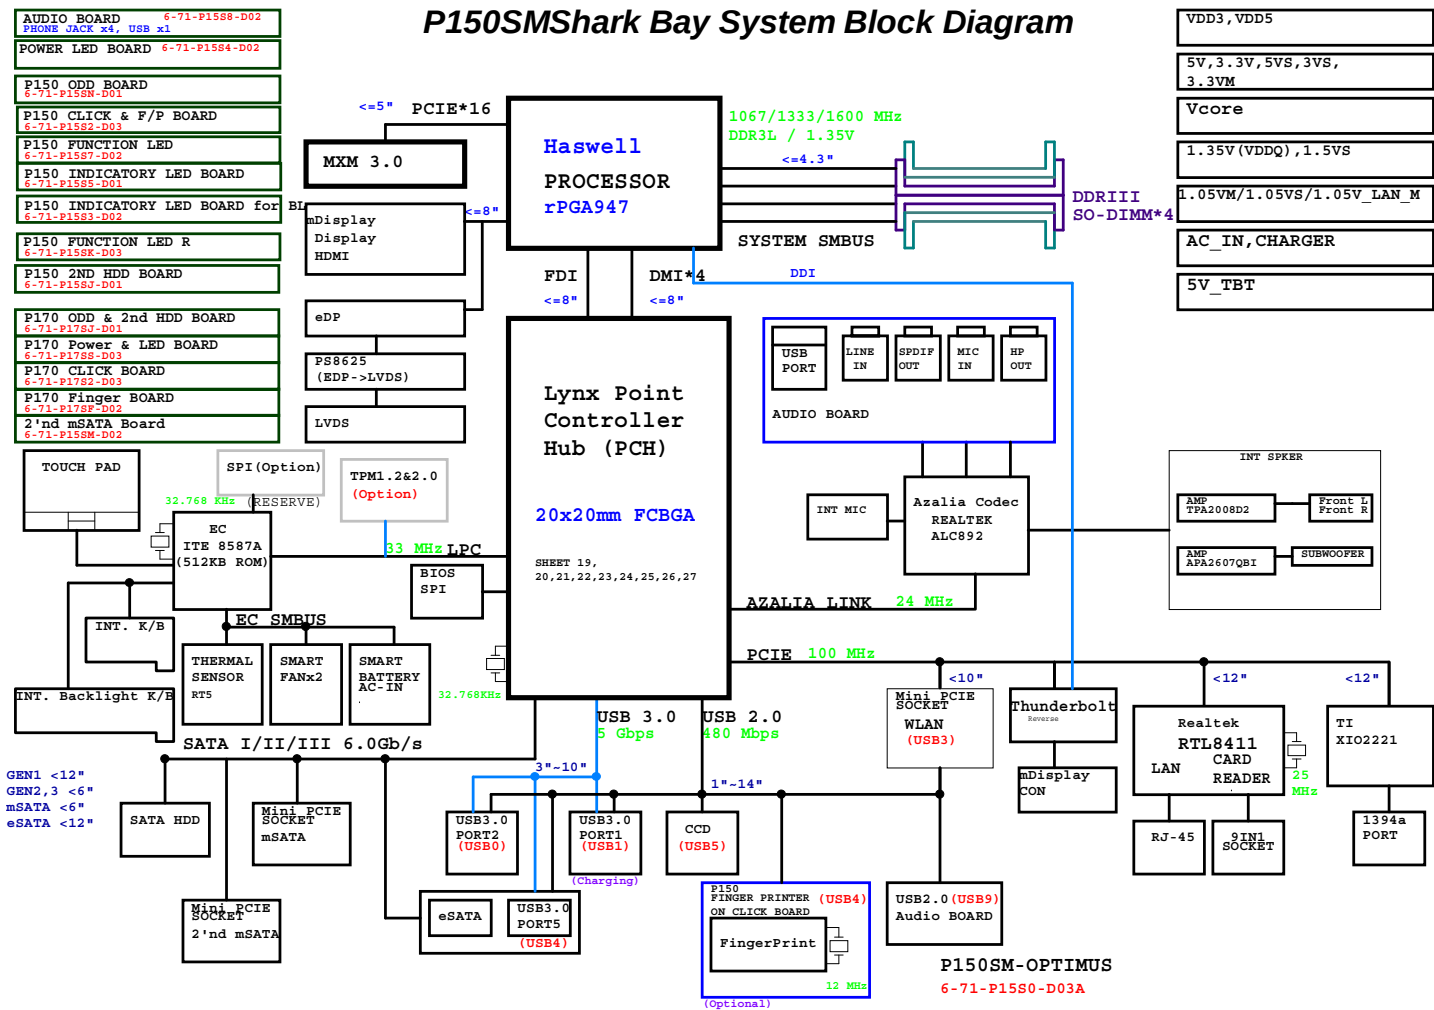

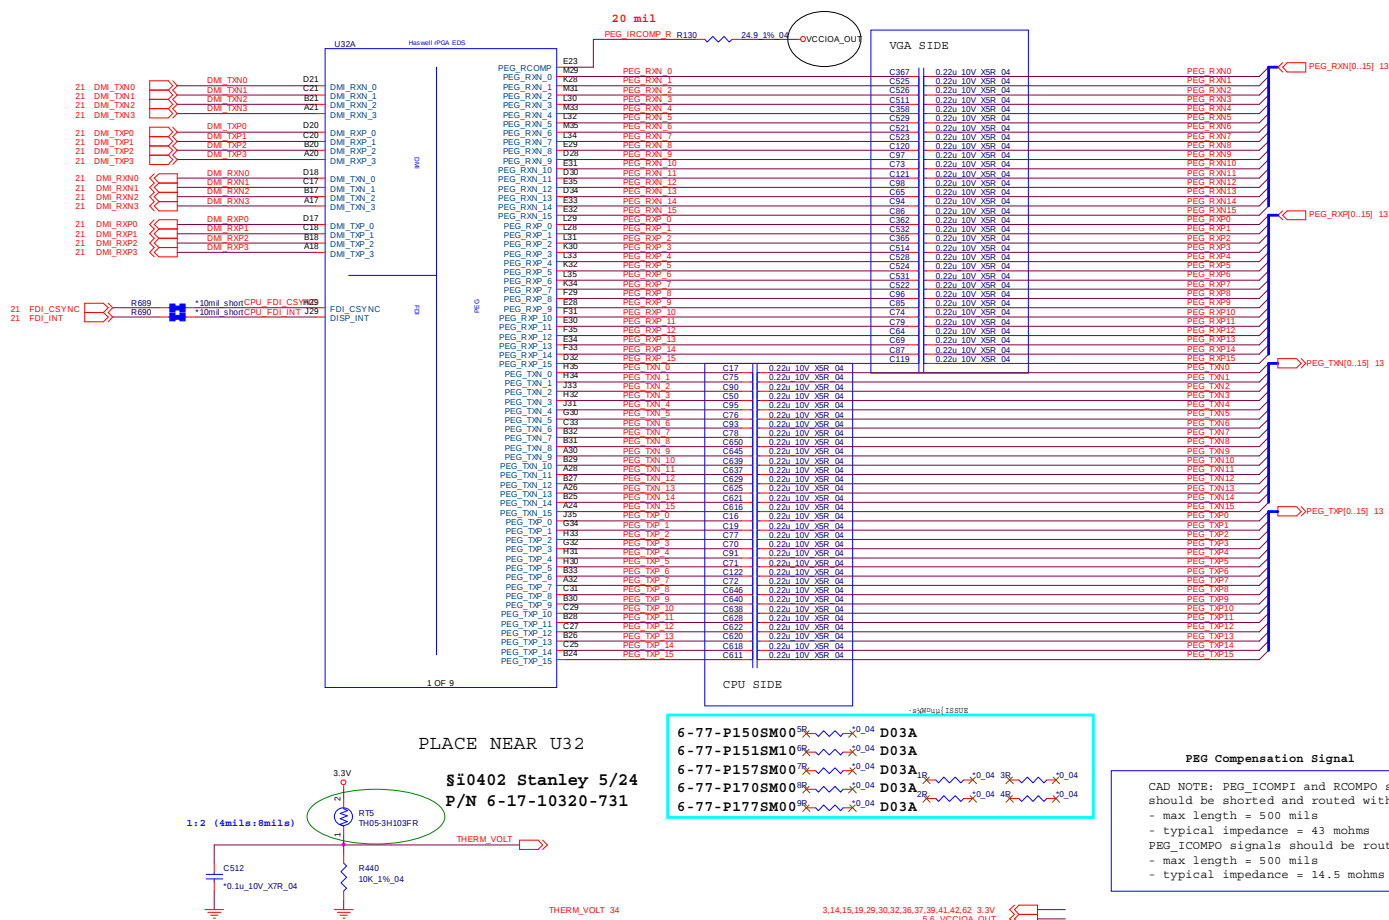


Haswell Processor 3/7 (DDR3L)

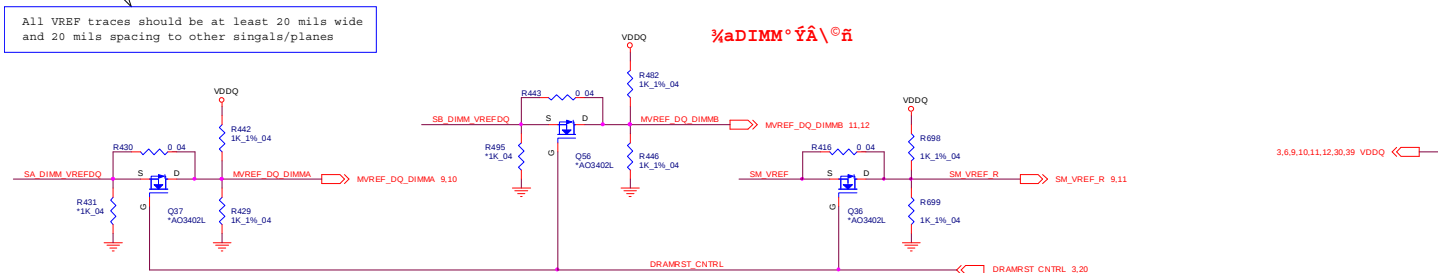

Processor 4/7


Haswell Processor 4/7 (DISPLAY)

Sheet 5 of 60
Processor 4/7

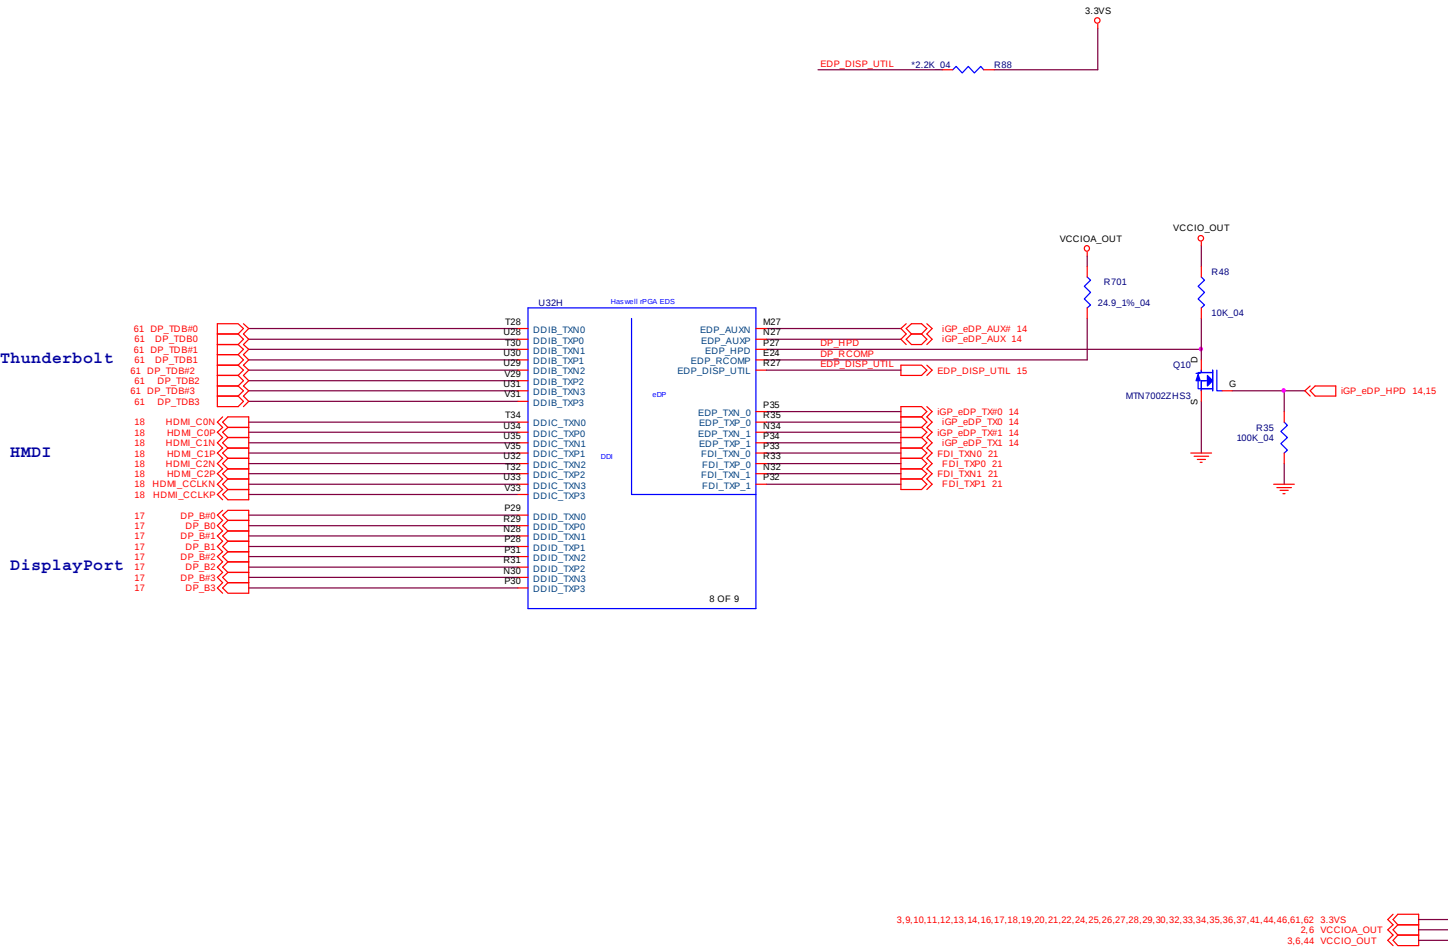

B.Schematic Diagrams


Processor 5/7 B - 7

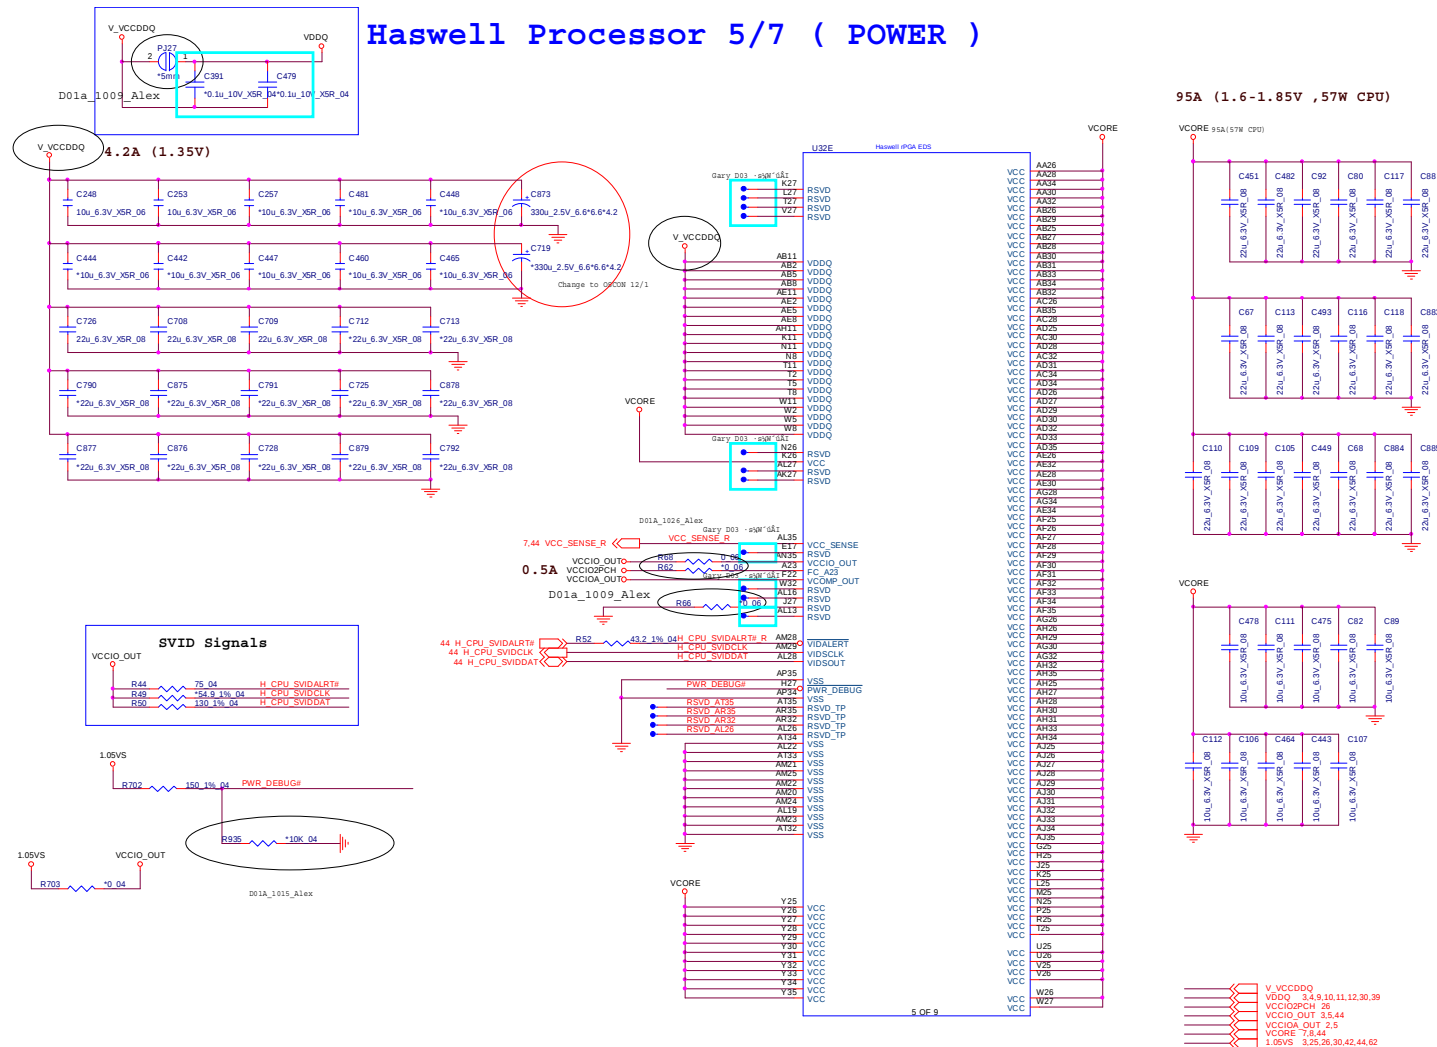

Processor 6/7

Haswell Processor 6/7 (GND)

Sheet 7 of 60
Processor 6/7

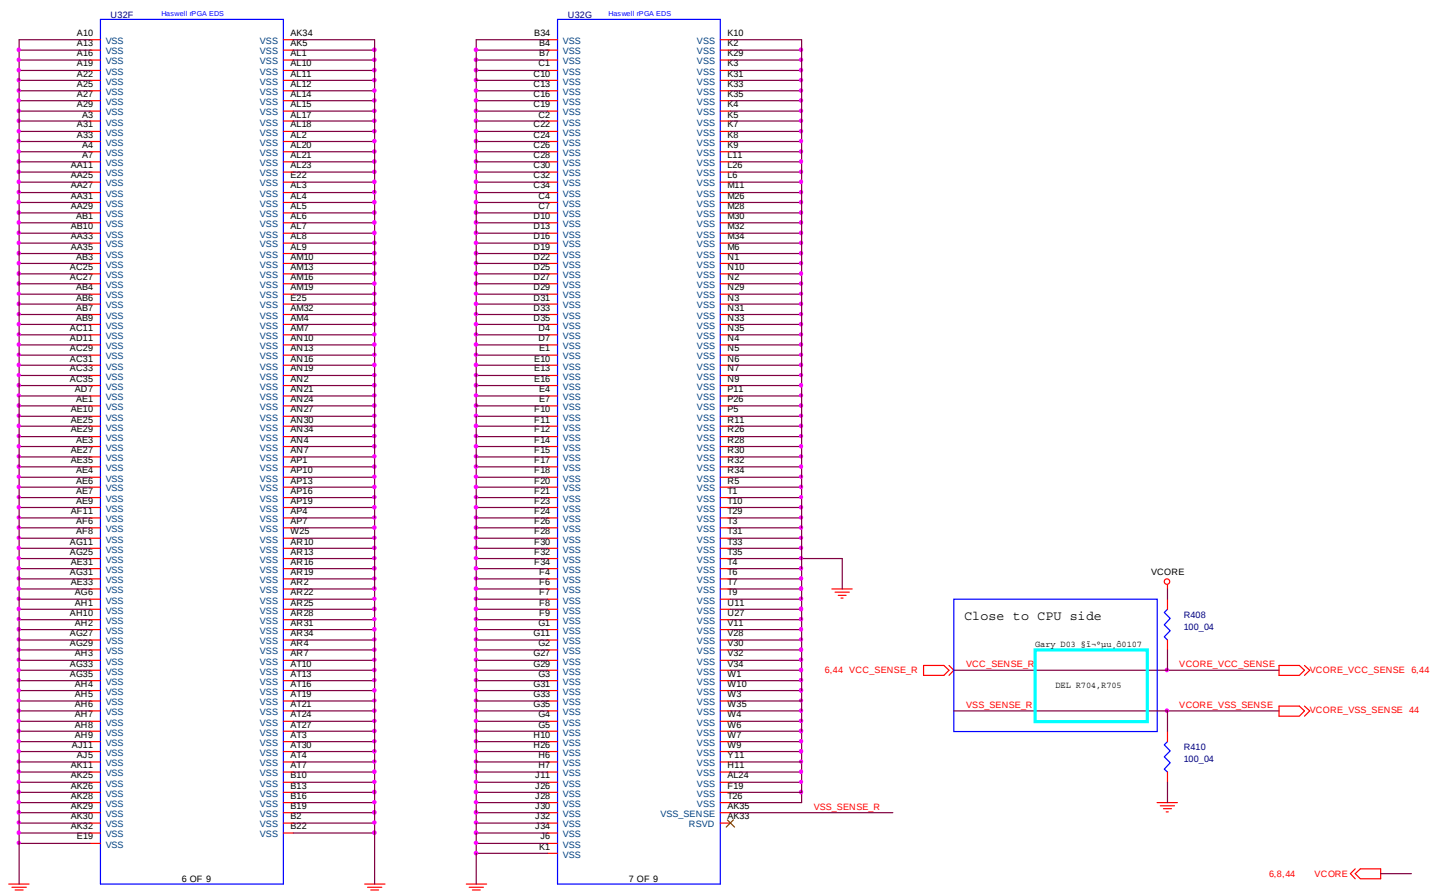

Haswell Processor 7/7 (RESERVED)






Processor 7/7 B - 9


DDRIII CHA SO-DIMM_0

Channel A SO-DIMM 0 [RAM1]

CHANGE TO STANDARD

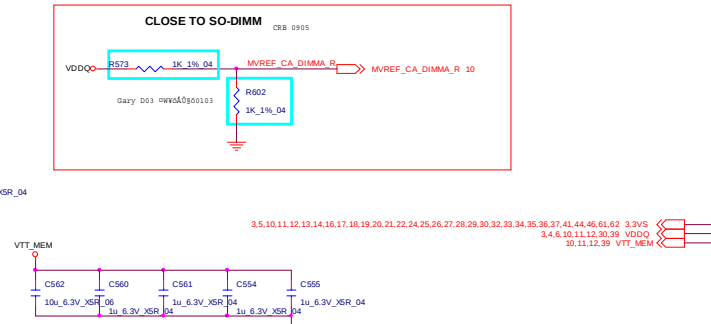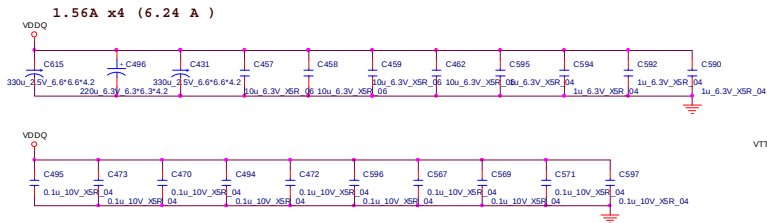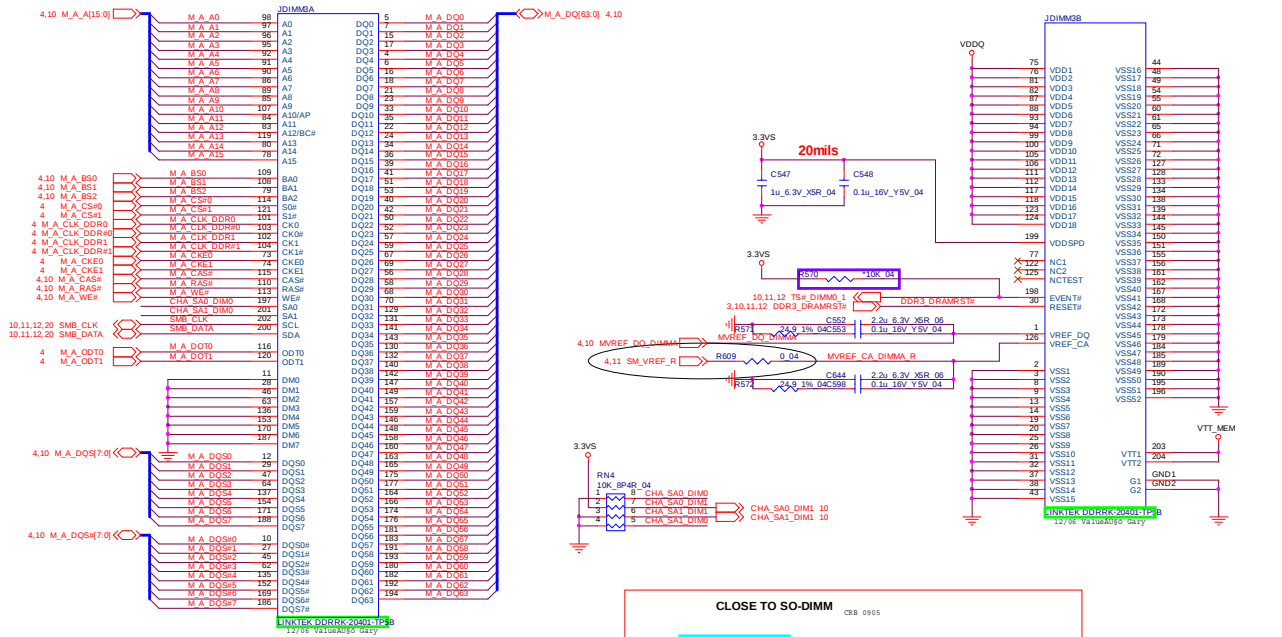

Channel A SO-DIMM 1 [RAM3]




DDRIII CHB SO-DIMM_1

Channel B SO-DIMM 1 [RAM4]

B. Schematic Diagrams

Sheet 11 of 60
DDRIII CHB SO-
DIMM 1

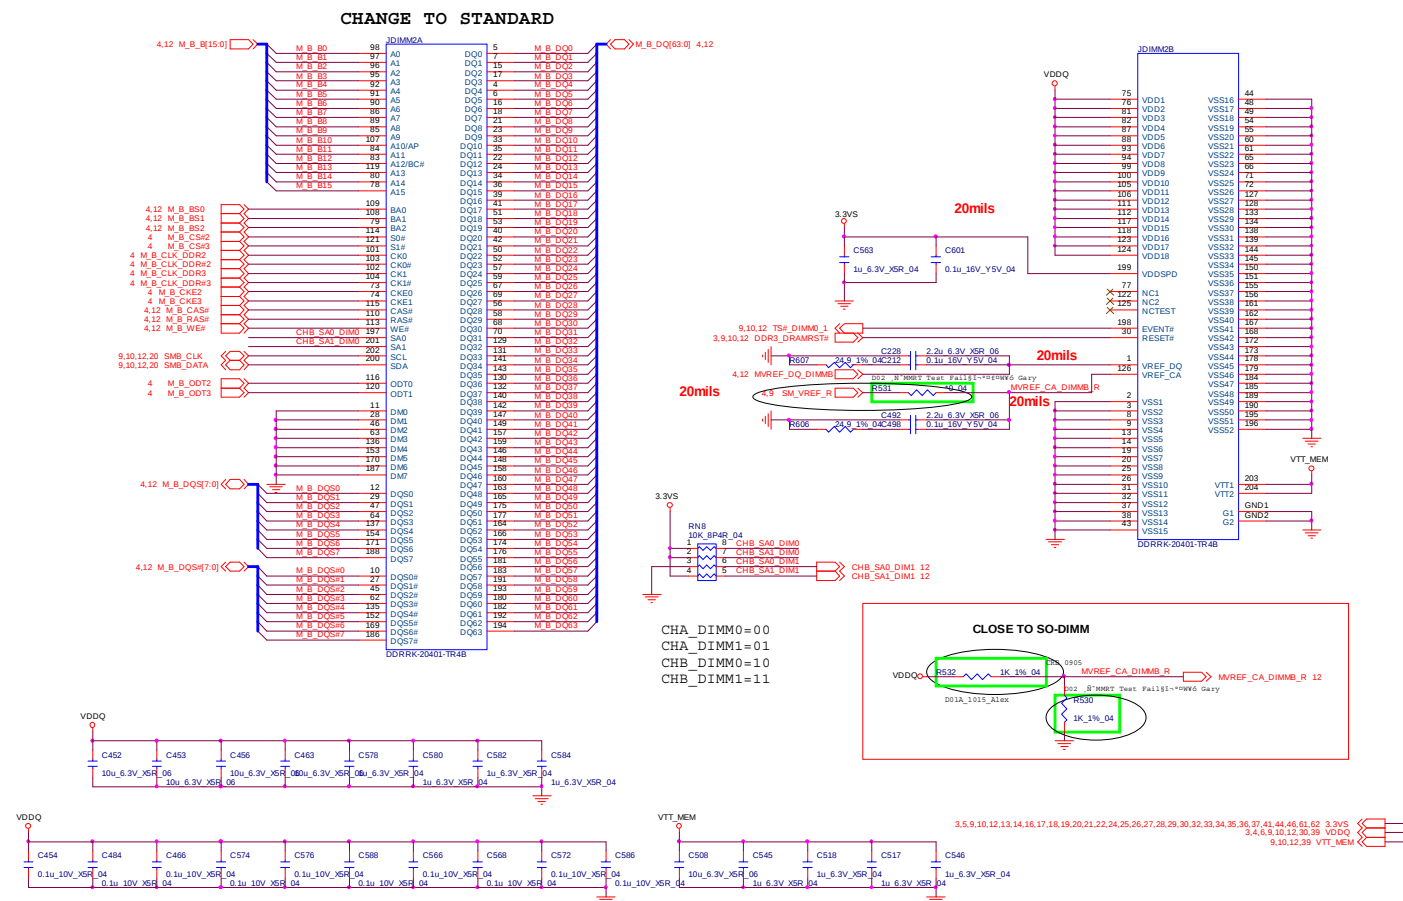


Channel B SO-DIMM 0 [RAM2]




MXM PCI-E

B.Schematic Diagrams

Sheet 13 of 60
MXM PCI-E

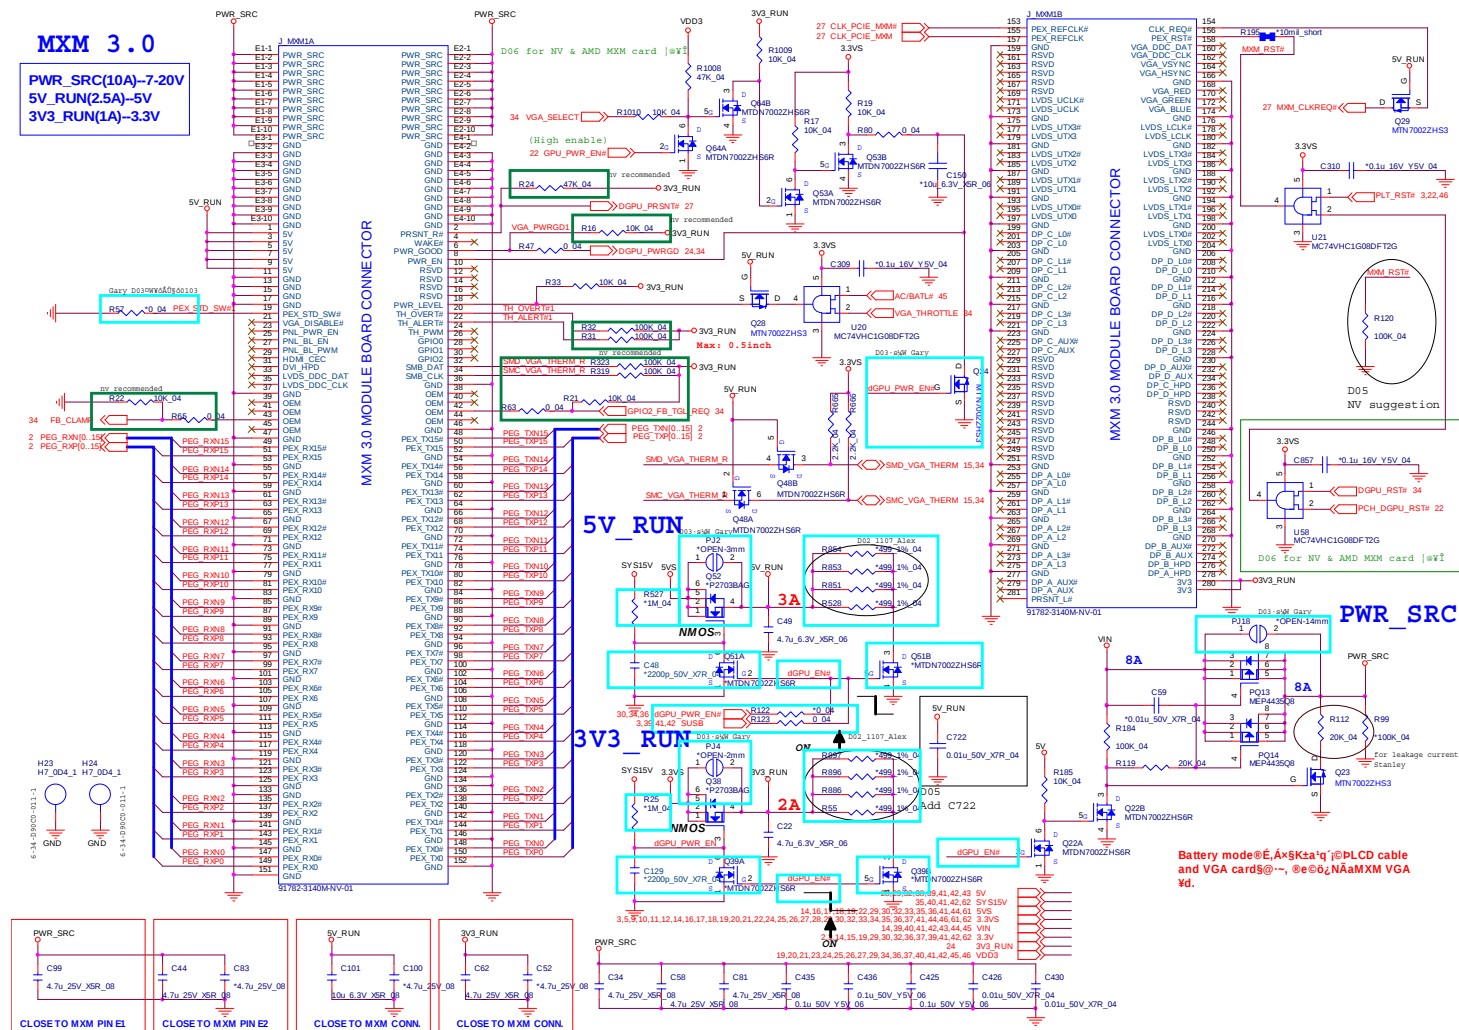


PANEL



Schematic Diagrams


PS8625

Sheet 15 of 60
PS8625

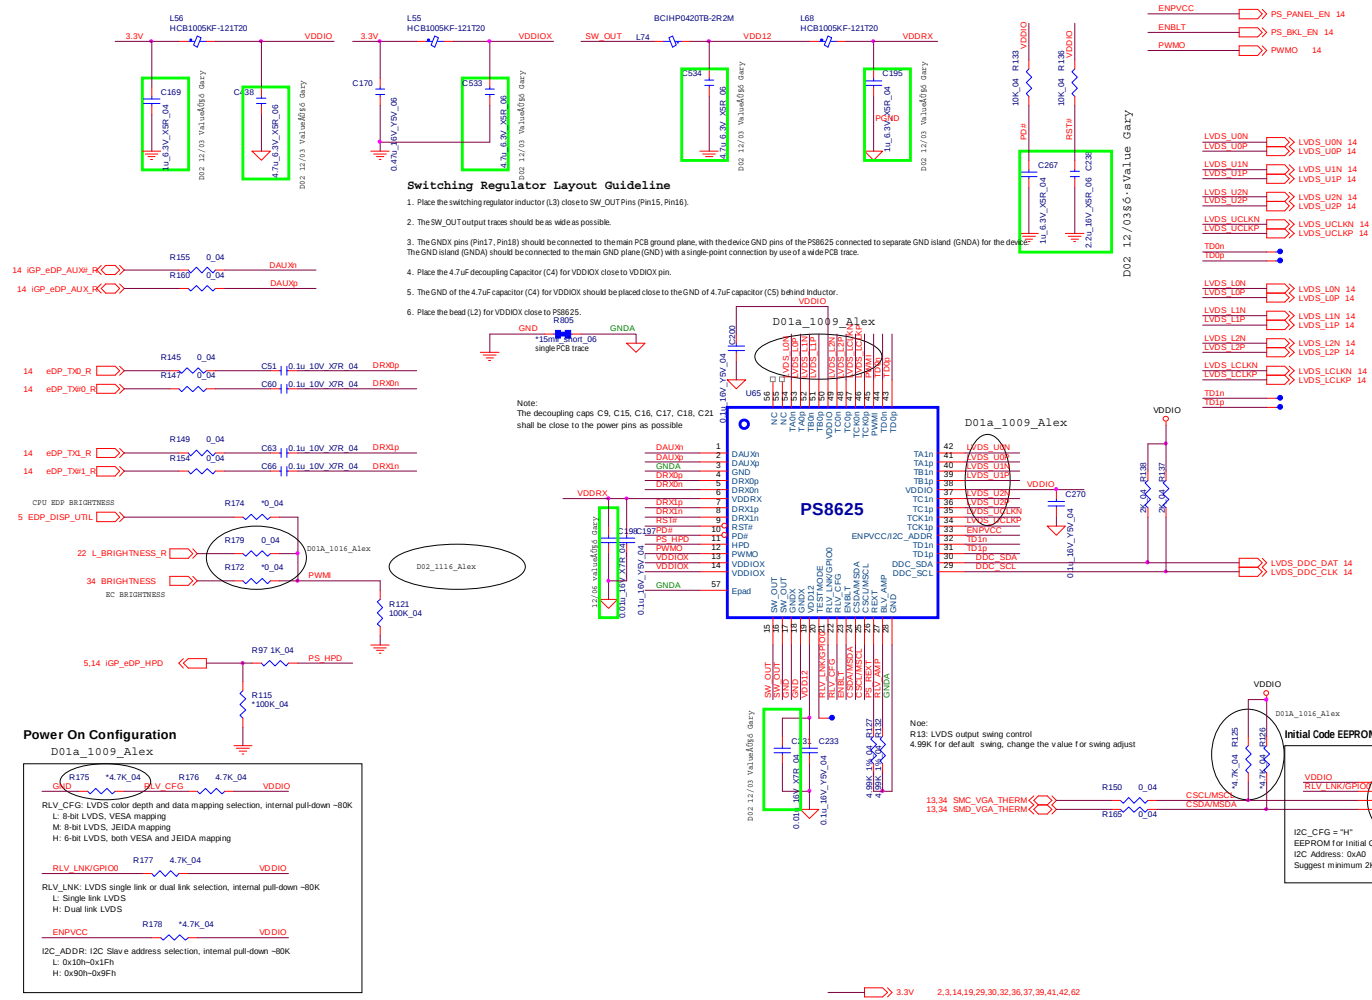


Display Port

Sheet 17 of 60
Display Port

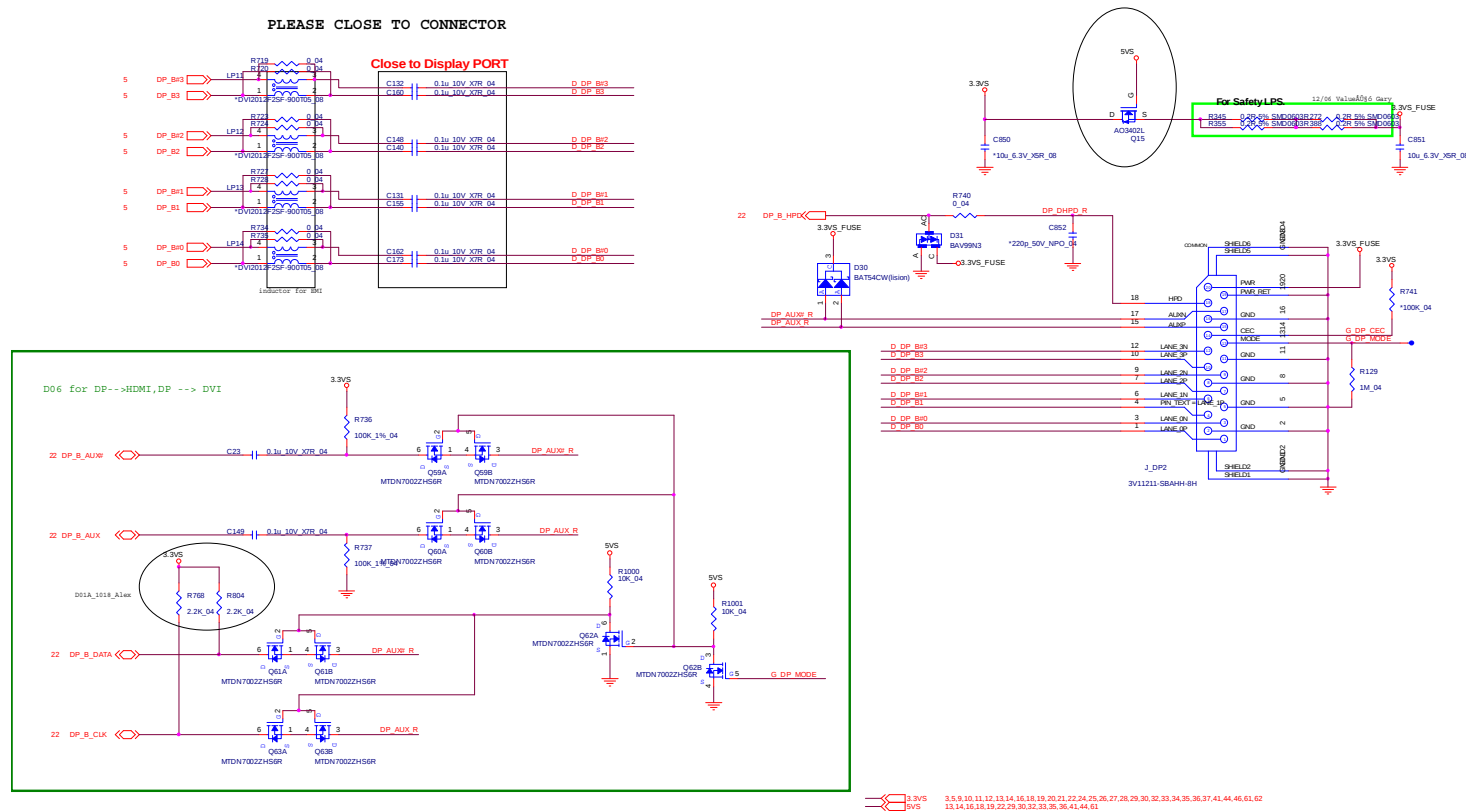


HDMI

HDMI CONNECTOR

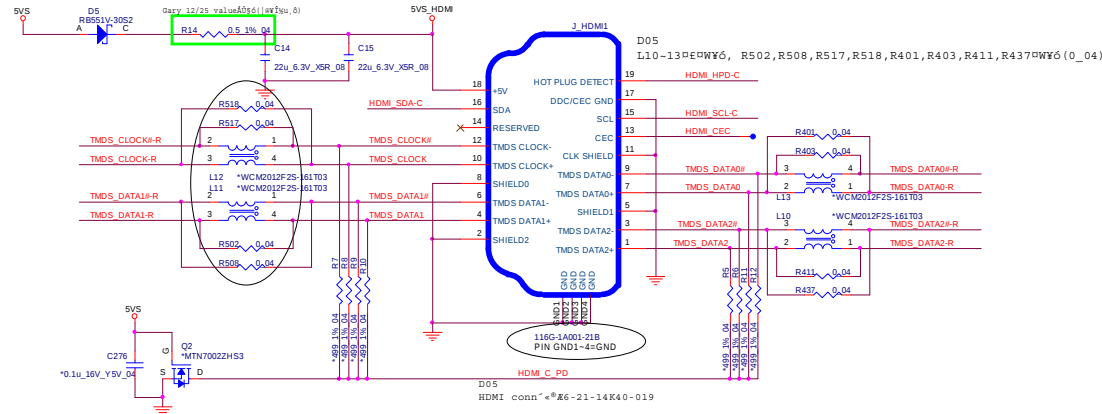


Sheet 18 of 60
HDMI

B.Schematic Diagrams

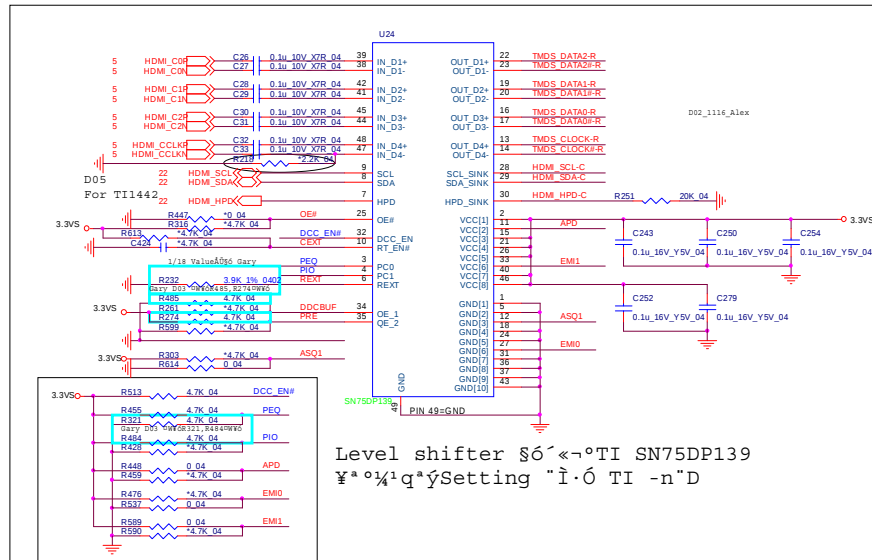

Level shifter \$0'«-°TI SN75DP139
¥ª°¼¹qªŸSetting "î.Ô TI -n"D

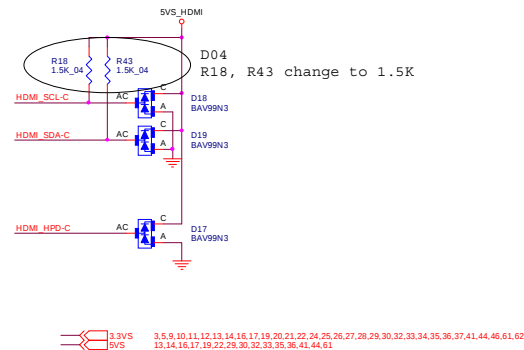


Schematic Diagrams

PCH 1/9 - RTC, HDA, SATA, JTAG

Lynx Point (RTC,AZALIA,SATA,JTAG)

Sheet 19 of 60
PCH 1/9 - RTC,
HDA, SATA, JTAG

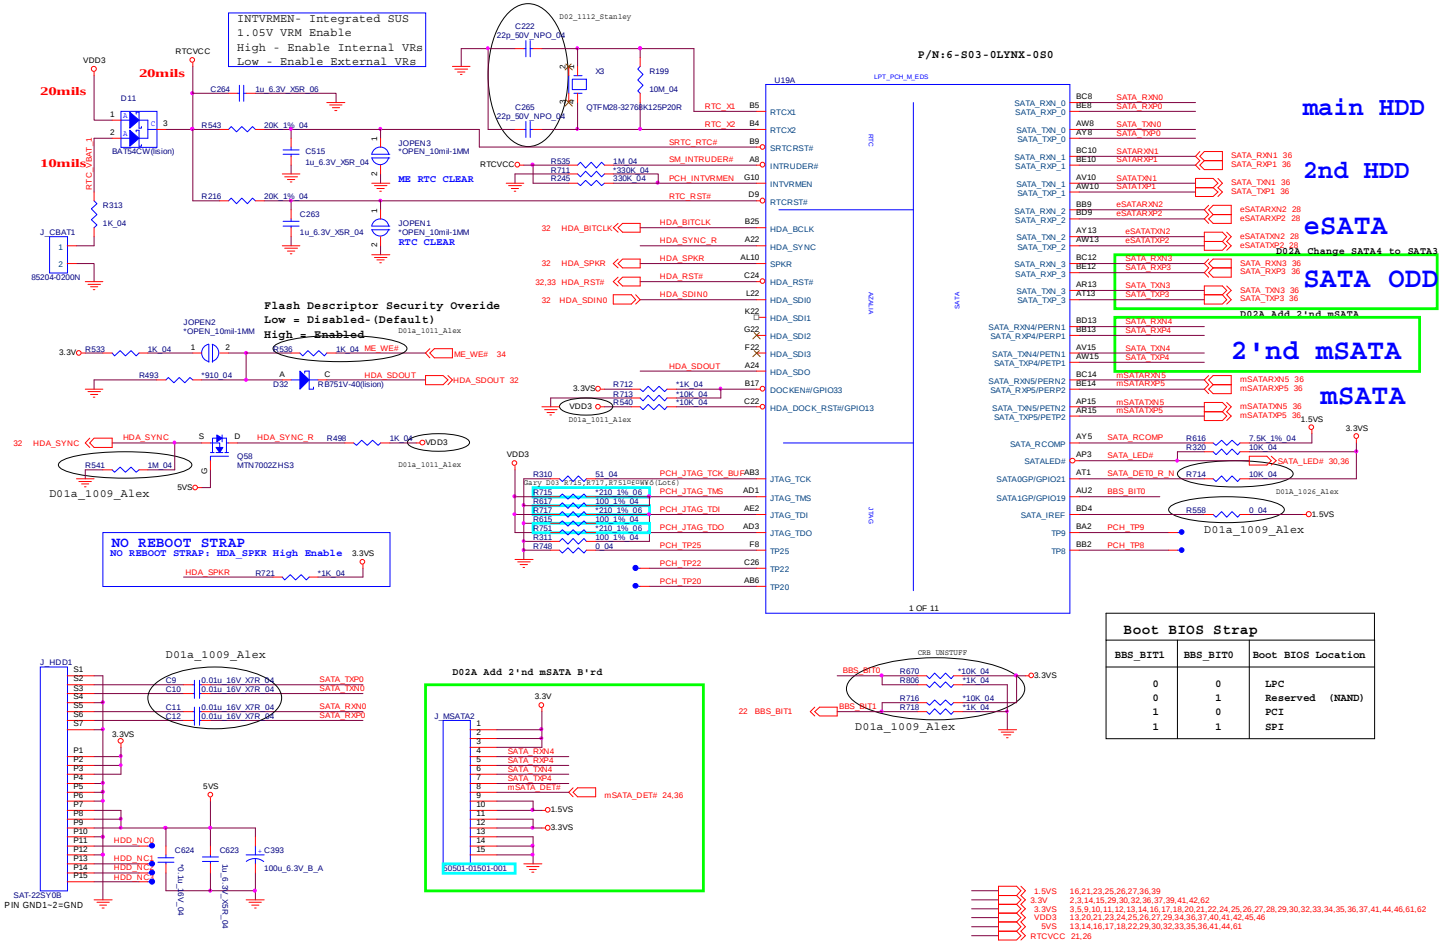

Sheet 20 of 60
PCH 2/9 - LPC,
SMBUS SPI, C-LI




Schematic Diagrams

PCH3/9 - DMI, FDI, PWRGD

Lynx Point (DMI, FDI, GPIO)

DSWODVREN - On Die DSW VR Enable	
R1 STUFFED, R2 UNSTUFFED	Enabled (DEFAULT)
R1 STUFFED, R2 UNSTUFFED	Disabled

Sheet 21 of 60
PCH 3/9 - DMI, FDI,
PWRGD

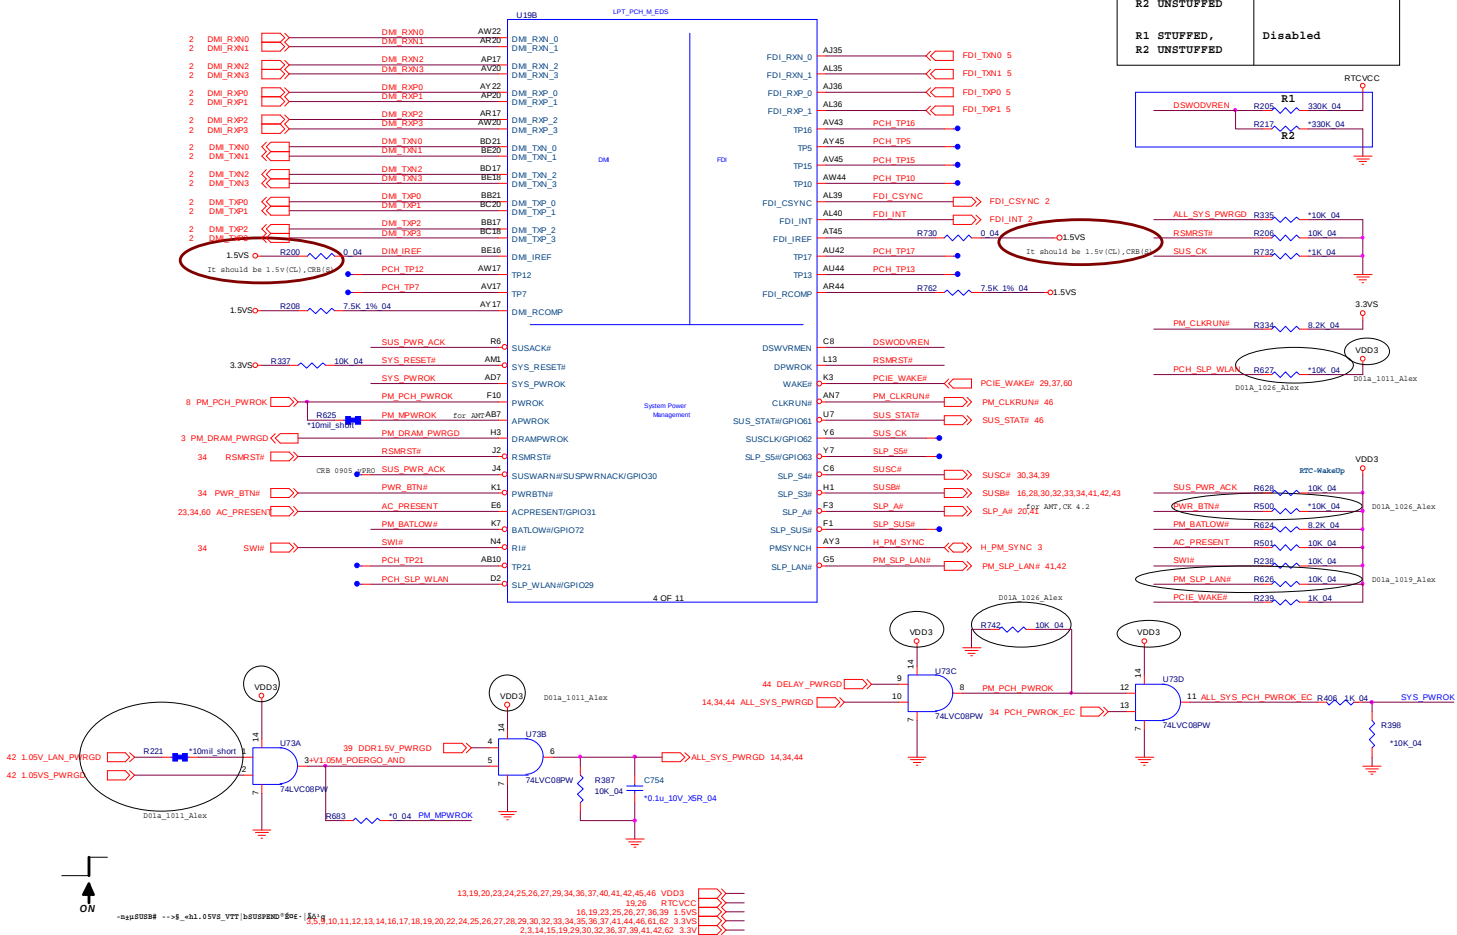

Sheet 22 of 60
PCH 4/9 - CRT,
Display, PCI



 MPC Switch Control
 MPC OFF -- 0 DEFAULT
 MPC ON -- 1




PCH 5/9 - PCIe, USB

Lynx Point (PCIe,USB)


B. Schematic Diagrams

Sheet 23 of 60
PCH 5/9 - PCIe, USB

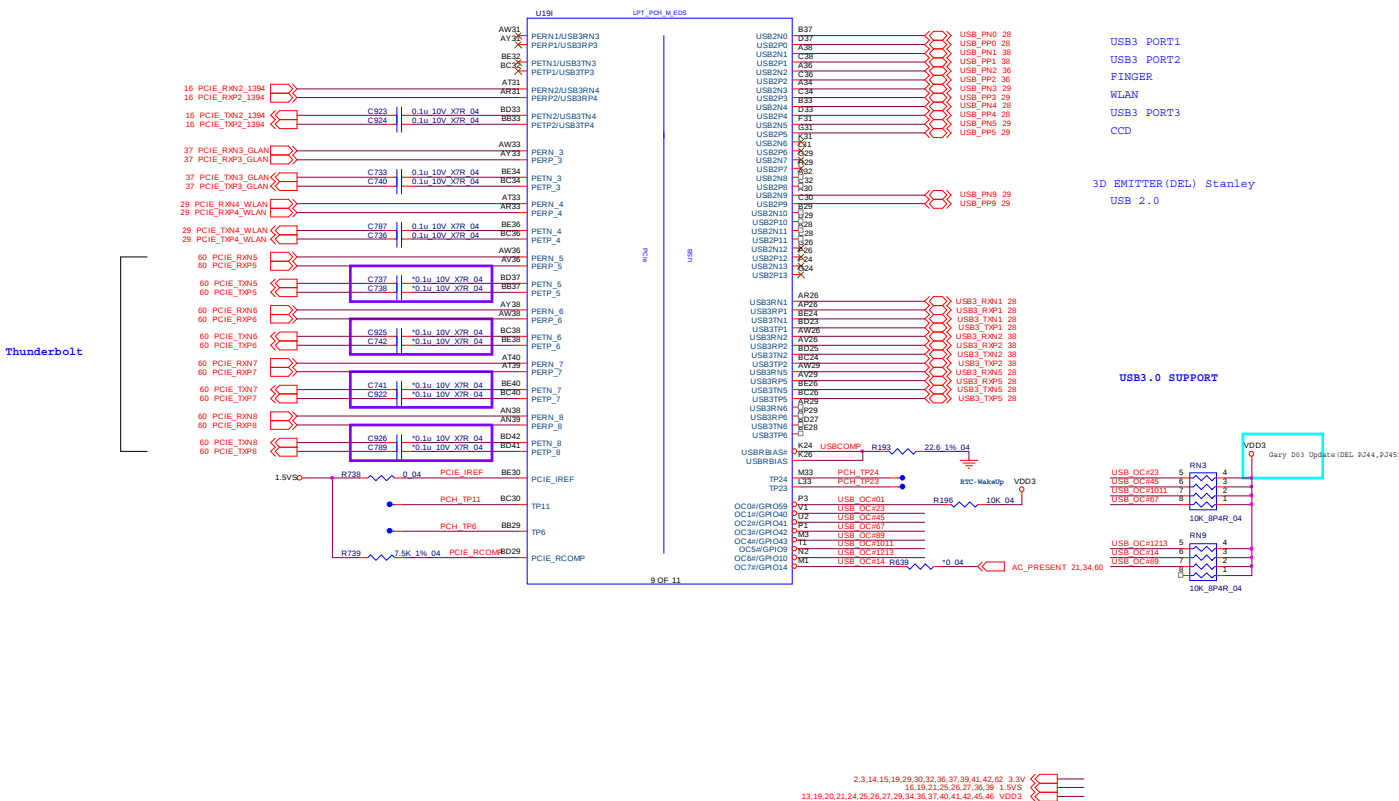

PCH 6/9 - GPIO, CPU

Lynx Point (GPIO,VSS_NCTF,RSVD)

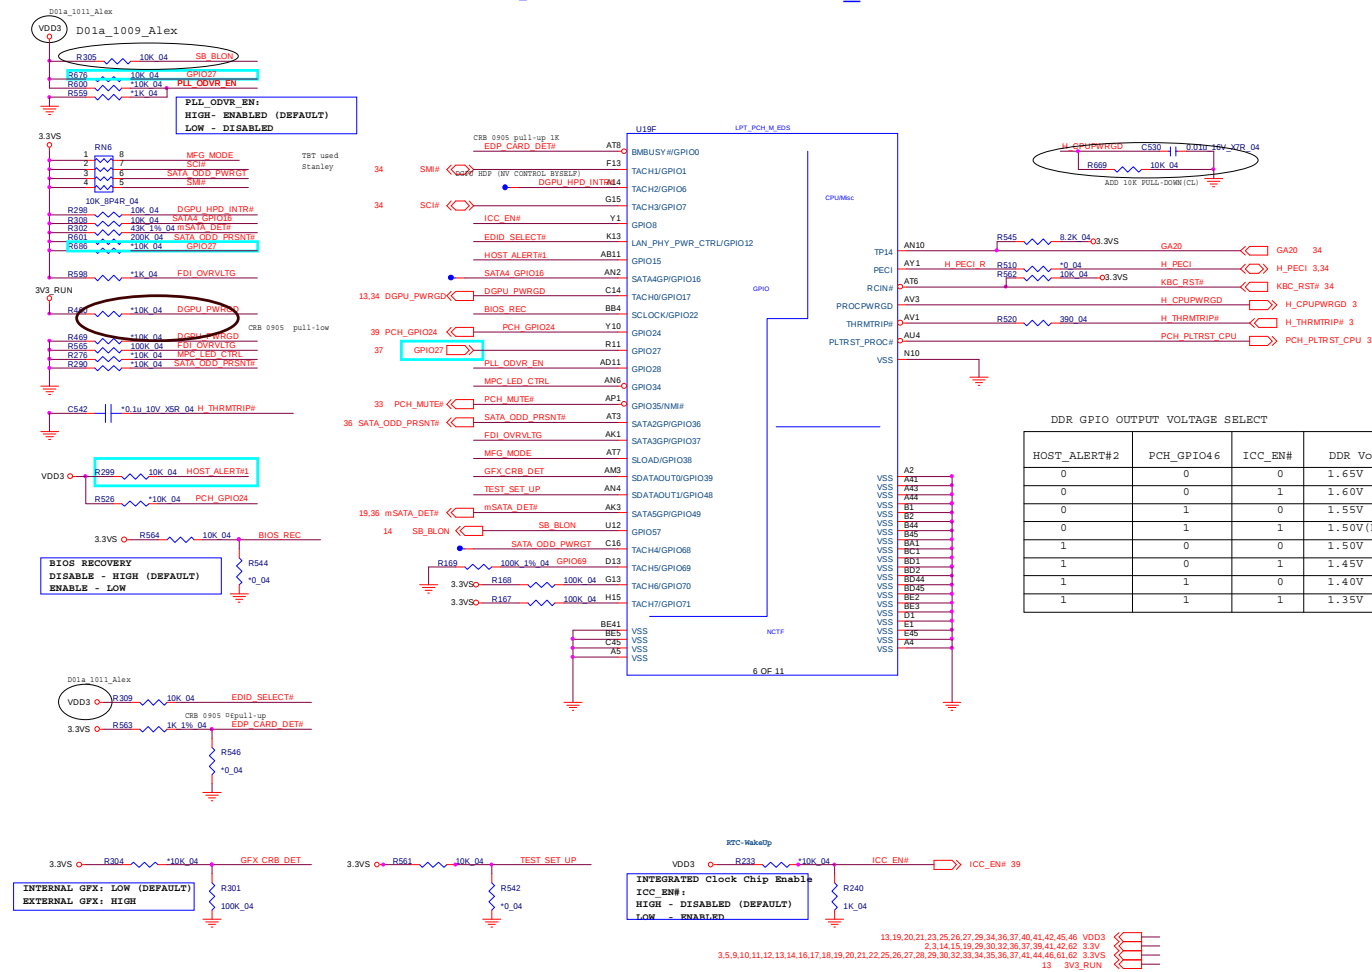


Sheet 24 of 60
 PCH 6/9 - GPIO,
 CPU


PCH 7/9 - Power

Sheet 25 of 60
PCH 7/9 - Power

Lynx Point (POWER)

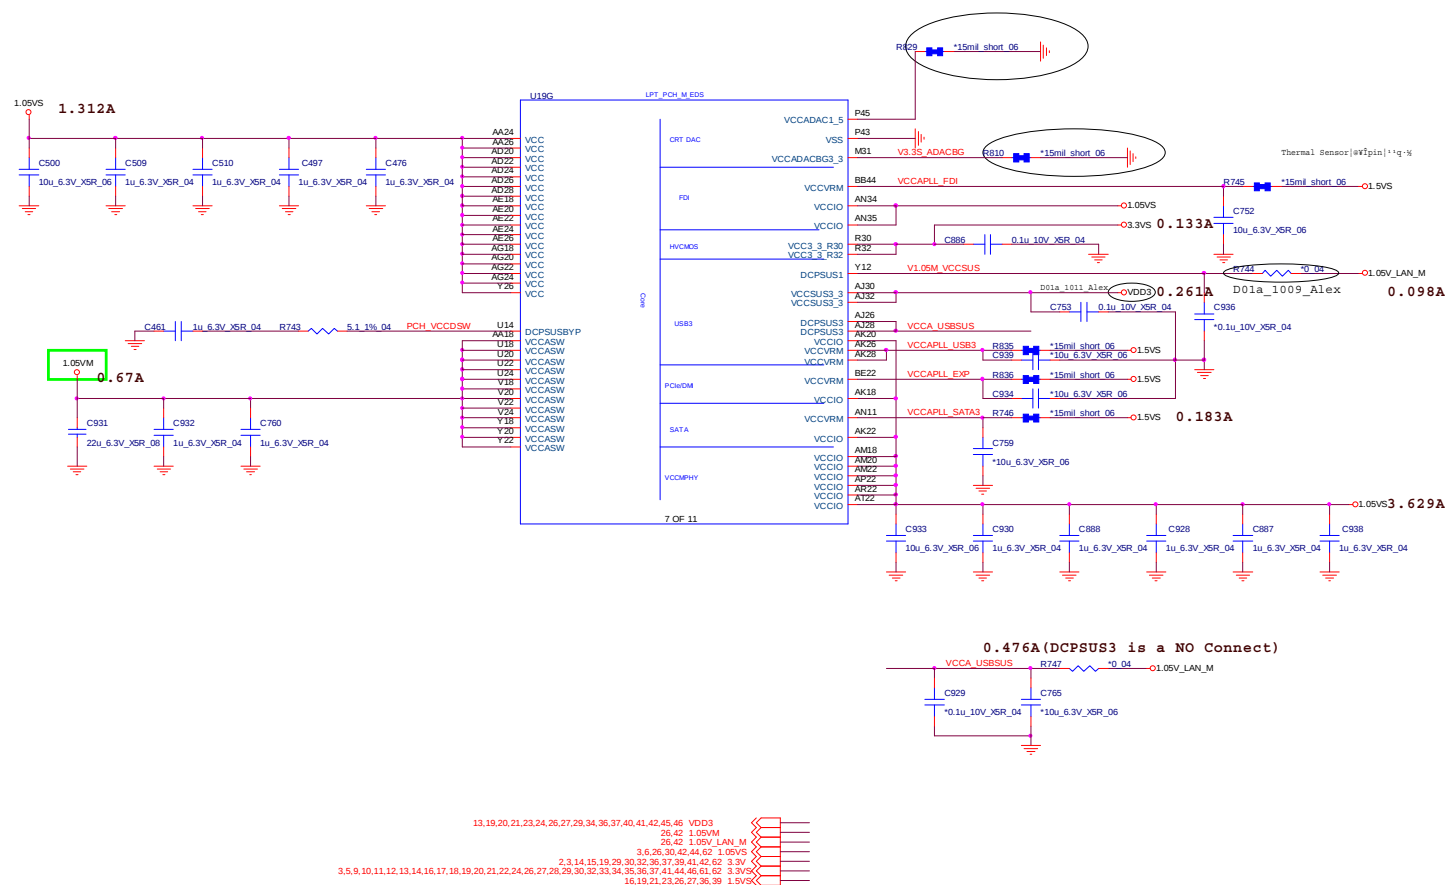



Lynx Point (POWER)



Schematic Diagrams


PCH 9/9 - CLK, GND

Sheet 27 of 60
PCH 9/9 - CLK, GND

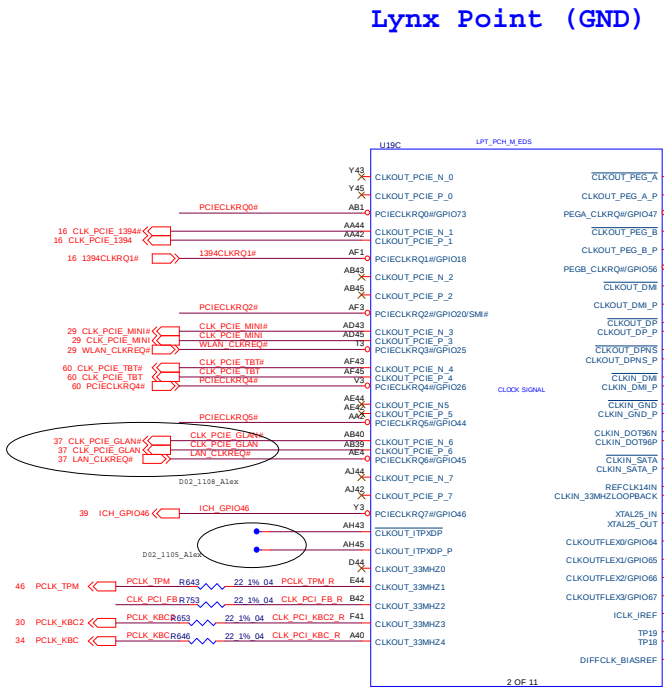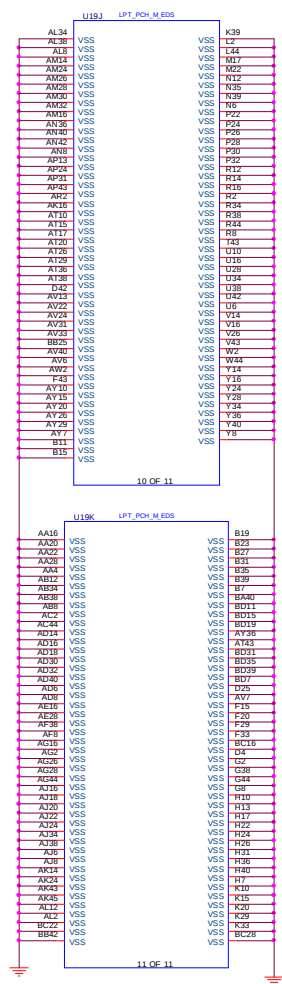


Garby D03 Update


PCI-E x1	Usage
Lane 1	1394
Lane 2	X
Lane 3	WLAN
Lane 4	TBT
Lane 5	X
Lane 6	GLAN/CARD READER
Lane 7	X

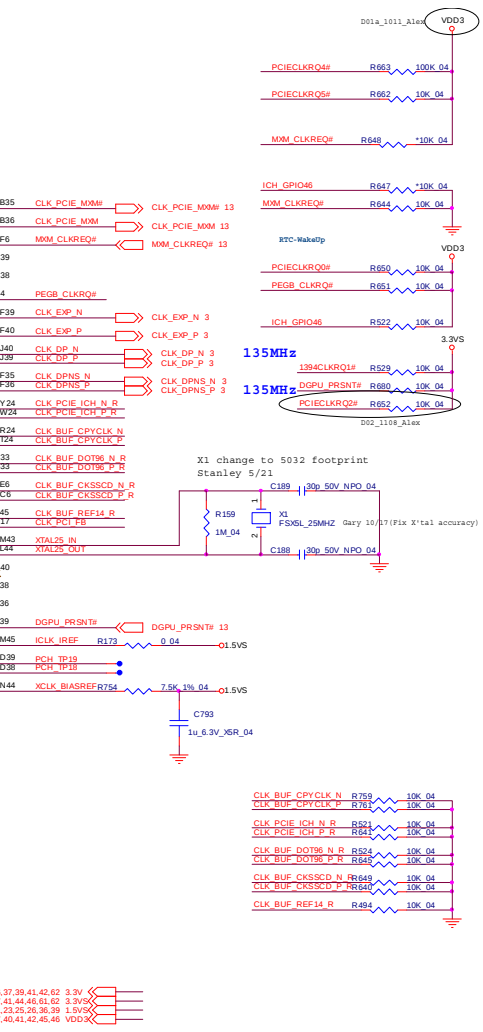

Schematic Diagrams




SLG55583 USB Charging PORT



USB+eSATA, USB Charging B - 29


B. Schematic Diagrams

Sheet 29 of 60
USB 2.0, CCD,
Mini PCIE, LED

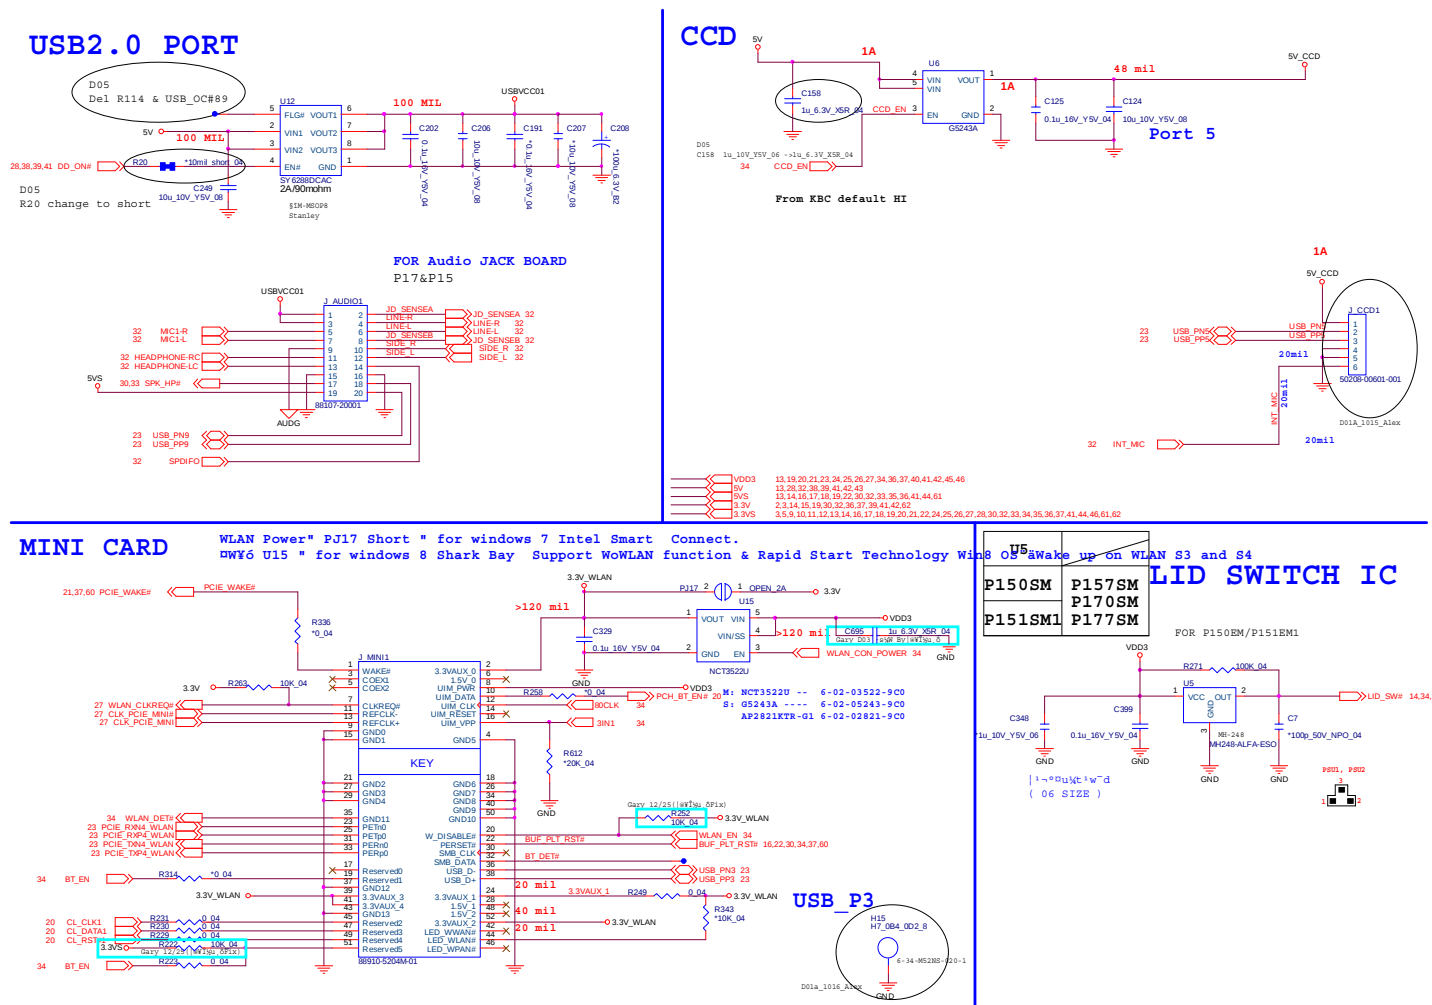


LED, Hotkey, LID SW, Fan


CPU FAN CONTROL

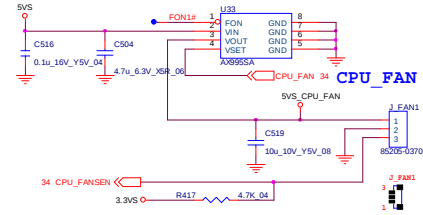


BAT LED




VGA FAN CONTROL

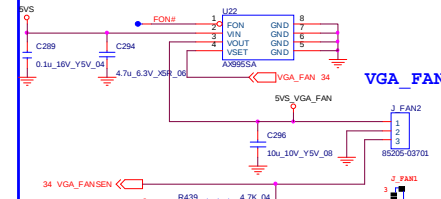

P150SM/P151SM1 only

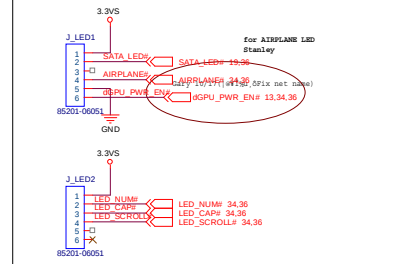



MB to EC BOARD CONN

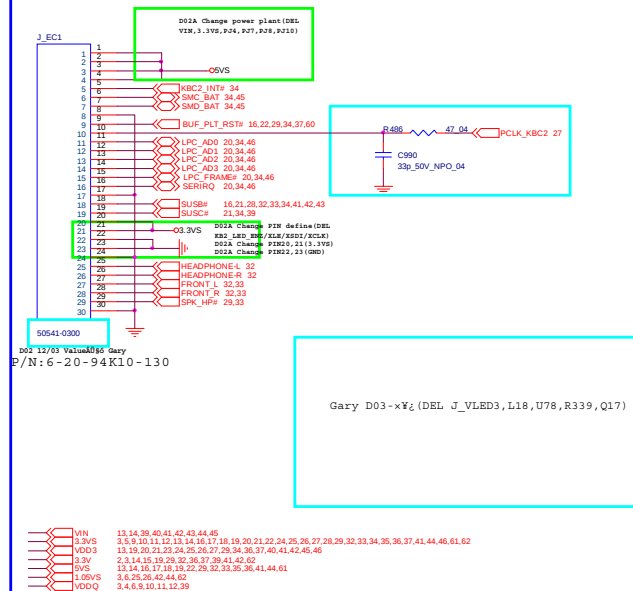

Sheet 30 of 60
LED, Hotkey, LID
SW, Fan




RJ 45

Sheet 31 of 60
RJ 45

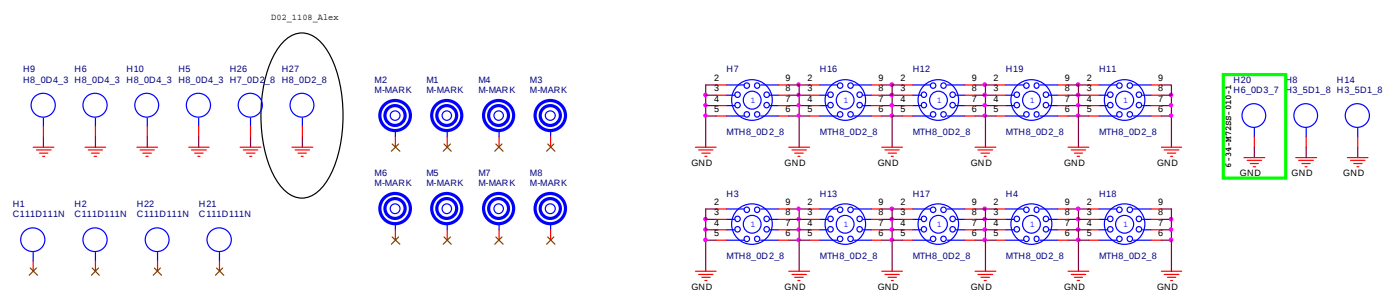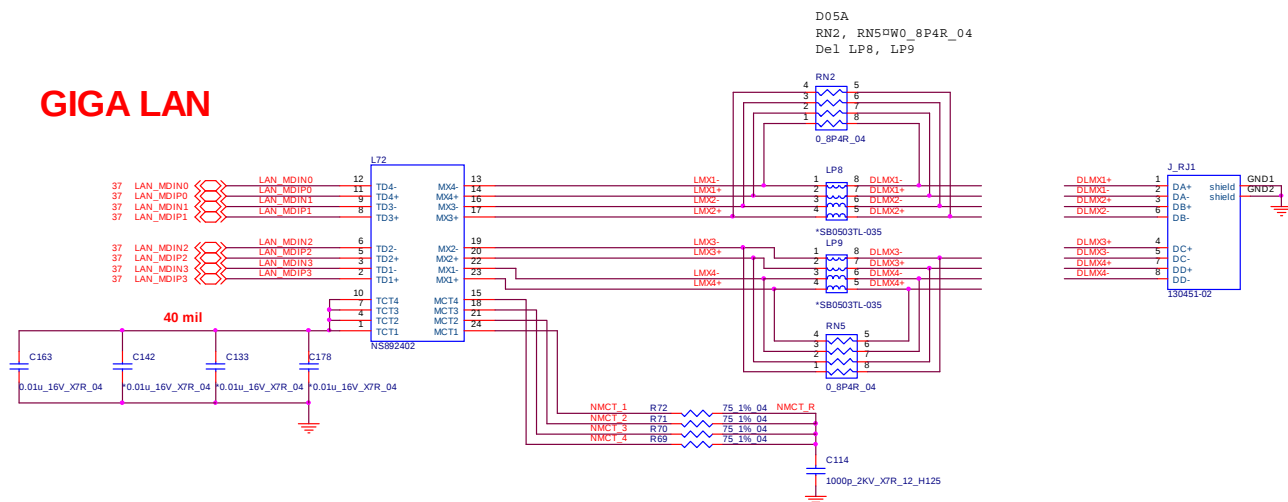


3.3V 2,3,14,15,19,29,30,32,36,37,39,41,42,62

Schematic Diagrams

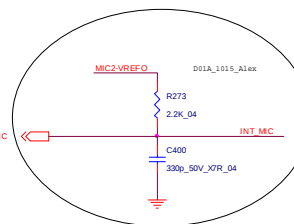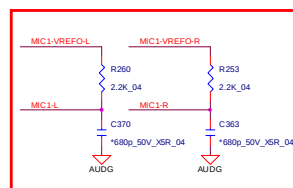


	3.3V	2, 3, 14, 15, 19, 29, 30, 36, 37, 39, 41, 42, 62
	3.3VS	3, 5, 9, 10, 11, 12, 13, 14, 16, 17, 18, 19, 20, 21, 22, 24, 25, 26, 27, 28, 29, 30, 33, 34, 35, 36, 37, 41, 44, 46, 61, 62
	5V	13, 28, 29, 38, 39, 41, 42, 43
	5VS	13, 14, 16, 17, 18, 19, 22, 29, 30, 33, 35, 36, 41, 44, 61

Sheet 33 of 60
APA2607-
TPA2008D2




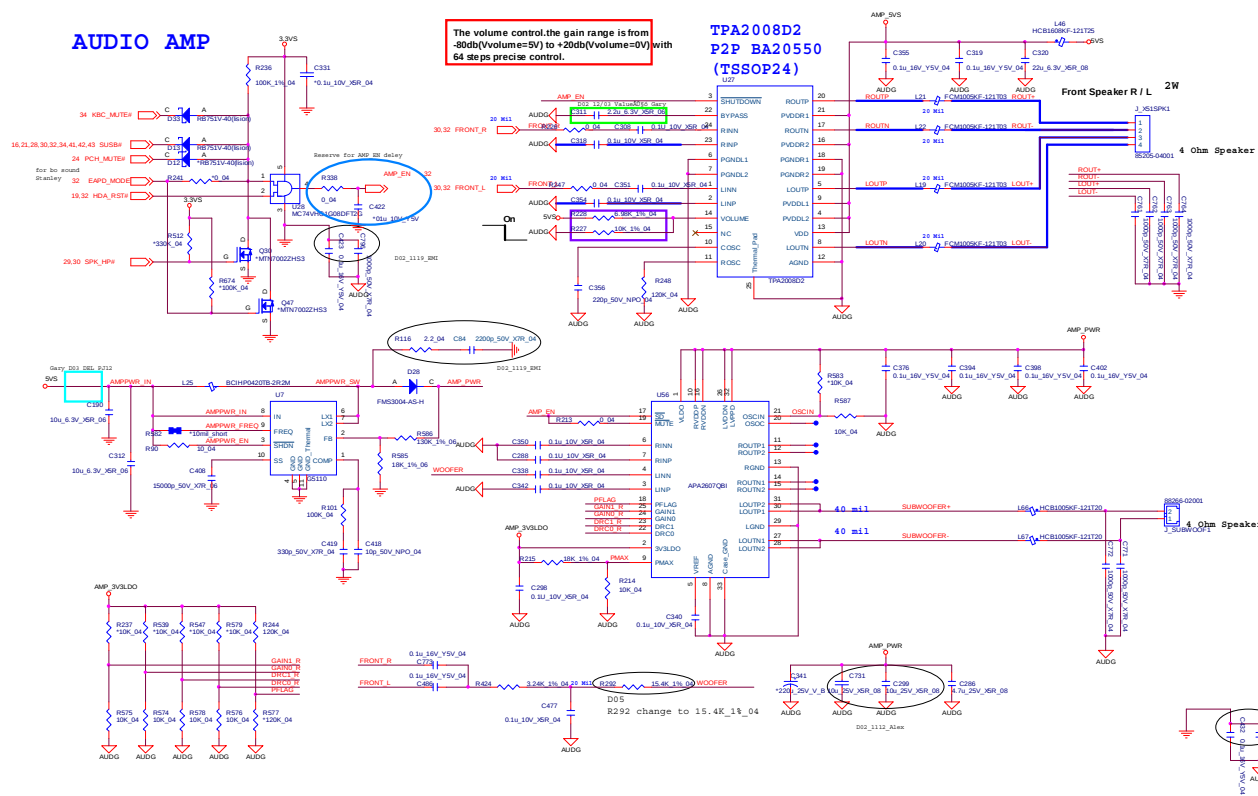


SVS 13,14,16,17,18,19,22,29,30,32,35,36,41,44,61
3-SVS 3,5,9,10,11,12,13,14,16,17,18,19,20,21,22,24,25,26,27,28,29,30,32,34,35,36,37,41,44,46,61,62



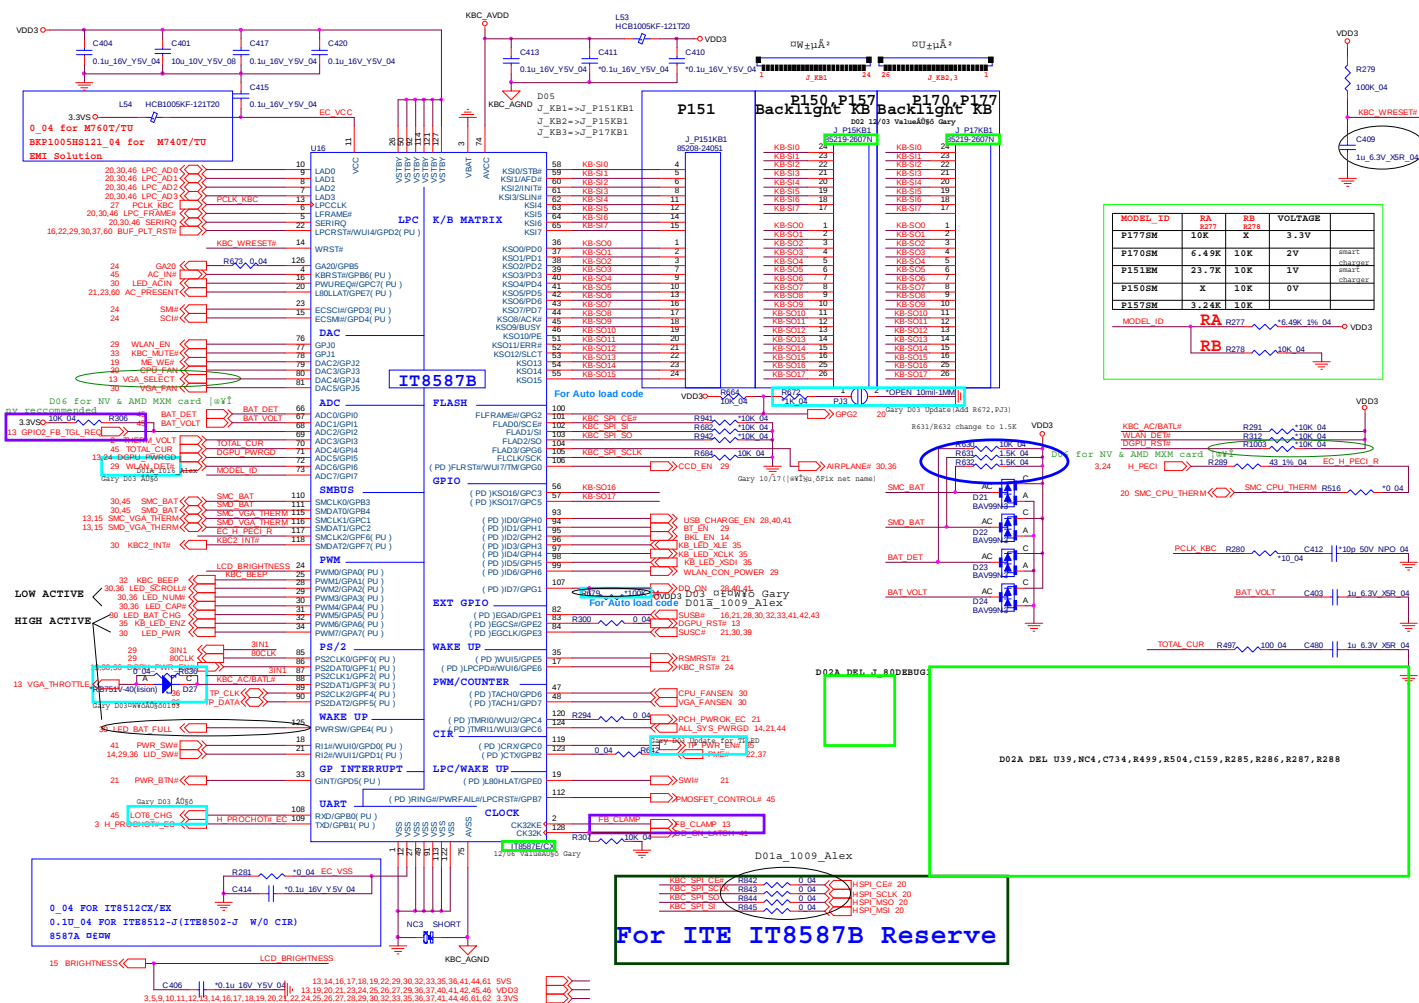


Backlight Keyboard




Sheet 35 of 60
Backlight
Keyboard

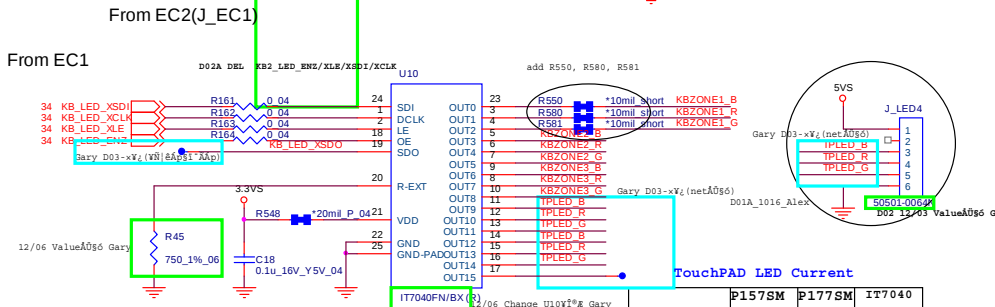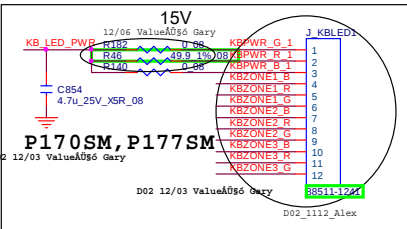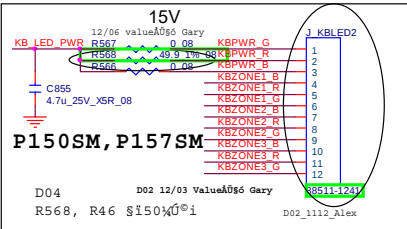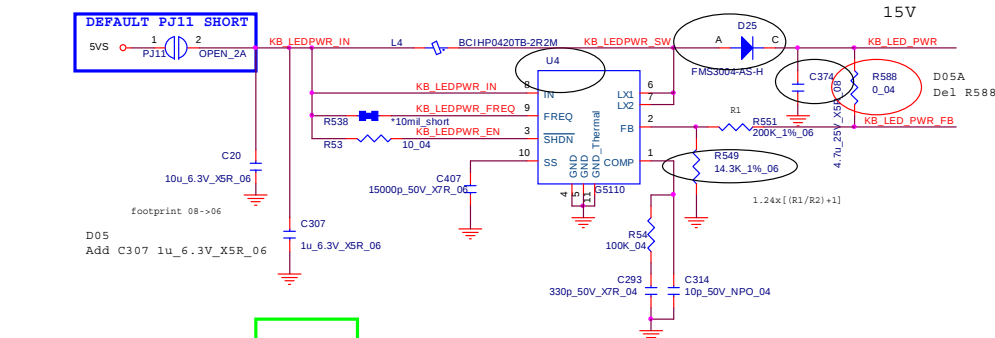

	P157SM	P177SM	IT7040
LED Qty	4+4	5+5	5 pin
Total Current (GROUP 12mA/LED)	96mA	120mA	225mA
Total Current (GROUP 13 2mA/LED)	106mA	132mA	225mA
Total Current (GROUP 12 2mA/LED)	98mA	122mA	225mA

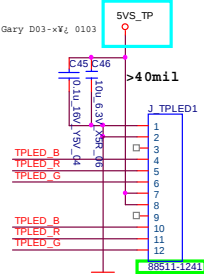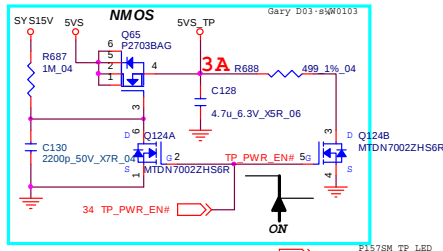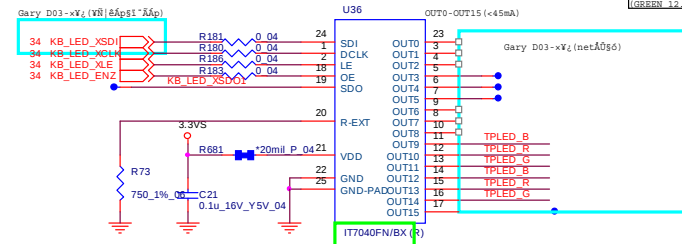


Sheet 36 of 60
mSATA, FAN, TP,
FP, MULTI-CON

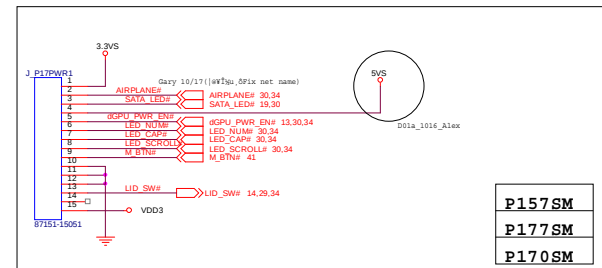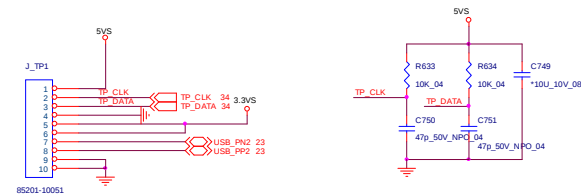


Card Reader RTL8411

Sheet 37 of 60
Card Reader
RTL8411

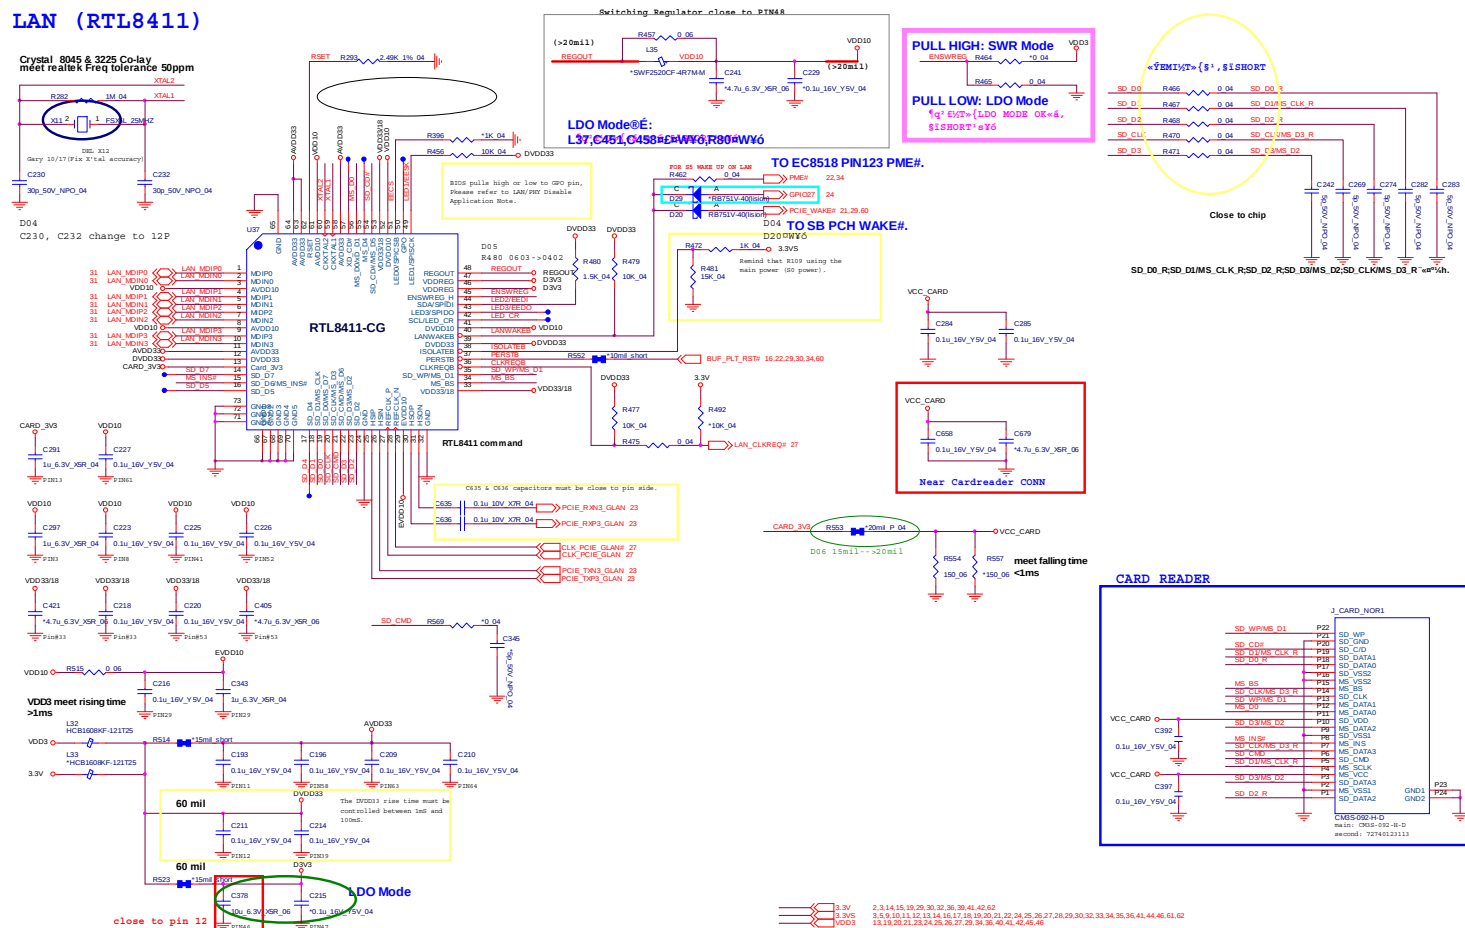

USB 3.0

USB3.0 PORT2

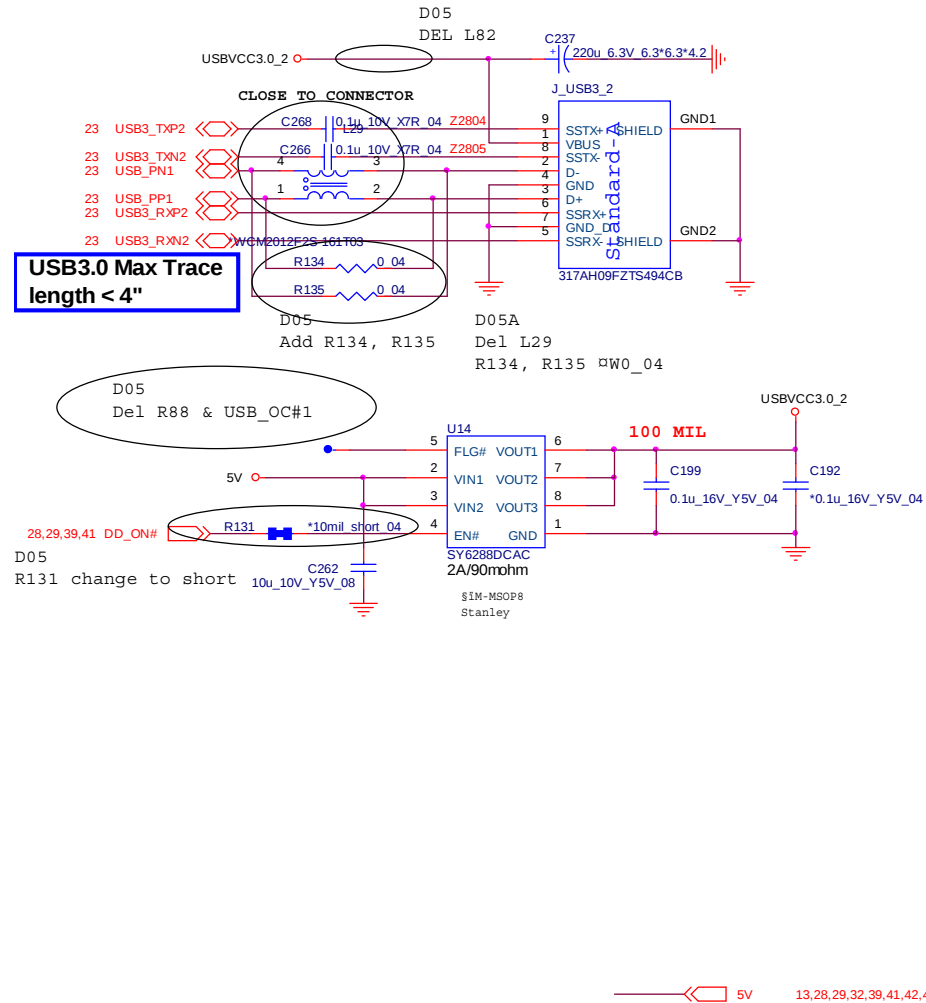

Sheet 38 of 60
USB 3.0

Schematic Diagrams

DDR 1.35V/0.75VS PCH 1.5V

Sheet 39 of 60
DDR 1.35V/0.75VS
PCH 1.5V

1.35V/0.75VS

VTT MEM

2A


1.35V

20A

HOST_ALERT#2	PCH_GPIO46	ICC_EM#	DDR_Vout	
0	0	0	1.65V	
0	0	1	1.60V	
0	0	1	1.55V	
0	1	1	1.50V (DEFAULT)	
1	0	0	1.50V	
1	0	1	1.45V	
1	1	0	1.40V	
1	1	1	1.35V	





B.Schematic Diagrams

Sheet 40 of 60
VDD3, VDD5




B. Schematic Diagrams

Sheet 41 of 60
5VS, 3.3VS, 1.5VS

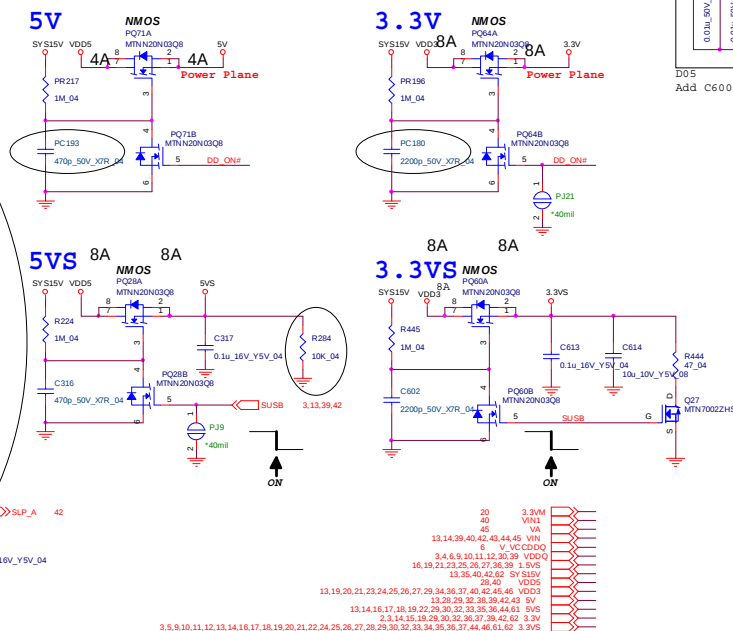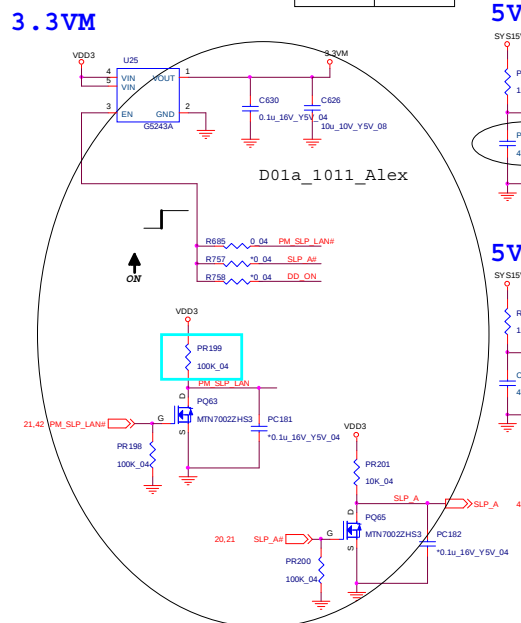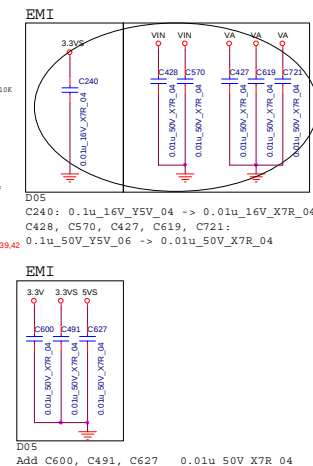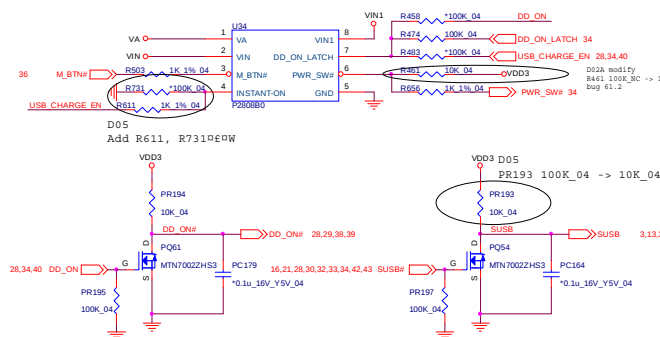


Power 1.05VS B - 43

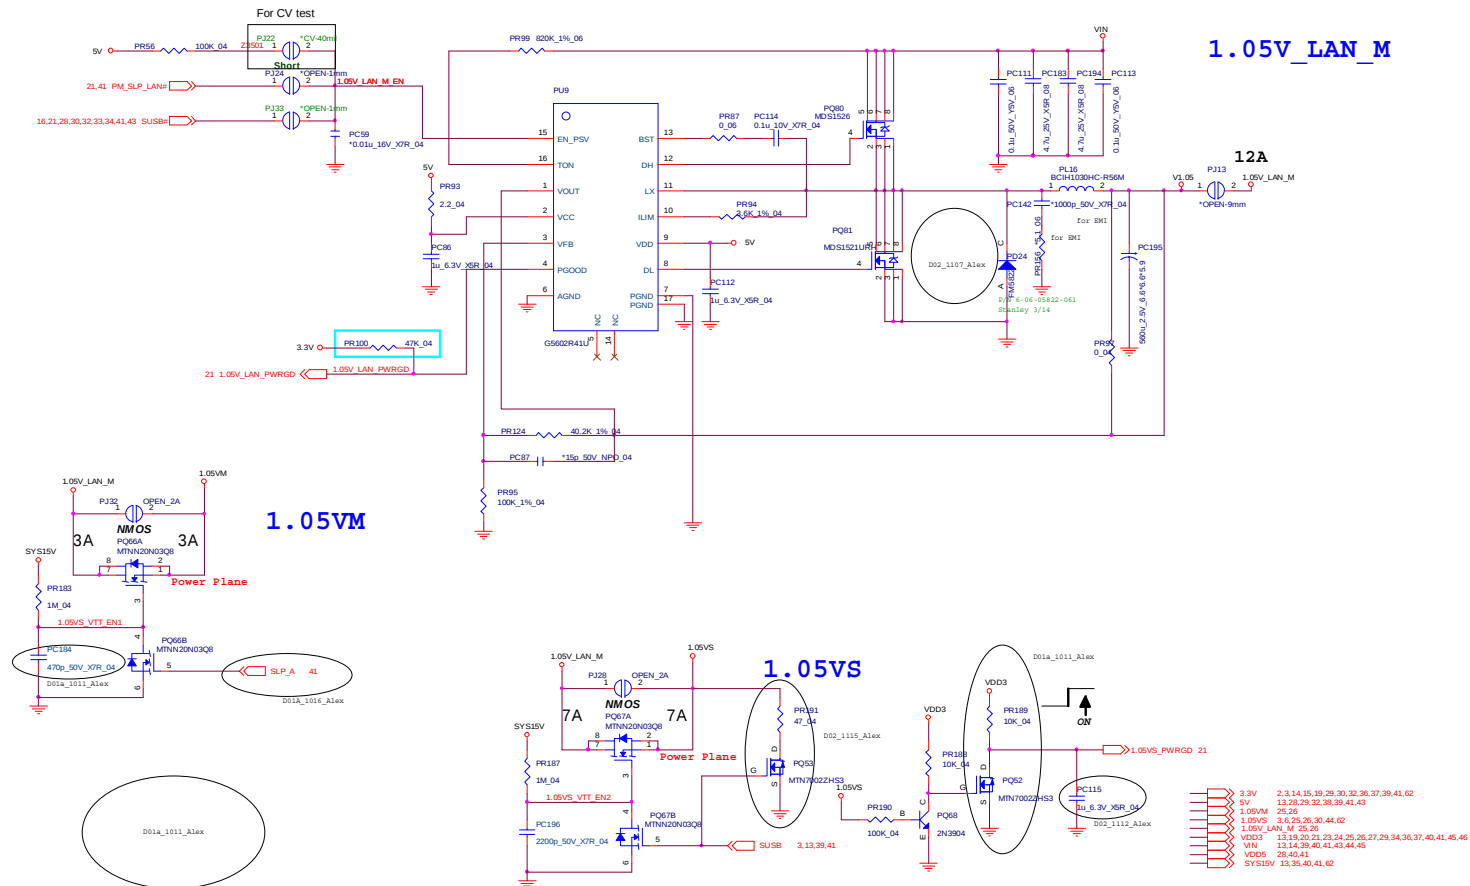


Schematic Diagrams

Power V-Core 1

Sheet 43 of 60
Power V-Core 1

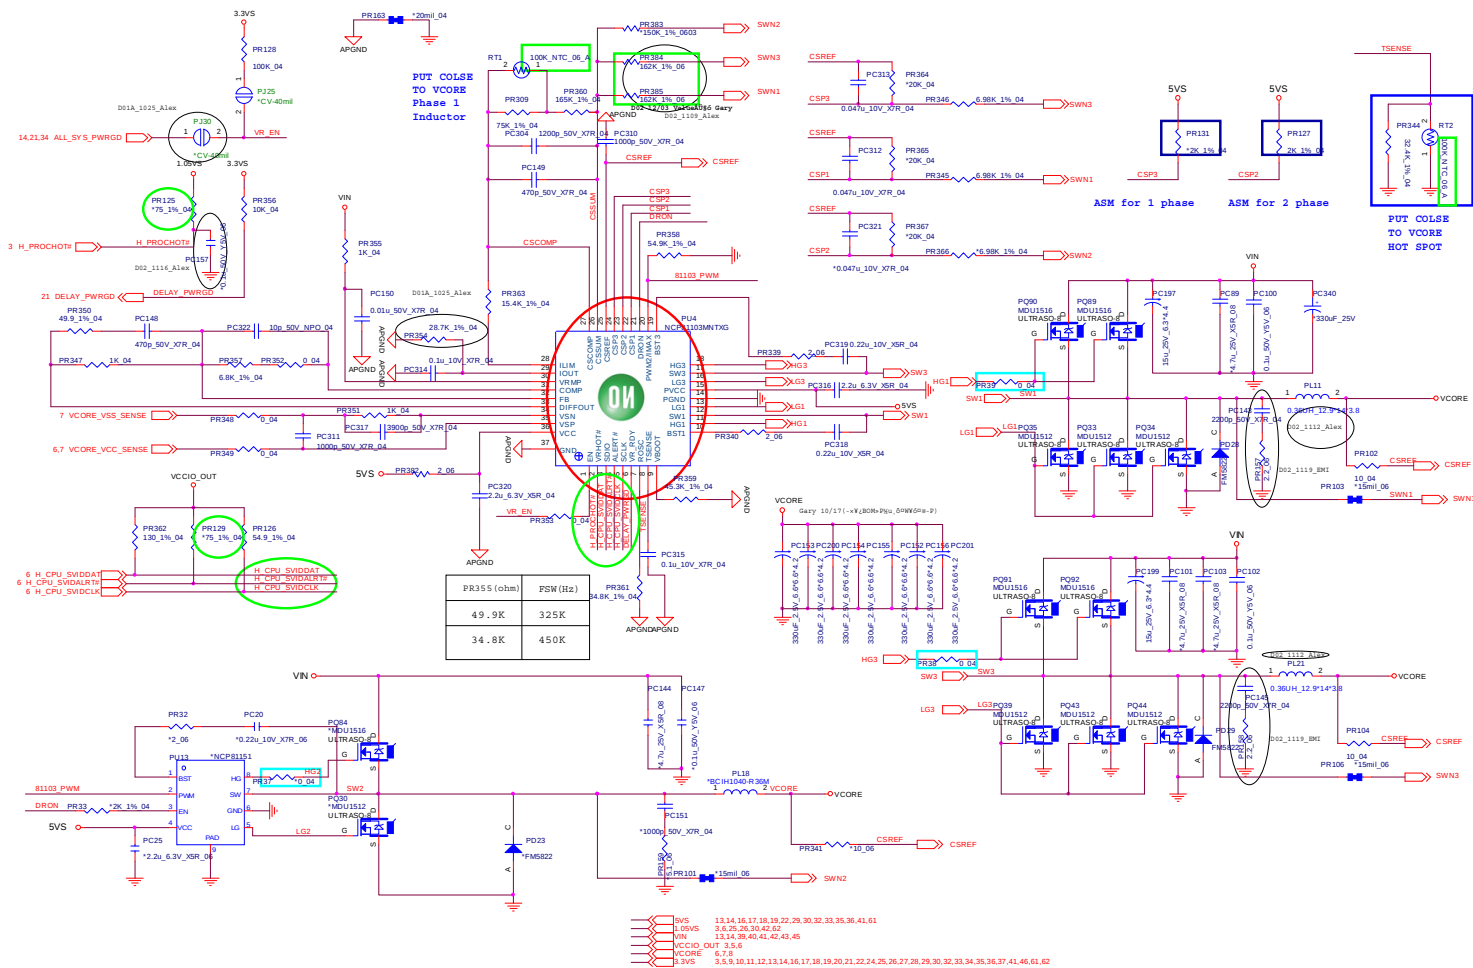

AC_In, Charger B - 45




Schematic Diagrams

TPM


SLB9635TT & SLB9655TT Co-Layout

Sheet 45 of 60
TPM




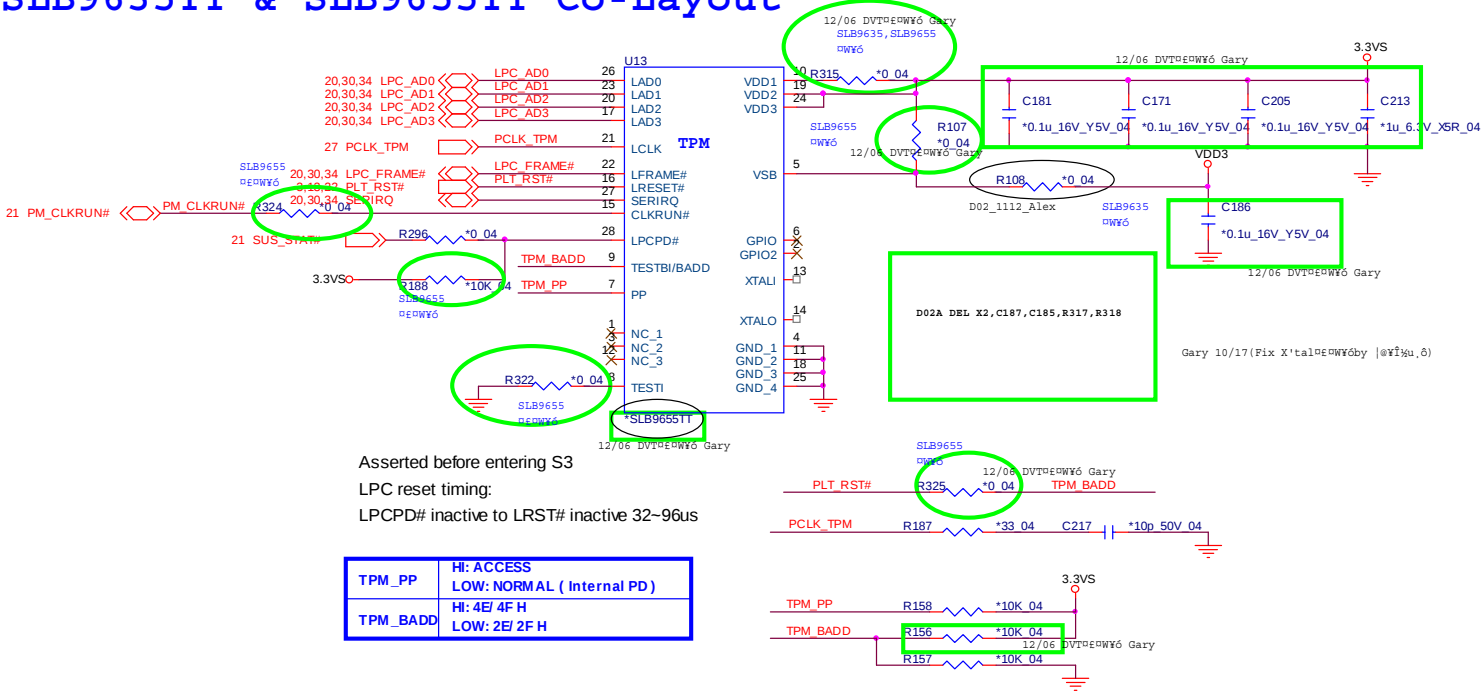


Audio Board

USB PORT

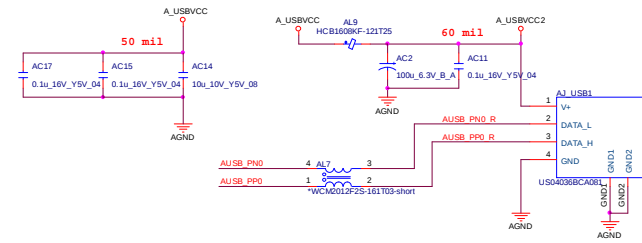Sheet 46 of 60
Audio Board




AUDIO JACK

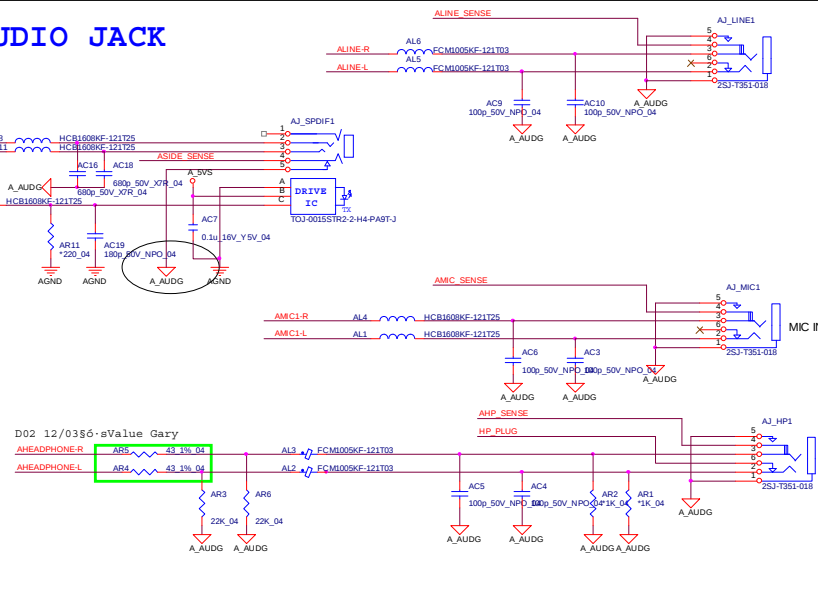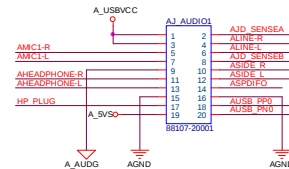



Schematic Diagrams

P150/151 ODD Board


Sheet 47 of 60
P150/151 ODD
Board

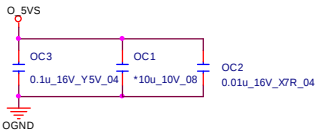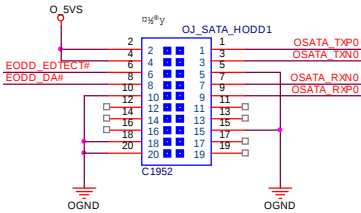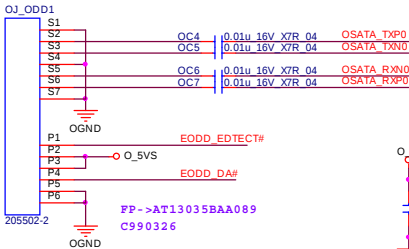

P150 ONLY



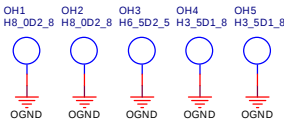


The TESD_GND trace has to be wide (> 20mil)

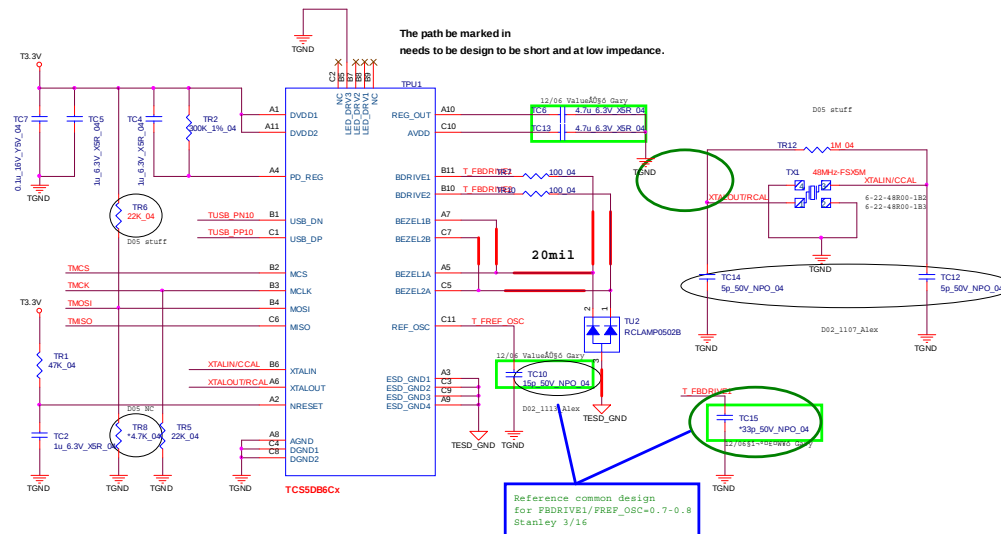


P150/151 Click Board B - 49

Sheet 49 of 60
P150/170SM LED 1
Board

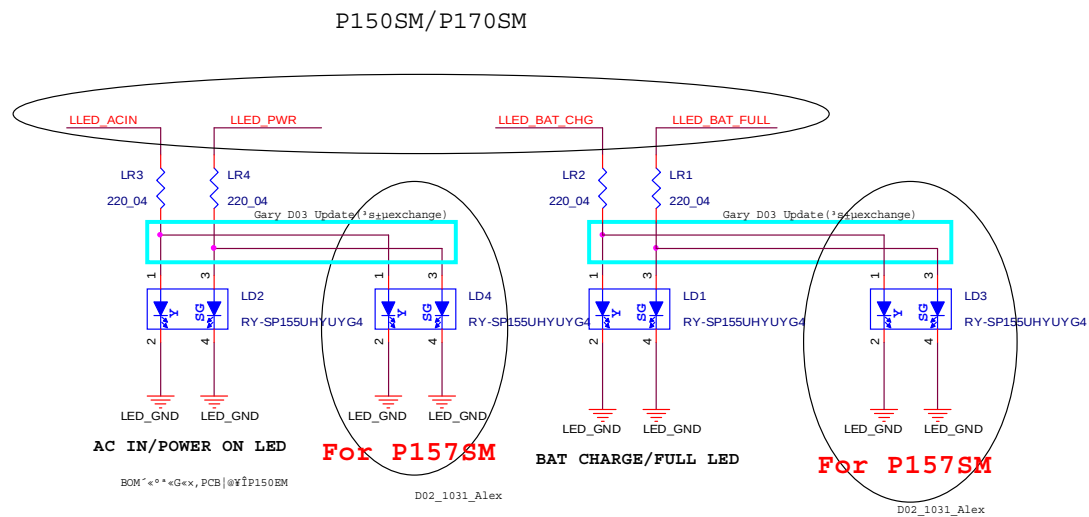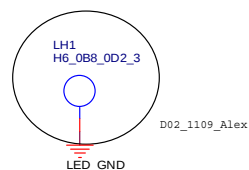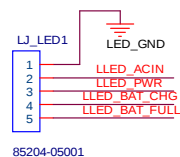

LD1, LD2	LD3, LD4
P150SM	P157SM
P151SM1	
P170SM	
P177SM	

P151 LED 2 Board

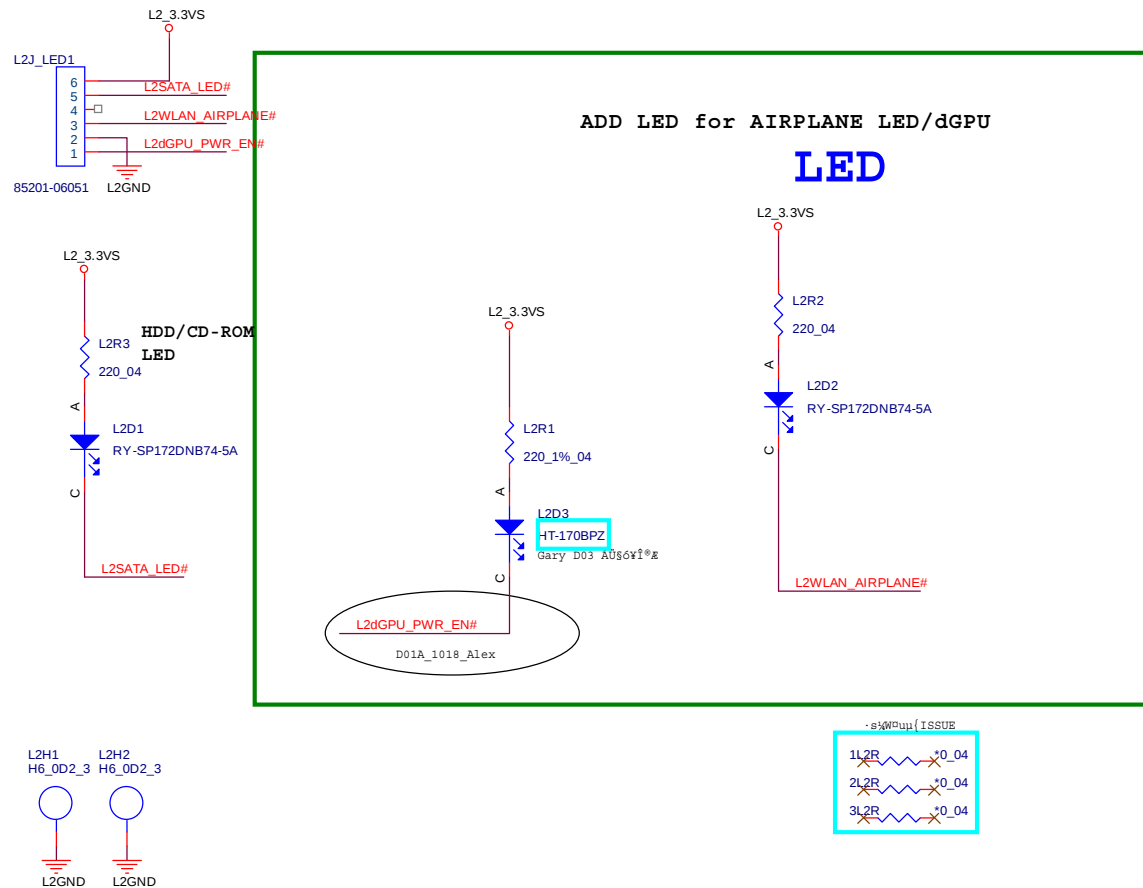


Sheet 50 of 60
P151 LED 2 Board

P151 LED 3 Board



B.Schematic Diagrams

Sheet 51 of 60
P151 LED 3 Board

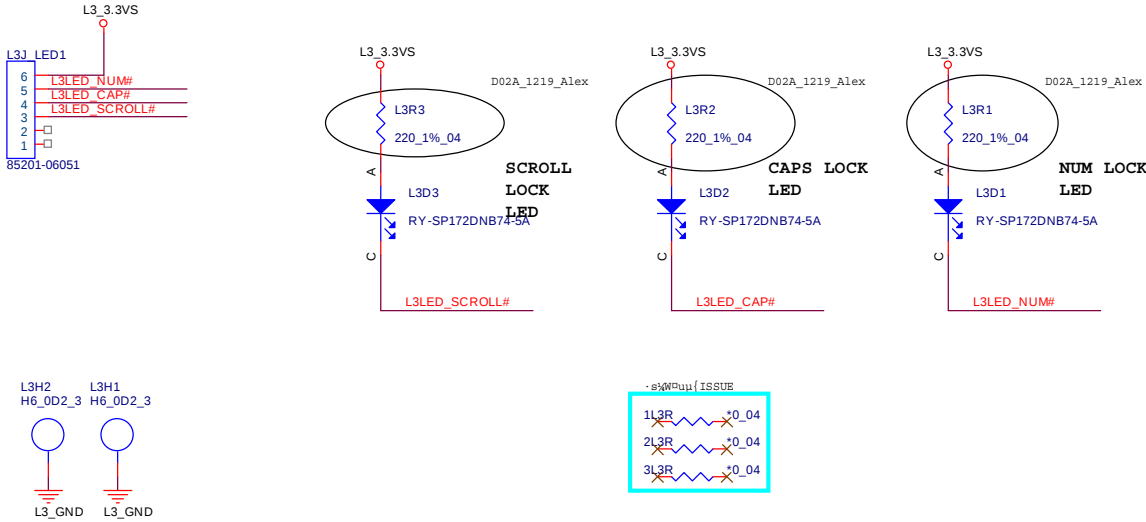




P151SM

P170 HDD & ODD Board

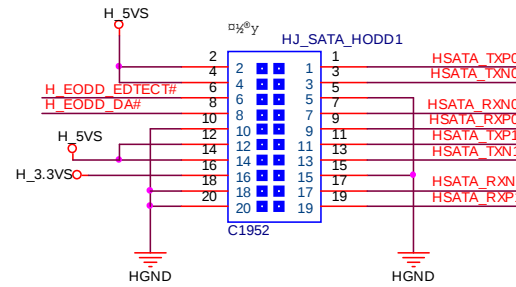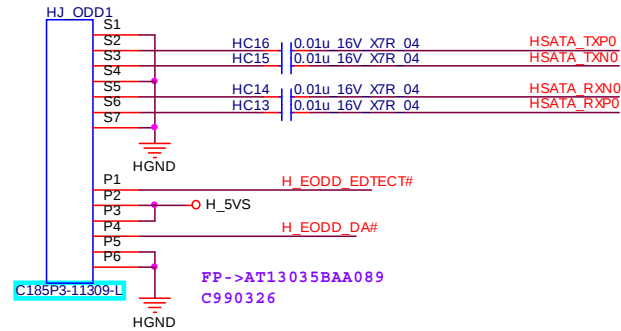

Sheet 52 of 60
 P170 HDD& ODD
 Board


P170 ONLY

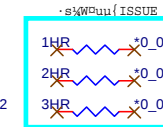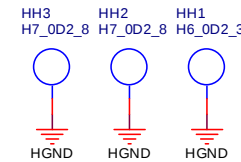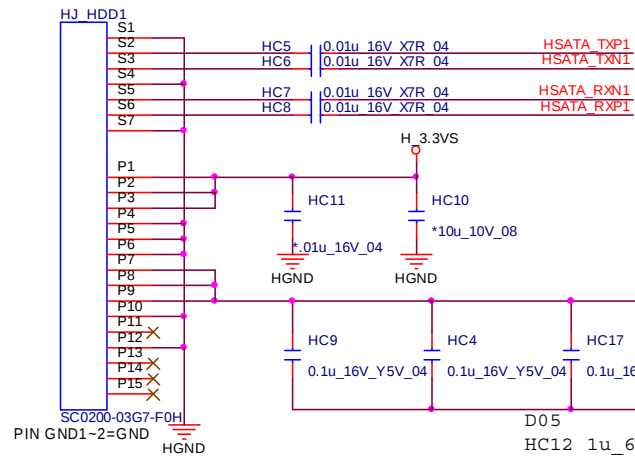

Schematic Diagrams







P170 LED Board

Sheet 53 of 60
P170 LED Board



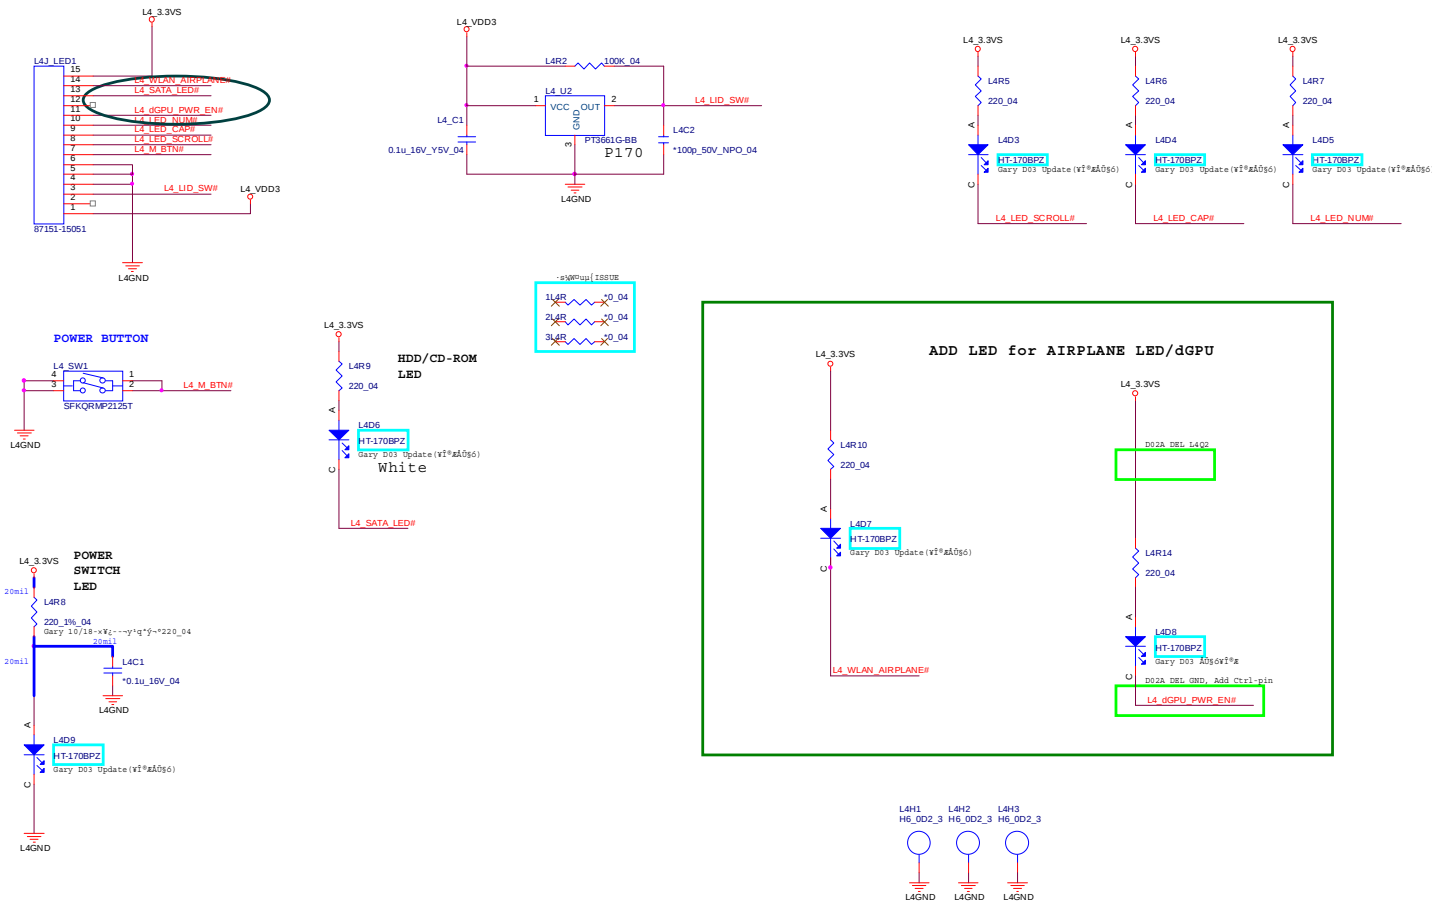


[illegible]

It is strongly recommended that the **TESD_GND** has a dedicated connection to the system chassis or cable shield.

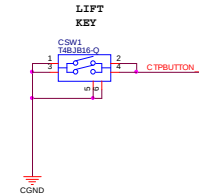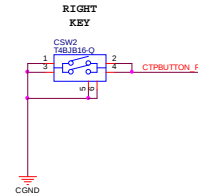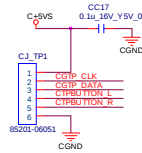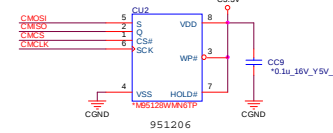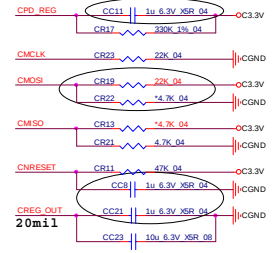[illegible]

D05
CC8, CC21 1u_6.3V_Y5V_04 -> 1u_6.3V_X5R_04

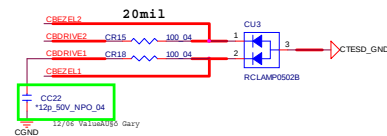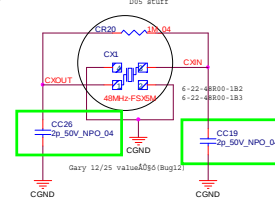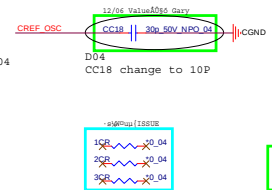


Sheet 55 of 60
P170 Fingerprint
Board



P150 HDD Board







Sheet 56 of 60
P150 HDD Board

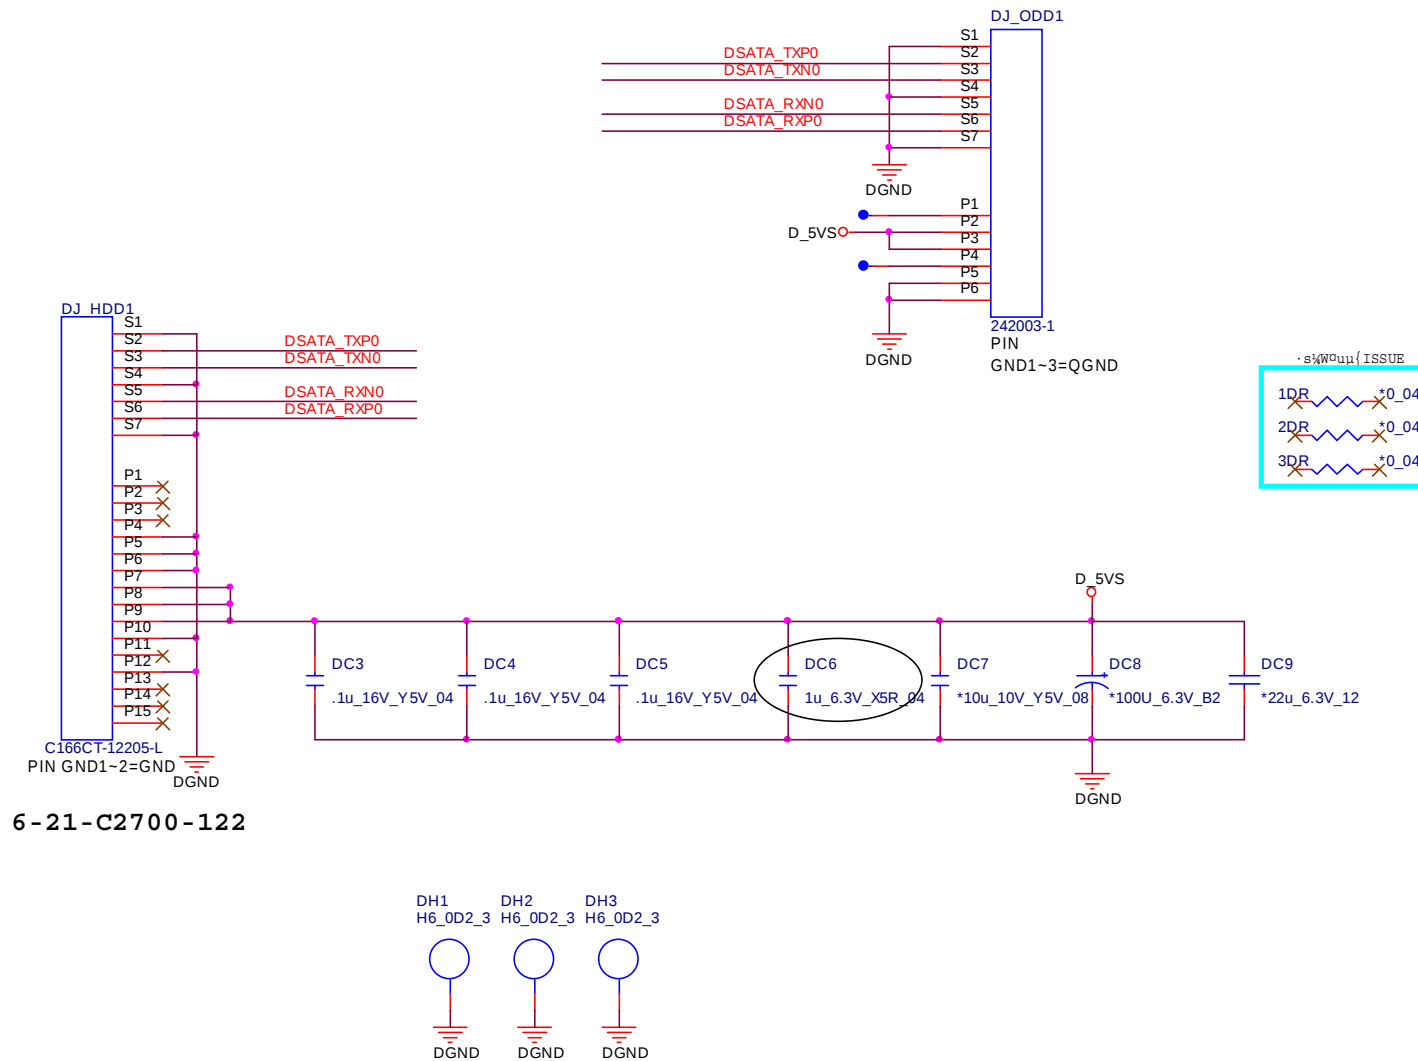


Schematic Diagrams

P150 LED Board_L




Sheet 57 of 60
P150 LED Board_L

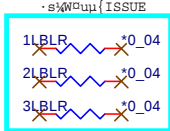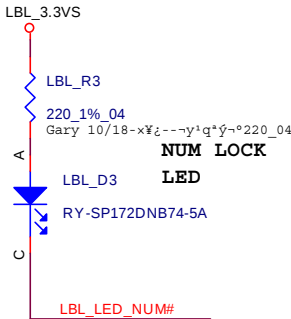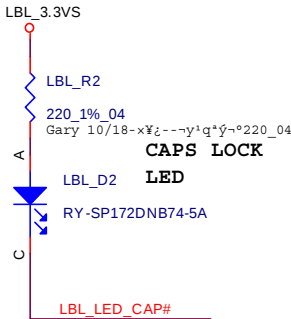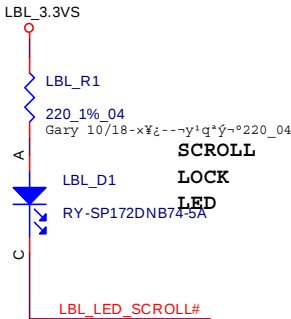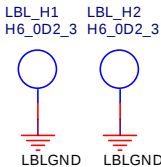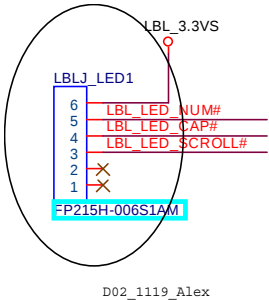

P150 LED Board_R

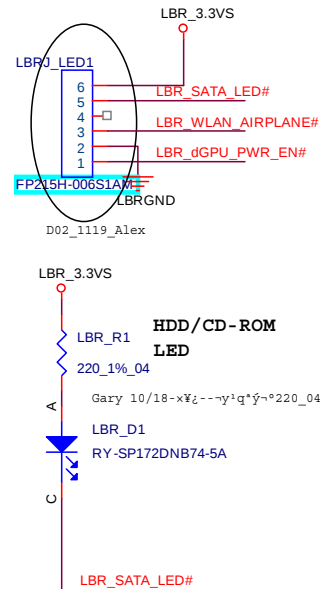

LED

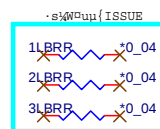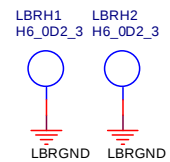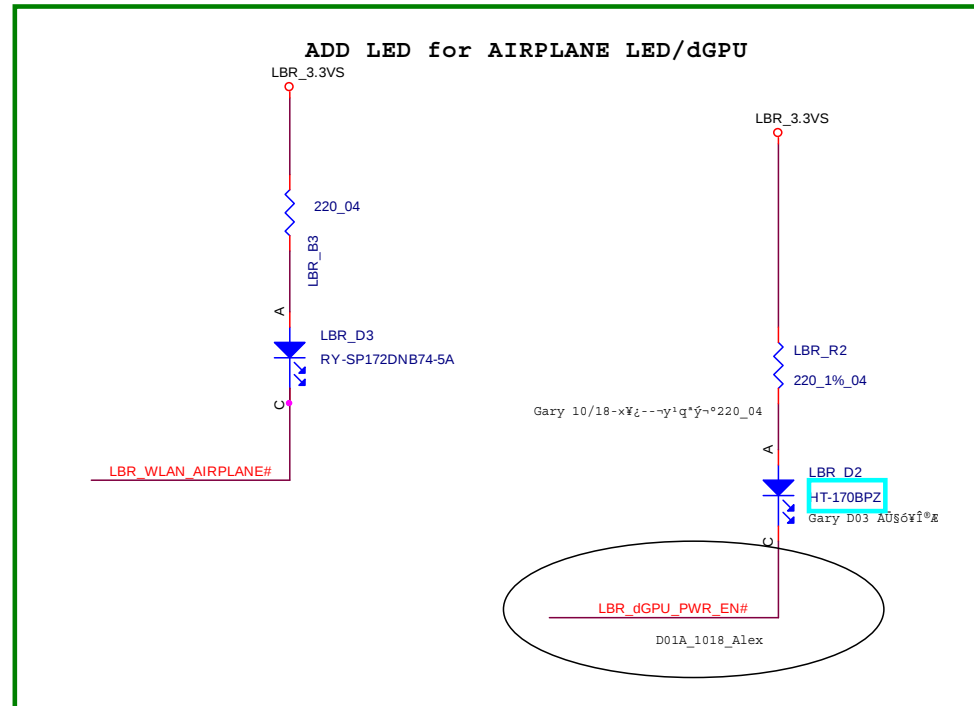

EC 721...s%WPIn2: BT_LED# "NWindows 8 "iVf. (pull hi 10K to 3.3V)



Sheet 58 of 60
P150 LED Board_R

B.Schematic Diagrams


Schematic Diagrams

mSATA Board


Sheet 59 of 60
mSATA Board

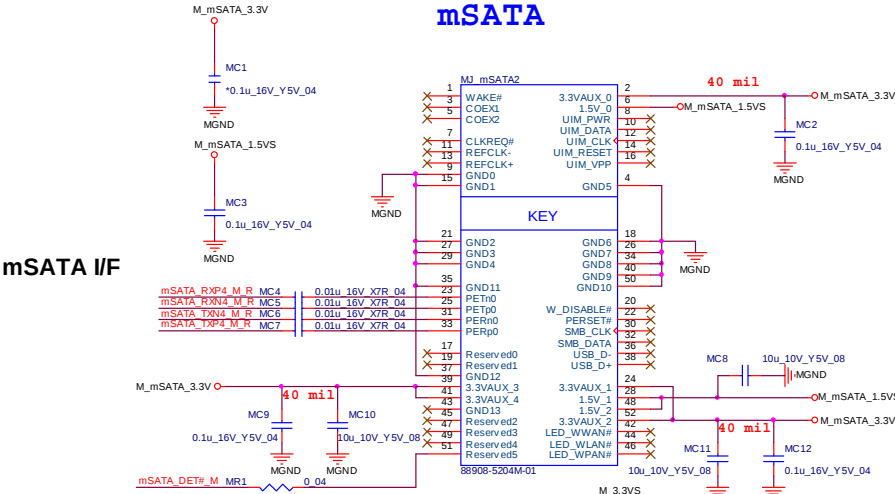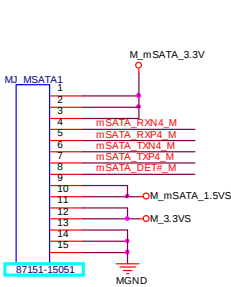

mSATA REDRIVER

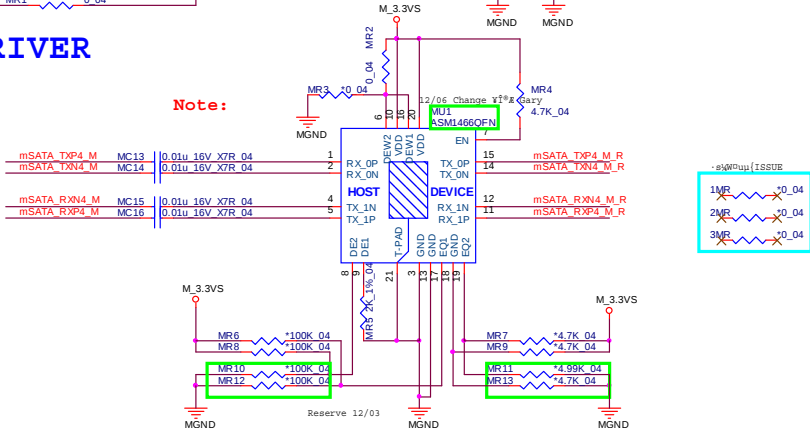

Power on Sequence

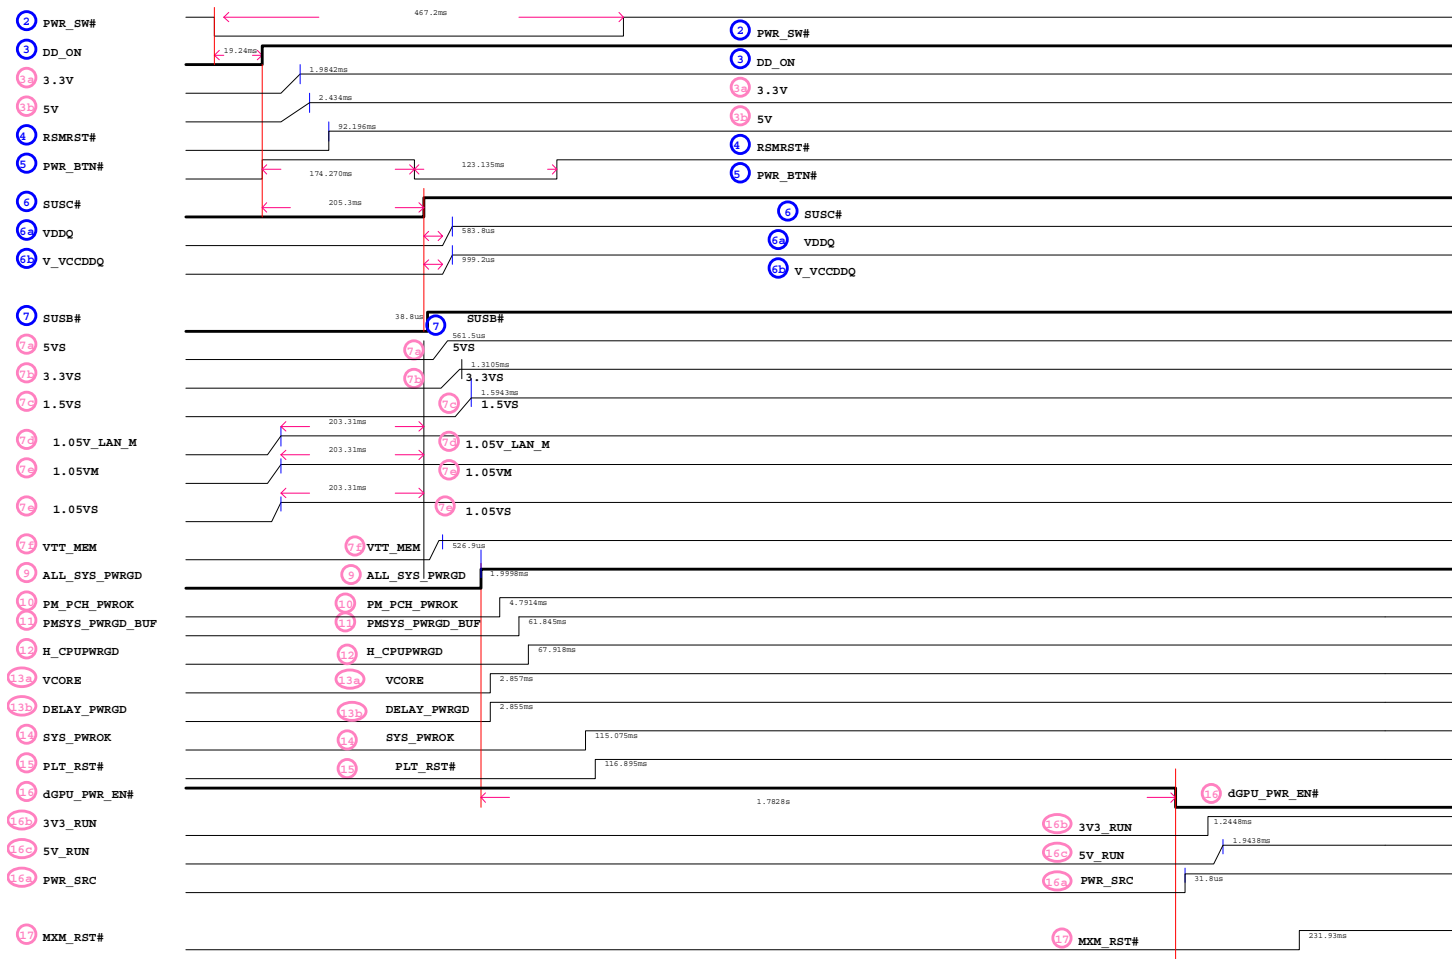Sheet 60 of 60
Power on
Sequence

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flashdrive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are **V1.01.XX or higher** as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: **DISK C:\>** (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

C:\> Flash.bat

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.