

SERVICE MANUAL

W270EUQ Series

notebook



Notebook Computer

W270EUQ

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
April 2012

Trademarks

Intel, Pentium and Intel Core are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *W270EUQ* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.
Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

Preface

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 3.42A or 18.5V, 3.5A (**65W**) minimum AC/DC Adapter.

CAUTION

This Computer's Optical Device is a Laser Class 1 Product

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

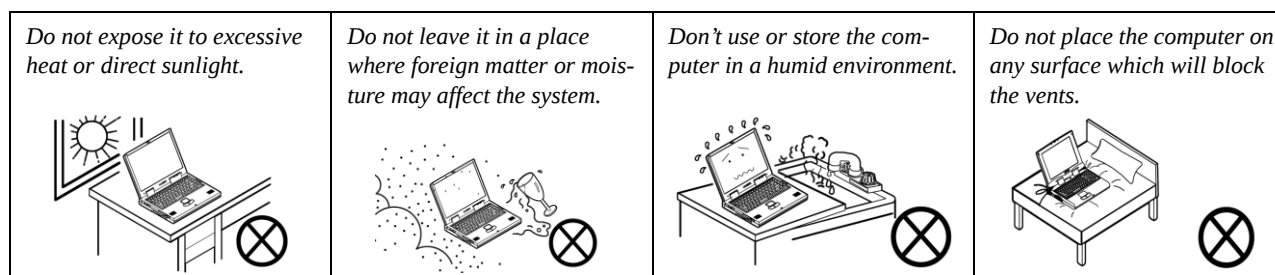


3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.



Preface


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

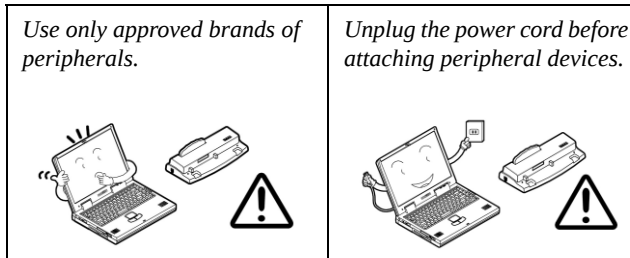

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

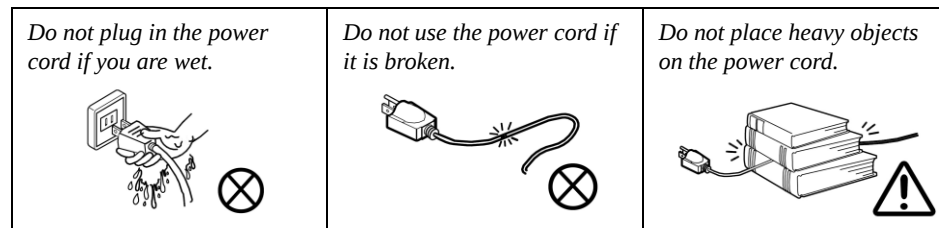

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.



Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Related Documents

You may also need to consult the following manual for additional information:


User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 130 degrees); use the other hand (as illustrated in [Figure 1](#)) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

Figure 1
Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In

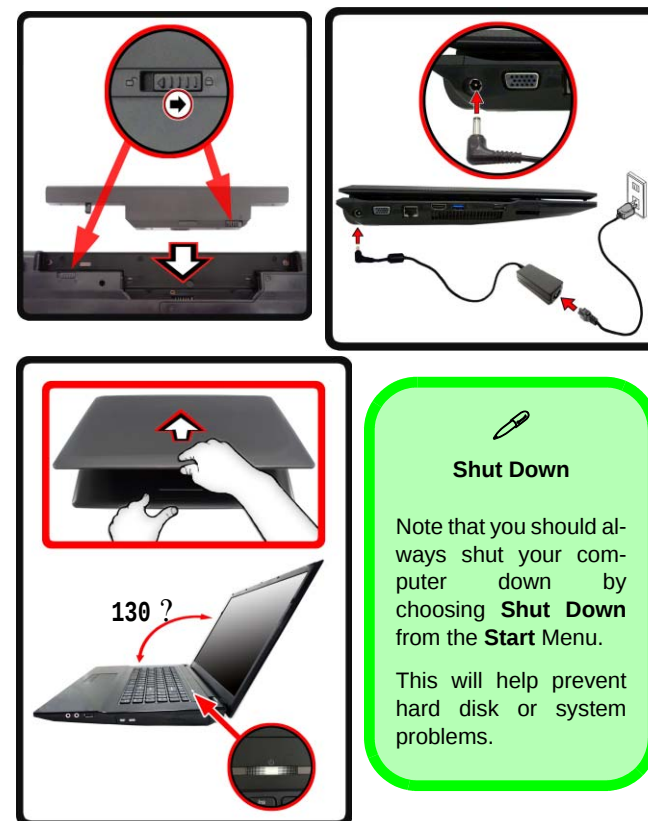

Contents

Introduction1-1

Overview	1-1
Specifications	1-2
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right Side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11

Disassembly2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Hard Disk Drive	2-6
Removing the Optical (CD/DVD) Device	2-8
Removing the System Memory (RAM)	2-9
Removing and Installing a Processor	2-11
Removing the Wireless LAN Module	2-14
Removing the Keyboard/CCD	2-15

Part ListsA-1

Part List Illustration Location	A-2
Top	A-3
Bottom	A-4
SATA BLU-RAY COMBO	A-5

SATA DVD DUAL	A-6
LCD	A-7

Schematic Diagrams.....B-1

System Block Diagram	B-2
Ivy Bridge Processor 1/7	B-3
Ivy Bridge Processor 2/7	B-4
Ivy Bridge Processor 3/7	B-5
Ivy Bridge Processor 4/7	B-6
Ivy Bridge Processor 5/7	B-7
Ivy Bridge Processor 6/7	B-8
Ivy Bridge Processor 7/7	B-9
DDR3 SO-DIMM_0	B-10
DDR3 SO-DIMM_1	B-11
LVDS, Inverter	B-12
HDMI, CRT	B-13
PantherPoint - M 1/9	B-14
PantherPoint - M 2/9	B-15
PantherPoint - M 3/9	B-16
PantherPoint - M 4/9	B-17
PantherPoint - M 5/9	B-18
PantherPoint - M 6/9	B-19
PantherPoint - M 7/9	B-20
PantherPoint - M 8/9	B-21
PantherPoint - M 9/9	B-22
USB 3.0, Power, WLAN	B-23
CCD, 3G, TPM	B-24
Card Reader, LAN RTL8411	B-25
LAN (RTL8411), SATA HDD, ODD	B-26
USB 3.0 TI TUSB7320	B-27
KBC-ITE IT8518	B-28

Preface

LED, MDC	B-29
Audio Codec ALC269	B-30
USB Charger, Fan, TP, Multi-Conn	B-31
System Power	B-32
VDD3, VDD5	B-33
Power 1.5V/0.75V/1.8VS	B-34
Power 1.05VS	B-35
Power 0.85VS	B-36
Power V-Core1	B-37
Power V-Core2	B-38
Charger, AC In	B-39
Click Board	B-40
Audio Board/USB	B-41
Power Switch & LID Board	B-42
ODD Board	B-43
Power Sequence	B-44

Updating the FLASH ROM BIOS..... C-1

Download the BIOS	C-1
Unzip the downloaded files to a bootable CD/DVD/ or	
USB Flash drive	C-1
Set the computer to boot from the external drive	C-1
Use the flash tools to update the BIOS	C-2
Restart the computer (booting from the HDD)	C-2

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **W270EUQ** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Window 7*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **W270EUQ** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor

Intel® Core™ i7 Processor

i7-3612QM (2.1GHz)

6MB L3 Cache, 22nm, DDR3-1600MHz, TDP 35W

i7-3520M (2.90GHz)

4MB L3 Cache, 22nm, DDR3-1600MHz, TDP 35W

Intel® Core™ i5 Processor

i5-3360M (2.80GHz), i5-3320M (2.60GHz), i5-3210M (2.50GHz)

3MB L3 Cache, 22nm, DDR3-1600MHz, TDP 35W

Intel® Core™ i3 Processor

i3-3110M (2.40GHz)

3MB L3 Cache, 22nm, DDR3-1600MHz, TDP 35W

Intel® Core™ i7 Processor

i7-2620M (2.7GHz)

4MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Intel® Core™ i5 Processor

i5-2540M (2.60GHz), i5-2520M (2.50GHz), i5-2450M (2.50GHz), i5-2430M (2.40GHz), i5-2410M (2.30GHz)

3MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Intel® Core™ i3 Processor

i3-2370M (2.40GHz), i3-2350M (2.30GHz), i3-2330M (2.20GHz), i3-2310M (2.10GHz)

3MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Intel® Pentium® Processor

B970 (2.30GHz), B960 (2.20GHz), B950 (2.10GHz), B940 (2.00GHz)

2MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Intel® Celeron® Processor

B840 (1.90GHz), B815 (1.60GHz), B810 (1.60GHz), B800 (1.50GHz)

2MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

B720 (1.70GHz), B710 (1.60GHz)

1.5MB L3 Cache, 32nm, DDR3-1333MHz, TDP 35W

Core Logic

Intel® HM76 Chipset

Display

17.3" (43.94cm) HD+/ FHD

Memory

Two 204 Pin SO-DIMM Sockets Supporting **DDR3 1333/1600MHz** Memory

Memory Expandable up to 8GB

(The real memory operating frequency depends on the FSB of the processor.)

Video Adapter

Intel Integrated GPU

(GPU is Dependent on Processor)

Intel® HD Graphics

Dynamic Frequency (Intel Dynamic Video Memory Technology for up to 1.7GB)

Microsoft DirectX®10 Compatible

Intel® HD Graphics 3000

Dynamic Frequency (Intel Dynamic Video Memory Technology for up to 1.7GB)

Microsoft DirectX®10 Compatible

Intel® HD Graphics 4000

Dynamic Frequency (Intel Dynamic Video Memory Technology for up to 1.7GB)

Microsoft DirectX®11 Compatible

BIOS

One 48Mb SPI Flash ROM
AMI BIOS

Storage

(Factory Option) One Changeable 12.7mm(h) Optical Device Type Drive (Super Multi Drive Module or Blu-Ray Combo Drive Module)
One Changeable 2.5" 9.5mm (h) SATA HDD

Security

Security (Kensington® Type) Lock Slot
BIOS Password

Audio

High Definition Audio Compliant Interface
2 * Built-In Speakers
Built-In Microphone

Pointing Device

Built-in Touchpad

Keyboard

Full-size "WinKey" keyboard (with numeric keypad)

Interface

One HDMI-Out Port
One Headphone-Out Jack
One Microphone-In Jack
One RJ-45 LAN Jack
One External Monitor Port
One USB 2.0 Port
Two USB 3.0 Ports
One DC-in Jack

Card Reader

Embedded Multi-In-1 Card Reader
MMC (MultiMedia Card) / RS MMC
SD (Secure Digital) / Mini SD / SDHC/ SDXC
MS (Memory Stick) / MS Pro / MS Duo

Mini Card Slots

Slot 1 for **WLAN** Module or Combo **WLAN and Bluetooth** Modul

Communication

Built-In Gigabit Ethernet LAN
(Factory Option) 300K/1.3M Pixel USB PC Camera Module

WLAN/ Bluetooth Half Mini-Card Modules:

(Factory Option) Intel® Centrino® Wireless-N 2230 Wireless LAN (**802.11b/g/n**) + Bluetooth 4.0
(Factory Option) Intel® Centrino® Wireless-N 135 Wireless LAN (**802.11b/g/n**) + Bluetooth 4.0
(Factory Option) Third-Party Wireless LAN (**802.11b/g/n**) + Bluetooth 3.0
(Factory Option) Third-Party Wireless LAN (**802.11b/g/n**) + Bluetooth 4.0

Operating Systems

Windows® 7 (with Service Pack 1)

Power

6 Cell Smart Lithium-Ion Battery Pack, 48.84WH
(Factory Option) 6 Cell Smart Lithium-Ion Battery Pack, 62.16WH

Full Range AC/DC Adapter
AC Input: 100 - 240V, 50 - 60Hz
DC Output: 19V, 3.42A or 18.5V, 3.5A (**65W**)

Environmental Spec

Temperature
Operating: 5°C - 35°C
Non-Operating: -20°C - 60°C
Relative Humidity
Operating: 20% - 80%
Non-Operating: 10% - 90%

Dimensions & Weight

413mm (w) * 270mm (d) * 14 - 40.5mm (h)
2.9 kg (with 48.84WH Battery and ODD)

Introduction

Figure 1
Top View

1. PC Camera
(Optional)
2. LCD
3. Power Button
4. LED Status
Indicators
5. Keyboard
6. Built-In
Microphone
7. Touchpad &
Buttons

External Locator - Top View with LCD Panel Open



External Locator - Front & Right Side Views

Figure 2
Front View

1. LED Power Indicators

FRONT VIEW



Figure 3
Right Side View

1. Microphone-In Jack
2. Headphone-Out Jack
3. USB 2.0 Port
4. Optical Device Drive Bay
5. Emergency Eject Hole
6. Security Lock Slot

RIGHT SIDE VIEW



Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. DC-In Jack
2. External Monitor Port
3. RJ-45 LAN Jack
4. HDMI-Out Port
5. USB 3.0 Port
6. Vent
7. USB 2.0 Port
8. Multi-in-1 Card Reader

LEFT SIDE VIEW



Figure 5
Rear View

1. Battery

REAR VIEW



External Locator - Bottom View

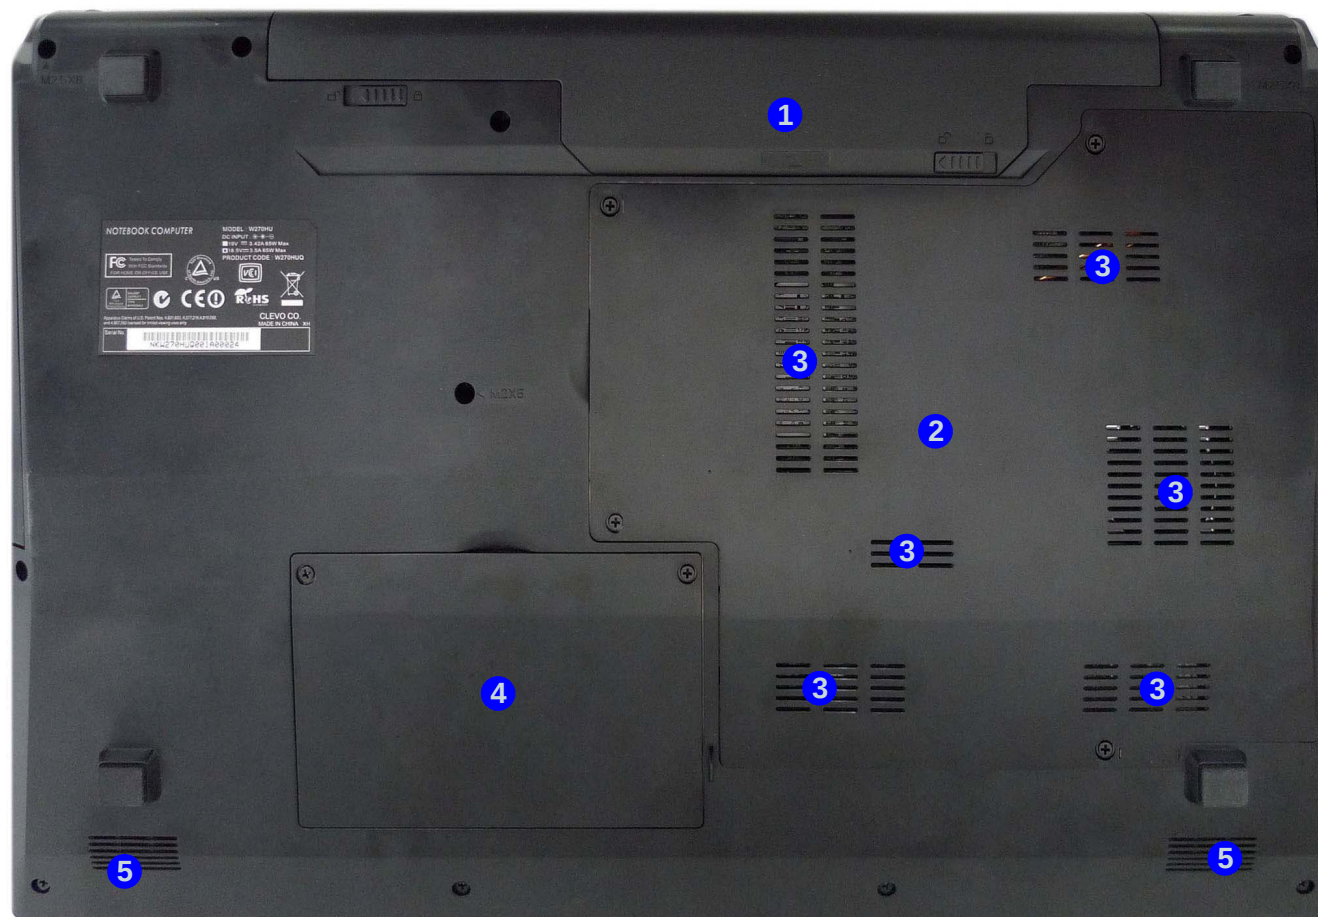


Figure 6
Bottom View

1. Battery
2. Component Bay Cover
3. Vent
4. Hard Disk Bay Cover
5. Speakers



Overheating


To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**

1. ITE 8518E
2. AZALIA Codec

Mainboard Overview - Top (Key Parts)

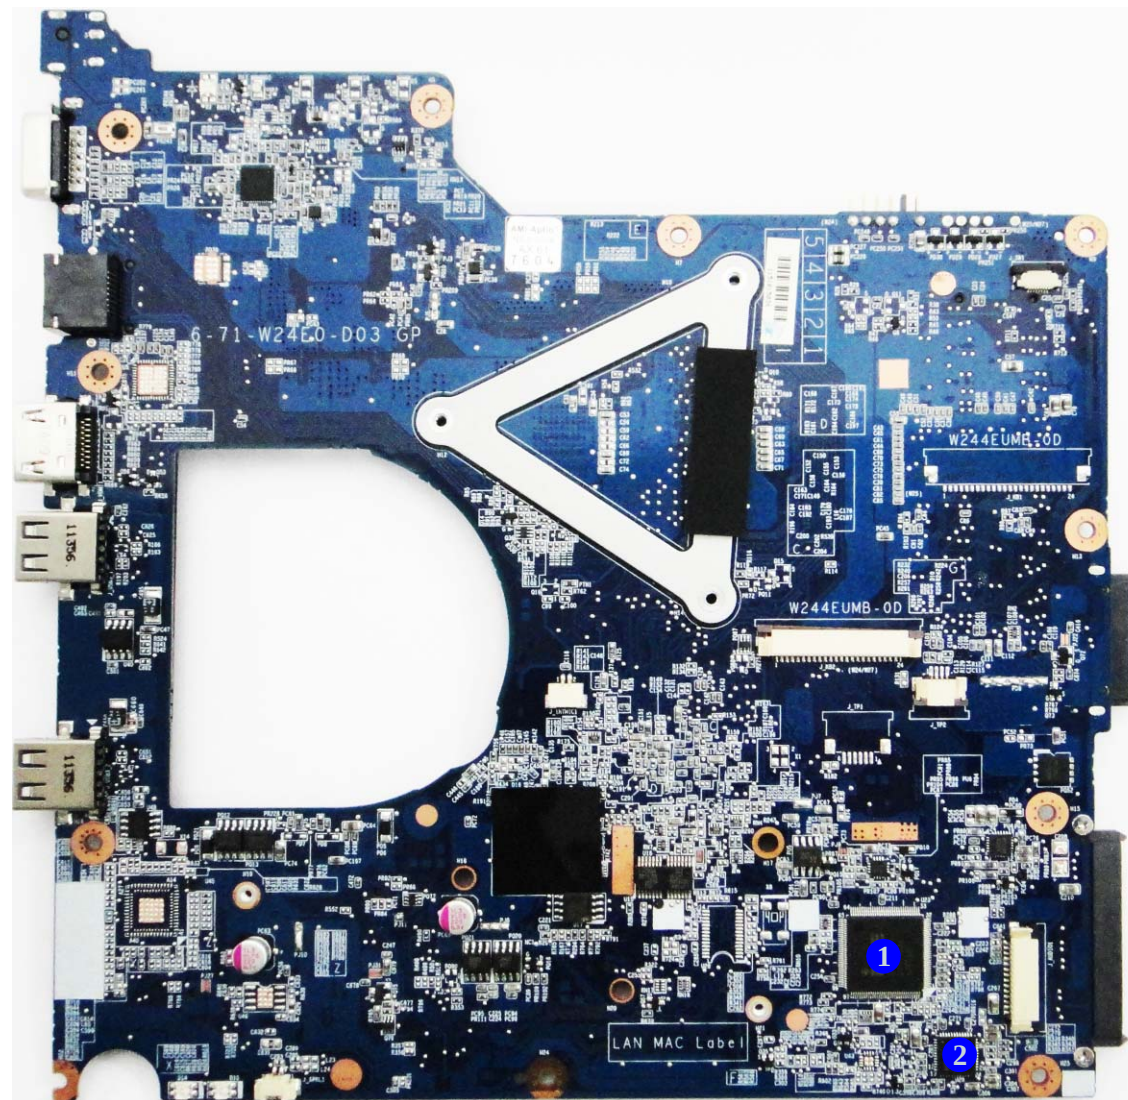

Mainboard Overview - Bottom (Key Parts)



Figure 8
**Mainboard Bottom
Key Parts**


1. Memory Slots
DDR3 SO-DIMM
2. CPU Socket (No
CPU installed)
3. Intel PCH
4. CMOS Battery
5. Mini-Card
Connector (WLAN
Module)
6. Card Reader
Socket

Introduction

Figure 9
**Mainboard Top
Connectors**

1. HDMI-Out Port
2. USB Port 3.0
3. Speaker Cable Connector
4. Microphone Cable Connector
5. Audio Board Connector
6. TouchPad Cable Connector 1
7. Keyboard Cable Connector
8. Switch Board Cable Connector

Mainboard Overview - Top (Connectors)

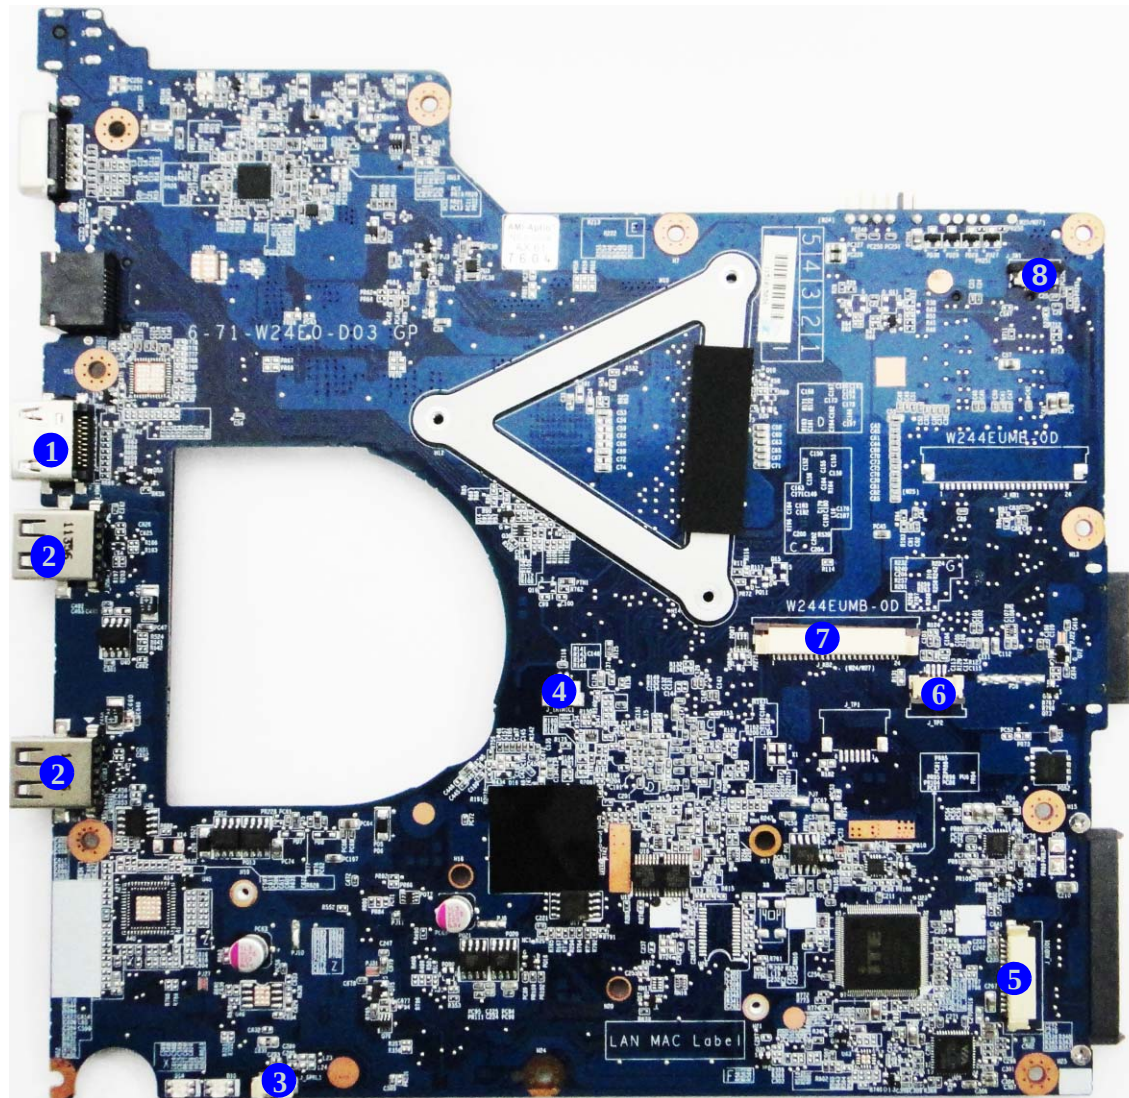

Mainboard Overview - Bottom (Connectors)

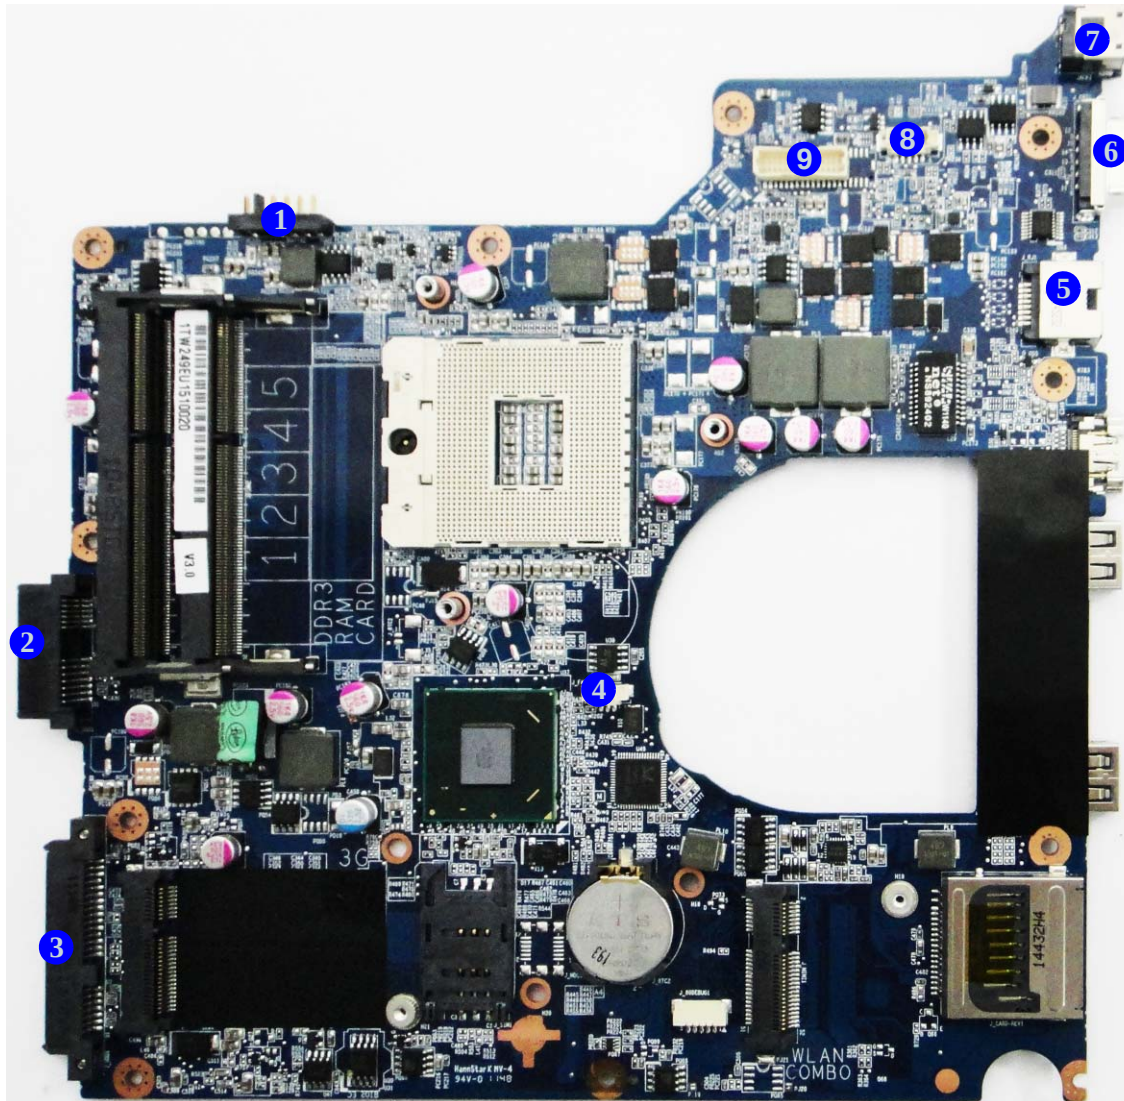


Figure 10
**Mainboard Bottom
Connectors**

1. Battery Connector
2. ODD Connector
3. HDD Connector
4. CPU Fan Cable Connector
5. RJ-45 LAN Jack
6. External Monitor Port
7. DC-In Jack
8. CCD Cable Connector
9. LCD Cable Connector

Chapter 2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling the **W270EUQ** series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).


We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

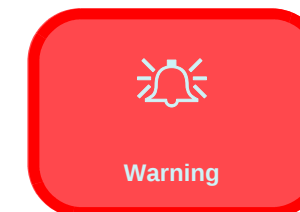

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery [page 2 - 5](#)

To remove the HDD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)

To remove the Optical Device:

1. Remove the battery [page 2 - 5](#)
2. Remove the Optical device [page 2 - 8](#)

To remove the System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 9](#)

To remove and install a Processor:

1. Remove the battery [page 2 - 5](#)
2. Remove the processor [page 2 - 11](#)
3. Install the processor [page 2 - 13](#)

To remove the Wireless LAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the WLAN module [page 2 - 14](#)

To remove the Keyboard and CCD:



1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 15](#)

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Slide the battery **3** in the direction of the arrow **4** (*Figure 1b*).

Figure 1
Battery Removal

- a. Slide the latch and hold it in place.
- b. Slide the battery in the direction of the arrow.

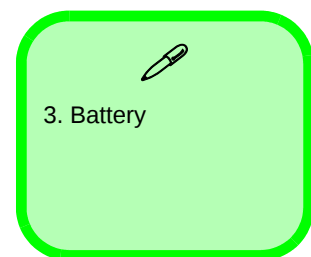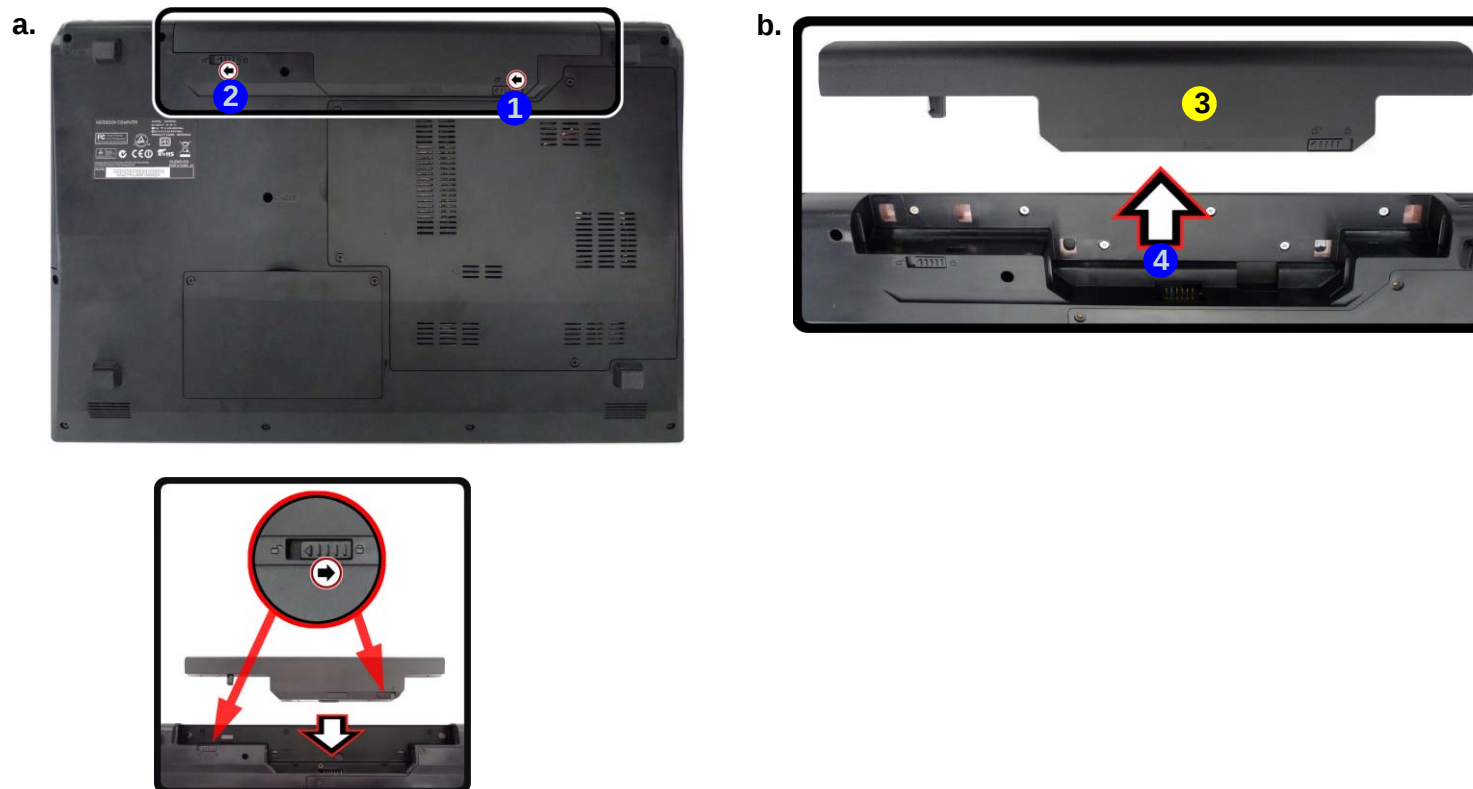

Disassembly

Figure 2
**HDD Assembly
Removal**

Removing the Hard Disk Drive


The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

- a. Locate the HDD bay cover and remove the screws.

Hard Disk Upgrade Process

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the hard disk bay cover and remove screws ① & ② ([Figure 2a](#)).

a.

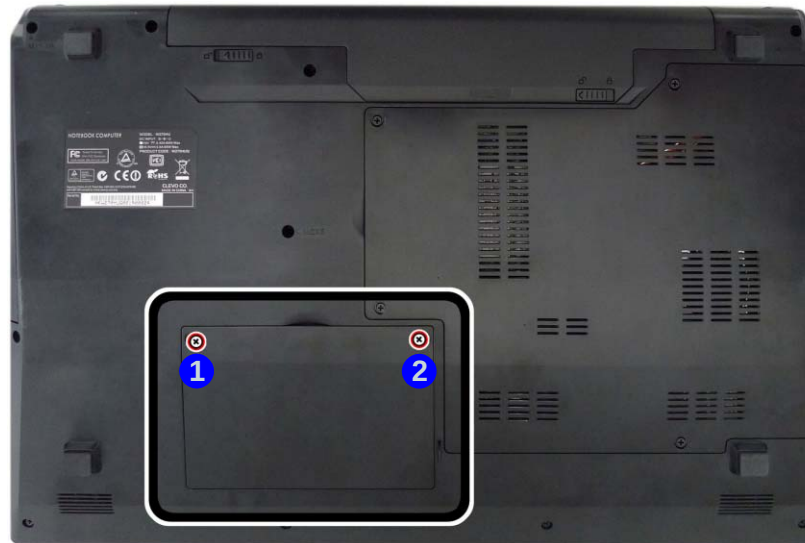

- 2 Screws



HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

3. Remove the hard disk bay cover **3** (*Figure 3b*).
4. Grip the tab and slide the hard disk in the direction of arrow **4** (*Figure 3c*).
5. Lift the hard disk assembly **5** out of the bay **6** (*Figure 3d*).
6. Remove the screw **7** - **10** and the mylar cover **11** from the hard disk **12** (*Figure 3e*).
7. Reverse the process to install a new hard disk (do not forget to replace all the screws and covers).

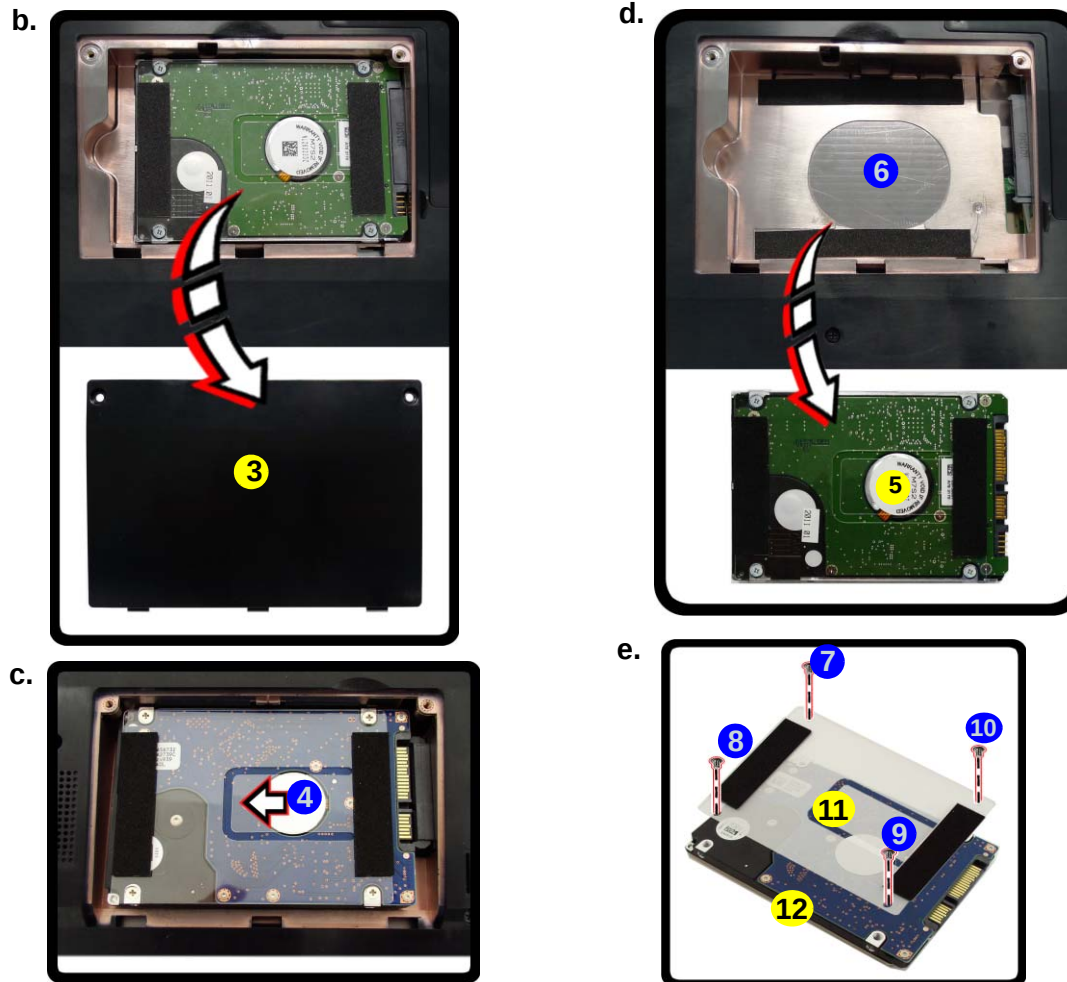


Figure 3
**HDD Assembly
Removal (cont'd.)**

- b. Remove the HDD bay cover.
- c. Grip the tab and slide the HDD assembly in the direction of the arrow.
- d. Lift the HDD assembly out of the bay.
- e. Remove the screws and mylar cover.



- 3. HDD Bay Cover
- 5. HDD Assembly
- 11. Mylar Cover
- 12. HDD
- 4 Screws


Disassembly

Figure 4
**Optical Device
Removal**

- a. Remove the screw at point ①.
- b. Use a screwdriver to carefully push out the optical device at point ②.

Removing the Optical (CD/DVD) Device

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)) and hard disk ([page 2 - 6](#)).
2. Remove the screw at point ① ([Figure 4a](#)).
3. Use a screwdriver to carefully push out the optical device ③ at point ② ([Figure 4b](#)).
4. Insert the new device and carefully slide it into the computer (the device only fits one way. **DO NOT FORCE IT**; The screw holes should line up).
5. Restart the computer to allow it to automatically detect the new device.

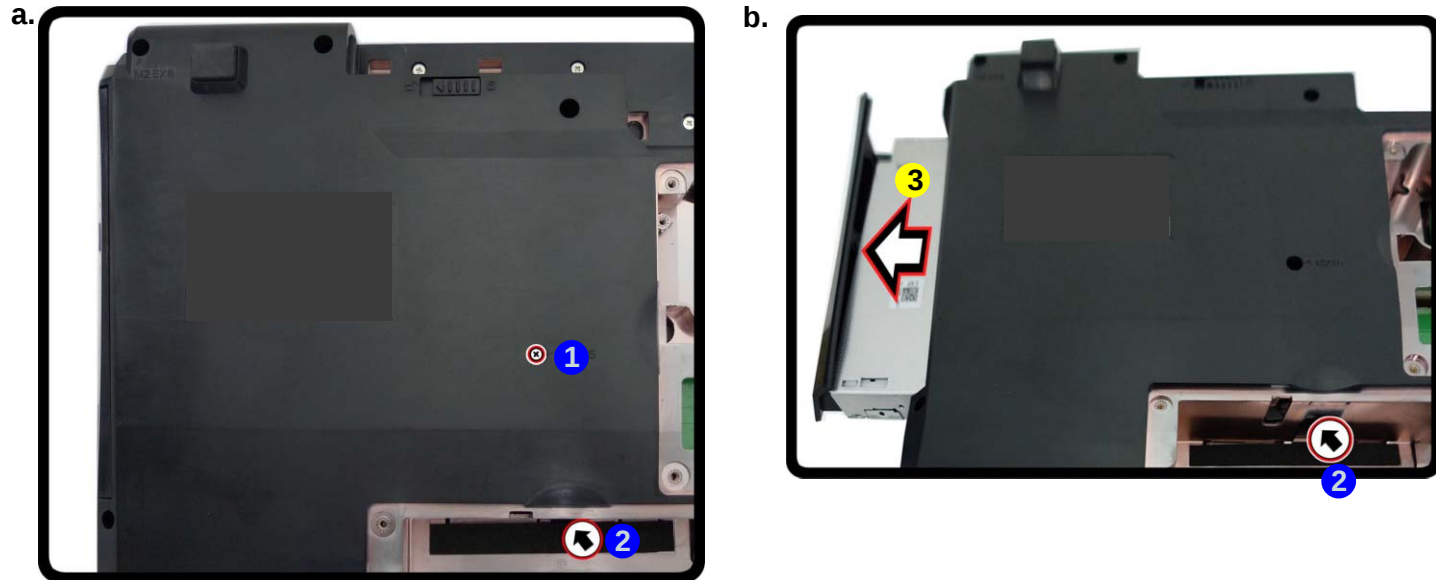

3. Optical Device

- 1 Screw


Removing the System Memory (RAM)

The computer has two memory sockets for 204 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDRIII (DDR3) Up to 1066/1333 MHz. The main memory can be expanded up to 8GB. The SO-DIMM modules supported are 1024MB and 2048MB **DDRIII** Modules. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

1. Turn **off** the computer, turn it over and remove the battery ([page 2 - 5](#)).
2. Remove screws **1** - **4** from the component bay cover ([Figure 5a](#)).
3. Carefully (**a fan and cable are attached to the under side of the cover**) lift up the bay cover.
4. Carefully disconnect the fan cable **5**, and remove the cover **6** (note that you need to raise the bottom cover up to an angle of around 30° angle).
5. The RAM modules will be visible at point **7** on the mainboard ([Figure 5b](#)).

a.

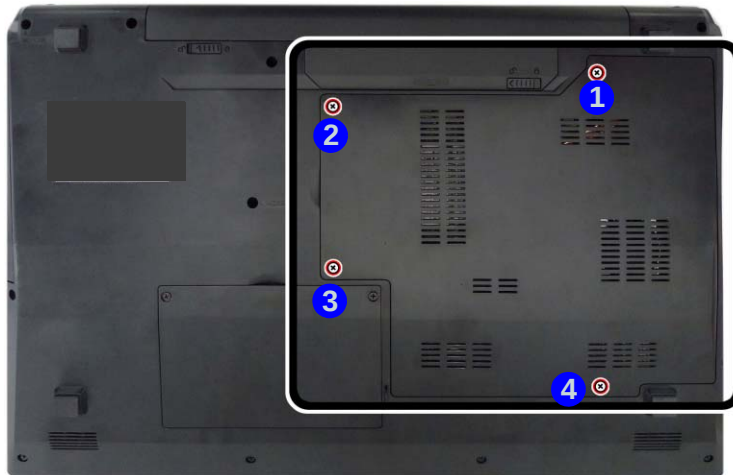

b.

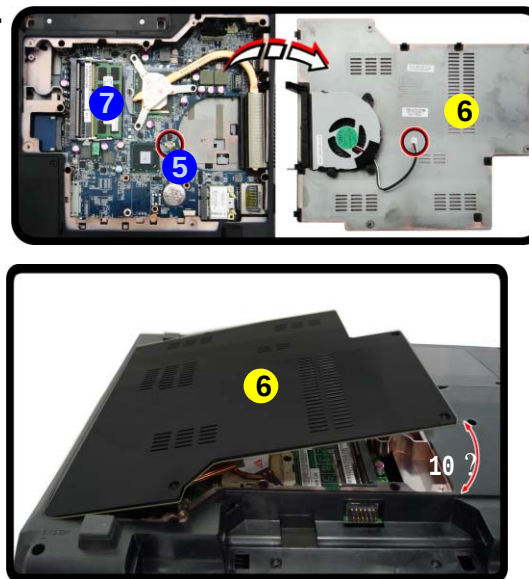


Figure 5
RAM Module Removal

- a. Remove the screws.
- b. The RAM modules will be visible at point **7** on the mainboard.



6. Component Bay Cover

- 4 Screws

Disassembly

Figure 6
**RAM Module
Removal (cont'd)**

- c. Pull the release latches.
d. Remove the module.



Contact Warning


Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.




10. RAM Module

6. Gently pull the two release latches (8 & 9) on the sides of the memory socket in the direction indicated by the arrows (*Figure 5c*). The RAM module 10 will pop-up (*Figure 5d*), and you can then remove it.

c.

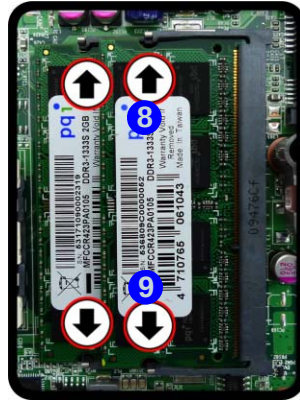

d.

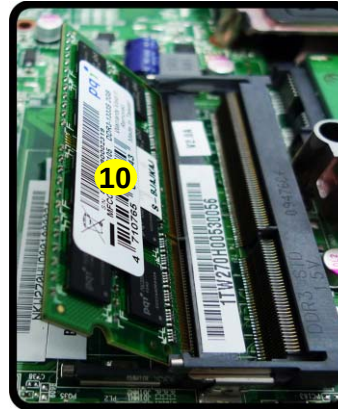

e.



Note:

The component bay cover has four cover pins, and these need to be aligned with the slots in the case to insure a proper cover fit. Make sure also that the cover is raised at a 10 degree angle during removal and installation.

7. Pull the latches to release the second module if necessary.
8. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
9. The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE IT; it should fit without much pressure.
10. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
11. Replace the bay cover by inserting it at an angle and aligning the cover pins (*Figure 6e*).
12. Replace the screws (**make sure you reconnect the fan cable before replacing all the screws and screwing down the bay cover**).
13. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.




Removing and Installing a Processor

Processor Removal Procedure

1. Turn **off** the computer, turn it over, and remove the battery ([page 2 - 5](#)) and the component bay cover ([page 2 - 9](#)).
2. The CPU heat sink will be visible at point **A**.
3. Loosen the CPU heat sink screws in the order **3**, **2** & **1** (the reverse order as indicated on the label [Figure 7a](#)).
4. Grip the heat sink tab and carefully lift the heat sink **4** up ([Figure 7b](#)) and off the computer at a 60 degree angle.

Figure 7
Processor Removal

- a. Remove the screws from the CPU heatsink.
- b. Grip the heat sink tab and carefully lift the heat sink up and off the computer at a 60 degree angle.

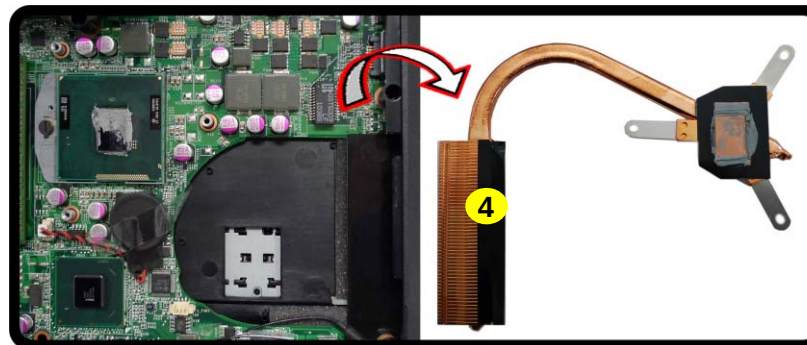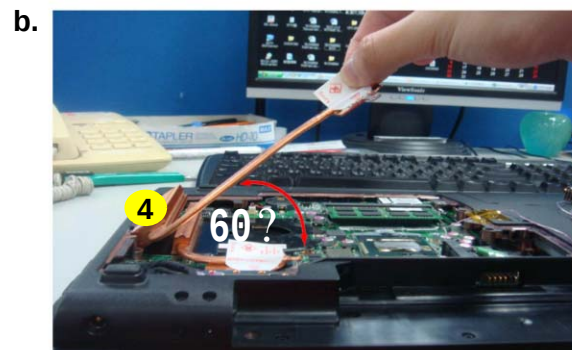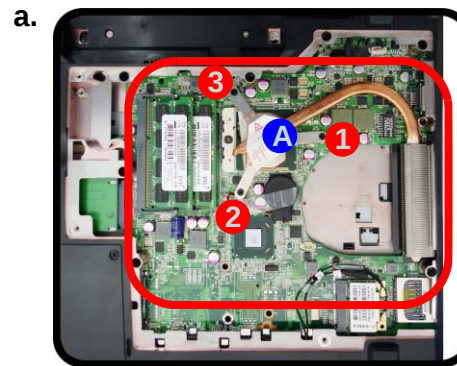

4. Heat Sink

- 3 Screws


Disassembly

Figure 8
**Processor Removal
(cont'd)**


- d. Turn the release latch to unlock the CPU.
- e. Lift the CPU out of the socket.

- 5. Turn the release latch **5** towards the unlock symbol  to release the CPU (*Figure 8d*).
- 6. Carefully (it may be hot) lift the CPU **6** up and out of the socket (*Figure 8e*).
- 7. Reverse the process to install a new CPU.
- 8. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).

c.

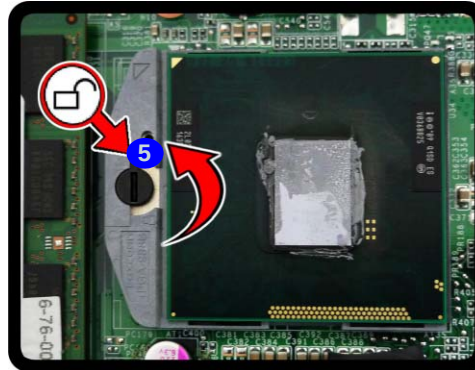


Unlock

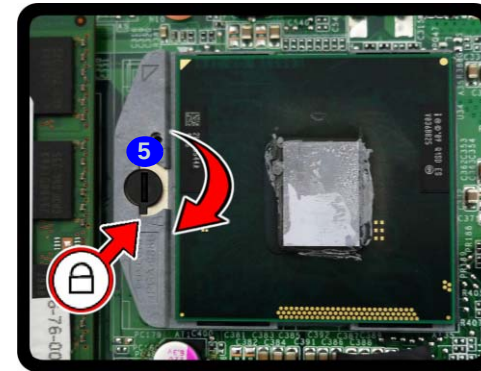

Lock

d.

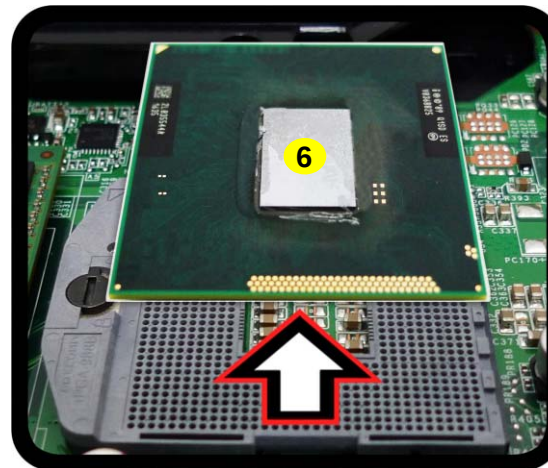


The heat sink, and CPU area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.

6. CPU

Processor Installation Procedure

1. Insert the CPU **A** (**Figure 9a**), pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!), and turn the release latch **B** towards the lock symbol  (**Figure 9b**).
2. **Remove the sticker C** (**Figure 9c**) from the heat sink.
3. Insert the heat sink **D** as indicated in **Figure 9d**.
4. Tighten the CPU heat sink screws in the order **1**, **2** & **3** (the order as indicated on the label and **Figure 9d**).
5. Replace the component bay cover (don't forget to replace the fan cable) and tighten the screws (**page 2 - 9**).

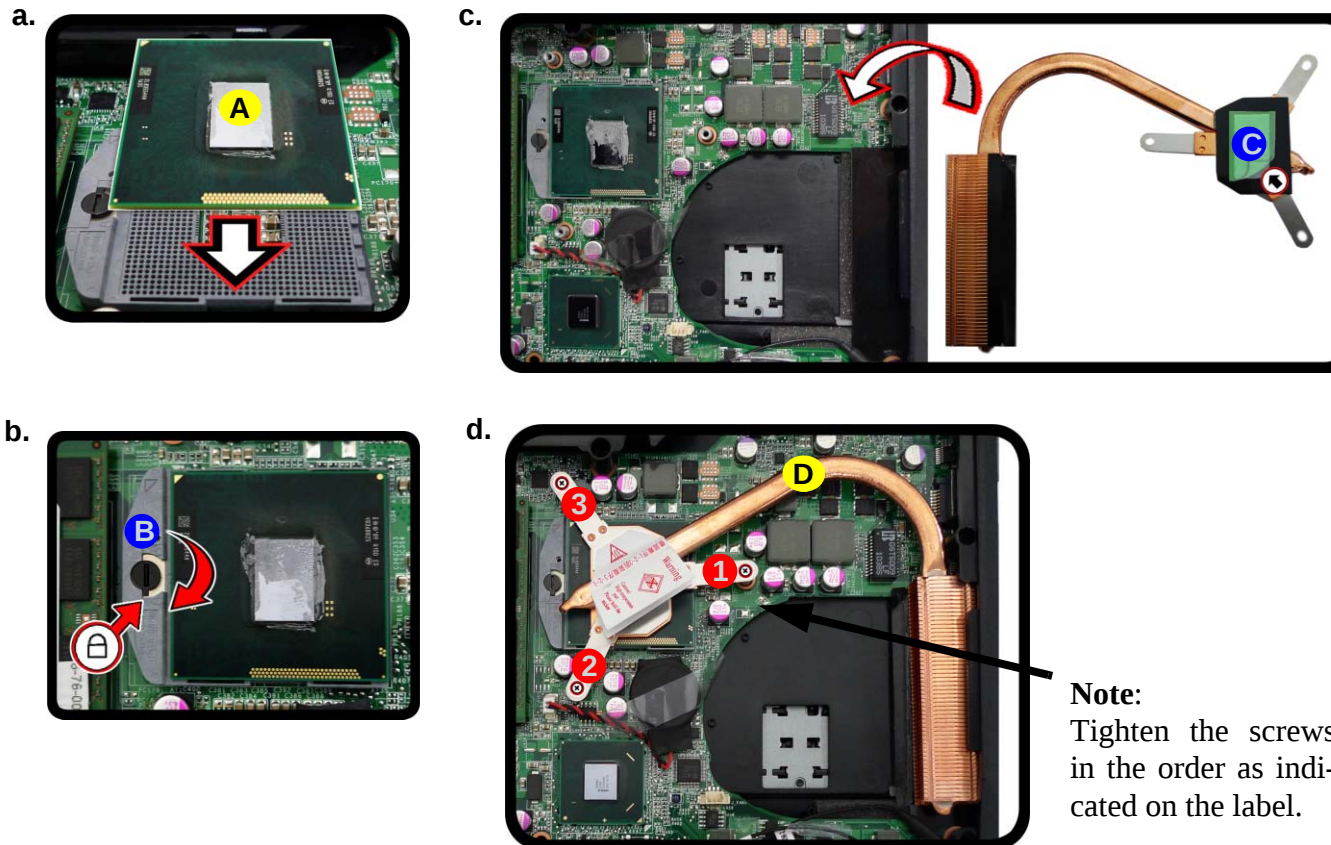

Note:
Tighten the screws
in the order as indi-
cated on the label.

- A. CPU
- D. Heat Sink
- 3 Screws

Figure 9
**Processor
Installation**

- a. Insert the CPU.
- b. Turn the release latch to-
wards the lock symbol.
- c. Remove the sticker from
the heat sink and insert
the heat sink.
- d. Tighten the screws.

Disassembly





Figure 10
**Wireless LAN
Module Removal**

- Locate the WLAN.
- Disconnect the cable and remove the screw.
- The WLAN module will pop up.
- Remove the Wireless LAN module.

Note: Make sure you reconnect the antenna cable to the “1 + 2” socket (*Figure 10b*).

Removing the Wireless LAN Module

- Turn **off** the computer, turn it over, and remove the battery (*page 2 - 5*) and the component bay cover (*page 2 - 9*).
- The Wireless LAN module will be visible at point **1** on the mainboard (*Figure 10a*).
- Carefully disconnect the cable **2**, and then remove the screw **3** (*Figure 10b*).
- The Wireless LAN module **4** (*Figure 10c*) will pop-up, and you can remove it from the computer (*Figure 10d*).

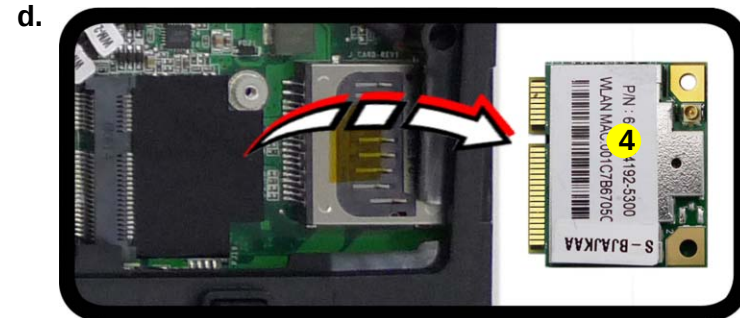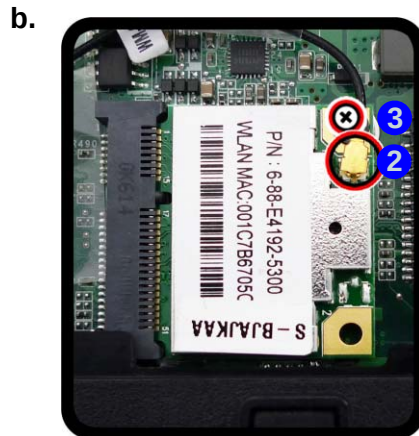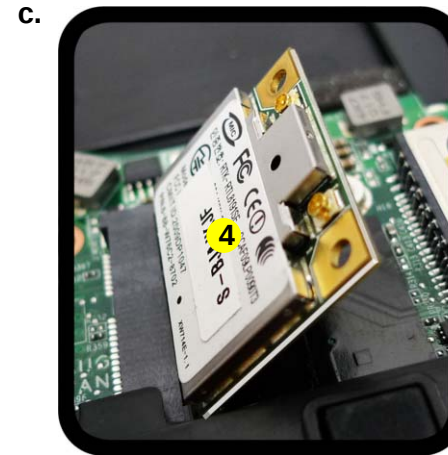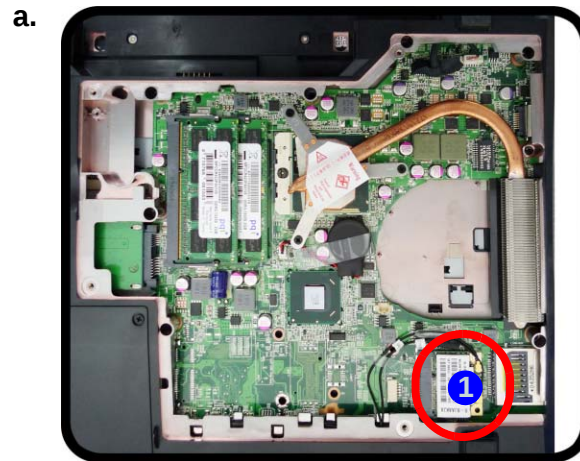

4. Wireless LAN Module

- 1 Screw

Removing the Keyboard/CCD

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)) and the component bay cover ([page 2 - 9](#)).
2. Remove screws **1** - **6** from the bottom of the computer (inside the battery compartment), and then press at point **7** to unsnap the LED cover module (use the eject pin tool provided to do this [Figure 11a](#)).
3. Turn the computer over, unsnap up the LED cover module **8** from the center of the computer ([Figure 11b](#)).
4. Remove screws **9** - **13** from the keyboard ([Figure 11c](#)).
5. Carefully lift the keyboard **14** up, being careful not to bend the keyboard ribbon cable **15**. Disconnect the keyboard ribbon cable **15** from the locking collar socket **16** by using a flat-head screwdriver to pry the locking collar pins **17** away from the base ([Figure 11d](#)).
6. Carefully lift up the keyboard **14** ([Figure 11e](#)) off the computer.

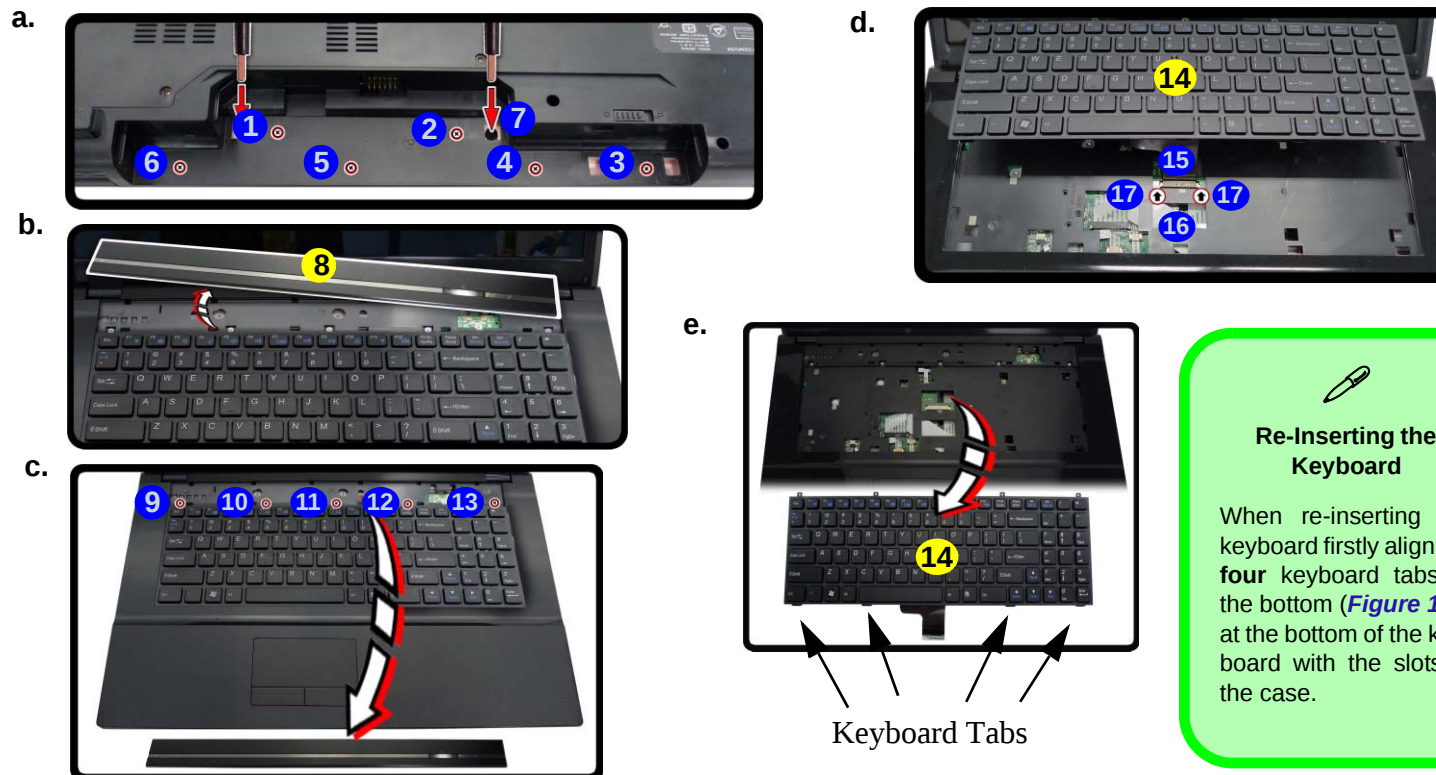


Figure 11
**Keyboard / CCD
Removal**






- a. Remove screws from the bottom of the computer.
- b. Turn the computer over, unsnap up the LED cover module from the center of the computer.
- c. Remove screws from the keyboard.
- d. Carefully lift the keyboard up and disconnect the keyboard ribbon cable from the locking collar socket by using a flat-head screwdriver to pry the locking collar pins away from the base.
- e. Remove the keyboard.

Disassembly

Figure 12
Keyboard / CCD
Module Removal

- f. Disconnect the cables and remove the screw.
- g. Turn the computer over, remove the screws from the bottom case.
- h. Turn the computer over, pry the top case off the bottom case at points **A** & **B** simultaneously, then run your fingers around the inner frame of the top case at points **C** - **E**.
- i. Carefully lift the top case up and off the bottom case.
- j. Carefully remove the rubber screw covers and screws from the front cover.

7. Disconnect cables **18** - **22** and remove screw **23**.
8. Turn the computer over, remove screws **24** - **43** from the bottom case.
9. Turn the computer over, pry the top case **44** off the bottom case at points **A** & **B** simultaneously, then run your fingers around the inner frame of the top case at points **C** - **E**.
10. Carefully lift the top case **44** up and off the bottom case.
11. Carefully remove the rubber screw covers **45** - **50** and screws **51** - **56** from the front cover.

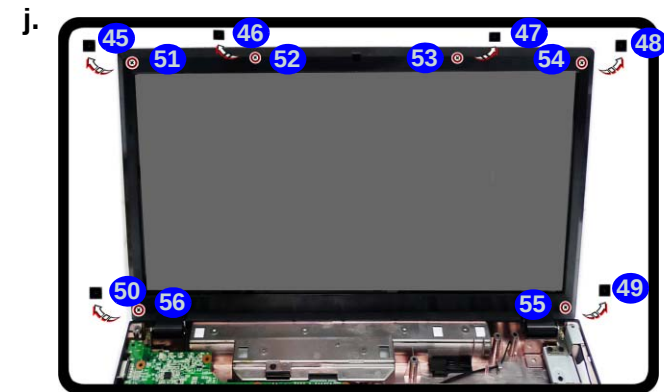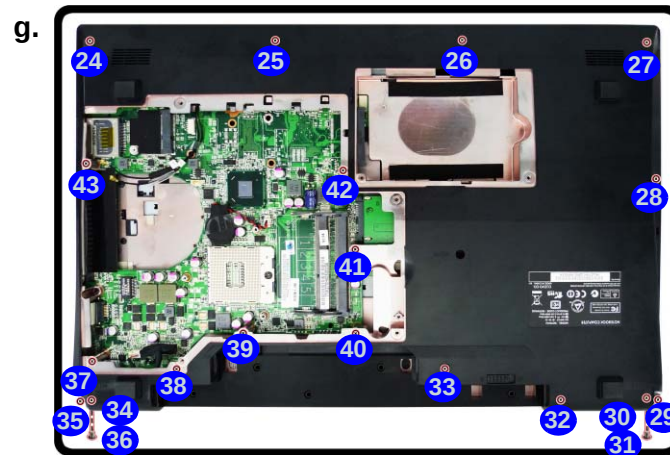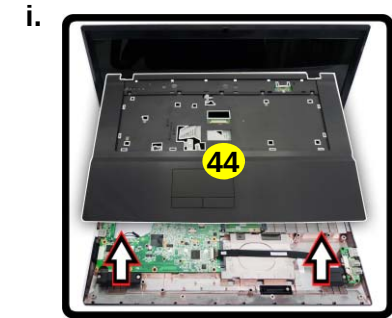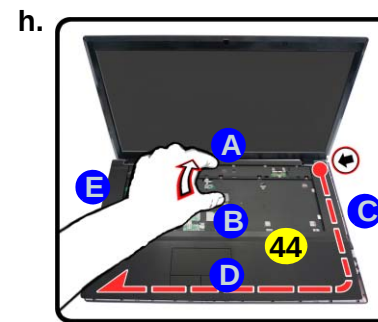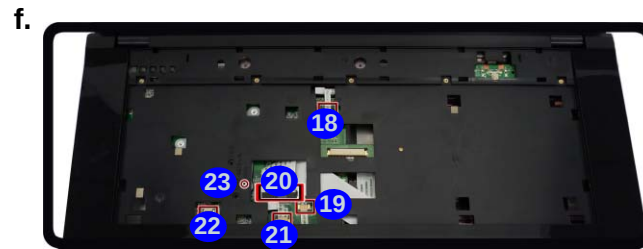


44. Top Case

- 27 Screws

12. Run your fingers around the inner frame of the LCD panel at the points indicated by the arrows 57 - 60 .
13. Lay the computer down on a flat surface with the top case up forming a 90 degree angle. Push the LCD front panel 61 upwards before carefully lifting it up.
14. Disconnect cable 62.
15. Remove the CCD module 63 .


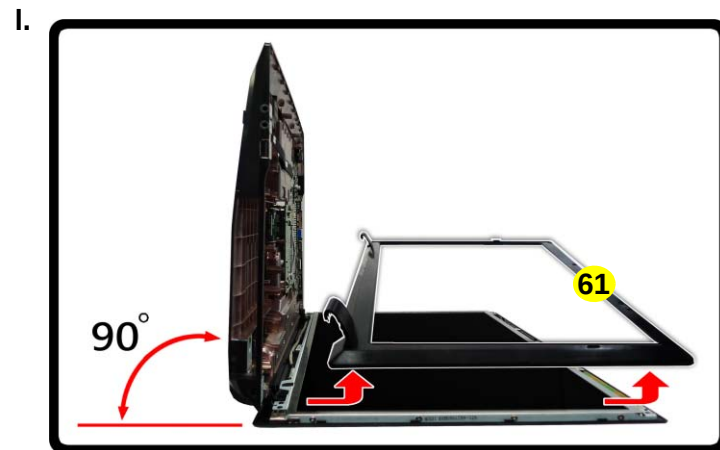


Figure 13
Keyboard / CCD Removal

- k. Run your fingers around the inner frame of the LCD panel at the points indicated by the arrows.
- l. Lay the computer down on a flat surface with the top case up forming a 90 degree angle. Push the LCD front panel upwards before carefully lifting it up.
- m. Disconnect the cable.
- n. Remove the CCD module.

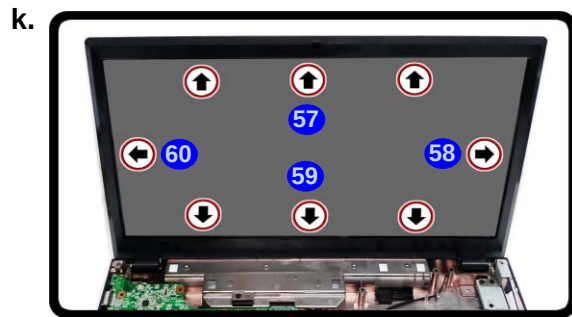

61. LCD Front Panel
63. CCD Module

Appendix A:Part Lists

This appendix breaks down the **W270EUQ** series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	W270EUQ
Top	<i>page A - 3</i>
Bottom	<i>page A - 4</i>
SATA BLU-RAY COMBO	<i>page A - 5</i>
SATA DVD DUAL	<i>page A - 6</i>
LCD	<i>page A - 7</i>

Top


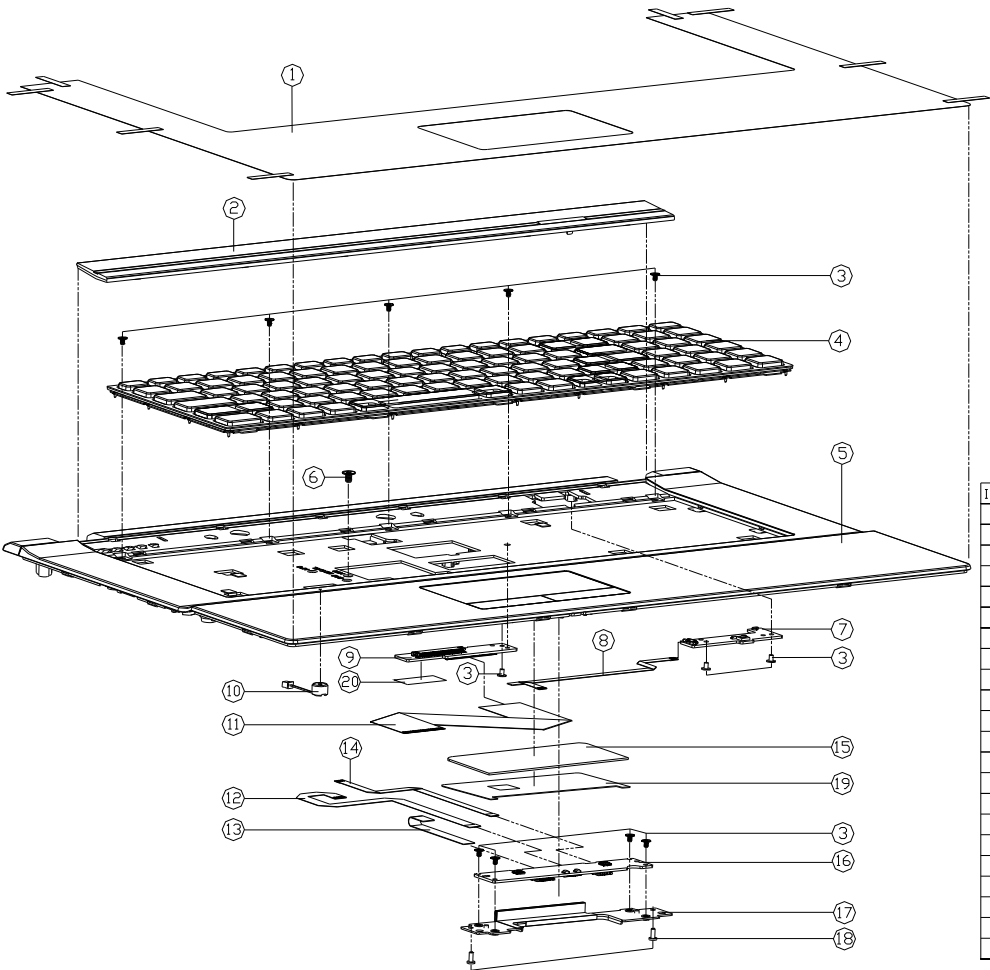


Figure A - 1
Top

ITEM	PART NAME	PART NO	REMARK
1	PALM REST PROTECT MYLAR (8835) W270HUQ	6-40-W27H8-011	
2	KB COVER MODULE W270HUQ	6-42-W27H8-102	
3	SCREW M2*3L K1 NI ICT NY (DD=045,DT=04)	6-35-B1120-3RE	
4	K/B US/BLACK/4 FRAME/US) MODULE W270HUQ	6-79-W270HUQK-010	
5	TDP CASE MODULE(CHANGE) W270HUQ	6-39-W27H2-014	
6	SCREW M2.5*5L K1 BK/Z ICT NY	6-35-B6125-5RA	
7	SWITCH BOARD V1.0 W270HUQ	6-77-W27HS-D01	
8	FFC CABLE 8PIN FOR W/B TO POWER BOARD 0HD W270HUQ	6-43-W27H0-041	
9	K/B-BRIDGE-BOARD V1.0 W270HUQ	6-77-W27H7-D01	
10	FFC CABLE 2PIN FOR W/B TO KB BRIDGE BOARD 0HD W270HUQ	6-43-W27H0-011	
11	FFC CABLE 2PIN FOR W/B TO CLICK BOARD 0HD W270HUQ	6-43-W27H0-021	
12	FFC CABLE FOR TOUCH PAD 6PIN C4500	6-43-C4502-010	
13	FFC CABLE 4PIN FOR W/B TO CLICK BOARD 0HD W270HUQ	6-43-W27H0-031	
14	TOUCH PAD ELAN S8420-603 MULTI-FINGER GESTURE V25HPD	6-49-W25A2-011	FOR W270HUQ
15	TOUCH PAD SYNAPTICS TM-0146-003 MULTI-GESTURE C4800	6-49-C4802-010	FOR W270EUQ
16	CLICK BOARD V2.0 W270BUQ	6-77-W2402-D02-A	FOR W270HUQ
16	CLICK BOARD V1.0 W255EU	6-77-W24E2-D01-A	FOR W270EUQ
17	TP BRACKET MODULE (SECC 0.8T) W270HUQ	6-33-W27H2-101	
18	SCREW M2*5L K1CT=0.8 D=4.0 BK/Z ICT NY	6-35-B6120-5R0	
19	TAPE MYLAR (C) (86*38.80MM) C4105	6-40-00150-861	
20	MYLAR KB BRIDGE BD PET W270HUQ	6-40-W27HZ-010	

Bottom

Figure A - 2
Bottom

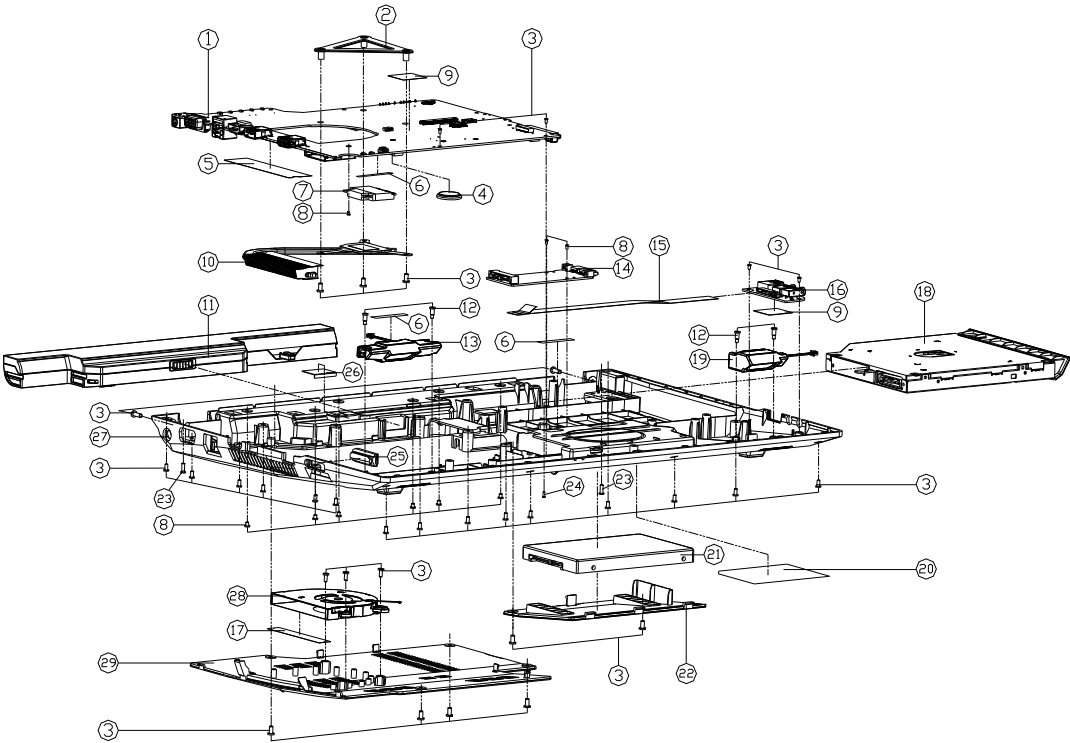

ITEM	PART NAME	PART NO	REMARK
1	MAIN BOARD V30 (W/TMP) V27EUD	6-77-V27UD-003	
1	MAIN BOARD V30 (W/TMP) V27EUD	6-77-V27UD-003-1	
1	MAIN BOARD V30 (W/TMP) V27EUD	6-77-V27UD-0L3-M	
1	MAIN BOARD V30 (W/TMP) V27EUD	6-77-V27UD-0L3-1	
2	OV SUPPOTER FOR MAIN RIVER SEC. W50NM	6-33-W50S-011	
3	SCREW M2.5x5L KI BK/Z ICT NY	6-35-B6125-SRA	
4	BATTERY 3V 200MA B00C003030 KTS	6-23-6A2B2-030	
5	BLU RY FOR BLU-RAY COMBO (OPTIO) P0000	6-40-W240S-011	
6	DATE LABEL TRANSPARENT (OPTIONAL) P0000	6-40-P1803-020	
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-W110F-4200	(OPTION)
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-P17EF-4200	(OPTION)
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-C555F-7001	(OPTION)
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-C555F-5301	(OPTION)
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-W1102-9400	(OPTION)
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-W1102-7000	(OPTION)
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-W2542-9400	(OPTION)
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-W349F-8700	(OPTION)
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-W2542-7000	(OPTION)
7	MAIN BOARD V30 (W/TMP) V27EUD	6-88-W349F-9400	(OPTION)
8	SCREW M2x3 KI NI ICT NY (00-W45.01-04)	6-35-B1120-3RE	
9	MAIN BOARD V30 (W/TMP) V27EUD	6-40-C4505-030	
10	CPU HEATSINK MODULE V240HU	6-31-W24HM-101	
11	HP 11.1 INCH LCD DISPLAY (11.1 INCH) V27EUD	6-87-C4805-46A	(OPTION)
11	HP 11.1 INCH LCD DISPLAY (11.1 INCH) V27EUD	6-87-C4805-40A	(OPTION)
11	HP 11.1 INCH LCD DISPLAY (11.1 INCH) V27EUD	6-87-W24ES-4W4	(OPTION)
12	SCREW M4x2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
13	PHONE (1) HANG UP (1) HANG UP (1) HANG UP	6-23-5E510-011	
14	BRIDGE (00) BOARD V10 W270HU	6-77-W27HM-001	
15	ITC (00) BOARD V10 W270HU	6-43-W270B-010-1	
16	AUDIO BOARD V40 W244EU	6-77-W24EB-004	
17	AIRDUCT MYLAR DFR117 W240HU	6-40-W24HB-011	
18	SATA BLU-RAY COMBO ASSY (OPTION)	6-79-W270UDV-000	
18	SATA BLU-RAY COMBO ASSY (OPTION)	6-79-W270UDV-000	
18	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-W270UDV-000	
18	V/D (00) ASSY W270HU (OPTION)	6-79-W270UDV-000	
19	PHONE (1) HANG UP (1) HANG UP (1) HANG UP	6-23-5E510-021	
20	PHONE LABEL FOR W270UDV (00) P0000	6-45-W270UDV-011	
20	PRODUCT LABEL FOR W270EUD	6-45-W270EUD-011	
21	W/HDD ASSY E51200	6-79-E51200J-000	
21	W/D HDD ASSY C4800	6-79-C48000J-010	
22	HDD COVER PC+ABS W270HU	6-42-W27HJ-011	
23	SCREW M2.5x5L KI BK/Z NY ICT	6-35-B6125-0R0	
24	SCREW M2.5x5L (01) BK/Z NY ICT	6-35-B6125-0R0	
25	DATA USER RUBBER SILICON W270HU	6-47-W27H3-030	
26	DATE LABEL TRANSPARENT (OPTIONAL) P0000	6-40-W27H3-020	
27	BOTTOM CASE MODULE W270HU	6-39-W27H3-013	
28	FAN MODULE W251HUJ	6-31-W25HS-100	
29	CPU COVER MODULE W270HUJ	6-42-W27HB-301	

SATA BLU-RAY COMBO


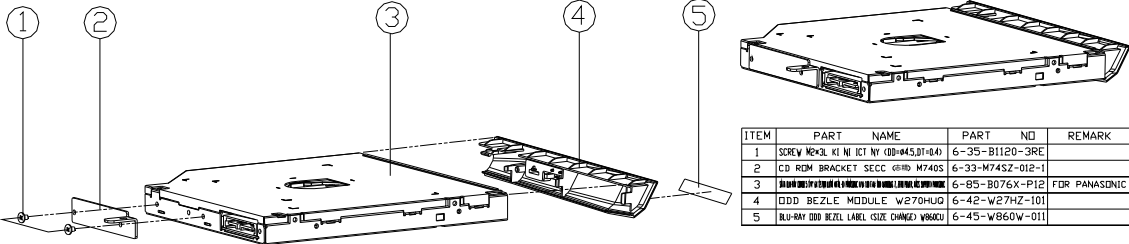


Figure 3
SATA BLU-RAY
COMBO

SATA DVD DUAL

Figure 4
SATA DVD DUAL

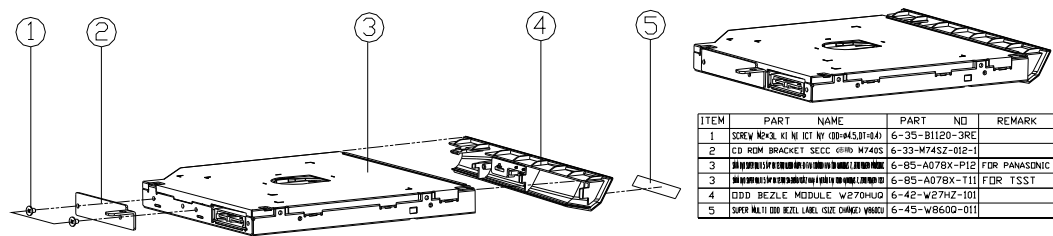

LCD

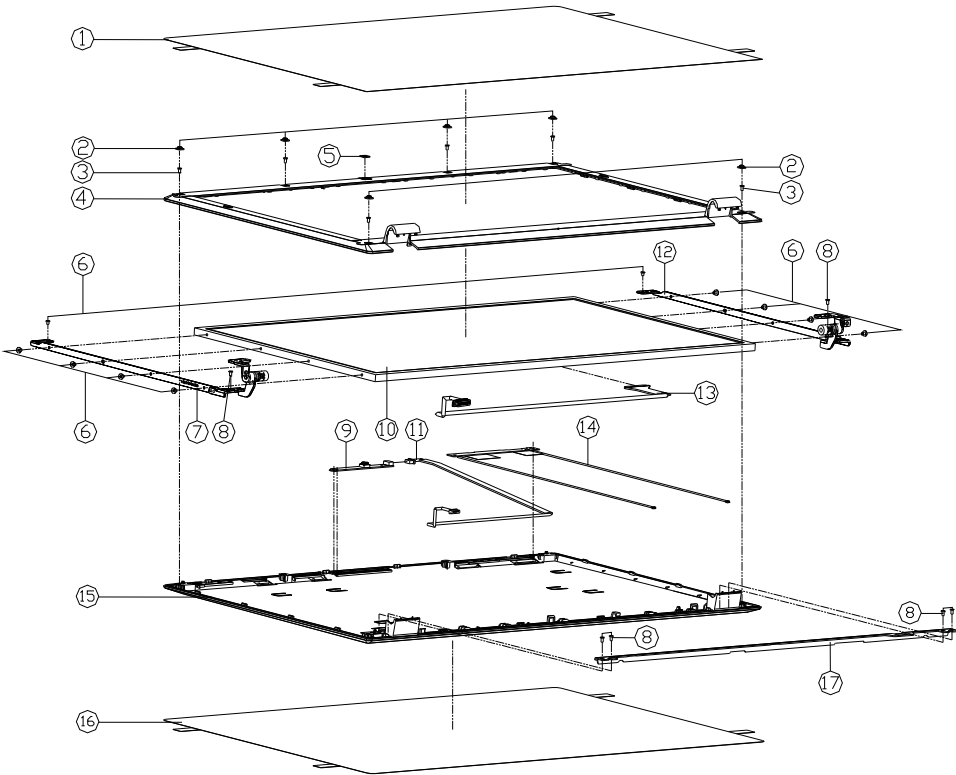


Figure A - 5
LCD

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT CASE PROTECT MYLAR PET B7110	6-40-B7118-012	
2	LCD COVER SCREW RUBBER SILICON W270HUQ	6-47-W27H8-020	
3	SCREW M2.5*SL K1 BK/Z ICT NY	6-35-B6125-SRA	
4	LCD FRONT COVER MODULE (CHANGED) W270HUQ	6-39-W27H1-012	
5	CCD LENS PMMA W270HUQ	6-40-W27H1-060	
6	W/D CCD LENS PMMA W270HUQ	6-40-W27H1-070	
7	SCREW M2*SL K1 IT ICT NY (D=4.5,D1=4)	6-35-B1120-3RE	
8	LCD HINGE L K7 W270HUQ	6-33-W27H1-021	
9	SCREW M2*SL K1IT-B8 D=4.0 BK/Z ICT NY	6-35-B6120-SR0	
9	UVC CAMERA BEZEL FIX (B26M15C-300 LCM H400*600) YES/NO	6-88-M15C-4902	OPTION
9	UVC CAMERA BEZEL FIX (B26M15C-300 LCM H400*600) YES/NO	6-88-W25CC-4900	OPTION
9	UVC CAMERA BEZEL FIX (B26M15C-300 LCM H400*600) YES/NO	6-88-ES10C-4904	OPTION
9	UVC CAMERA BEZEL FIX (B26M15C-300 LCM H400*600) YES/NO	6-88-M15C-4900	OPTION
9	UVC CAMERA BEZEL FIX (B26M15C-300 LCM H400*600) YES/NO	6-88-M110C-4901	OPTION
9	UVC CAMERA BEZEL FIX (B26M15C-300 LCM H400*600) YES/NO	6-88-ES10C-4902	OPTION
9	UVC CAMERA BEZEL FIX (B26M15C-300 LCM H400*600) YES/NO	6-88-M15C-4901	OPTION
10	LCD 17.3" HD+ LG LP173W01-TL03 QLED 60 W	6-50-NA160-L07	OPTION
10	LCD 17.3" HD+ LG LP173W01-TL03 QLED 60 W	6-50-NB260-D00	OPTION
10	LCD 17.3" HD+ LG LP173W01-TL03 QLED 60 W	6-50-NA160-L04	OPTION
10	LCD 17.3" HD+ LG LP173W01-TL03 QLED 60 W	6-50-NA158-D00	OPTION
10	LCD 17.3" HD+ SAMSUNG LTM173K101-H01 QLED 58 W	6-50-NA158-M01	OPTION
10	LCD 17.3" HD+ LG LP173W01-TL03 QLED 60 W	6-50-NA160-L00	OPTION
10	LCD 17.3" HD+ LG LP173W01-TL03 QLED 60 W	6-50-NA160-L02	OPTION
10	LCD 17.3" HD+ LG LP173W01-TL03 QLED 60 W	6-50-NA160-G00	OPTION
10	LCD 17.3" HD+ LG LP173W01-TL03 QLED 60 W	6-50-NB258-N00	OPTION
11	WIRE CABLE FOR CCD 5P 43MM (H) FOR W270HUQ	6-43-W27H1-010	
12	LCD HINGE R K7 W270HUQ	6-33-W27H1-011	
13	CABLE FOR UVC 25MM (H) FOR CONCENTRATED W270HUQ	6-43-W27H1-010-1A	
14	UVC CAMERA BEZEL FIX (B26M15C-300 LCM H400*600) YES/NO	6-23-W27H1-020	
15	LCD BACK THIN COVER MODULE W270HUQ	6-39-W27H1-021	
16	BACK COVER PROTECT MYLAR (PET+360S) W270HUQ	6-40-W27H1-041	
17	LCD SUPPORT SECC W270HUQ	6-33-W27H1-031	

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *W270EUQ* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>PantherPoint - M 6/9 - Page B - 19</i>	<i>Power 0.85VS - Page B - 36</i>
<i>Ivy Bridge Processor 1/7 - Page B - 3</i>	<i>PantherPoint - M 7/9 - Page B - 20</i>	<i>Power V-Core1 - Page B - 37</i>
<i>Ivy Bridge Processor 2/7 - Page B - 4</i>	<i>PantherPoint - M 8/9 - Page B - 21</i>	<i>Power V-Core2 - Page B - 38</i>
<i>Ivy Bridge Processor 3/7 - Page B - 5</i>	<i>PantherPoint - M 9/9 - Page B - 22</i>	<i>Charger, AC In - Page B - 39</i>
<i>Ivy Bridge Processor 4/7 - Page B - 6</i>	<i>USB 3.0, Power, WLAN - Page B - 23</i>	<i>Click Board - Page B - 40</i>
<i>Ivy Bridge Processor 5/7 - Page B - 7</i>	<i>CCD, 3G, TPM - Page B - 24</i>	<i>Audio Board/USB - Page B - 41</i>
<i>Ivy Bridge Processor 6/7 - Page B - 8</i>	<i>Card Reader, LAN RTL8411 - Page B - 25</i>	<i>Power Switch & LID Board - Page B - 42</i>
<i>Ivy Bridge Processor 7/7 - Page B - 9</i>	<i>LAN (RTL8411), SATA HDD, ODD - Page B - 26</i>	<i>ODD Board - Page B - 43</i>
<i>DDR3 SO-DIMM_0 - Page B - 10</i>	<i>USB 3.0 TI TUSB7320 - Page B - 27</i>	<i>Power Sequence - Page B - 44</i>
<i>DDR3 SO-DIMM_1 - Page B - 11</i>	<i>KBC-ITE IT8518 - Page B - 28</i>	
<i>LVDS, Inverter - Page B - 12</i>	<i>LED, MDC - Page B - 29</i>	
<i>HDMI, CRT - Page B - 13</i>	<i>Audio Codec ALC269 - Page B - 30</i>	
<i>PantherPoint - M 1/9 - Page B - 14</i>	<i>USB Charger, Fan, TP, Multi-Conn - Page B - 31</i>	
<i>PantherPoint - M 2/9 - Page B - 15</i>	<i>System Power - Page B - 32</i>	
<i>PantherPoint - M 3/9 - Page B - 16</i>	<i>VDD3, VDD5 - Page B - 33</i>	
<i>PantherPoint - M 4/9 - Page B - 17</i>	<i>Power 1.5V/0.75V/1.8VS - Page B - 34</i>	
<i>PantherPoint - M 5/9 - Page B - 18</i>	<i>Power 1.05VS - Page B - 35</i>	


Table B - 1
**SCHEMATIC
DIAGRAMS**



Version Note


The schematic diagrams in this chapter are based upon version 6-7P-W24E5-003. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

System Block Diagram

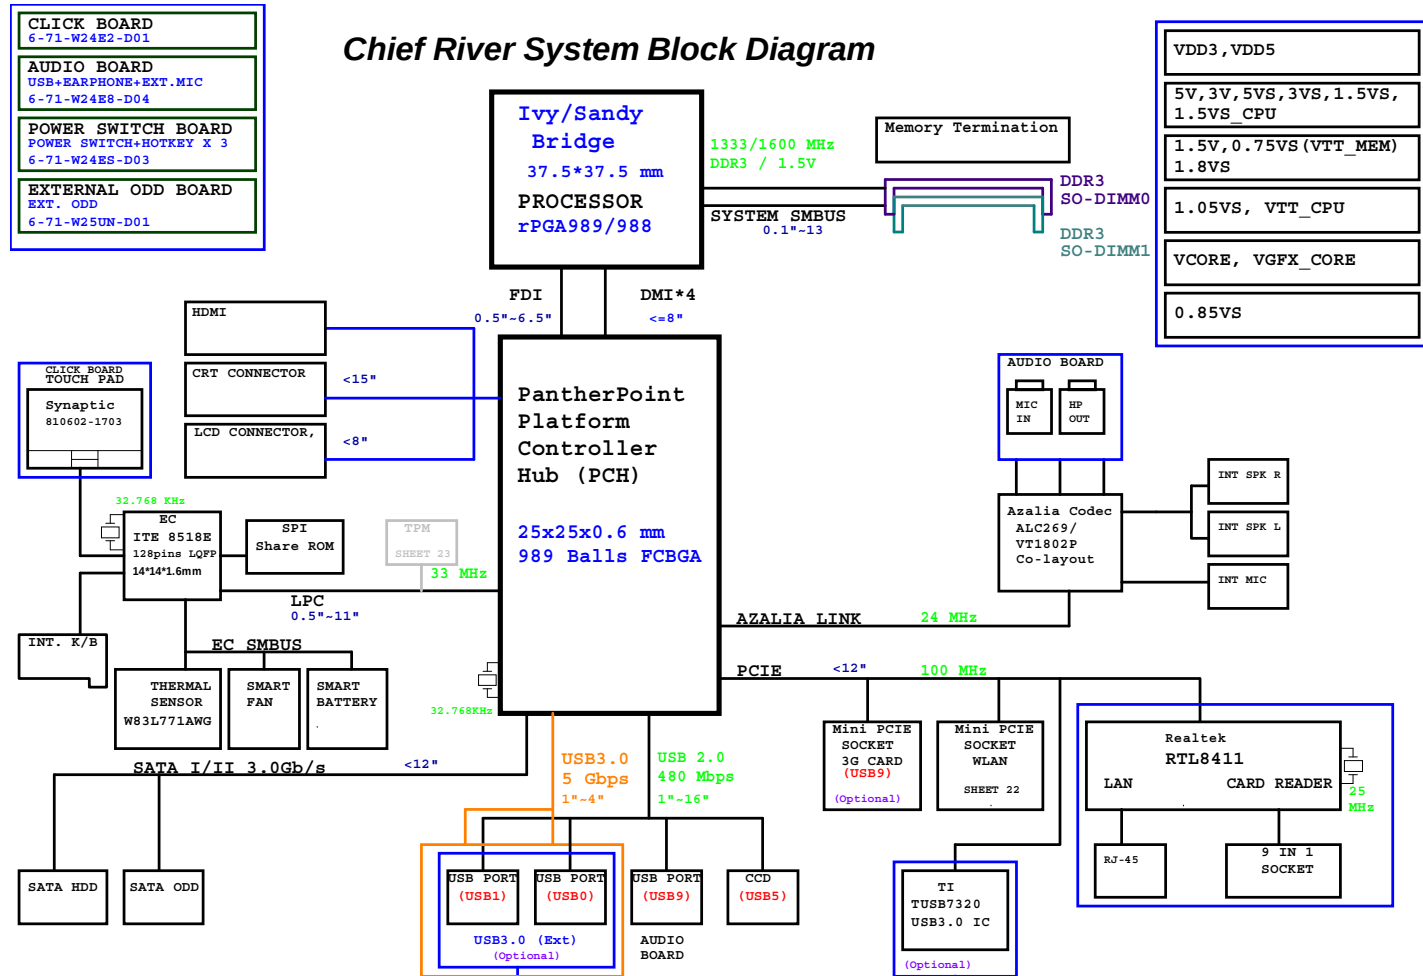

Sheet 1 of 43
System Block
Diagram


Ivy Bridge Processor 1/7

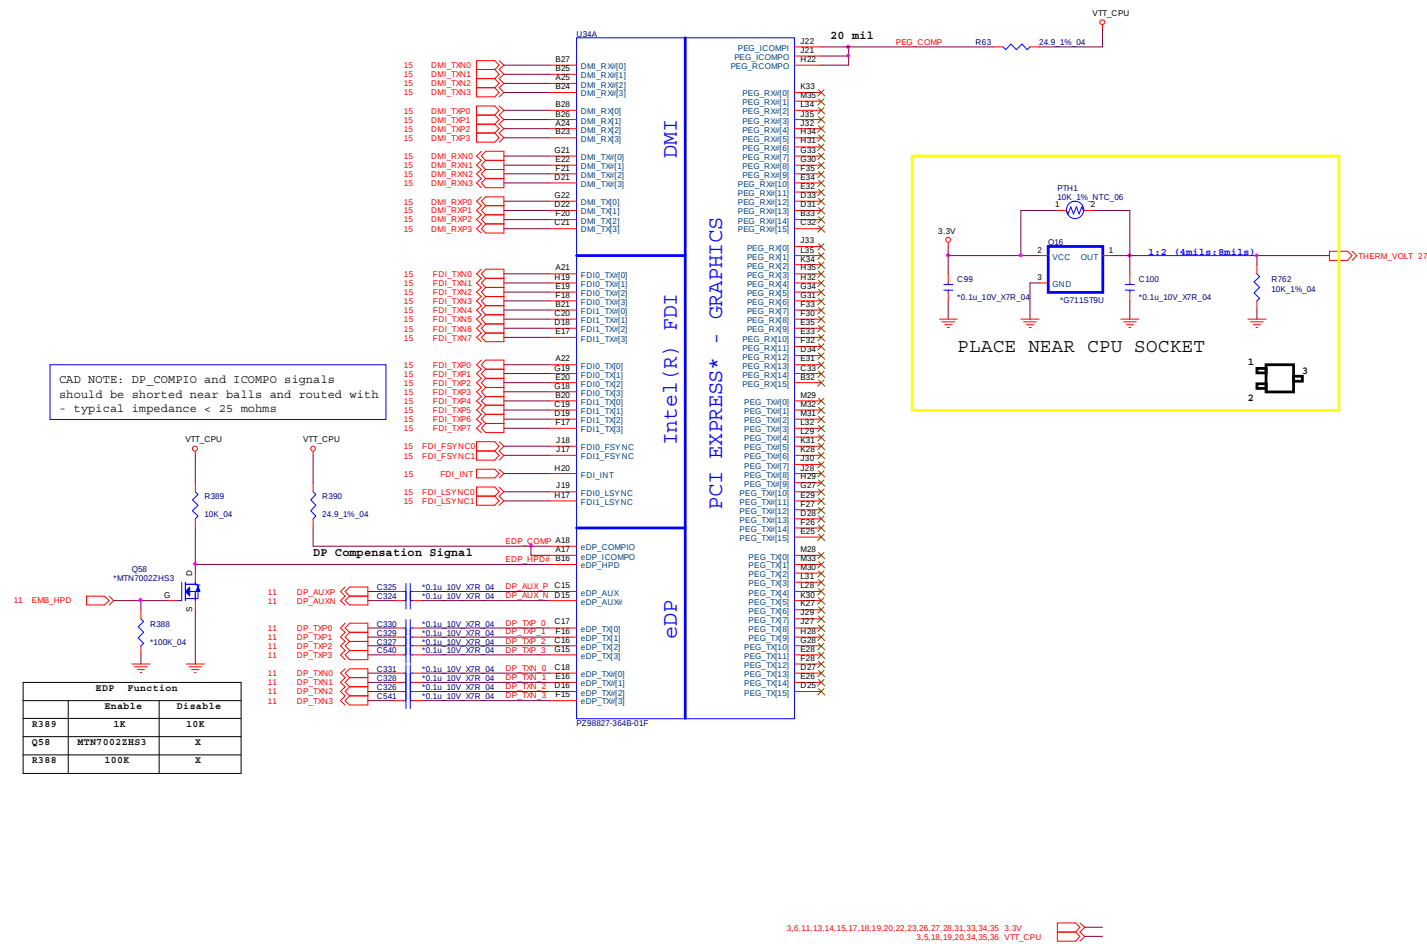Ivy/Sandy Bridge Processor 1/7
(DMI,PEG,FDI)Sheet 2 of 43
Ivy Bridge
Processor 1/7

Schematic Diagrams


Ivy Bridge Processor 2/7

Sheet 3 of 43
Ivy Bridge
Processor 2/7

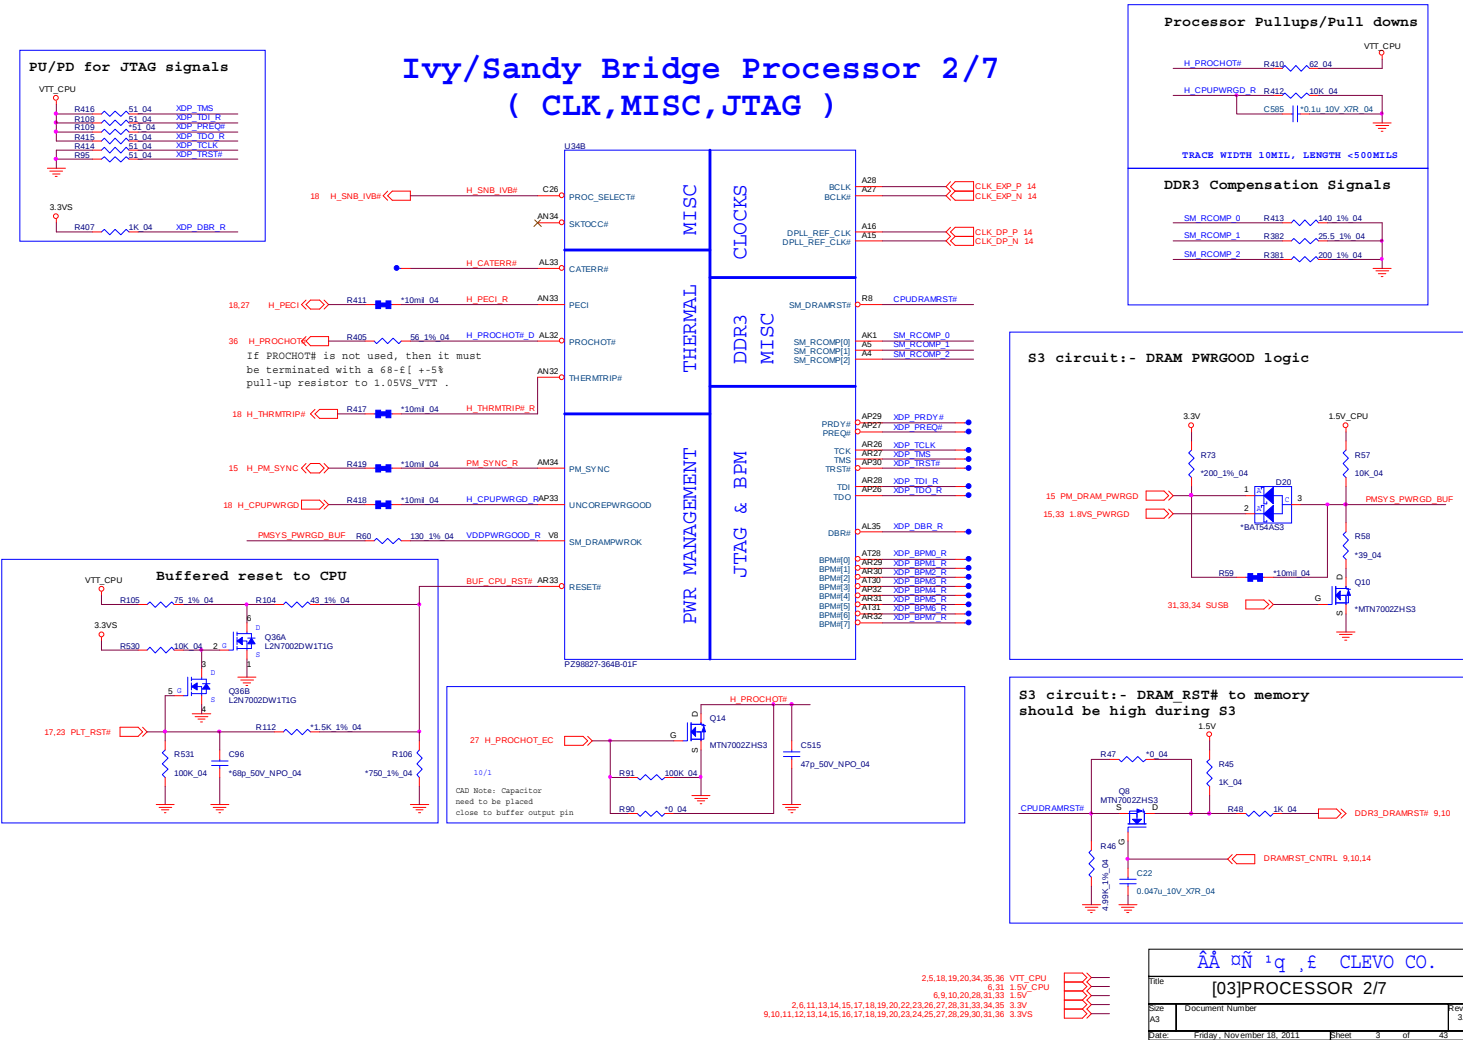

Ivy Bridge Processor 3/7

Ivy/Sandy Bridge Processor 3/7 (DDR3)

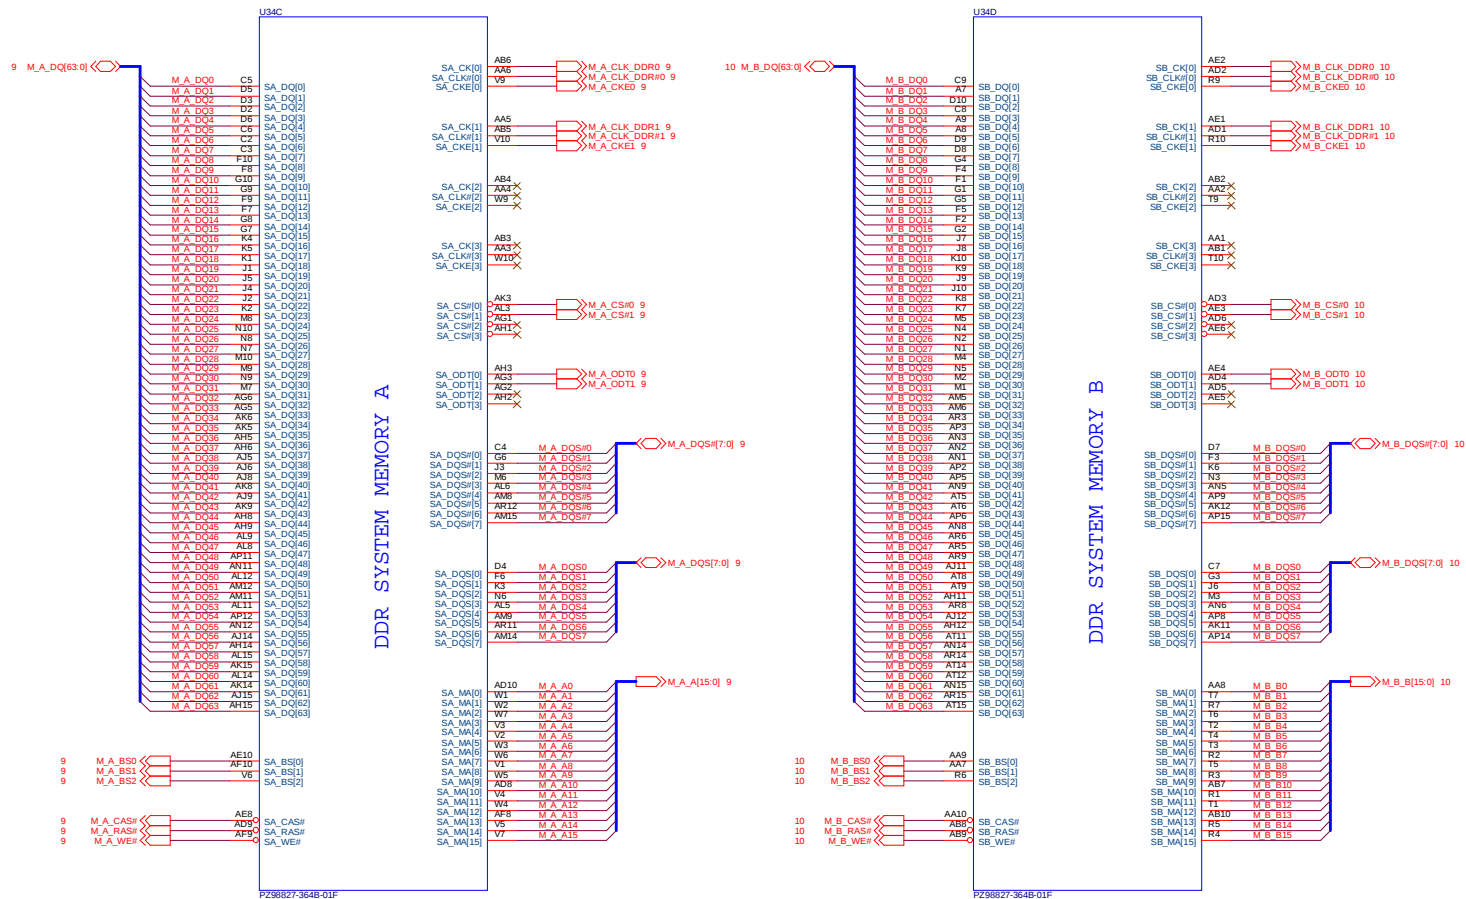



Sheet 4 of 43
Ivy Bridge
Processor 3/7

Ivy Bridge Processor 4/7


B. Schematic Diagrams

PROCESSOR CORE POWER

ICCMAX Maximum Processor SV 48

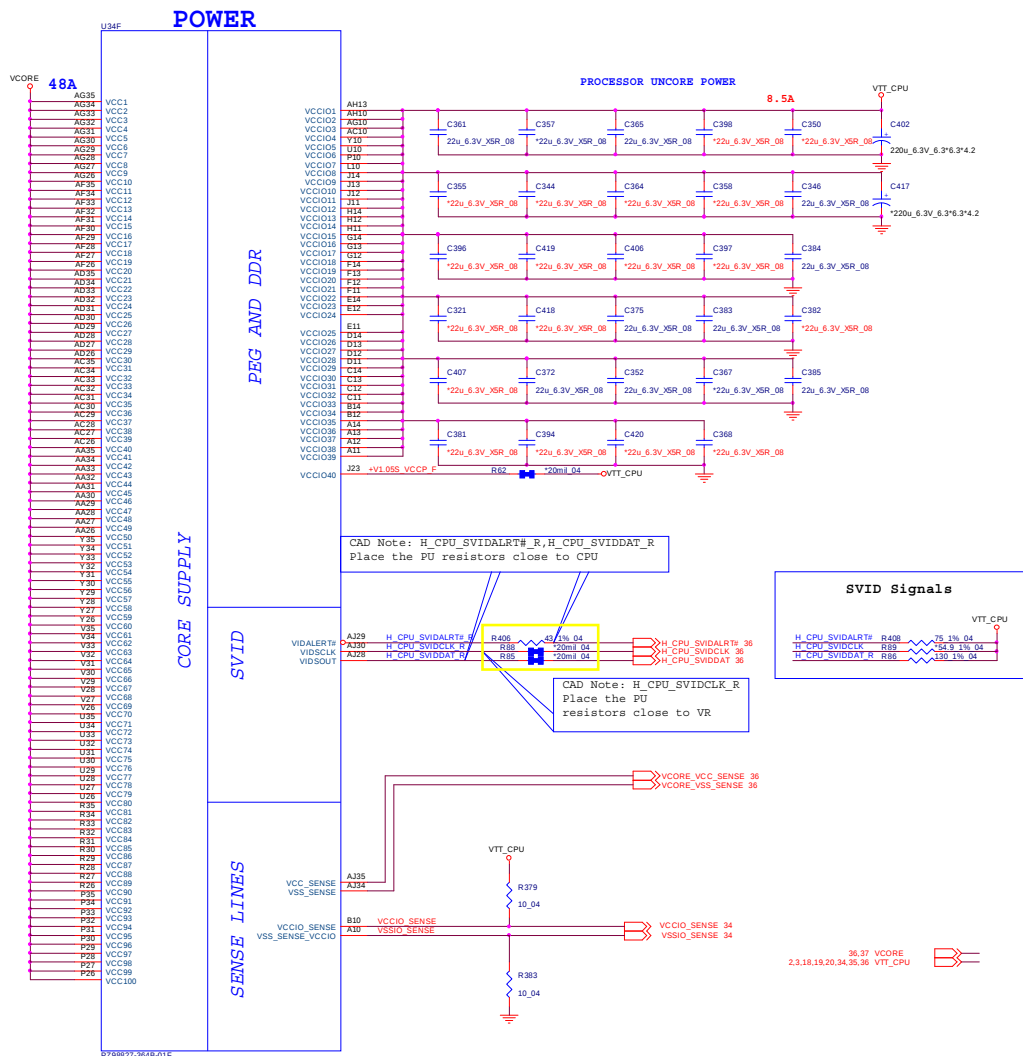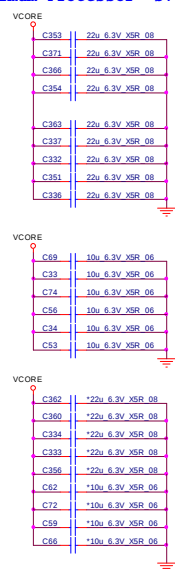

1. *Journal of Management Studies*, 1997, 34(1), 1-14.

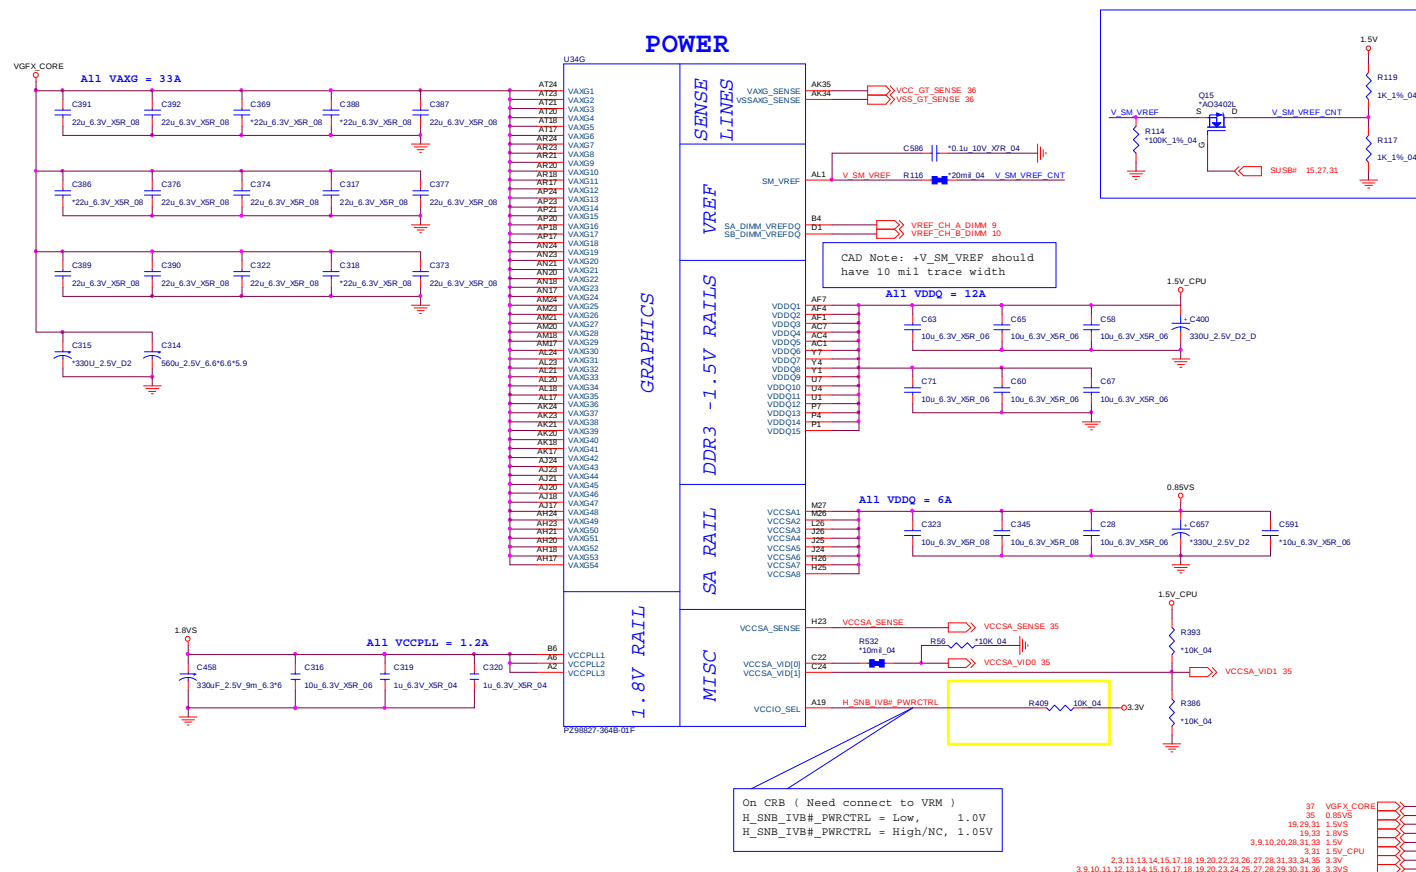


Ivy Bridge Processor 6/7






Sheet 7 of 43
Ivy Bridge
Processor 6/7

CAD Note: 0 ohm resistor
should be placed close
to CPU

Ivy\Sandy Bridge Processor 6/7 (GND)

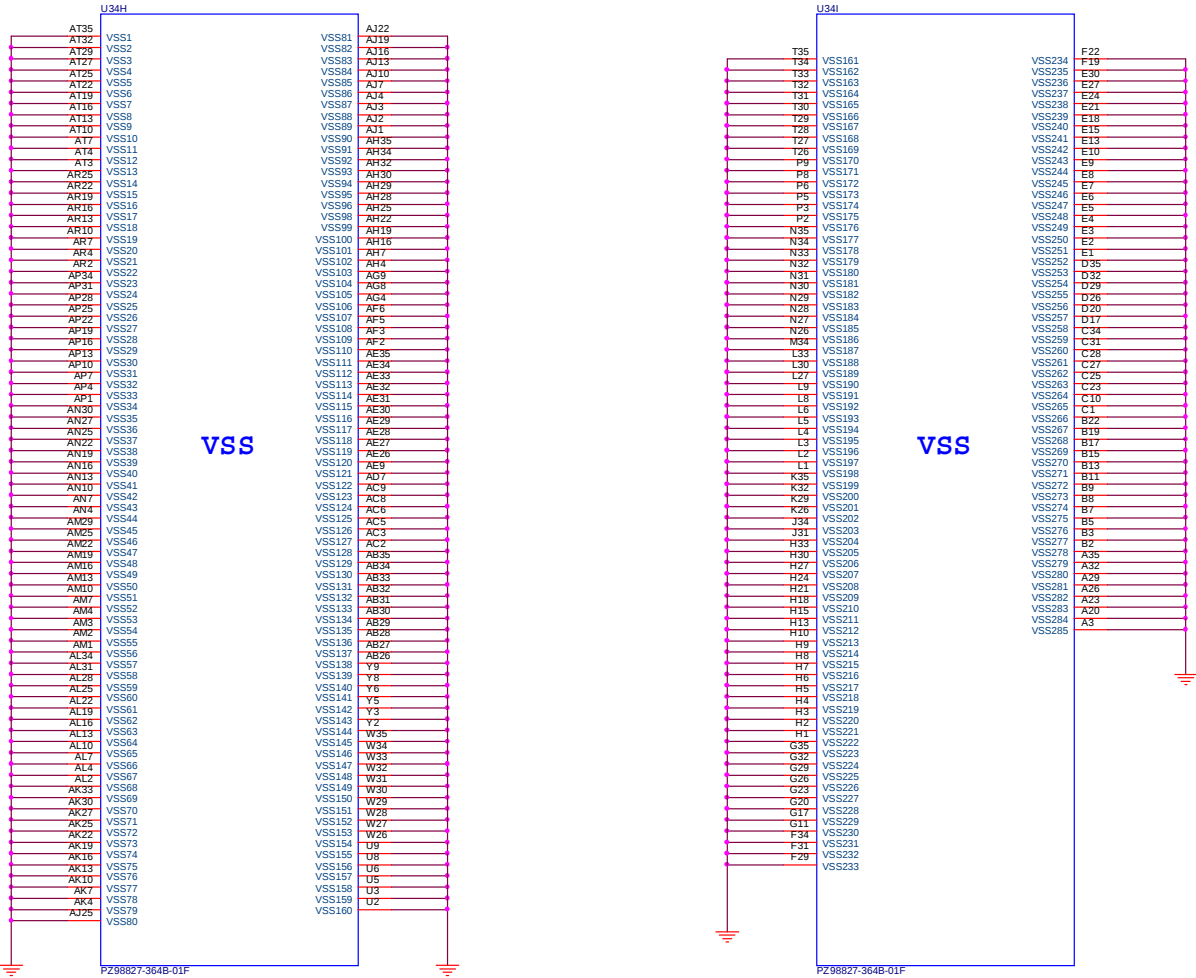

Ivy Bridge Processor 7/7

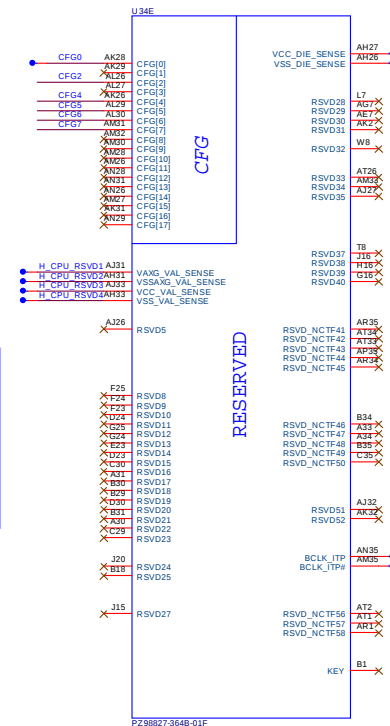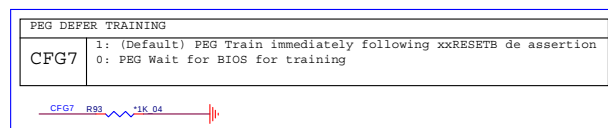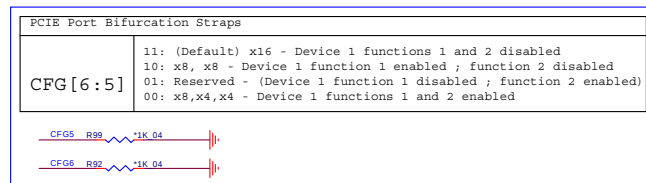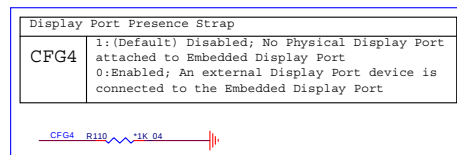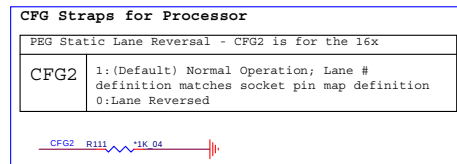Ivy/Sandy Bridge Processor 7/7
(RESERVED)

3,6,9,10,20,28,31,33 1.5V


Sheet 8 of 43
Ivy Bridge
Processor 7/7

Schematic Diagrams

DDR3 SO-DIMM_0

SO-DIMM A CHANGE TO STANDARD

Sheet 9 of 43
DDR3 SO-DIMM_0

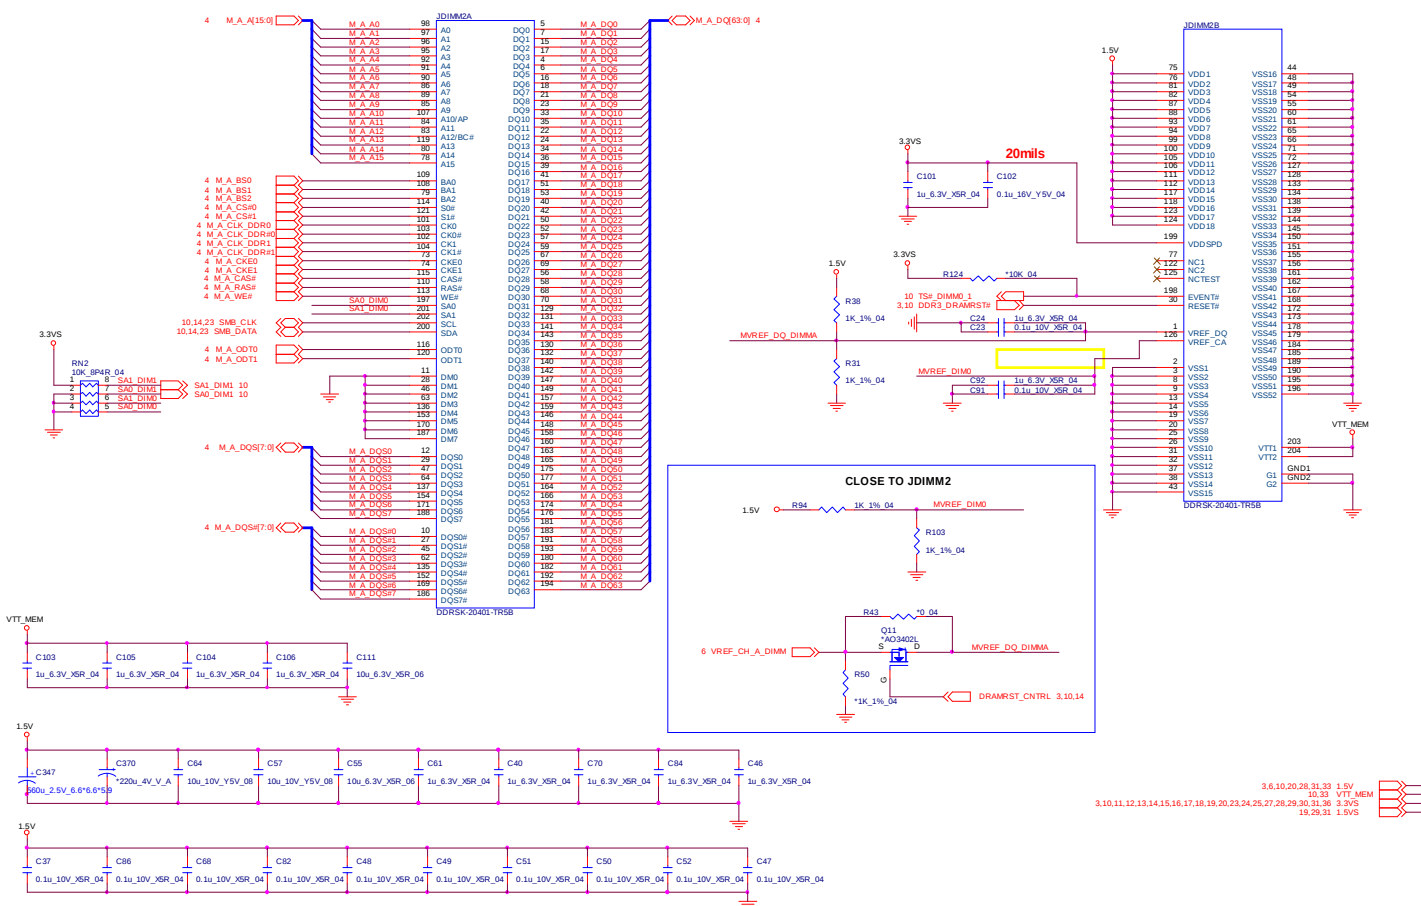


SO-DIMM B

Sheet 10 of 43
DDR3 SO-DIMM_1



PANEL CONNECTOR

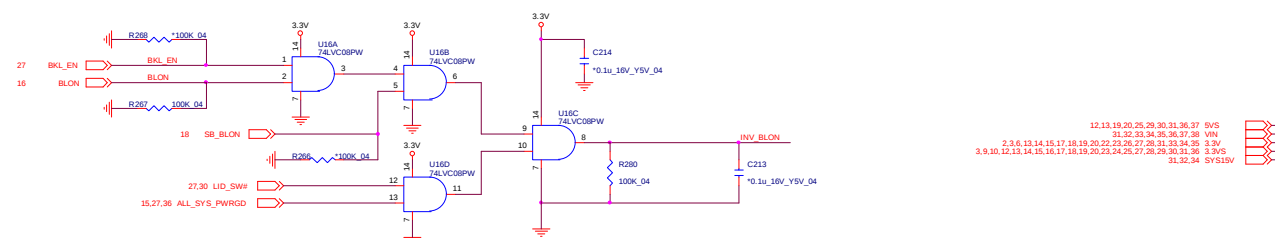

HDMI, CRT B - 13

B.Schematic Diagrams


CRT PORT



Schematic Diagrams

PantherPoint - M 1/9

Sheet 13 of 43
PantherPoint - M
1/9

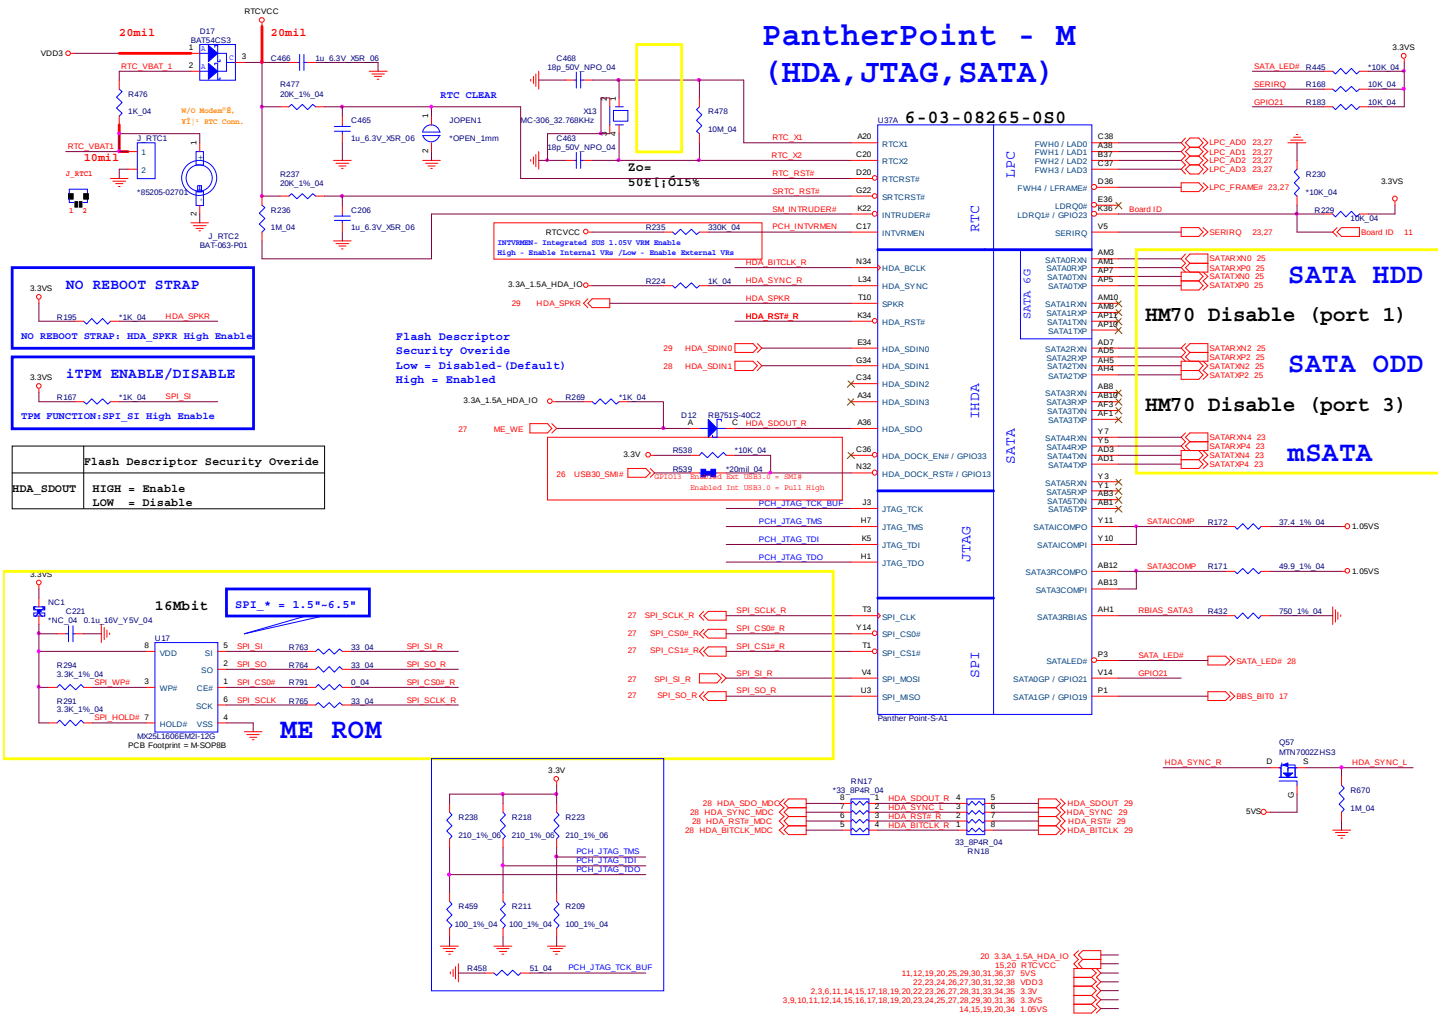


PantherPoint - M (PCI-E,SMBUS,CLK)




PantherPoint - M 3/9

Sheet 15 of 43
PantherPoint - M
3/9

PantherPoint -M (DMI,FDI,GPIO)

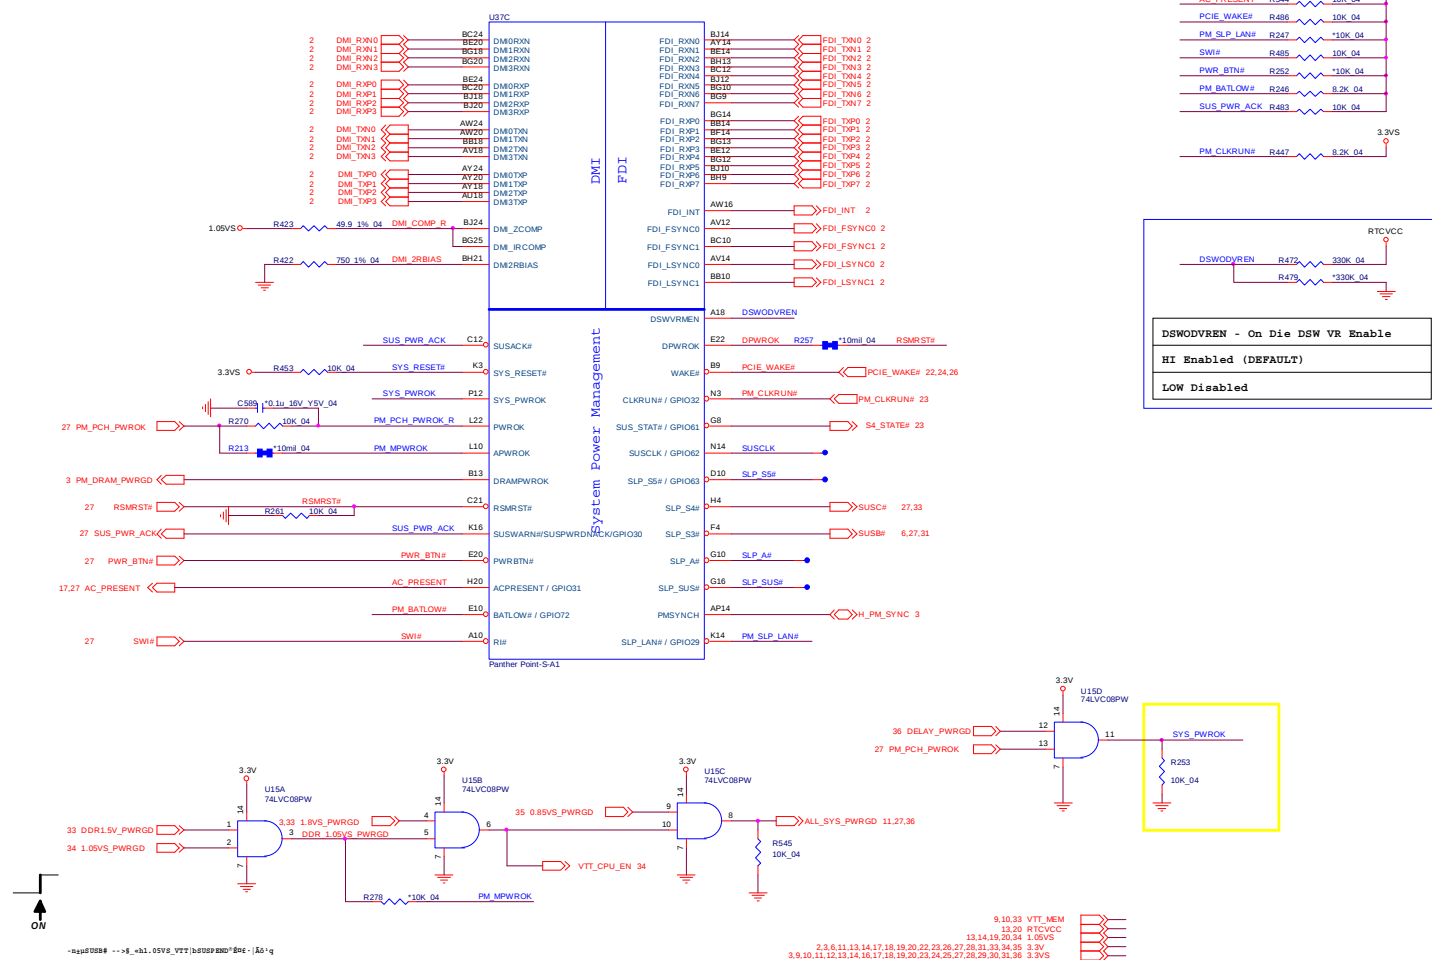

PantherPoint - M 4/9

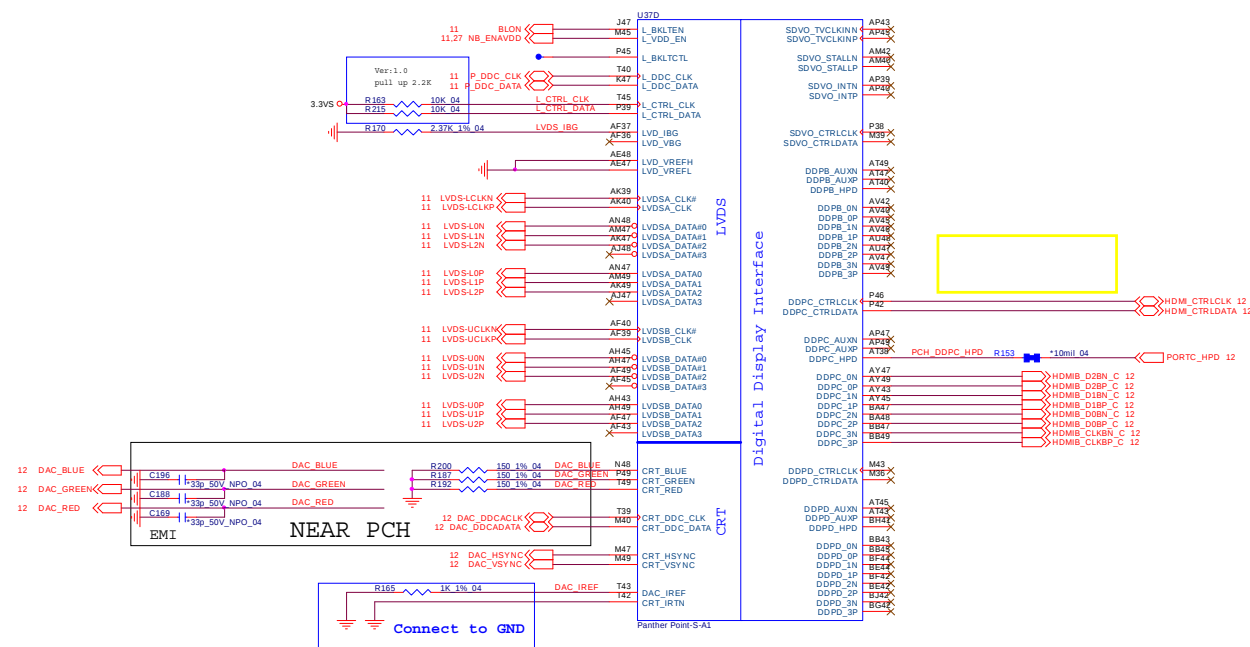PantherPoint -M
(LVDS,DDI,CRT)

Sheet 16 of 43
PantherPoint - M
4/9

Schematic Diagrams

PantherPoint - M 5/9

Sheet 17 of 43
PantherPoint - M
5/9


Boot BIOS Strap		
BBS_BIT1	BBS_BIT0	Boot BIOS Location
0	0	LPC
0	1	Reserved (NAND)
1	0	PCI
1	1	SPI

R226 *1K 04 BBS_BIT1
R446 *1K 04 BBS_BIT0 13


Flash Descriptor security override strap	
PCI_GNT#3	LOW = PCI_GNT#3 swap override HIGH = Default

R225 *1K 04 PCI_GNT#3



R243 *1K 04 INT_PIRQ#
MPC Switch Control
MPC ON -- 0
MPC OFF -- 1 DEFAULT

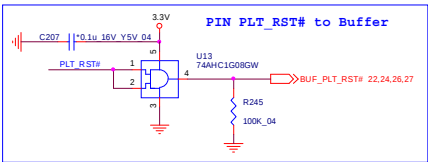

PantherPoint -M (PCI,USB,NVRAM)

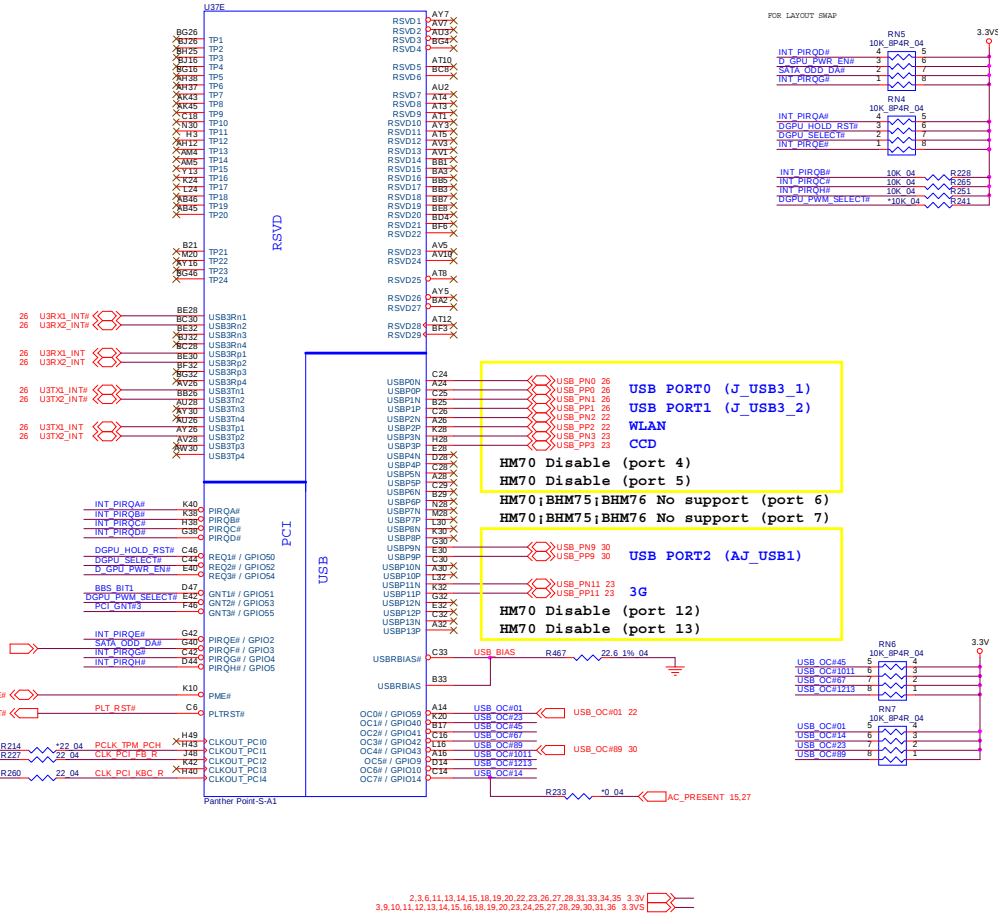

PantherPoint - M 6/9

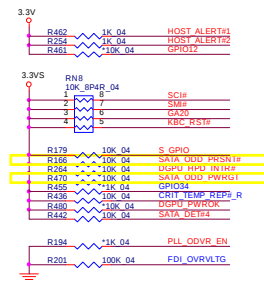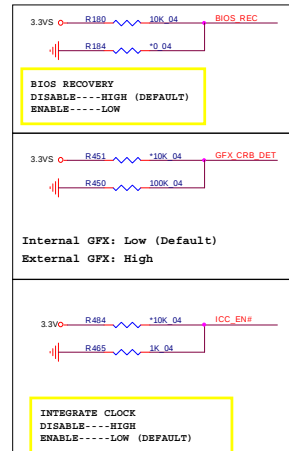

PantherPoint - M (GPIO,VSS_NCTF,RSVD)



Sheet 18 of 43
 PantherPoint - M
 6/9

B. Schematic Diagrams

Sheet 19 of 43
PantherPoint - M
7/9

PartherPoint -M (POWER)

The schematic diagram illustrates the power supply range for the PartherPoint -M (POWER) board. It shows various power planes and their connections to the board's power pins. The diagram includes a table of power supply ranges for different board configurations.

Min	Voltage	Max
1.00V	1.05V	1.10V
1.43V	1.5V	1.58V
1.71V	1.8V	1.89V
3.14V	3.3V	3.47V
4.75V	5V	5.25V

Additional information from the diagram:


- POWER** section: VCC CORE, VCCIO, VCCMOS, VCCD, VCCSPI.
- Table of power supply ranges:**

Min	Voltage	Max
1.00V	1.05V	1.10V
1.43V	1.5V	1.58V
1.71V	1.8V	1.89V
3.14V	3.3V	3.47V
4.75V	5V	5.25V

PantherPoint - M 8/9

Min	Voltage	Max
1.00V	1.05V	1.10V
1.43V	1.5V	1.58V
1.71V	1.8V	1.89V
3.14V	3.3V	3.47V
4.75V	5V	5.25V

PantherPoint - M (POWER)

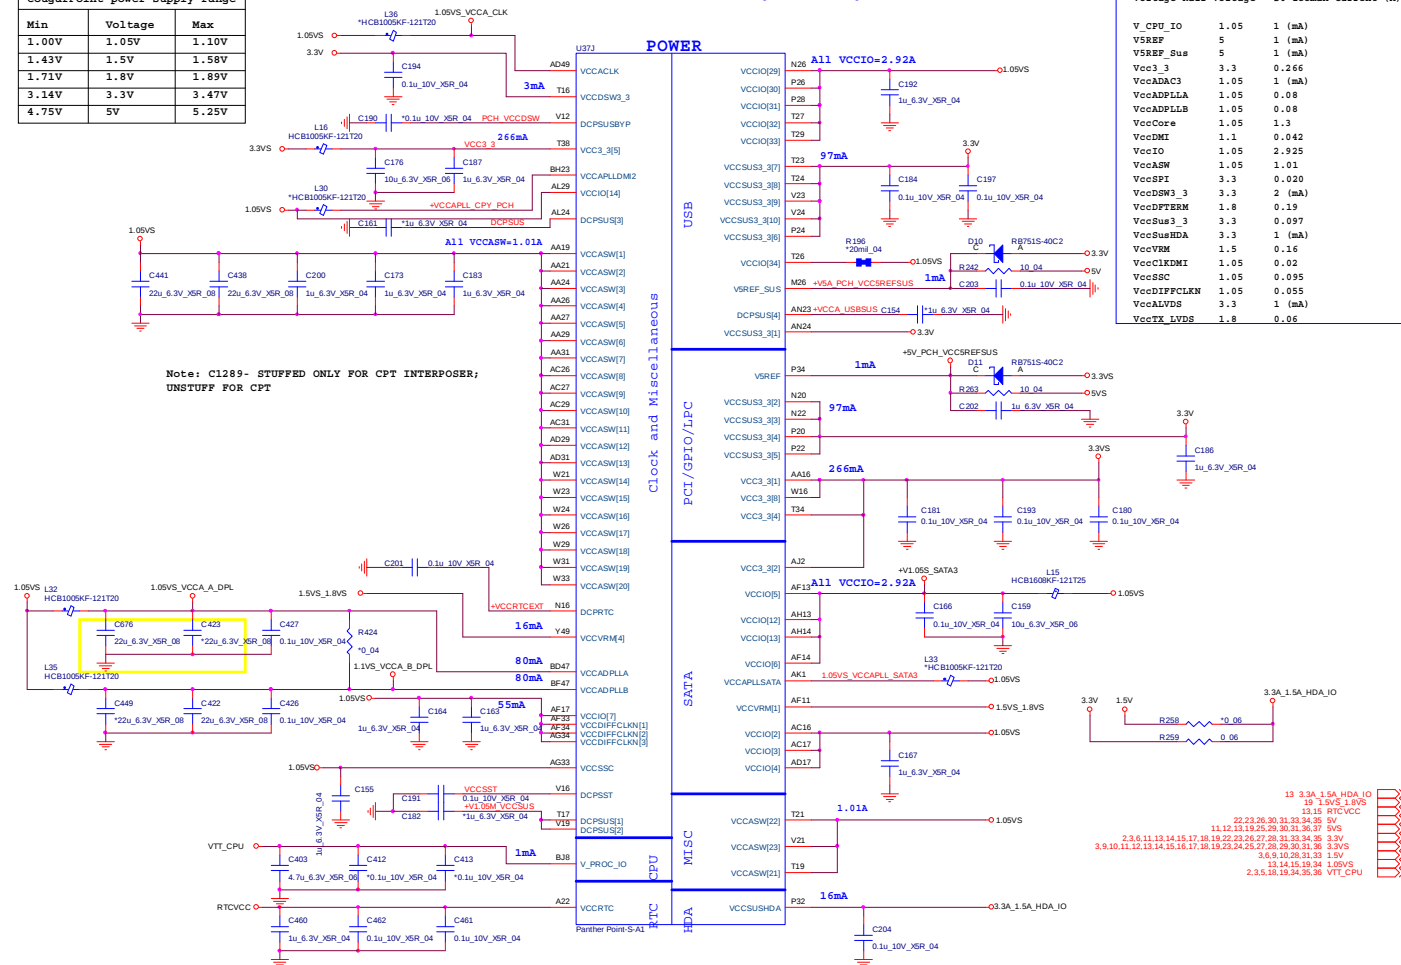


Sheet 20 of 43
PantherPoint - M
8/9

PantherPoint - M 9/9


PantherPoint -M (GND)

Sheet 21 of 43
PantherPoint - M
9/9

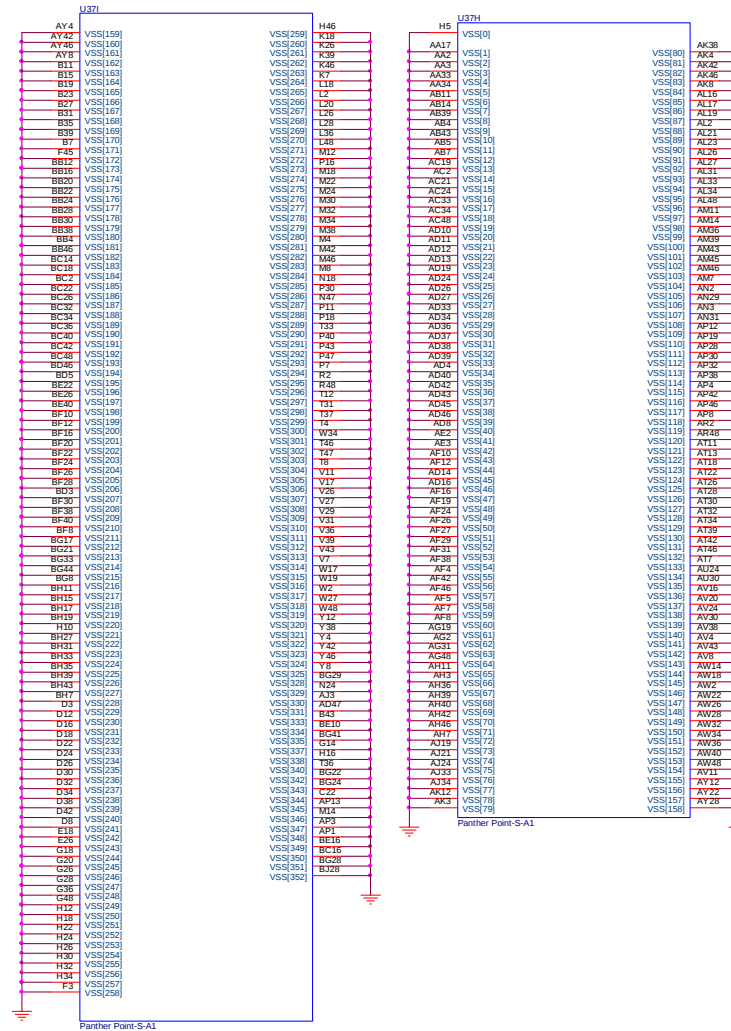


USB 3.0, Power, WLAN

USB 3.0 Power

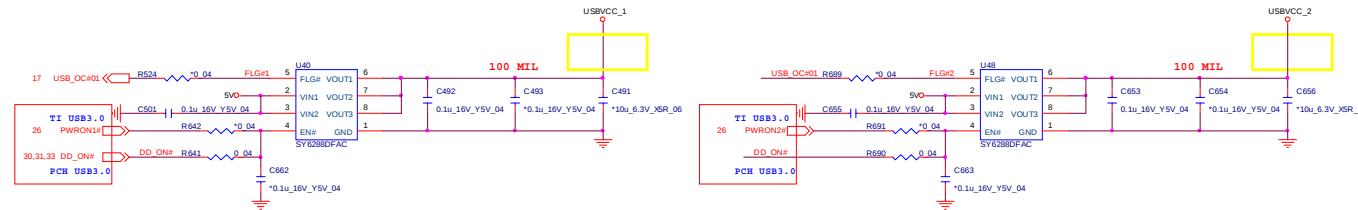

Sheet 22 of 43
USB 3.0, Power,
WLAN


MINI CARD WLAN

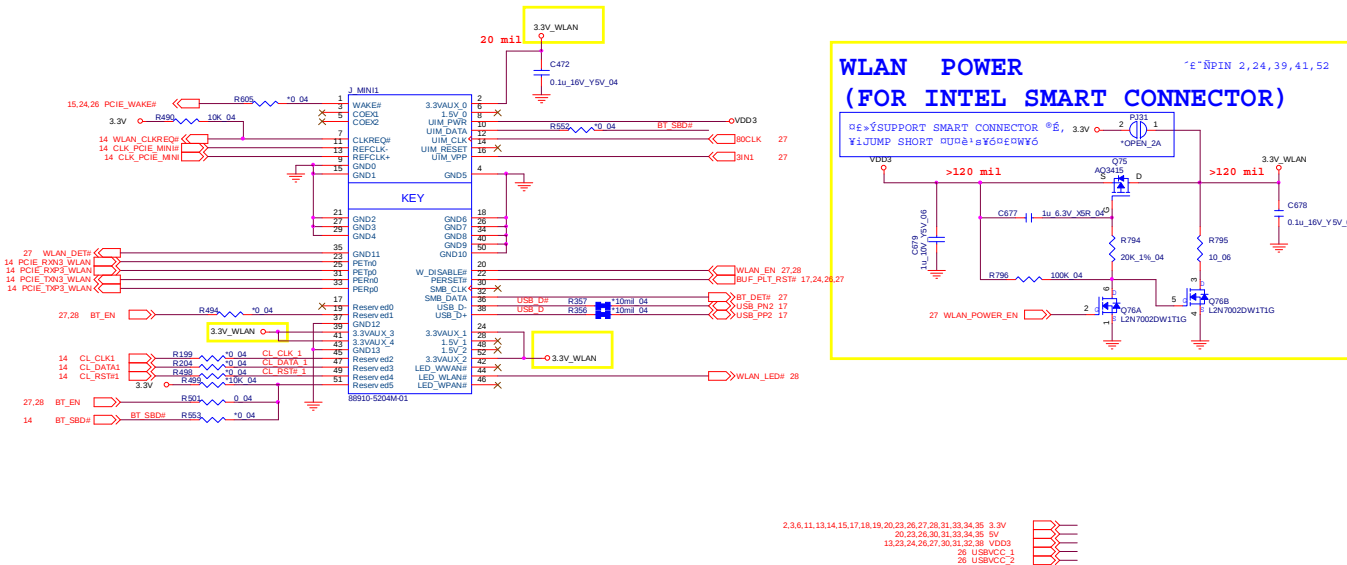


B. Schematic Diagrams

B - 24 CCD, 3G, TPM


Sheet 23 of 43
CCD, 3G, TPM

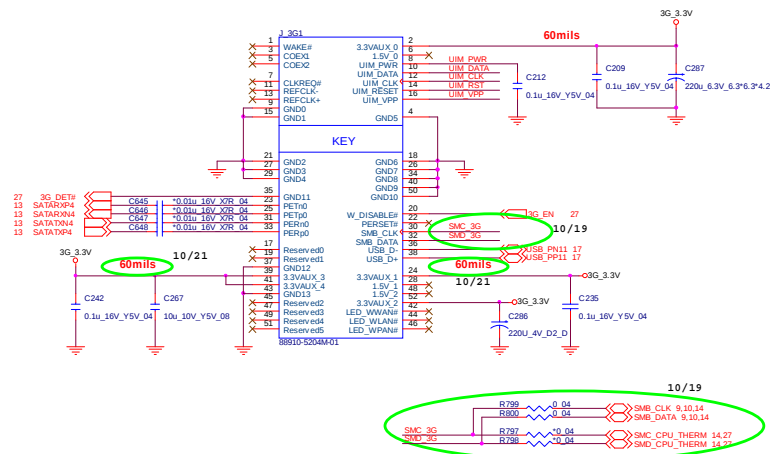

From H8 default HI

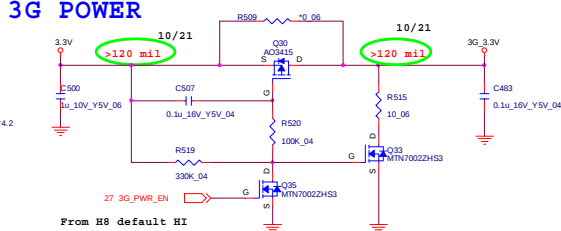

Asserted before entering S3
LPC reset timing:
LPCPD# inactive to LRST# inactive 32~96us

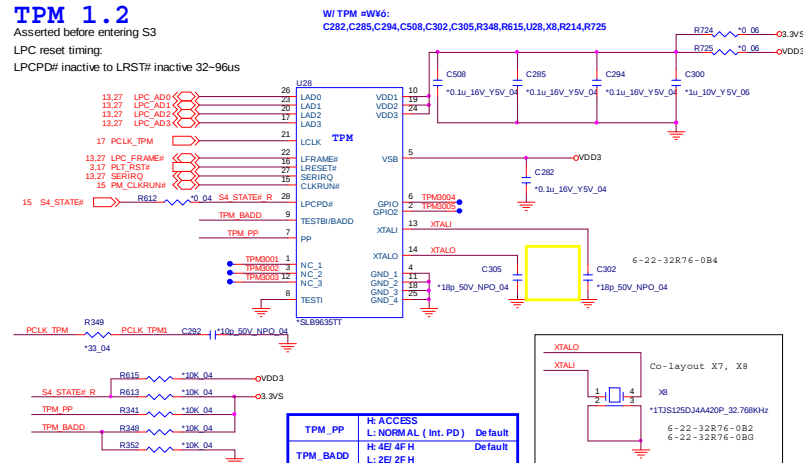[illegible]


Sheet 24 of 43
Card Reader, LAN
RTL8411




Schematic Diagrams

LAN (RTL8411), SATA HDD, ODD


Sheet 25 of 43
LAN(RTL8411),
SATA HDD, ODD

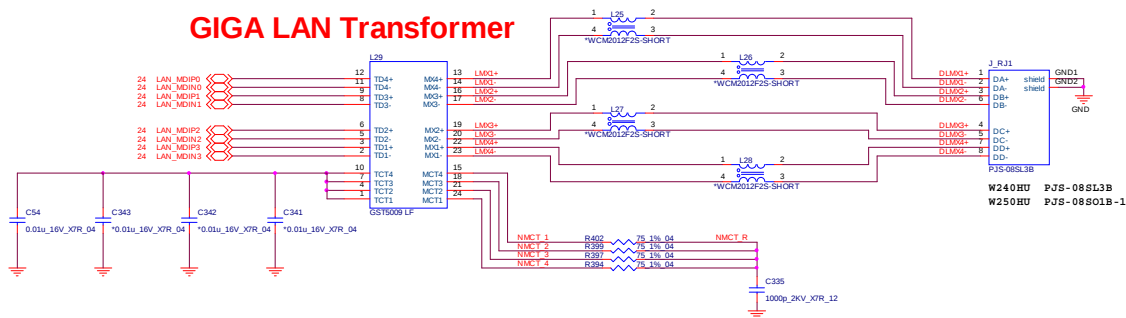


SATA HDD

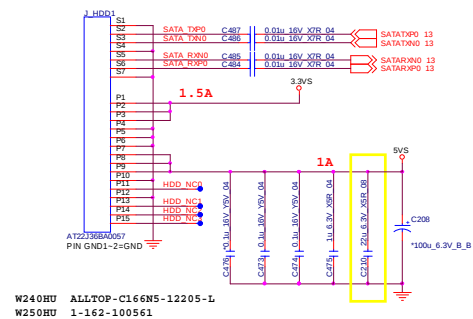

SATA ODD

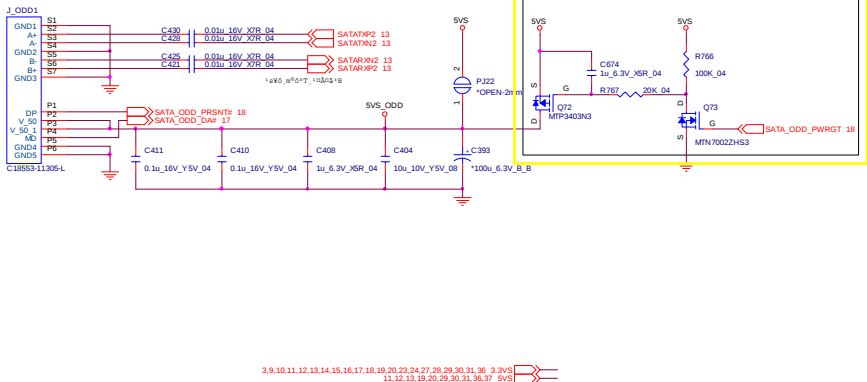


USB 3.0 TI TUSB7320

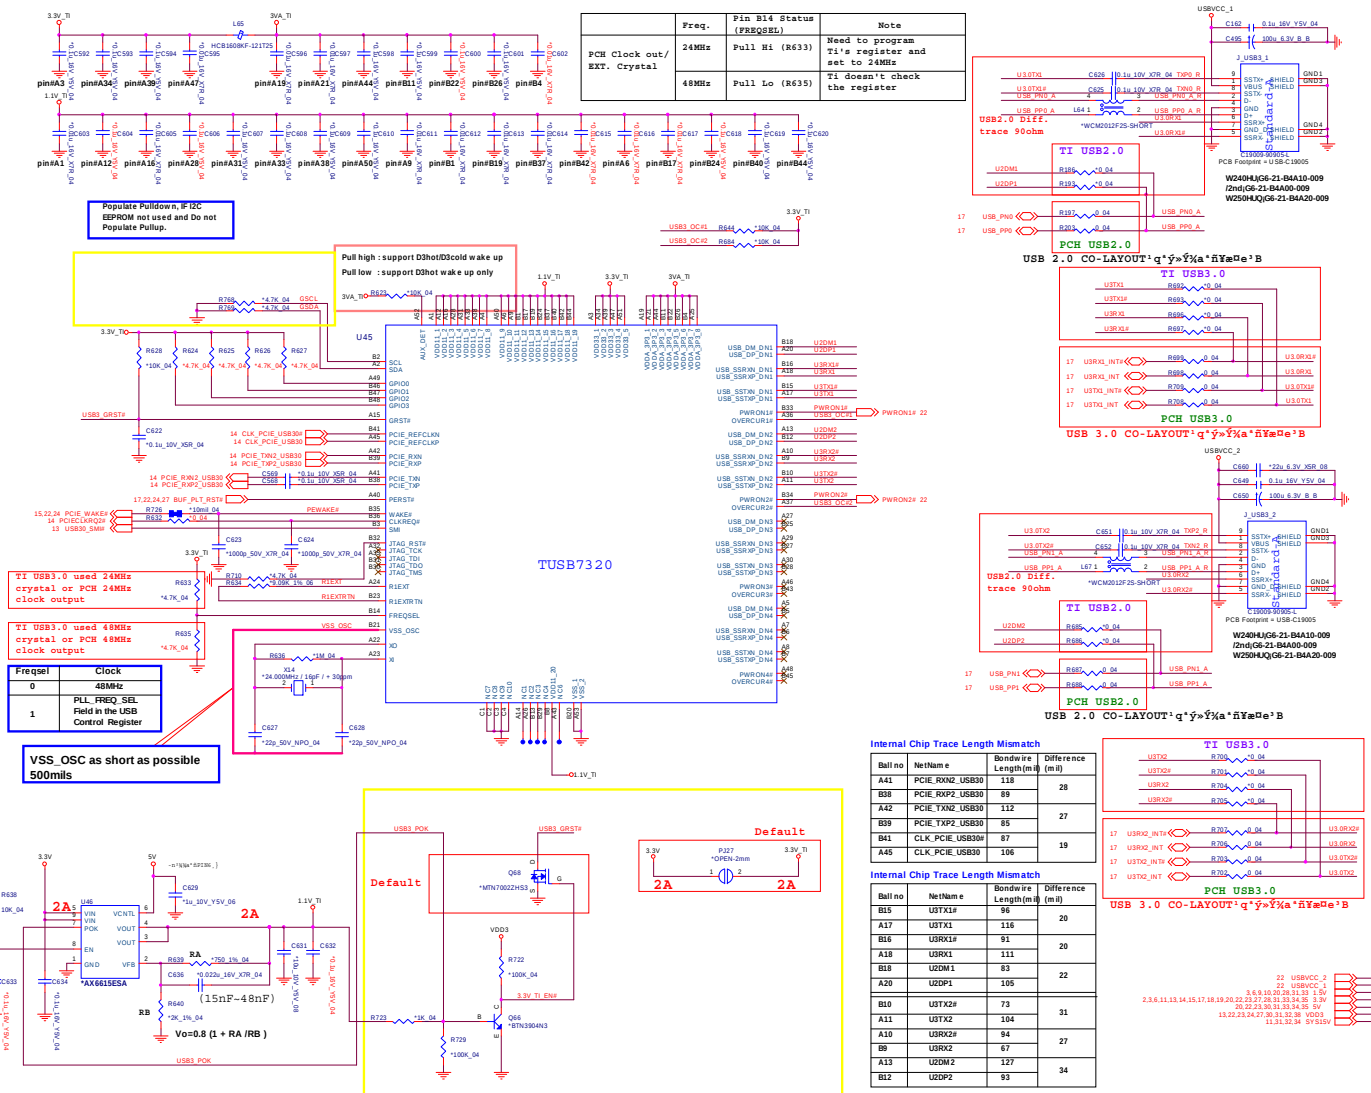


Sheet 26 of 43
USB 3.0 TI
TUSB7320

B - 28 KBC-ITE IT8518

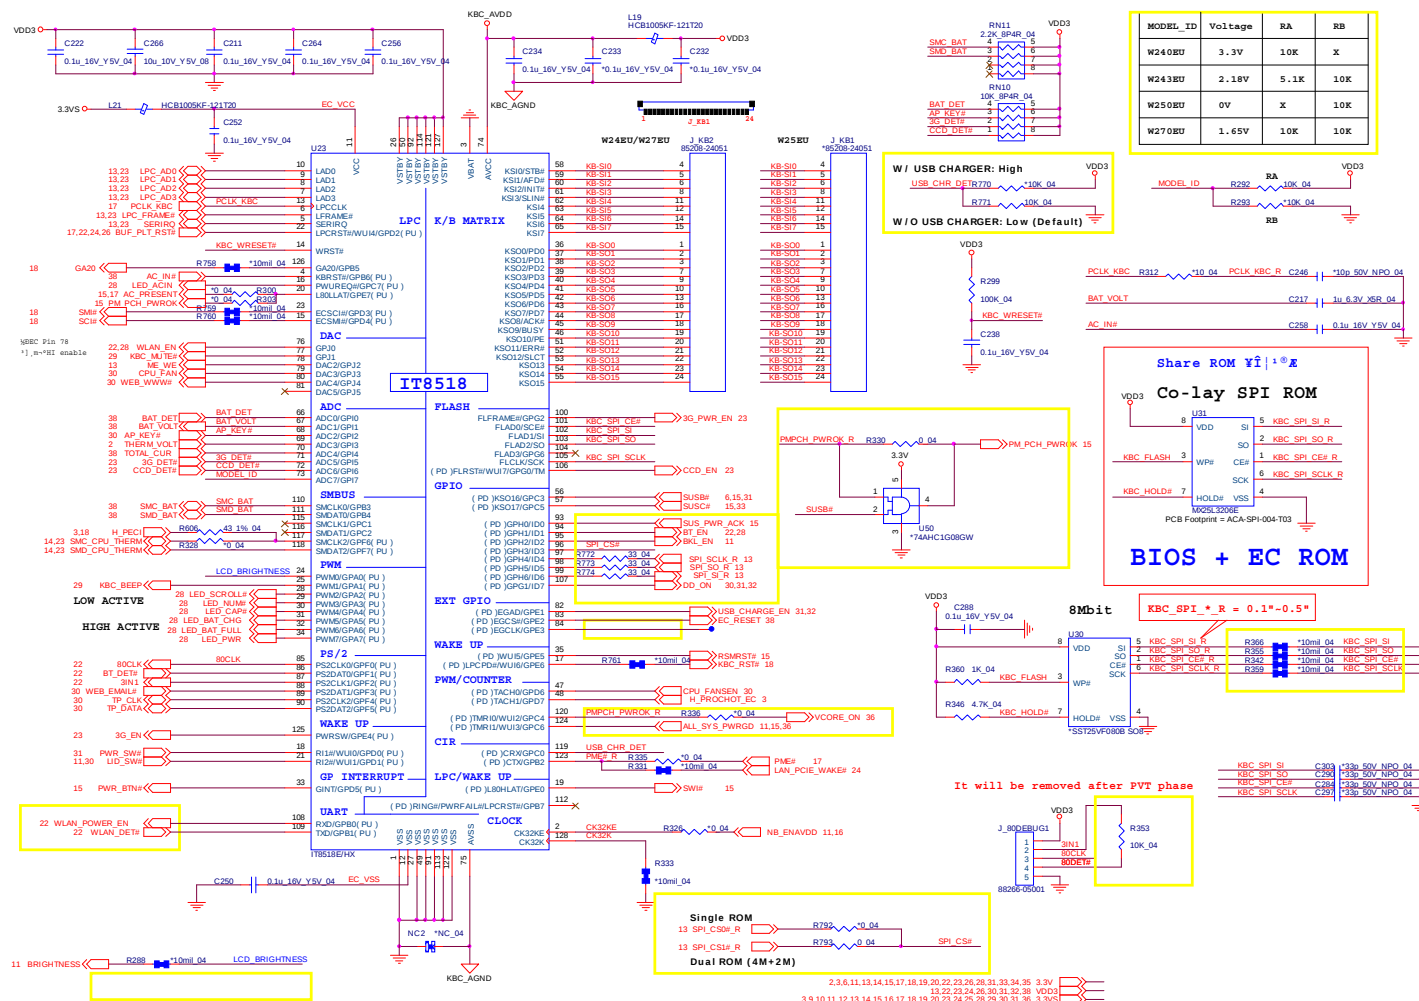

MDC

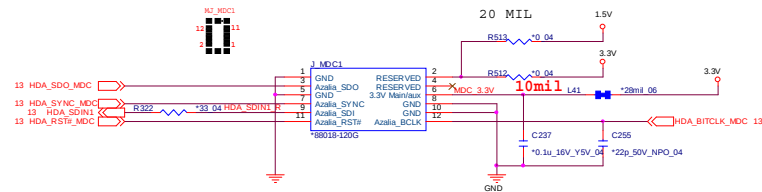


3,6,9,10,20,31,33 1.5V
2,3,6,11,13,14,15,17,18,19,20,22,23,26,27,31,33,34,35 3.3V
3,9,10,11,12,13,14,15,16,17,18,19,20,23,24,25,27,29,30,31,36 3.3VS


Audio Codec ALC269

B. Schematic Diagrams

Sheet 29 of 43
Audio Codec
ALC269

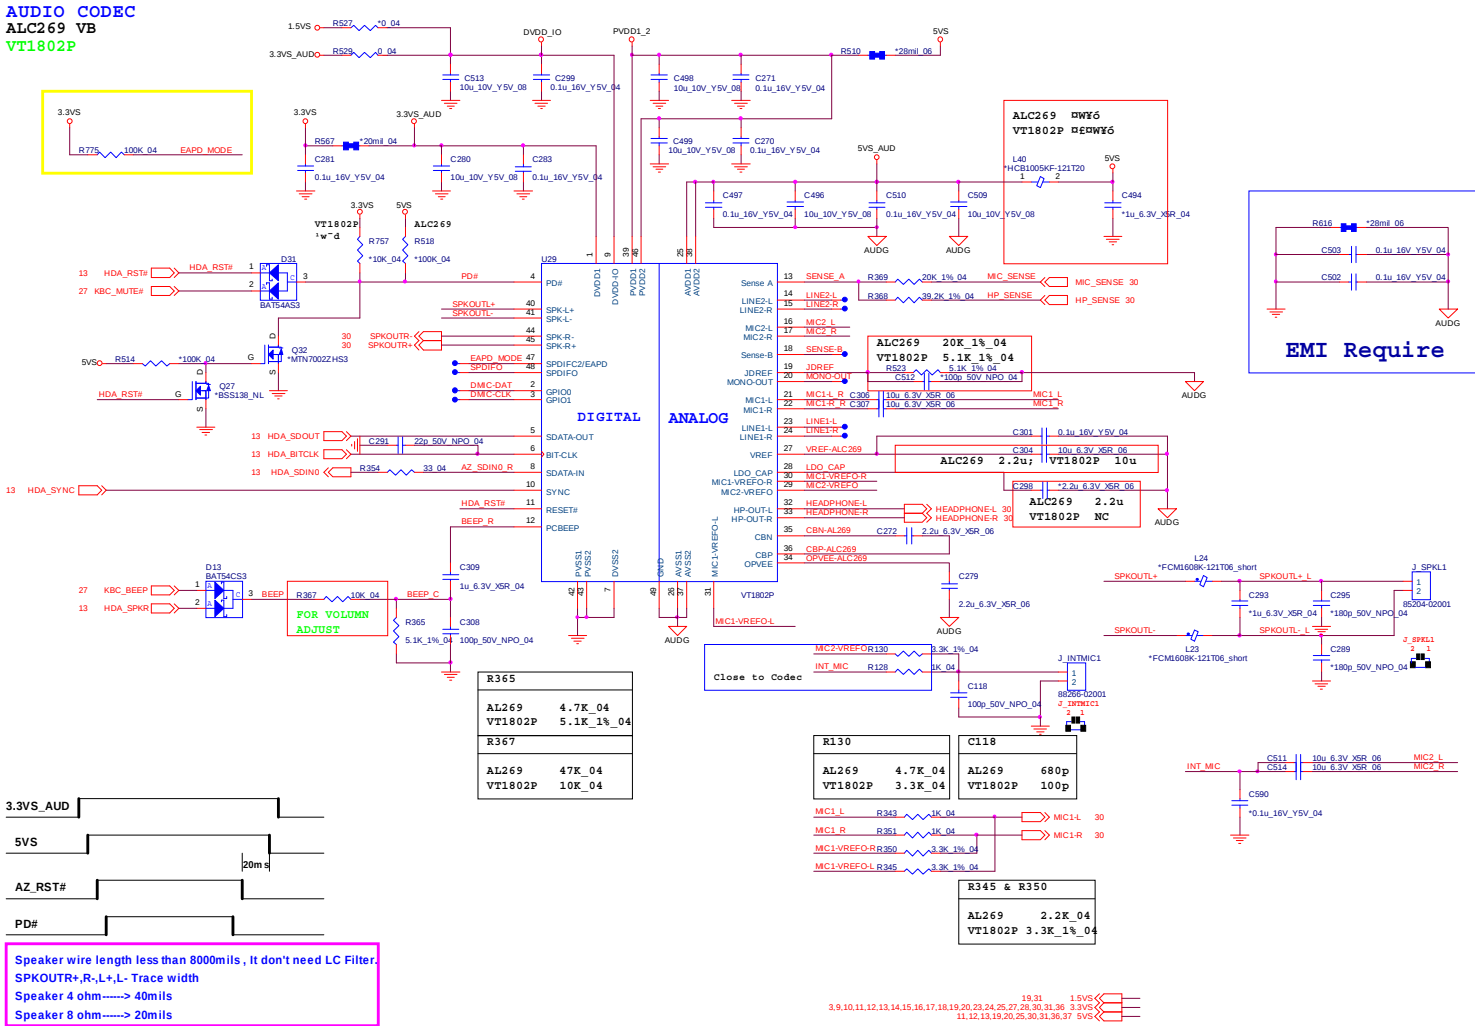

W/O USB CHARGER

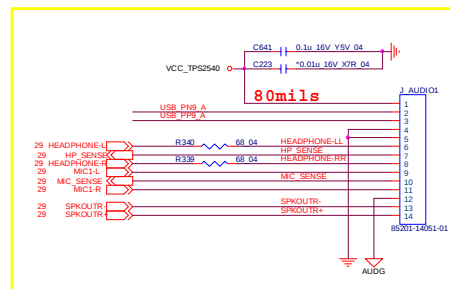

The schematic shows two fan headers being connected to specific pins on two different connectors.


- J1B8 Header:** This header has four pins labeled F0N1, VIN, VOUT, and VISET. These are connected to pins 8, 7, 6, and 5 respectively on the connector labeled X1B5SA. Pin 8 is GND, pin 7 is FAN, pin 6 is GND, and pin 5 is GND. A red arrow points from the label "CPU_FAN" to the F0N1 pin.
- J1FAN1 Header:** This header has three pins labeled 1, 2, and 3. These are connected to pins 1, 2, and 3 respectively on the connector labeled 82C05-0701. Pin 1 is 3V5, pin 2 is 5V5, and pin 3 is 3V5. A red arrow points from the label "CPU_FANSEN" to the pin 1 position.

[illegible][illegible]

Sheet 30 of 43
USB Charger, Fan,
TP, Multi-Conn


System Power

Sheet 31 of 43
System Power

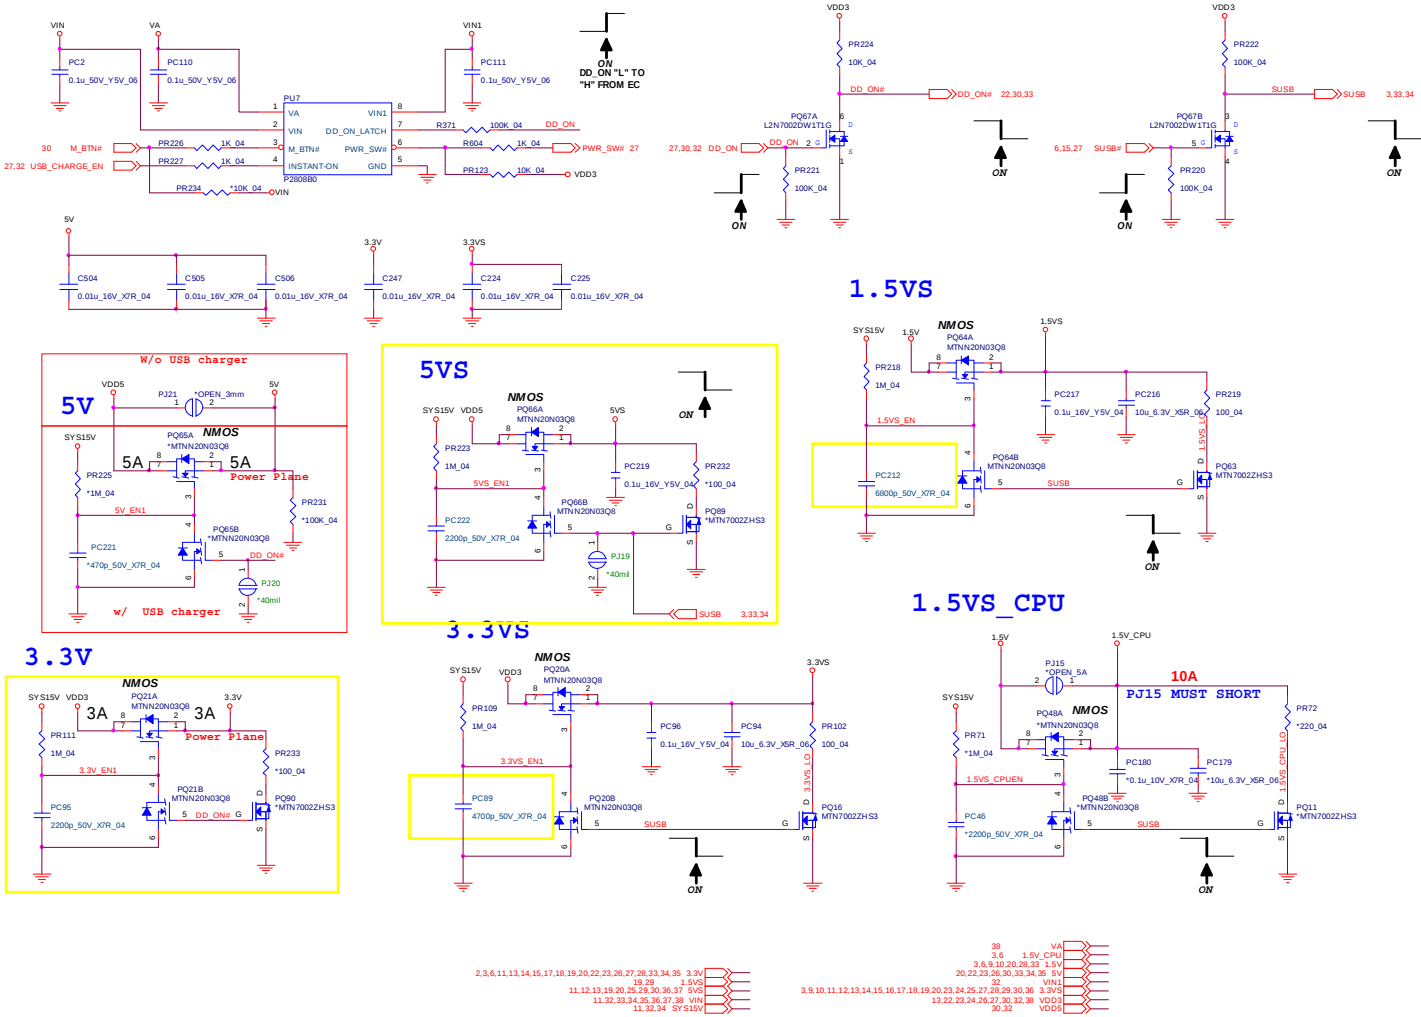


VDD3, VDD5

VDD3/VDD5

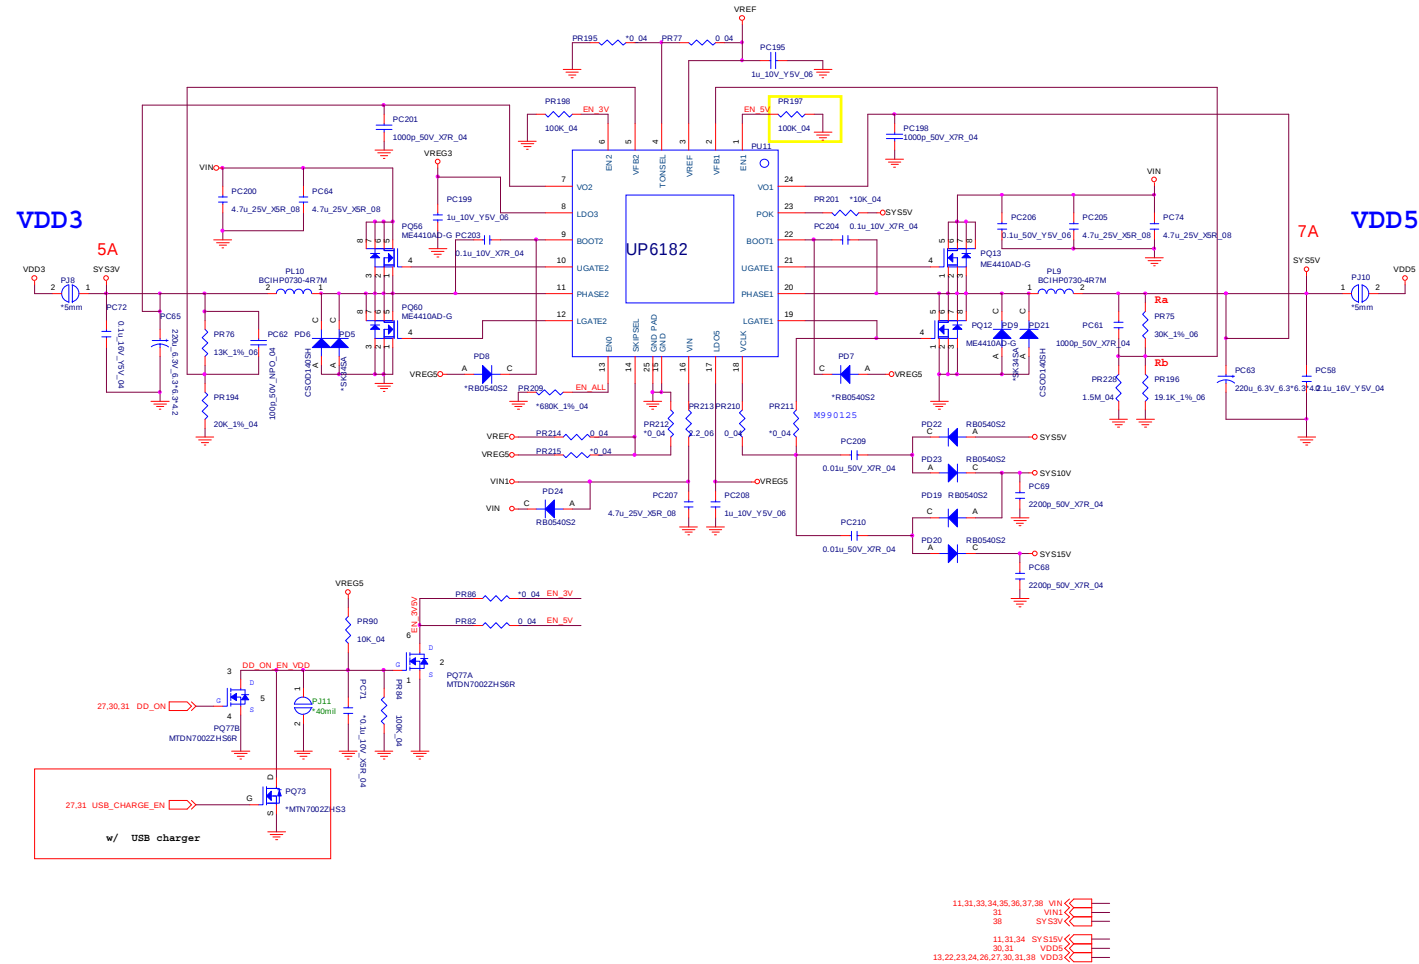
Sheet 32 of 43
VDD3, VDD5

B. Schematic Diagrams



1.5V/0.75VS/1.8VS

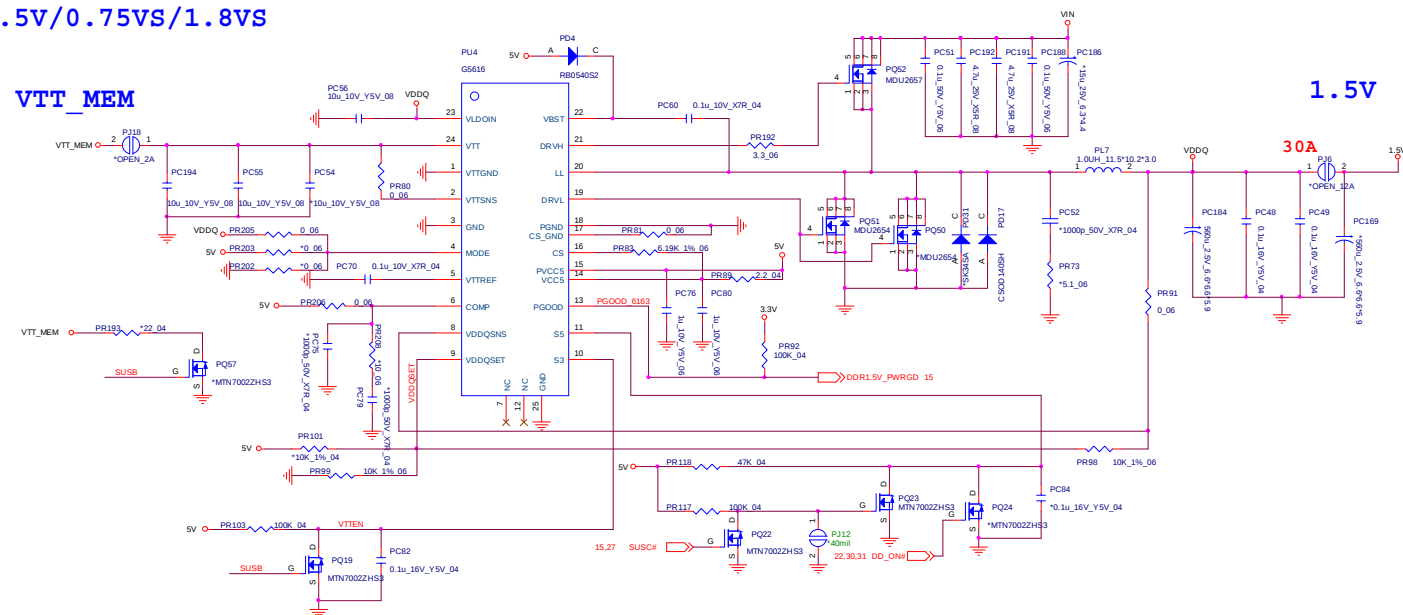

1.5V_CTRL1	1.5V_CTRL0	Voltage
1	1	1.55V
1	0	1.60V
0	1	1.65V
0	0	1.70V

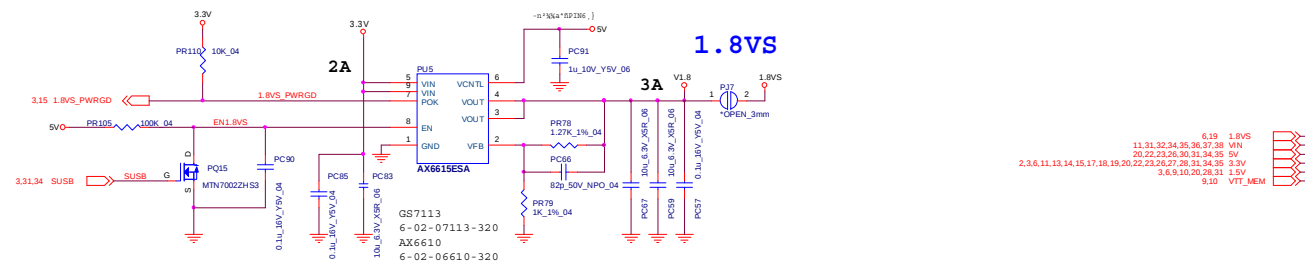

Power 1.05VS

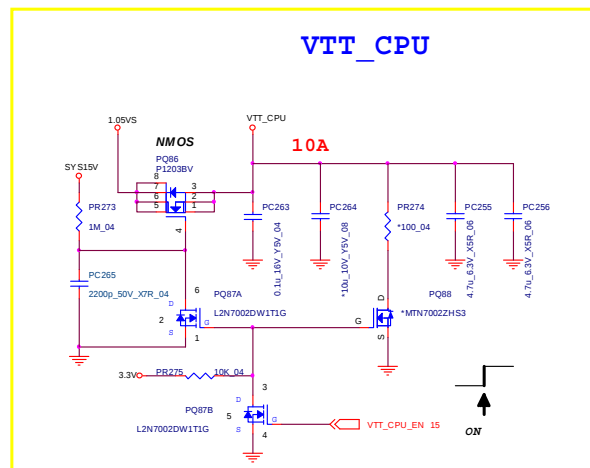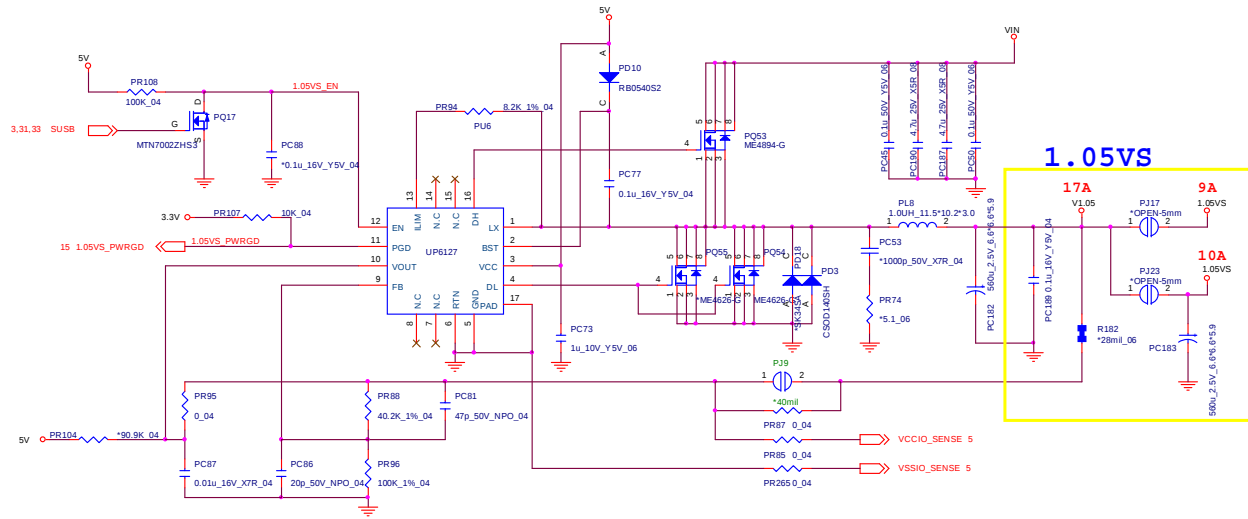

2,3,5,18,19,20,35,36	VTT_CPU
13,14,15,19,20	1.05VS
6,35	0.05VS
3,9,10,11,12,13,14,15,16,17,18,19,20,23,24,25,27,28,29,30,31,36	3.3VS
2,3,6,11,13,14,15,17,18,19,20,22,23,26,27,28,31,33,35	3.3V
20,22,23,26,30,31,33,35	5V
11,31,32,33,35,36,37,38	VIN
11,31,32	SY515V


Schematic Diagrams

Power 0.85VS

0.85VS


Sheet 35 of 43
Power 0.85VS

	0.5V	0.6V	0.725V	0.675V
VCCSA_VID0	0	0	1	1
VCCSA_VID1	0	1	0	1

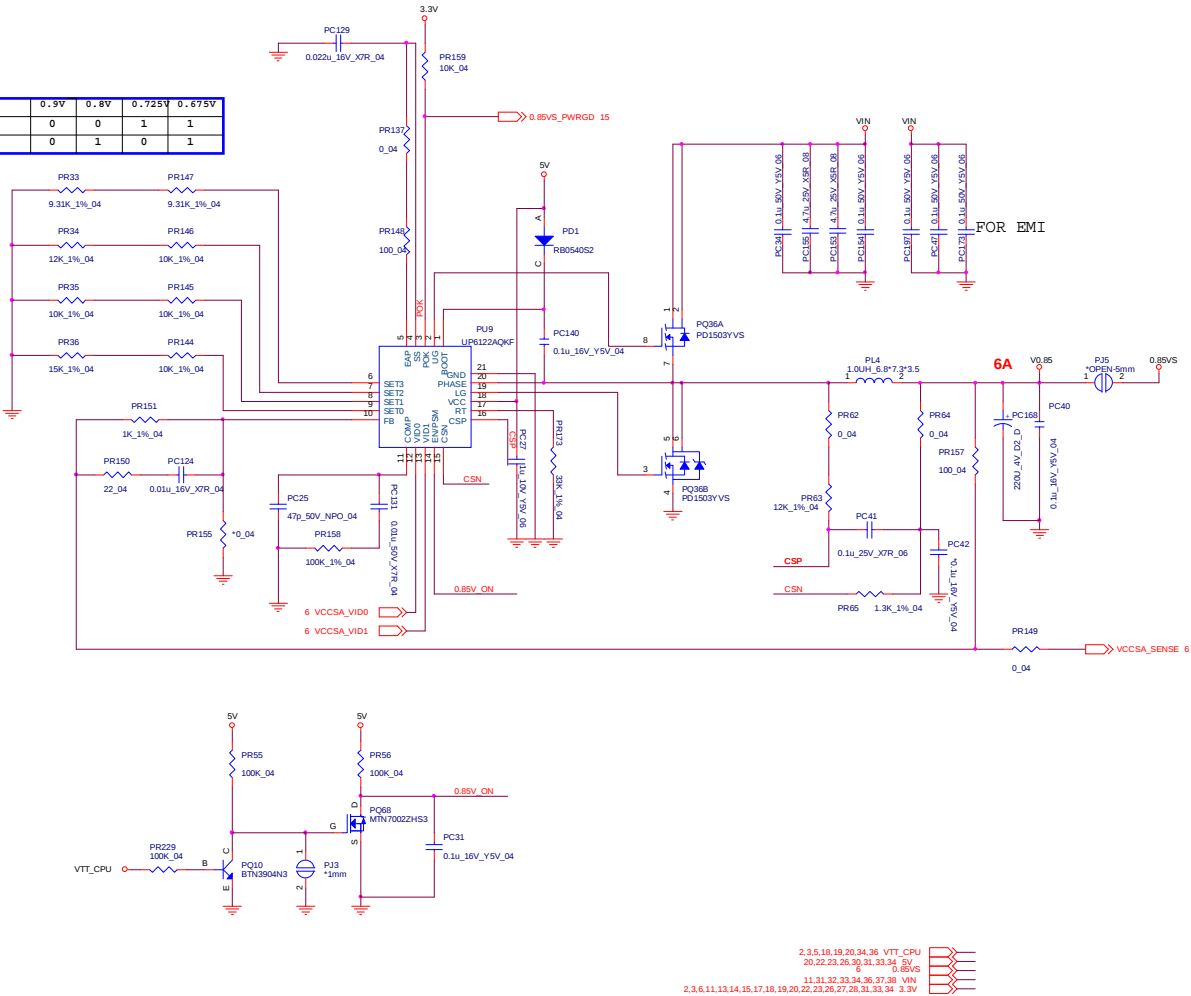


B.Schematic Diagrams


Sheet 36 of 43
Power V-Core1

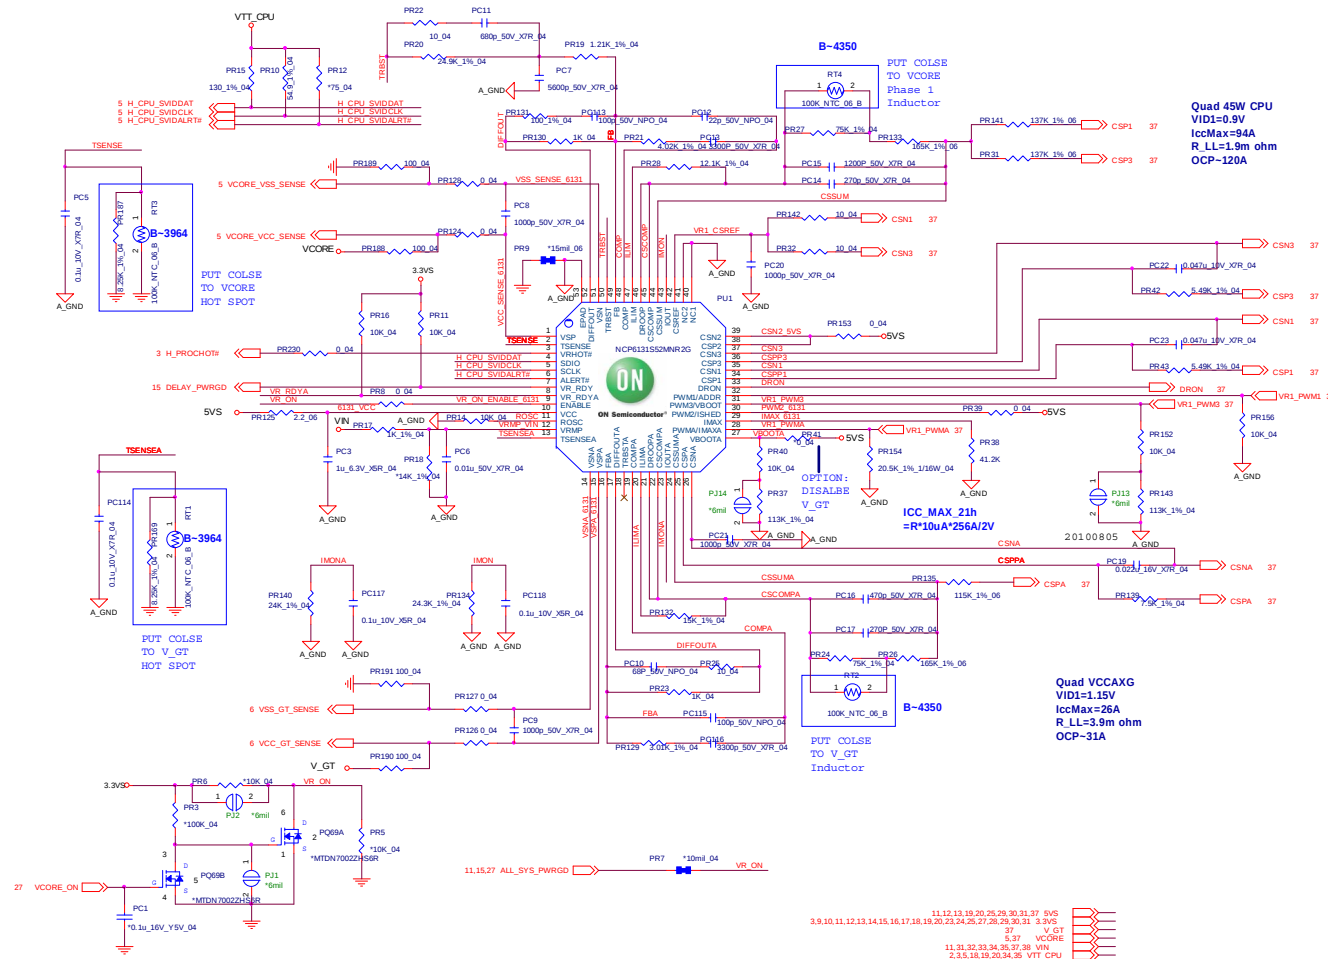

Sheet 37 of 43
Power V-Core2

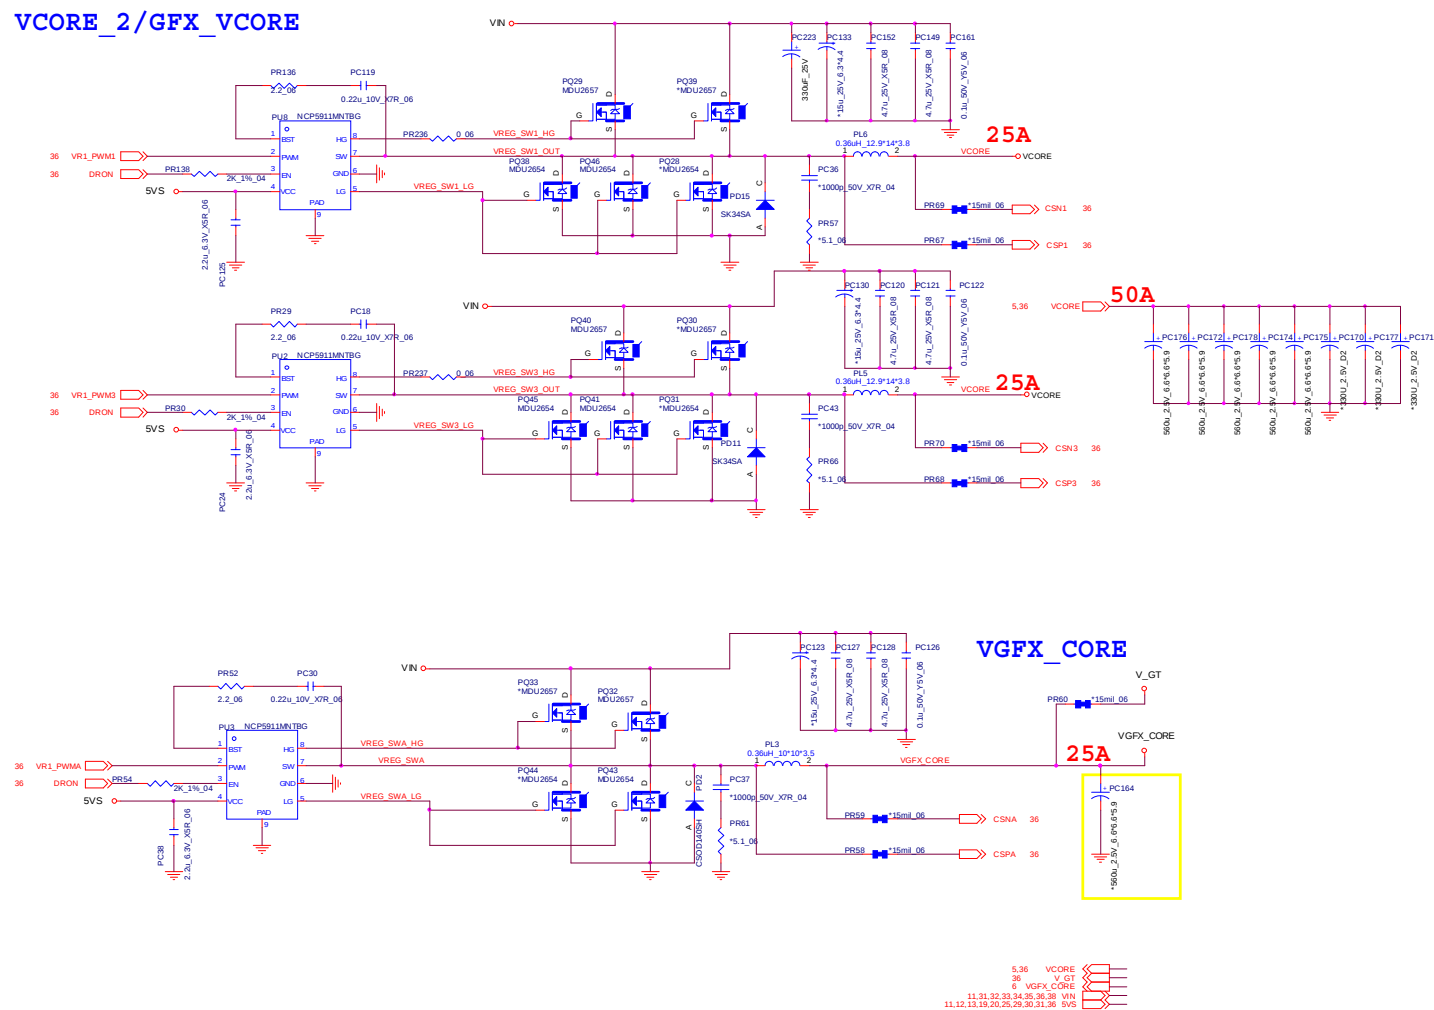










SMART CHARGER

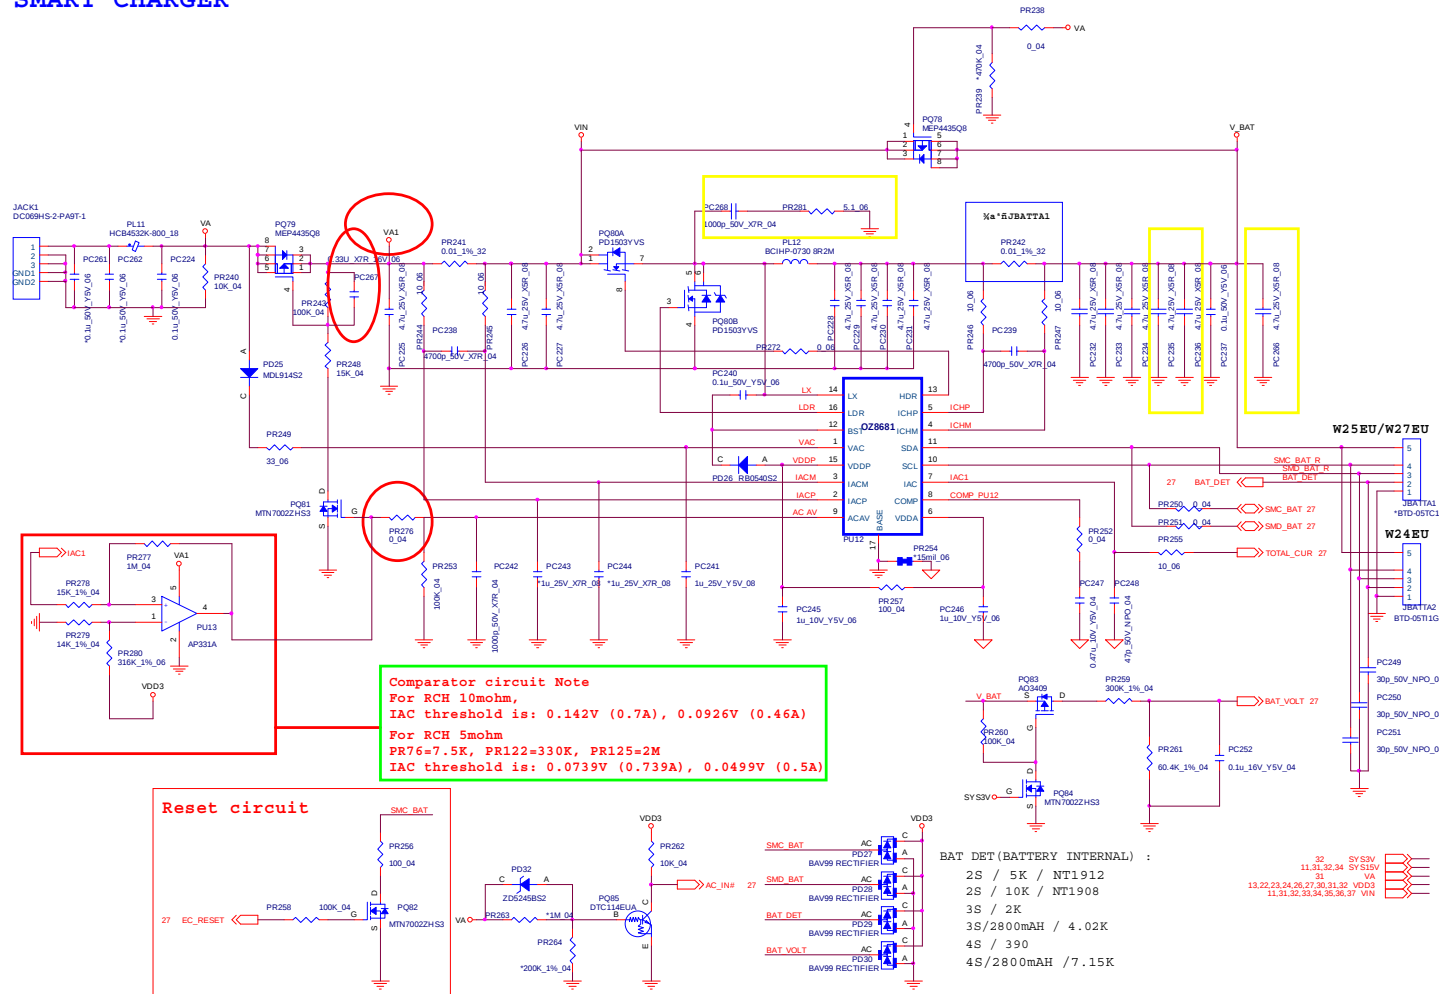

Schematic Diagrams


Click Board

Sheet 39 of 43
Click Board

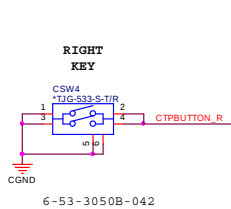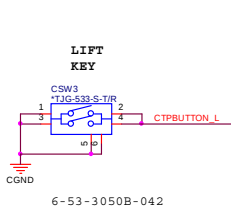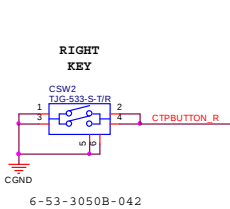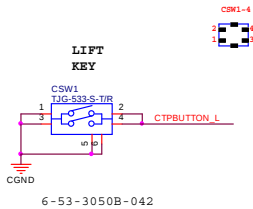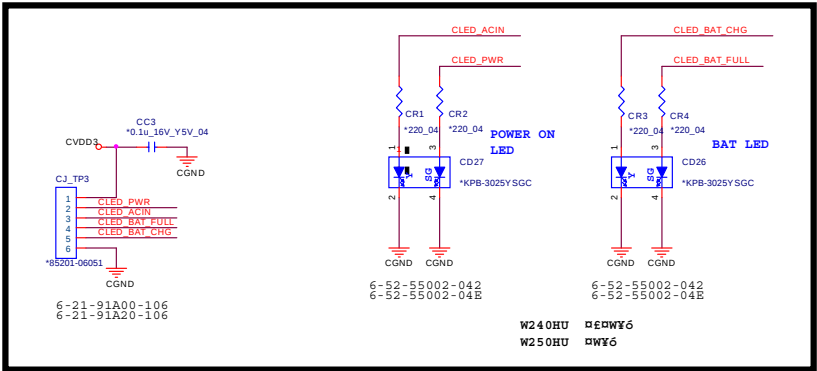
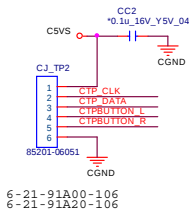
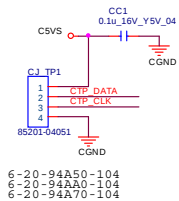


Audio Board/USB


USB PORT

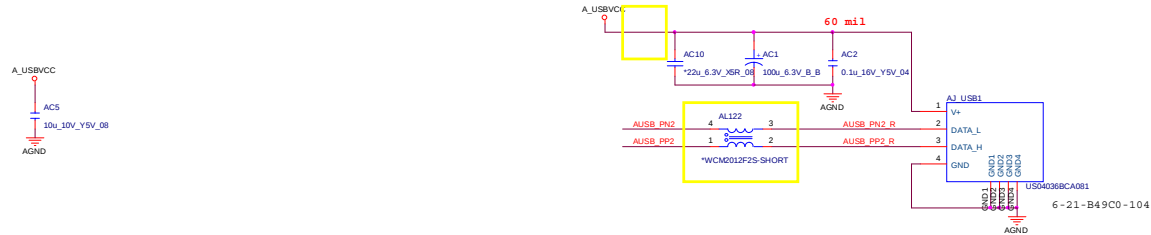

TO M/B

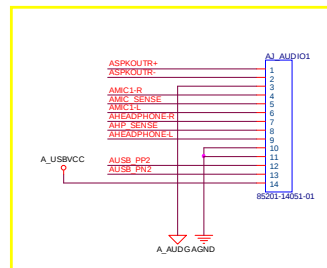

AUDIO JACK

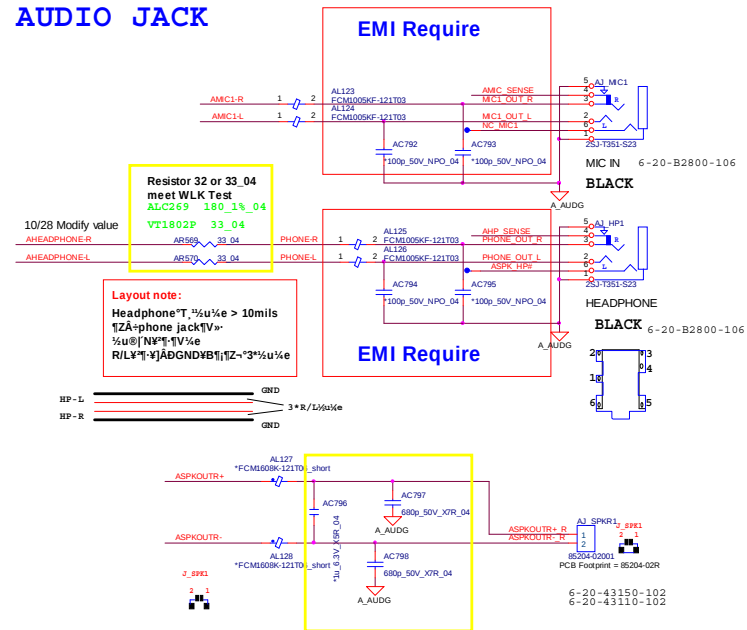


Sheet 40 of 43
Audio Board/USB


Schematic Diagrams

Power Switch & LID Board

Sheet 41 of 43
Power Switch & LID
Board

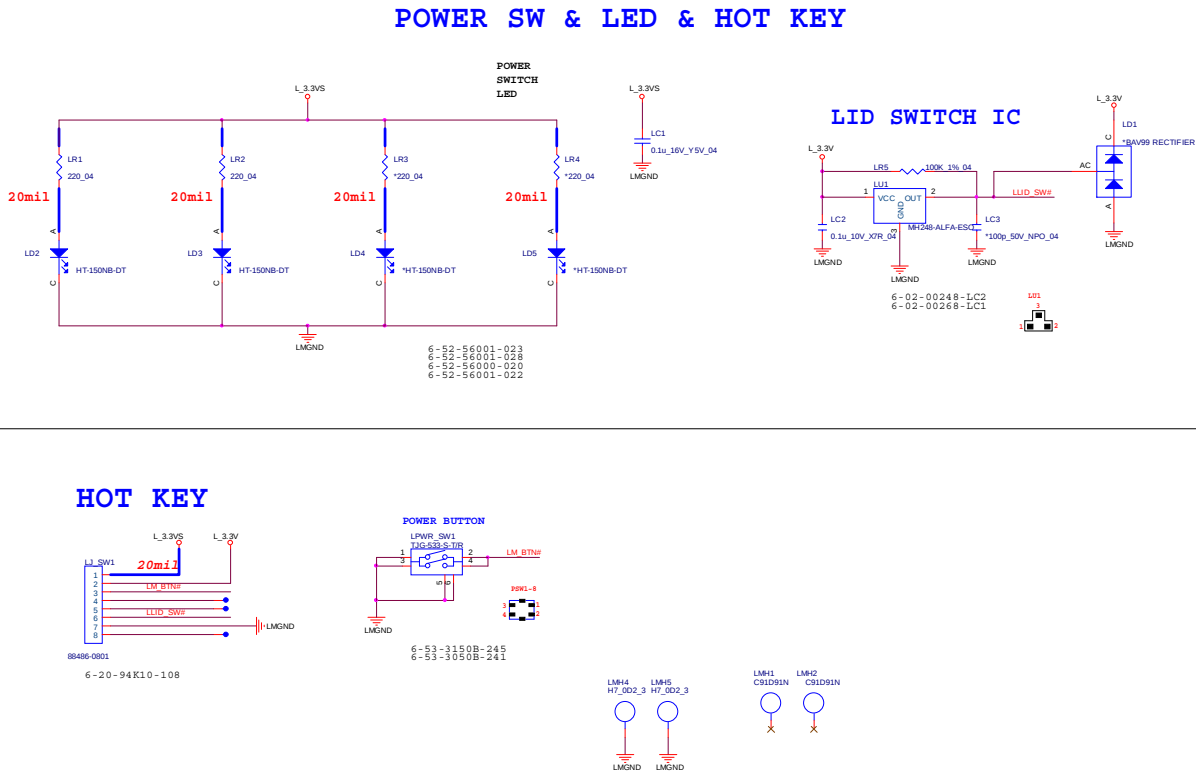

Power Sequence

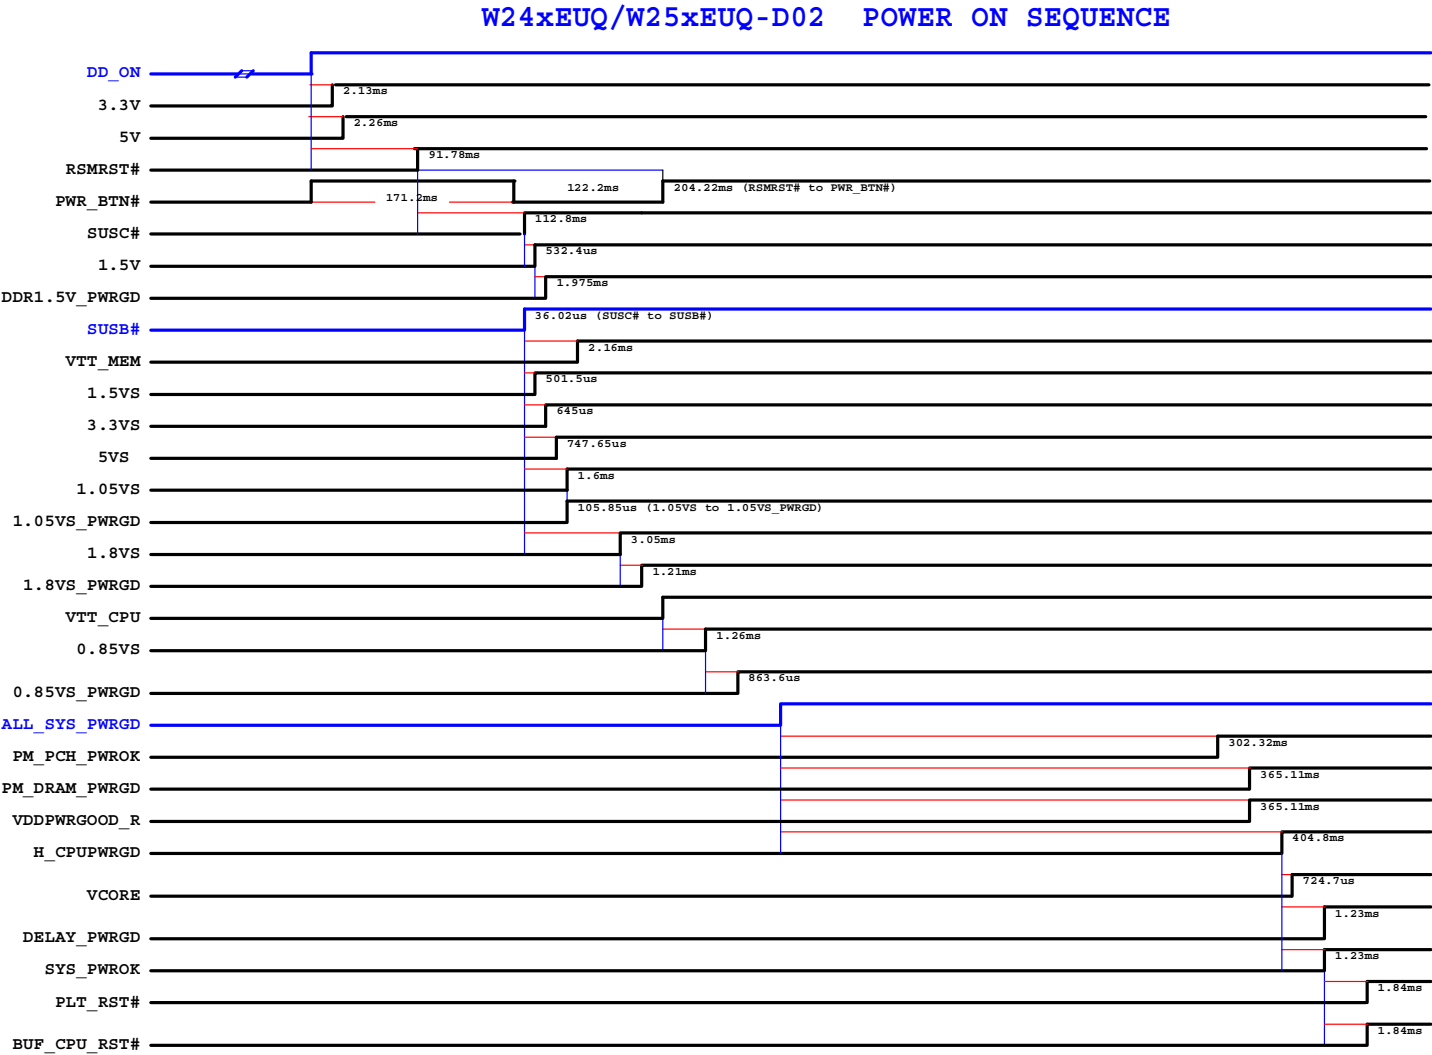

Sheet 43 of 43
Power Sequence

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are V1.01.XX or higher as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: **DISK C:\>** (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

C:\> Flash.bat

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.