

SERVICE MANUAL

notebook

P957HP6



Notebook Computer

P957HP6

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0
June 2017

Trademarks

Intel and Intel Core are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and /or registered trademarks of their respective companies.



About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *P957HP6* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit as follows:
 - AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 7.89A (**150** Watts) minimum AC/DC Adapter.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.




2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

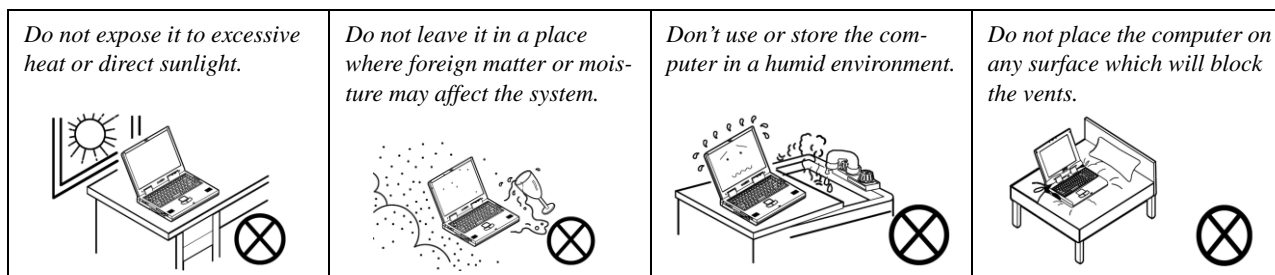

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

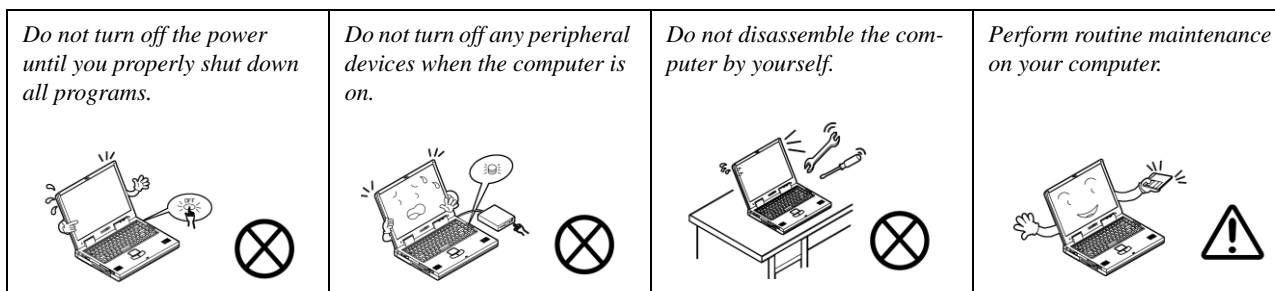


4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

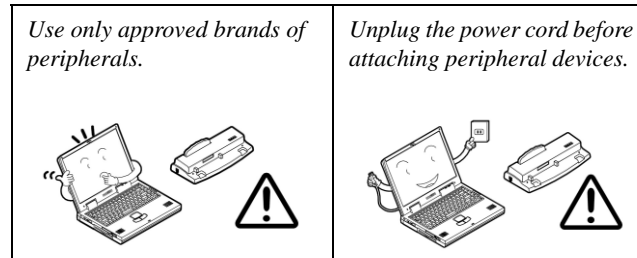

Power Safety

The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.

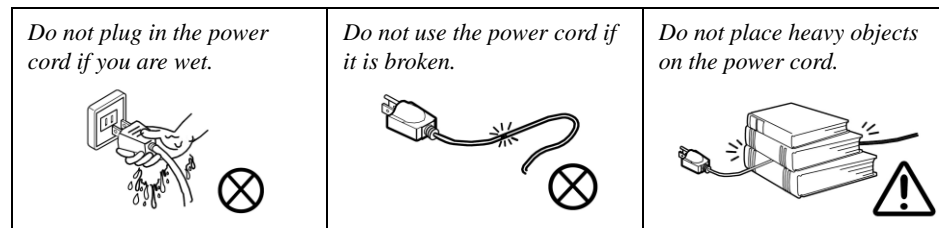

Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.




Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon  in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD/DVD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and make sure it is locked in position.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. **When first setting up the computer use the following procedure** (as to safeguard the computer during shipping, the battery will be locked to not power the system until first connected to the AC/DC adapter and initially set up as below):
 - Attach the AC/DC adapter cord to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter and **leave it there for 6 seconds or longer**.
 - Remove the adapter cord from the computer's DC-In jack, and then plug it back in again; the battery will now be unlocked.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not exceed 130 degrees); use the other hand (as illustrated in Figure 1) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

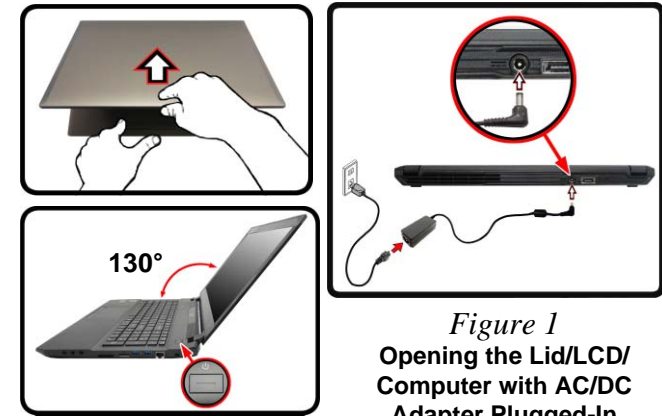



Figure 1
**Opening the Lid/LCD/
Computer with AC/DC
Adapter Plugged-In**


Shut Down

Note that you should always shut your computer down by choosing the **Shut down** command in **Windows** (see below). This will help prevent hard disk or system problems.

Click the icon  in the **Start Screen** and choose **Shut down** from the menu.



Or

Right-click the **Start button**  at the bottom of the **Start Screen** or the **Desktop** and choose **Shut down or sign out** > **Shut down** from the context menu.

Contents

Introduction	1-1	Top (with FP)	A-4
Overview	1-1	Bottom	A-5
Specifications	1-2	Main Board	A-6
External Locator - Top View with LCD Panel Open	1-4	HDD	A-7
External Locator - Front & Right Side Views	1-5	LCD	A-8
External Locator - Left Side & Rear View	1-6	Schematic Diagrams.....	B-1
External Locator - Bottom View	1-7	System Block Diagram	B-2
Mainboard Overview - Top (Key Parts)	1-8	Processor 1/7	B-3
Mainboard Overview - Bottom (Key Parts)	1-9	Processor 2/7	B-4
Mainboard Overview - Top (Connectors)	1-10	Processor 3/7	B-5
Mainboard Overview - Bottom (Connectors)	1-11	Processor 4/7	B-6
Disassembly	2-1	Processor 5/7	B-7
Overview	2-1	Processor 6/7	B-8
Maintenance Tools	2-2	Processor 7/7	B-9
Connections	2-2	DDR4 CHA SO-DIMM_0	B-10
Maintenance Precautions	2-3	DDR4 CHB SO-DIMM_0	B-11
Disassembly Steps	2-4	Panel, Inverter	B-12
Removing the Keyboard	2-5	Mini DP Port	B-13
Removing the Battery	2-6	HDMI Connector	B-14
Removing the Hard Disk Drive	2-8	VGA PCI Express	B-15
Removing the System Memory (RAM)	2-10	GPU Frame Buffer Partition	B-16
Removing the M.2 SSD Module	2-11	Frame Buffer Partition A	B-17
Removing the Wireless LAN Module	2-13	Frame Buffer Partition B	B-18
Wireless LAN, Combo, 3G & LTE Module Cables	2-14	Frame Buffer Partition A_B	B-19
Removing the 3G/4G Module	2-15	GPU Frame Buffer Partition	B-20
Removing the CCD	2-16	Frame Buffer Partition C	B-21
Part Lists	A-1	Frame Buffer Partition D	B-22
Part List Illustration Location	A-2	Frame Buffer Partition C_D	B-23
Top (no FP)	A-3	GPU Decoupling 1	B-24
		GPU Decoupling 2	B-25

Preface


Straps and XTAL	B-26	DDR 1.2V / 0.6VS	B-58
IFP I/O Interface	B-27	Power 1.0V, VCCIO	B-59
Misc - GPIO, I2C and ROM	B-28	VCore & VCCGT Output 1	B-60
GPU NVVDD, FBVDDQ	B-29	VCore & VCCGT Output 2	B-61
GPU GND & Sequence	B-30	VCCSA	B-62
PCH 1/9	B-31	AC_In, Charger	B-63
PCH 2/9	B-32	NVVDDS	B-64
PCH 3/9	B-33	NVVDD 1	B-65
PCH 4/9	B-34	NVVDD 2	B-66
PCH 5/9	B-35	FBVDDQ	B-67
PCH 6/9	B-36	LAN Board	B-68
PCH 7/9	B-37	Reader Board	B-69
PCH 8/9	B-38	USB Board	B-70
PCH 9/9	B-39	LED Board	B-71
KBC IT8587	B-40	Click Board	B-72
Backlight KB	B-41	Power Board	B-73
Realtek ALC1220	B-42	Power Sequence	B-74
Smart AMP ALC1305	B-43	USB Board	B-75
3D AMP Headphone	B-44	Updating the FLASH ROM BIOS..... C-1	
ASM2142 1/3	B-45	Download the BIOS	C-1
ASM2142 2/3	B-46	Unzip the downloaded files to a bootable CD/DVD or	
ASM2142 3/3	B-47	USB Flash drive	C-1
M.2 3G/LTE	B-48	Set the computer to boot from the external drive	C-1
M.2 WLAN+BT, PCIE4X SSD	B-49	Use the flash tools to update the BIOS	C-2
TPM, TP	B-50	Restart the computer (booting from the HDD)	C-2
Connector	B-51		
Fan, LID, KB LED	B-52		
5V, 5VS, 3.3V, 3.3VS, 3.3VA	B-53		
1.0DX_VCCSTG/VCCSFR_OC/2.5V	B-54		
1V8_RUN/AON, NV3V3	B-55		
PEX_VDD	B-56		
VDD3, VDD5	B-57		

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the **P957HP6** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. The manual is shipped with the computer.

Operating systems (e.g. *Windows 10*, etc.) have their own manuals as do application softwares (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **P957HP6** series notebook is designed to be upgradeable. See [Disassembly on page 2 - 1](#) for a detailed description of the upgrade procedures for each specific component. Please take note of the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU Speed & Computer in DC Mode

Note that when the computer is in DC mode (powered by the battery only) the CPU may not run at full speed. This is a design feature implemented in order to protect the battery.



SO-DIMM Memory Types

All SO-DIMM memory modules installed in the system should be identical (the same size and brand) in order to prevent unexpected system behavior.

Do not mix SO-DIMM memory module sizes and brands otherwise unexpected system problems may occur.

Processor Options

i7-7700HQ (2.80GHz)

6MB Smart Cache, **14nm**, DDR4-2400MHz, TDP 45W

i5-7300HQ (2.50GHz)

6MB Smart Cache, **14nm**, DDR4-2400MHz, TDP 45W

Core Logic

Intel® HM175 Express Chipset

LCD Options

15.6" (39.62cm), 16:9, QFHD (3840x2160)/FHD (1920x1080)

BIOS

AMI BIOS (64Mb SPI Flash-ROM)

Memory

Two 260 Pin SO-DIMM Sockets Supporting **DDR4 2400MHz** Memory

(The real memory operating frequency depends on the FSB of the processor.)

Memory Expandable from **8GB (minimum)** up to **32GB (maximum)**

Compatible with 4GB, 8GB or 16GB Modules

Security

Security (Kensington® Type) Lock Slot

BIOS Password

Intel PTT for Systems Without TPM Hardware

(**Factory Option**) TPM 2.0

(**Factory Option**) Fingerprint Reader Module

Video Adapter Options

Microsoft Hybrid Graphics Mode

Supports up to 4 Active Displays

Supports NVIDIA Surround View via HDMI x 1 and MiniDP x2

Intel Integrated GPU

Intel® HD Graphics 630

Dynamic Frequency

Intel Dynamic Video Memory Technology

Microsoft DirectX®12 Compatible

NVIDIA® Discrete GPU

NVIDIA® GeForce GTX 1060

6GB GDDR5 Video RAM

Microsoft DirectX®12 Compatible

Supports GPU Overclocking

Pointing Device

(**Factory Option**) Built-In Secure Pad (with Microsoft PTP Multi Gesture & Scrolling Functionality)

Or

(**Factory Option**) Built-in Touchpad (with Microsoft PTP Multi Gesture & Scrolling Functionality)

Keyboard

Full Color Illuminated Full-size Winkey Keyboard (with numeric keypad)

Storage

One changeable 2.5" (6cm) **7.0mm (h) SATA** (Serial) Hard Disk Drive/Solid State Drive (SSD)
(Factory Option) One M.2 SATA/PCIe Gen3 x4 Solid State Drive (SSD)

Audio

High Definition Audio Compliant Interface
 S/PDIF Digital Output
 Two Speakers
 Sound Blaster Audio
 ANSP™ 3D sound technology on headphone output
 Built-In Array Microphone

Communication

Built-In 10/100/1000Mb Base-TX Ethernet LAN
 2.0M FHD PC Camera Module
(Factory Option) M.2 3G/4G Module

WLAN/ Bluetooth M.2 Modules:

(Factory Option) Intel® Wireless-AC 8265 Wireless LAN **(802.11ac)** + Bluetooth
(Factory Option) Intel® Wireless-AC 3168 Wireless LAN **(802.11ac)** + Bluetooth
(Factory Option) Qualcomm® Atheros Killer™ Wireless-AC 1535 Wireless LAN **(802.11ac)** + Bluetooth

Card Reader

Embedded Multi-In-1 Push-Push Card Reader
 MMC (MultiMedia Card)/RS MMC
 SD (Secure Digital)/Mini SD/SDHC/ SDXC (up to UHS-II)

M.2 Slots

Slot 1 for **Combo WLAN and Bluetooth** Module
 Slot 2 for **SATA or PCIe Gen3 x4 SSD**
(Factory Option) Slot 3 for 3G/4G Module

Interface

Two USB 3.1 Gen 2 Type-C Ports*
**The maximum amount of current supplied by USB Type-C ports is 500mA (USB 2.0)/900mA (USB 3.1).*
 Three USB 3.0 (USB 3.1 Gen 1) Ports (Including one AC/DC Powered USB port)
 Two Mini DisplayPorts (1.3)
 One HDMI-Out Port
 One 2-In-1 Audio Jack (Headphone & S/PDIF (Optical) Out Combo Jack)
 One Microphone-In Jack
 One RJ-45 LAN Jack
 One DC-In Jack

**USB 3.1 Gen 2**

Note that when a single USB device is plugged in to a USB 3.1 Gen 2 port the data transfer speed will be 10Gbps, however when two devices are plugged in to both USB 3.1 Gen 2 ports, this bandwidth will be shared between the ports.

Features

Virtual Reality Ready
 Supports Windows® 10 Cortana with Voice
(Factory Option) USB Drive

Environmental Spec**Temperature**

Operating: 5°C - 35°C
 Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%
 Non-Operating: 10% - 90%

Power

Embedded 4-Cell Polymer Battery Pack, 55WH
 Full Range AC/DC Adapter
 AC Input: 100 - 240V, 50 - 60Hz
 DC Output: 19V, 7.89A **(150W)**

Dimensions & Weight

380mm (w) * 252mm (d) * 18.6mm (h)
 1.95kg (Barebone with 55WH Battery)

Introduction

Figure 1
Top View

1. PC Camera
2. *PC Camera LED
**When the PC camera is in use, the LED will be illuminated.*
3. Built-In Array Microphone
4. LCD
5. Speakers
6. Power Button
7. Keyboard
8. Touchpad & Buttons
9. Fingerprint Reader (Optional)

External Locator - Top View with LCD Panel Open



External Locator - Front & Right Side Views

Figure 2
Front View

1. LED Indicator

FRONT VIEW



Figure 3
Right Side View

1. Microphone-In Jack
2. Headphone & S/PDIF Combo Jack
3. USB 3.0 (USB 3.1 Gen 1) Ports
4. Multi-in-1 Card Reader
5. USIM Card Reader (for 3G/4G USIM Cards)
6. RJ-45 LAN Jack
7. Security Lock Slot

RIGHT SIDE VIEW



Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. Vent
2. DC-In Jack
3. HDMI-Out Port
4. Mini Display Ports
5. USB 3.1 Gen 2 Type-C Ports
6. USB 3.0 (USB 3.1 Gen 1) Ports
7. Powered USB 3.0 Port

LEFT SIDE VIEW



Figure 5
Rear View

1. Vent

REAR VIEW



External Locator - Bottom View

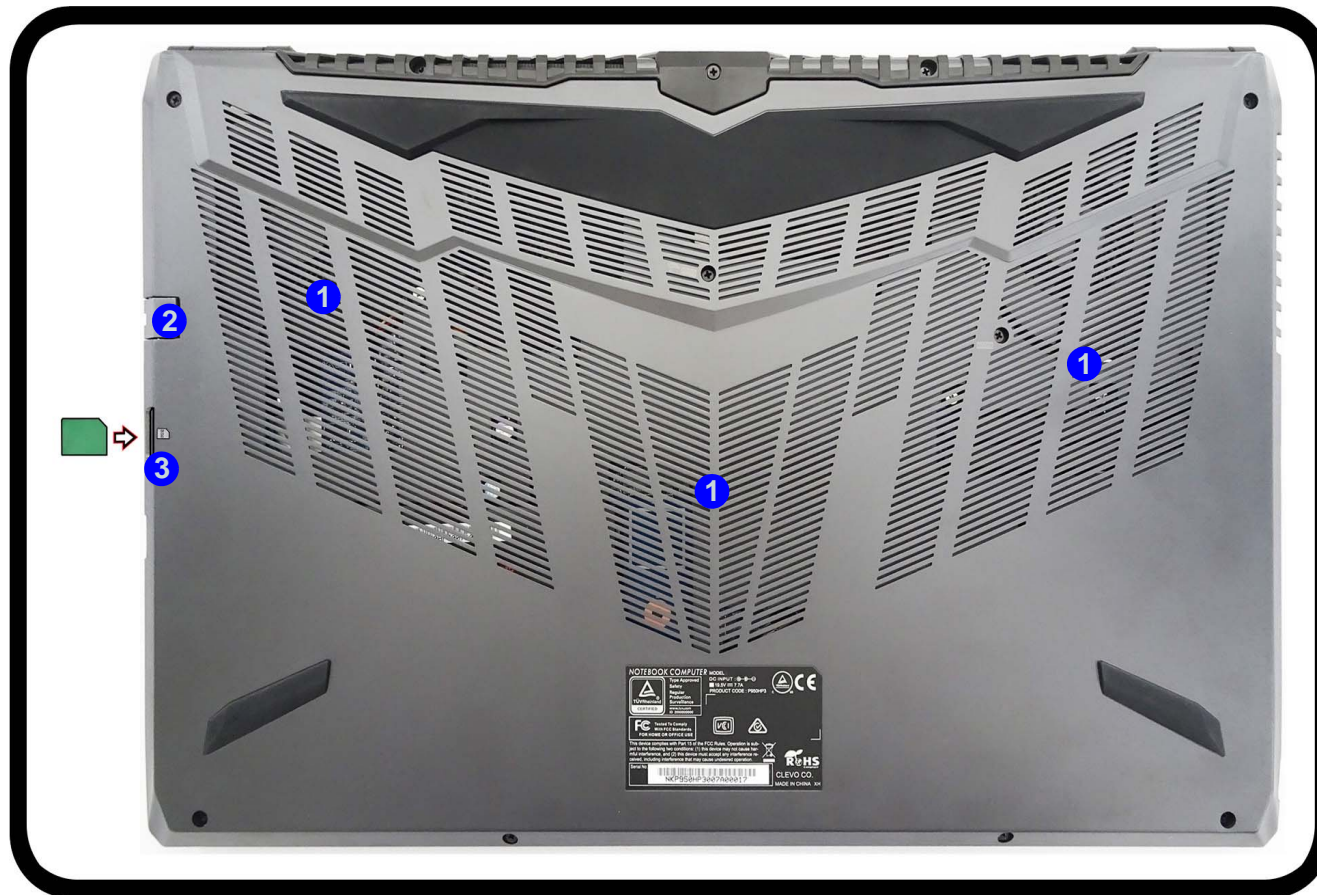


Figure 6
Bottom View

1. Vent
2. RJ-45 LAN Jack
3. USIM Card Reader (for 3G/4G USIM Cards)


Overheating

To prevent your computer from overheating, make sure nothing blocks any vent while the computer is in use.

Introduction

Figure 7
Mainboard Top
Key Parts

1. KBC-ITE IT8587

Mainboard Overview - Top (Key Parts)



Mainboard Overview - Bottom (Key Parts)

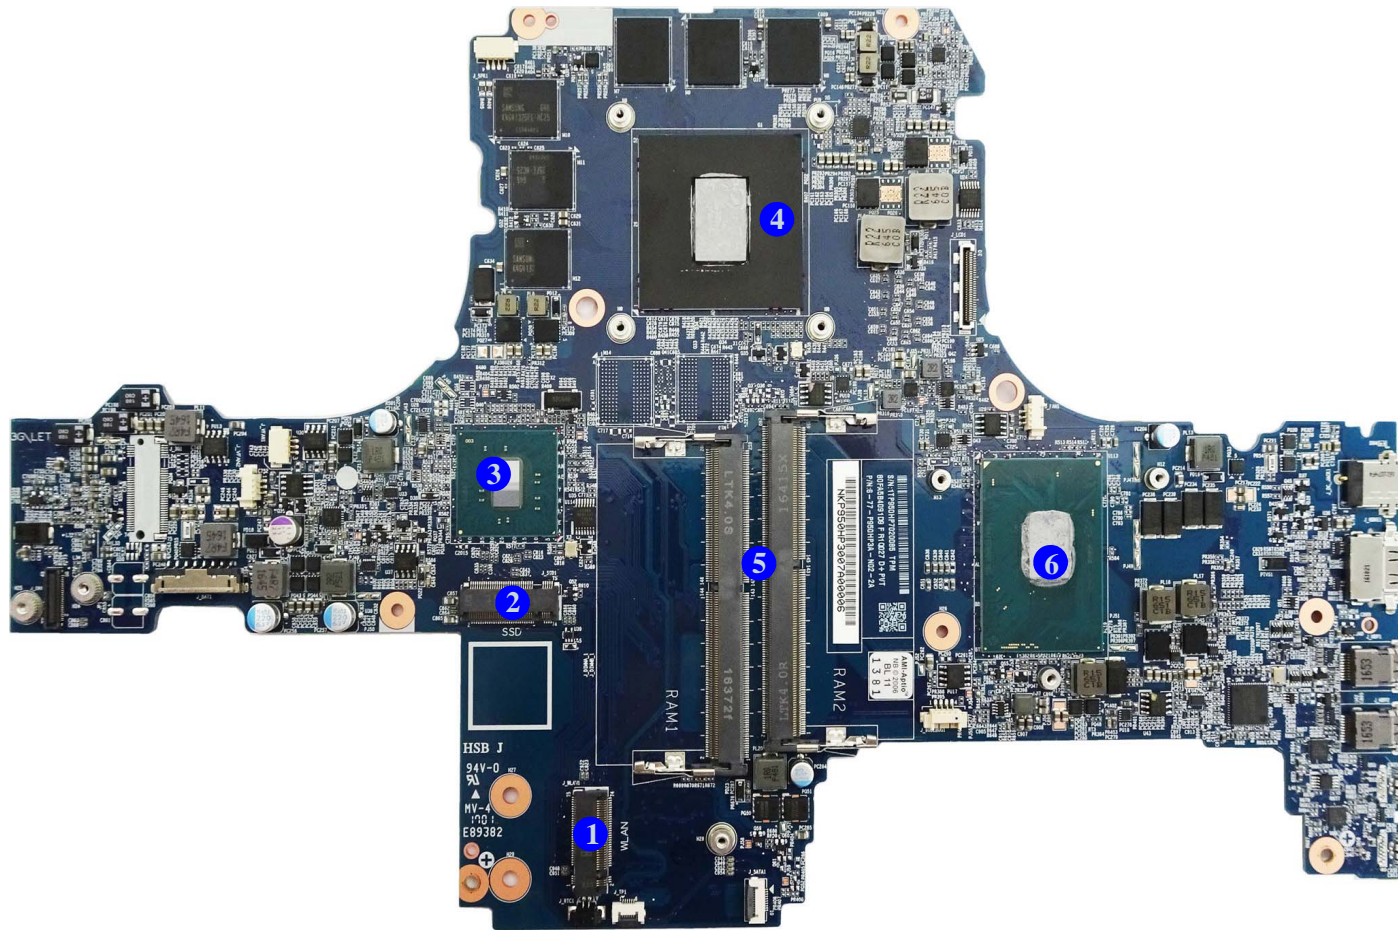


Figure 8
**Mainboard Bottom
Key Parts**


1. Mini-Card Connector (WLAN Module)
2. Mini-Card Connector (M.2 SSD Module)
3. PCH
4. GPU-GTX1060M
5. Memory Slots (DDR4 SO-DIMM)
6. CPU

Introduction

Figure 9
**Mainboard Top
Connectors**

1. DC-In Jack
2. HDMI Port
3. Mini Display Ports
4. USB Port 3.1
Connector
5. USB Port
Connector
6. DP Connector
7. LED KB
Connector
8. USB Port
Connector
9. Keyboard Cable
Connector
10. LAN Connector


Mainboard Overview - Top (Connectors)

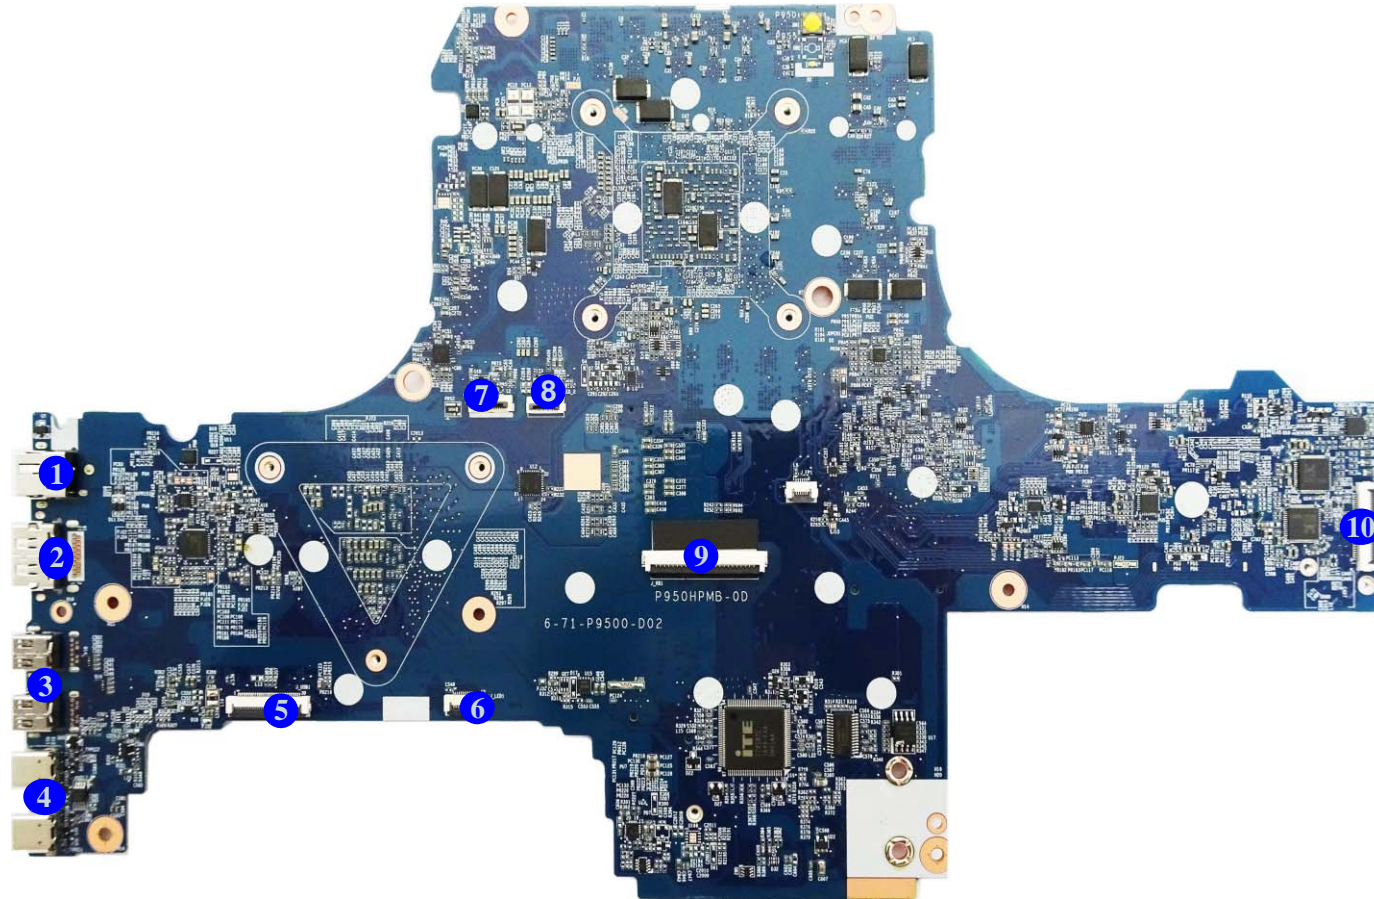

Mainboard Overview - Bottom (Connectors)

Figure 10
**Mainboard Bottom
Connectors**

1. Fan Connector
2. Fan Connector
3. Battery Connector
4. Touchpad Cable Connector
5. HDD Connector

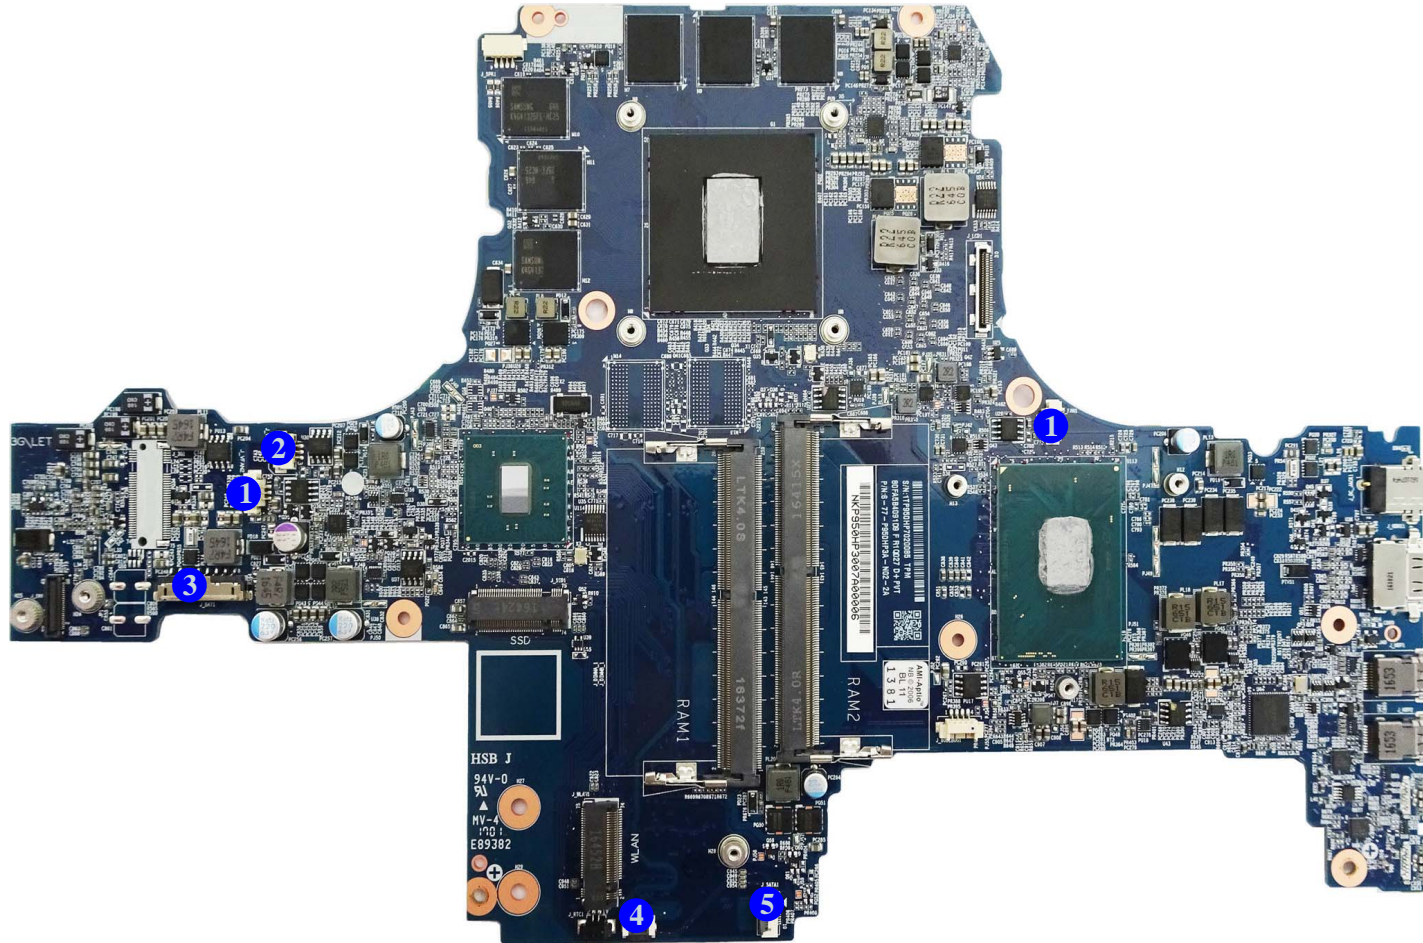


Chapter 2: Disassembly


Overview

This chapter provides step-by-step instructions for disassembling the *P957HP6* series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

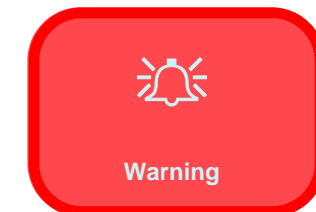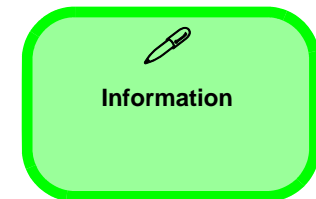

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.

(For Computer Models Supplied with Light Blue Cleaning Cloth) Some computer models in this series come supplied with a light blue cleaning cloth. To clean the computer case with this cloth follow the instructions below.

- Power off the computer and peripherals.
- Disconnect the AC/DC adapter from the computer.
- Use a little water to dampen the cloth slightly.
- Clean the computer case with the cloth.
- Dry the computer with a dry cloth, or allow it time to dry before turning on.
- Reconnect the AC/DC adapter and turn the computer on.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Keyboard:

1. Remove the keyboard [page 2 - 5](#)

To remove the Battery:

1. Remove the keyboard [page 2 - 5](#)
2. Remove the battery [page 2 - 6](#)

To remove the HDD:

1. Remove the keyboard [page 2 - 5](#)
2. Remove the battery [page 2 - 6](#)
3. Remove the HDD [page 2 - 8](#)

To remove the System Memory:

1. Remove the keyboard [page 2 - 5](#)
2. Remove the battery [page 2 - 6](#)
3. Remove the system memory [page 2 - 10](#)

To remove and install the M.2 SSD:

1. Remove the keyboard [page 2 - 5](#)
2. Remove the battery [page 2 - 6](#)
3. Remove the M.2 SSD [page 2 - 11](#)
4. Install the M.2 SSD [page 2 - 12](#)

To remove the Wireless LAN Module:

1. Remove the keyboard [page 2 - 5](#)
2. Remove the battery [page 2 - 6](#)
3. Remove the WLAN [page 2 - 13](#)

To remove the 3G/4G Module:

1. Remove the keyboard [page 2 - 5](#)
2. Remove the battery [page 2 - 6](#)
3. Remove the 3G/4G [page 2 - 15](#)

To remove the CCD Module:

1. Remove the keyboard [page 2 - 5](#)
2. Remove the battery [page 2 - 6](#)
3. Remove the CCD module [page 2 - 16](#)

Removing the Keyboard

1. Turn **off** the computer, turn it over.
2. Remove screws **1** - **2** from the bottom of the computer.
3. Open it up with the LCD on a flat surface before pressing at point **3** to release the keyboard module (use the special eject stick **4** to do this) while releasing the keyboard in the direction of the arrow **5** as shown (*Figure 1a*).
4. Carefully lift the keyboard **6** up, being careful not to bend the keyboard ribbon cable **7**. Disconnect the keyboard ribbon cable **7** from the locking collar socket by using a flat-head screwdriver to pry the locking collar pins **8** away from the base (*Figure 1b*).
5. Carefully lift the keyboard **6** off the computer (*Figure 1c*).


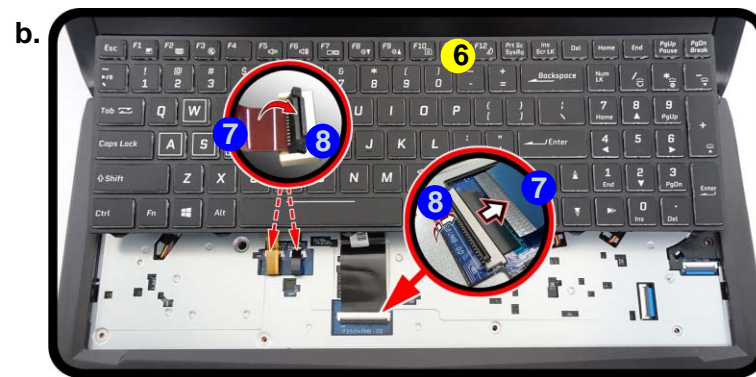


Figure 1
Keyboard Removal

- a. Remove the screws from the bottom of the computer and then eject the keyboard using a special eject stick to push the keyboard out while releasing the keyboard as shown.
- b. Lift the keyboard up and disconnect the keyboard ribbon cable from the locking collar socket.
- c. Remove the keyboard.

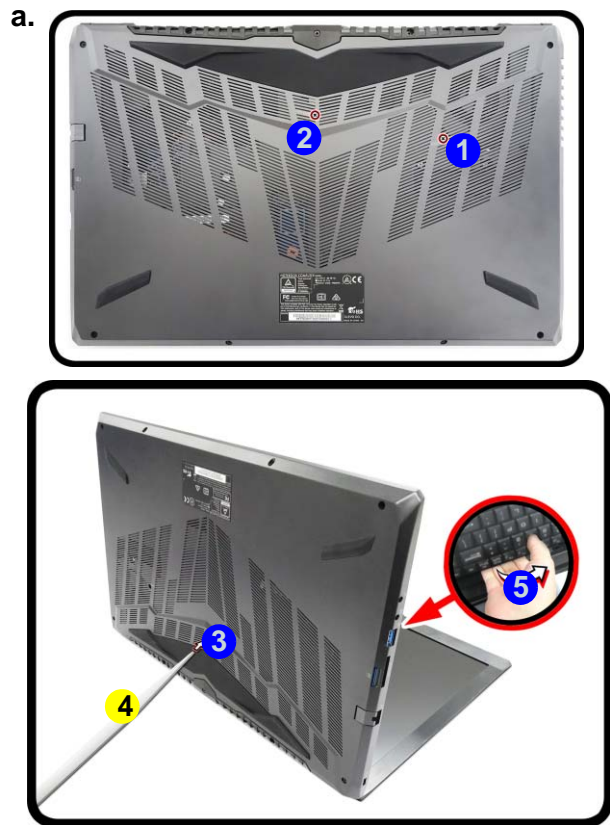

Re-inserting the Keyboard

When re-inserting the keyboard firstly, align the keyboard tabs at the bottom of the keyboard with the slots in the case.



4. Eject Stick
6. Keyboard

- 2 Screws



Disassembly

Figure 2
Battery Removal

- Remove the screws.
- Remove the SD cover and screws.
- Remove the bottom case.

Removing the Battery

- Turn the computer off, and remove the keyboard ([page 2 - 5](#)).
- Remove screws **1** - **5** ([Figure 2a](#)).
- Remove the SD card cover **6** and screws **7** - **15** ([Figure 2b](#)).
- Carefully lift the bottom case **16** up in the direction of the arrow at point **17** and remove it ([Figure 2c](#)).

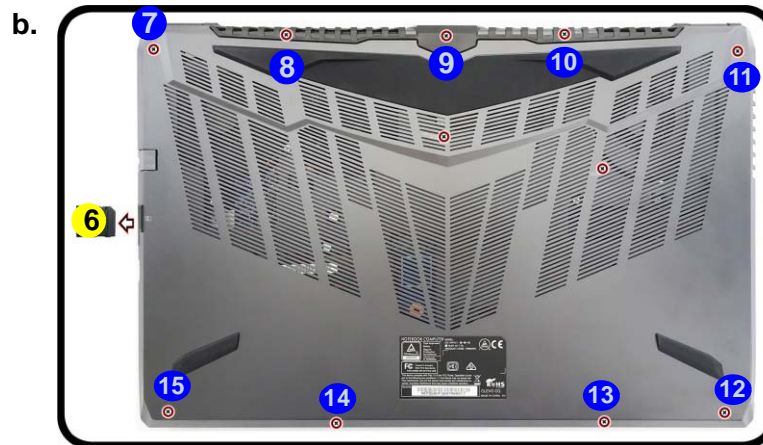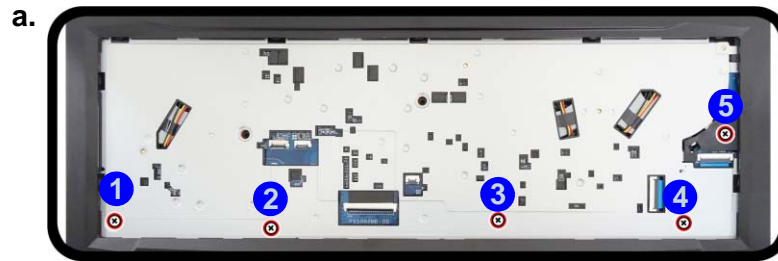

- 1. SD Card Cover
- 16. Bottom Case

- 14 Screws

5. The battery will be visible at point **18** on the computer (*Figure 3a*).
6. Carefully disconnect the cable **19**, then remove screws **20** - **21** (*Figure 3e*).
7. Lift the battery **22** off the computer (*Figure 3f*).
8. Reverse the process to install a new battery (do not forget to replace all the screws and bottom cover).

Figure 3
Battery Removal
(cont'd.)

- d. Locate the battery.
- e. Disconnect the cable and remove the screws.
- f. Lift the battery off the computer.



22. Battery

- 2 Screws

Figure 4
**HDD Assembly
Removal**


- a. Locate the HDD.
- b. Remove the screws.

Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 7mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Disassembly Process

1. Turn **off** the computer, and remove the battery ([page 2 - 6](#)).
2. The HDD will be visible at point **1** on the mainboard ([Figure 4a](#)).
3. Remove the screw **2** from the HDD assembly ([Figure 4b](#)).

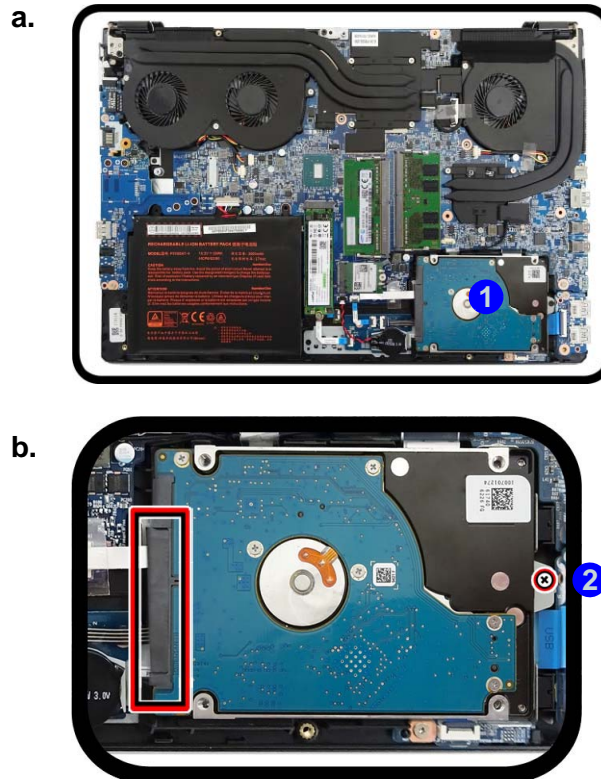

HDD System Warning

New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.

You have all the CD-ROMs and FDDs required to install your operating system and programs.



If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.




6. Hard Disk

- 1 Screw

4. Slightly slide and pull the hard disk out.
5. Lift the hard disk assembly **3** out of the bay **4** (*Figure 5c*).
6. Remove screws **5** - **6** and bracket **7** from the hard disk **8** (*Figure 5d*).
7. Reverse the process to install a new hard disk (do not forget to replace the screws).

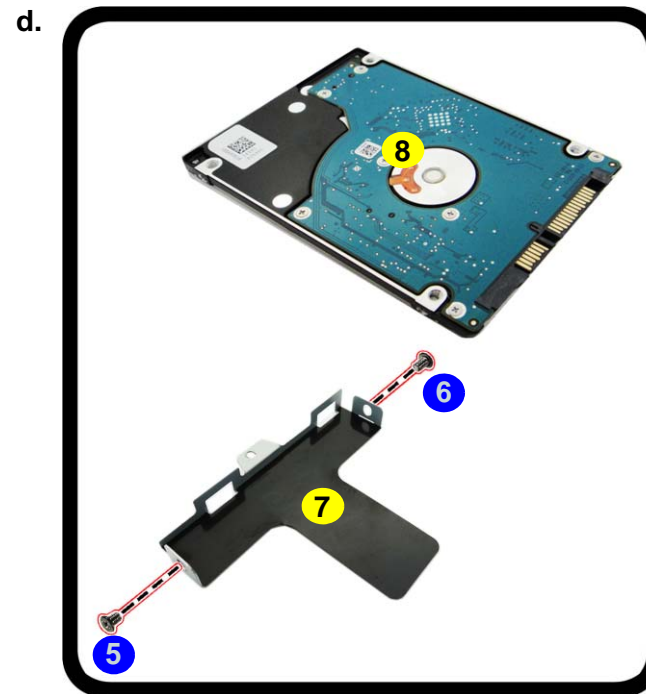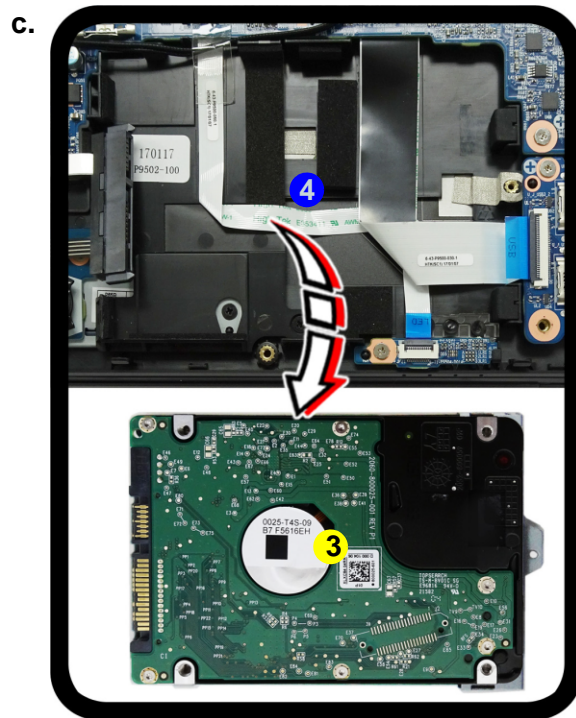

- c. Slide and pull the HDD assembly out of the bay.
- d. Remove the screws and bracket from the HDD.

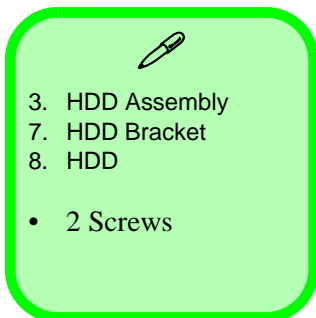

Disassembly

Figure 6
RAM Module Removal

- The RAM modules will be visible at point **1** on the mainboard.
- Pull the release latches.
- Remove the module.



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.




4. RAM Module

Removing the System Memory (RAM)

The computer has four memory sockets for 260 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR4 Up to 2400 MHz. The main memory can be expanded up to 64GB. The total memory size is automatically detected by the POST routine once you turn on your computer.

Memory Upgrade Process

- Turn **off** the computer, turn it over, remove the battery ([page 2 - 6](#)).
- The RAM-2 modules will be visible at point **1** on the mainboard ([Figure 6a](#)).
- Gently pull the two release latches (**2** & **3**) on the sides of the memory socket in the direction indicated by the arrows ([Figure 6b](#)). The RAM module **4** will pop-up ([Figure 6c](#)), and you can then remove it.
- Pull the latches to release the second module if necessary.
- Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
- The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE IT**; it should fit without much pressure.
- Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
- Replace the bottom cover and the screws (see [page 2 - 6](#)).
- Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

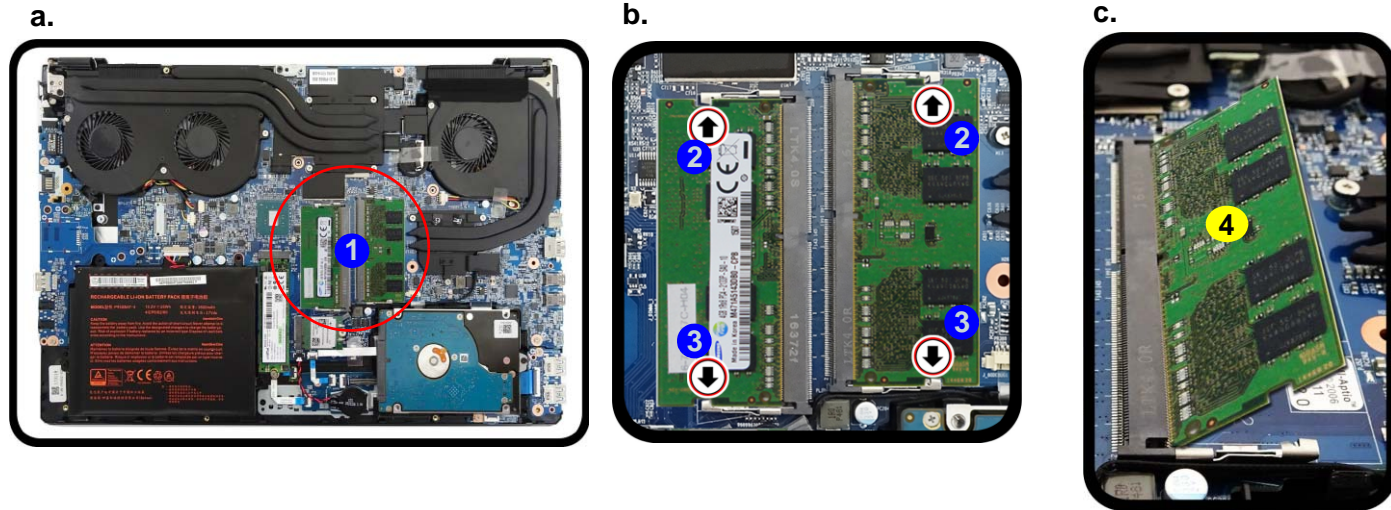



Removing the M.2 SSD Module


M.2 SSD-1 Removal Procedure

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 6](#)).
2. The M.2 SSD module will be visible at point **1** on the mainboard ([Figure 7a](#)).
3. Remove the screw **2** ([Figure 7b](#)).
4. The M.2 SSD module **3** ([Figure 7c](#)) will pop-up, and you can remove it from the computer.
5. Reverse the process to install a new module (do not forget to replace the screws and thermal pad).

Figure 7
M.2 SSD-1 Module Removal

- a. Locate the M.2 SSD.
- b. Remove the screw.
- c. The M.2 SSD module will pop up.

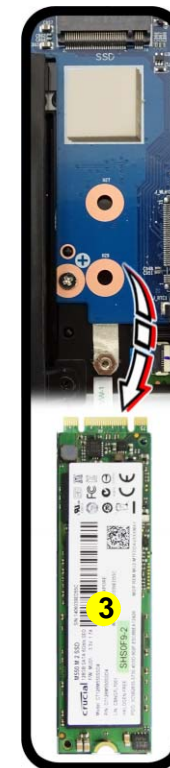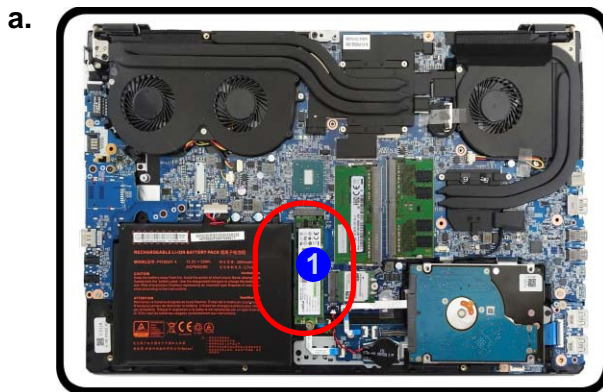



3.M2 SSD Module

- 1 Screw


Disassembly

Figure 8
**M.2 SSD Module
 Installation**

- Place the thermal pad.
- Insert the module.
- Tighten the screw.

M.2 SSD Installation Procedure

- Place the thermal pad **1** on the mainboard as shown (*Figure 8a*).
- Insert the module **2** in the computer (*Figure 8b*).
- Tighten the screw **3** to secure it in place (*Figure 8c*).

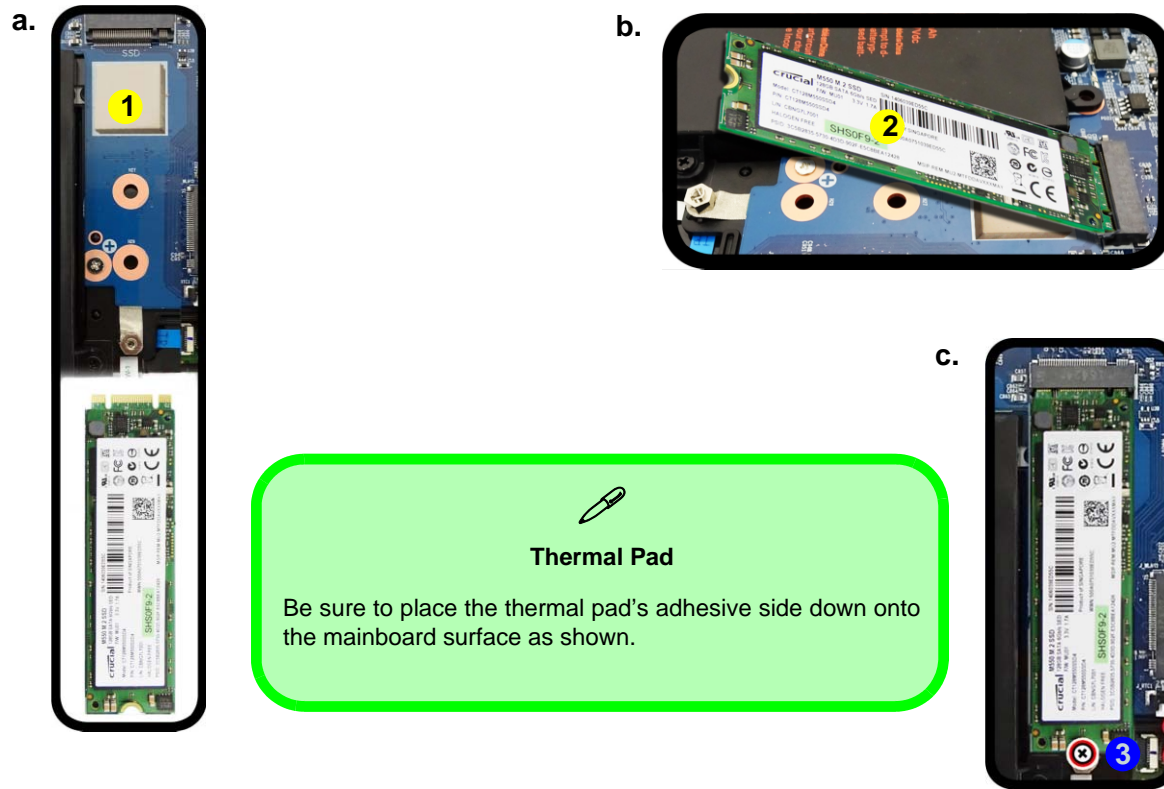

- Thermal Pad
- M2 SSD Module

- 1 Screw

Removing the Wireless LAN Module

1. Turn **off** the computer, turn it over, remove the battery ([page 2 - 6](#)).
2. The Wireless LAN module will be visible at point **1** on the mainboard ([Figure 9a](#)).
3. Carefully disconnect the cables **2** & **3**, and then remove the screw **4** ([Figure 9b](#)).
4. The Wireless LAN module **5** ([Figure 9c](#)) will pop-up, and you can remove it from the computer.

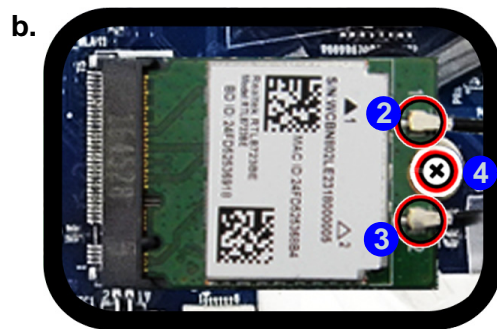



Figure 9
**Wireless LAN
Module Removal**

- a. Locate the WLAN.
- b. Disconnect the cables and remove the screw.
- c. The WLAN module will pop up.

Note: Make sure you reconnect the antenna cable to the “1 + 2” socket ([Figure 9b](#)).



5. Wireless LAN Module

- 1 Screw

Wireless LAN, Combo, 3G & LTE Module Cables

Note that the cables for connecting to the antennae on WLAN, WLAN & Bluetooth Combo, 3G and LTE modules are not labelled. The cables/covers (each cable will have either a black or transparent cable cover) are color coded for identification as outlined in the table below.

Module Type	Antenna Type	Cable Color	Cable Cover Type
WLAN/WLAN & Bluetooth Combo	WM 1	Black	Transparent
	WM 2	Black	White
LTE Broadband	LTE 1	Black	Black
	LTE 2	Black	Blue

Cable 1 is usually connected to antenna 1 (Main) on the module, and cable 2 to antenna 2 (Aux).


Removing the 3G/4G Module


3G/4G Module Removal Procedure

1. Turn off the computer, remove the battery (page 2 - 6).
2. Locate the module, it is visible at point 1 (Figure 10a).
3. Carefully disconnect the cables 2 & 3, and then remove the screw 4 from the module (Figure 10b).
4. The module 5 will pop-up (Figure 10c).
5. Lift the module 5 up and off the computer (Figure 10d).

Figure 10
3G/4G Module
Removal

- a. Locate the module.
- b. Disconnect the cables and remove the screw.
- c. The module will pop-up.
- d. Lift the module up off the socket.

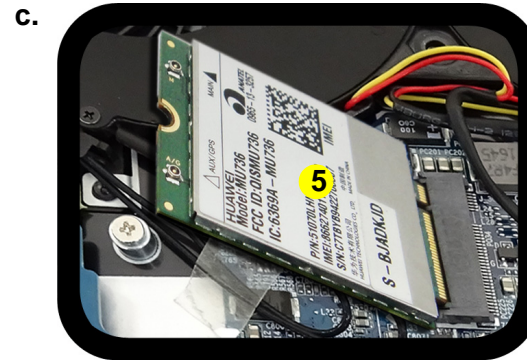



5. 3G/4G Module

- 1 Screw


Disassembly

Figure 11
CCD Removal

- a. Remove rubber and screws and then carefully release the inner frame of the LCD panel at the points indicated by the arrows.
- b. Remove the LCD front cover.

Removing the CCD

1. Turn **off** the computer, turn it over to remove the battery ([page 2 - 6](#)).
2. Lay the computer down on a flat surface with the top case up forming a 130 degree angle. Carefully remove the mylar covers **1** - **2** and screws **3** - **4**.
3. Run your fingers around the inner frame of the LCD panel to lift at points **5** - **6** as indicated by the arrows, and slightly lift up the outer frame at point **7** as indicated by the arrows, and then run your fingers again around the inner frame at the lower point **8** as indicated by the arrows ([Figure 11a](#)).
4. Remove the LCD front cover **5** ([Figure 11b](#)).

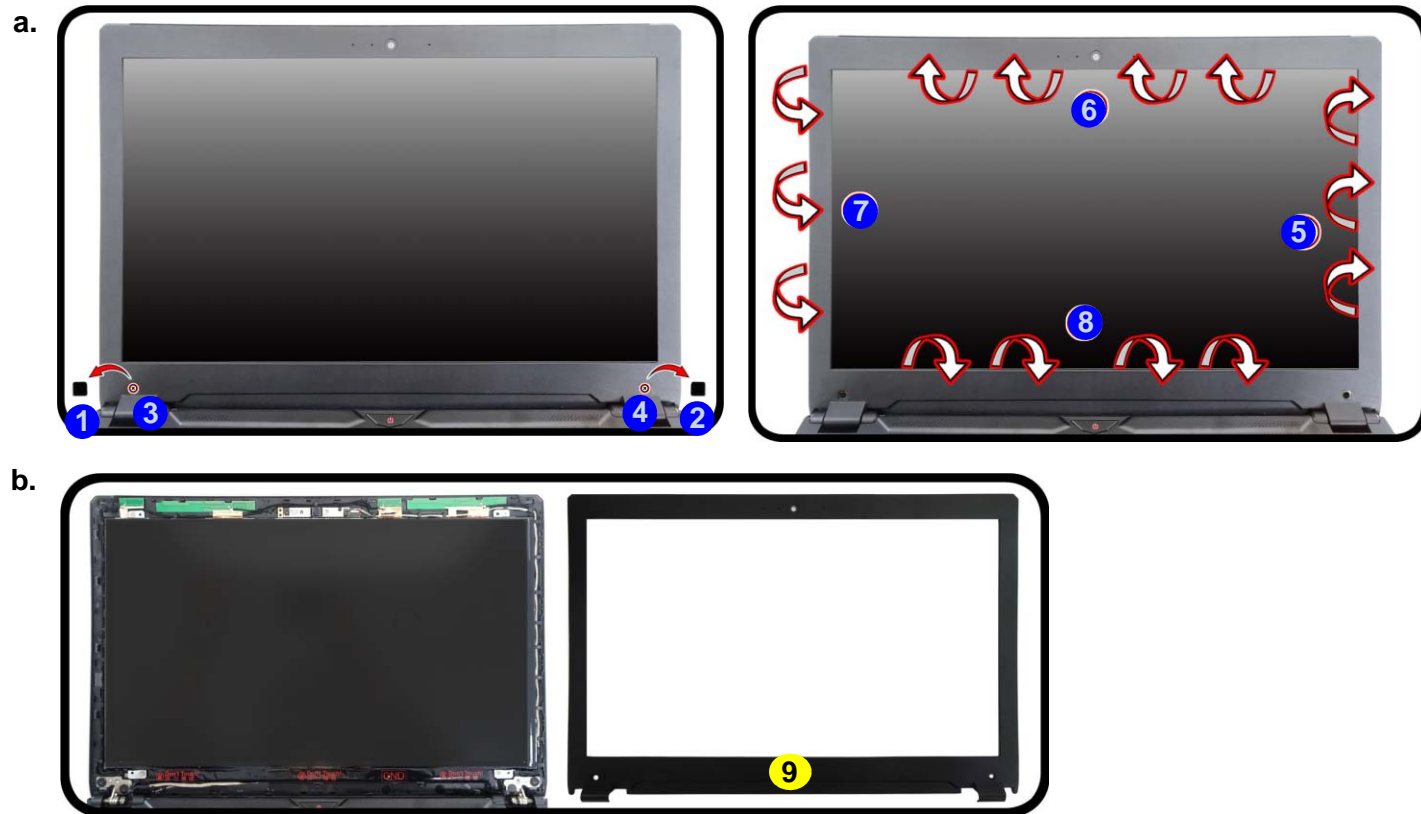

5. Disconnect the cable **10** (*Figure 12c*).
6. Remove the CCD module **11** (*Figure 12d*).
7. Reverse the process to install a new CCD module.


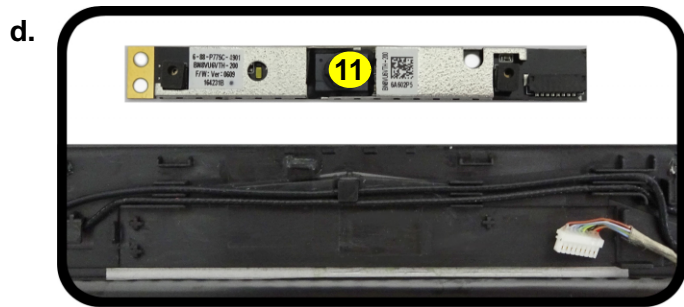


Figure 12
CCD Removal
(cont'd)

- c. Disconnect the cable.
- d. Remove the CCD module.

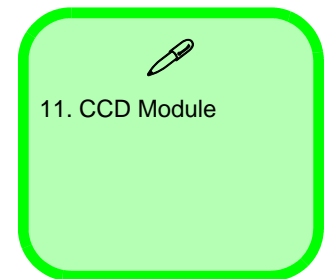

Appendix A:Part Lists

This appendix breaks down the *P957HP6* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.


Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A - 1
**Part List Illustration
Location**

Part	
Top (no FP)	<i>page A - 3</i>
Top (with FP)	<i>page A - 4</i>
Bottom	<i>page A - 5</i>
Main Board	<i>page A - 6</i>
HDD	<i>page A - 7</i>
LCD	<i>page A - 8</i>

Top (no FP)

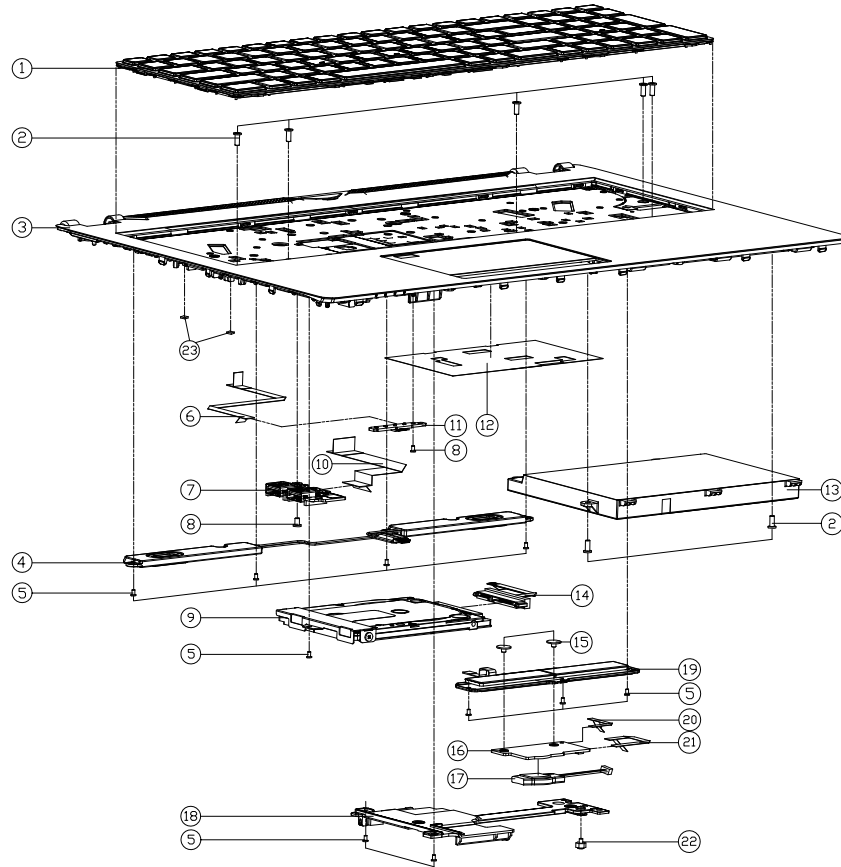

ITEM	PART NAME	PART NO	REMARK
1	TOP LID (NO FINGERPRINT SENSOR) (BLACK) (L) (NO FRONT PANEL) (NO KEY) (NO FPC)	6-80-N8500-010-1	
2	.SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
3	(PRE-PROCESS) TOP CASE MODULE (W/O FP) FOR TP P950HR	6-78-P950HR02-020	
3	(PRE-PROCESS) TOP CASE MODULE (W/O FP) FOR TP P957HR	6-78-P957HR02-020	
3	(PRE-PROCESS) TOP CASE MODULE (W/O FP) FOR TP P957HR-H	6-78-P957HRH2-020	
4	FFC CABLE MAIN PL. R 70MM L 120MM 2W 4CP (GOSTED) P950HP6	6-23-5P950-0S3	
5	.SCREW M2*3L KI BZ ICT NY (DD=0.45,DT=0.4)	6-35-B6120-3RD	
6	FFC CABLE LED TO MB L=141MM 5V 12P (OX) P950HP6	6-43-P9500-051	
7	USB3.0 BOARD V2.0 (W/ RE-DRIVER IC) P950HP6	6-77-P9503-D02	
8	.SCREW M2*4L KI NT ICT NY (DD=0.45,DT=0.4)	6-35-B1120-4RE	
9	W/HDD ASS'Y P950HR	6-79-P950HR0J-010	
9	W/O HDD ASS'Y P950HR	6-79-P950HR0J-020	
10	FFC CABLE USB TO MB L=104.5MM 5V 30P (OX) P950HP6	6-43-P9500-031	
11	FRONT LED BOARD V2.0 P950HP6	6-77-P9504-D02	
12	TOP TP MYLAR PET P775DM2	6-40-P7752-211	
13	IMP 3.11 (S2)/S2/S2/S2/IMP EXP REMOVABLE FILMED SPECIFIED PS90HP LABEL ONLINE	6-87-P950S-52B01	
13	IMP 3.11 (S2)/S2/S2/S2/IMP EXP REMOVABLE FILMED SPECIFIED PS90HP LABEL ONLINE	6-87-P950S-51E01	
14	HDD CONCS100S-100+PCB+W/CABLE (FFC CABLE 52MM) P950HP6	6-23-FP950-010	
15	SCREW M2*2L KI BK/Z ICT NY(0.8,T=0.6)	6-35-B6120-2RE	
16	CLICK BOARD V2.0 P950HP6	6-77-P9502-D02	
17	BAT. 20MM 3V 220MAH W/CABLE 55MM DC32020265SVMI00 (S30HAND)	6-23-22015-TE0	
18	HDD HOLDER MODULE P950HP6	6-42-P9502-101	
19	FUNCTION KEY FOR CLICK BUTTON MODULE W/O FINGER P950HP6	6-23-KP65R-022	
20	FFC CABLE CLICK TO MB L=35MM 5V 6P (OX) P950HP6	6-43-P9500-020	
21	FFC CABLE CLICK TO TP L=60MM 5V 8P (OX) P950HP6	6-43-P9502-010	
22	.SCREW M2*3L (H=25 D=5) STEEL ICT NY FOR KEFF CARBOCHANGE	6-35-ZA120-2RS-1	
23	TOP CASE SPONGE (5*5*1) CR4382 P950HP6	6-47-0019A-05K	ONLY FOR P950HR/HP6

Figure A - 1
Top (no FP)

Top (with FP)


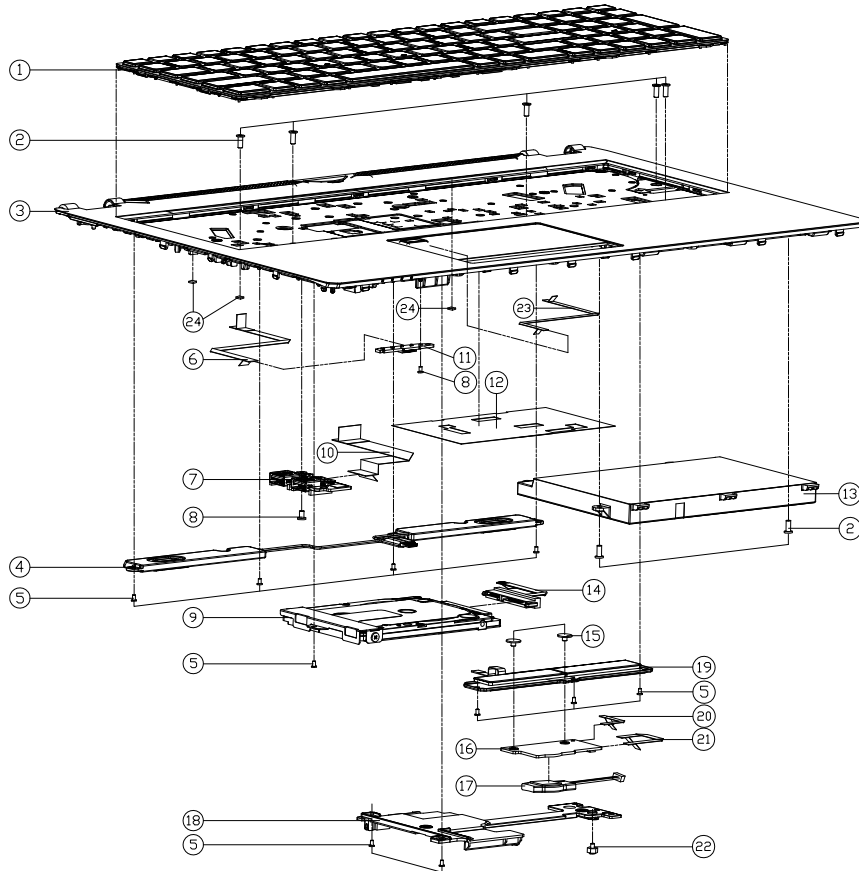


Figure A - 2
Top (with FP)

ITEM	PART NAME	PART NO	REMARK
1	W/O HDD CRACKLEBOARD BOARD CASE COVER LONG PROTRUSION BOTTOM WITH HOLE 1401006	6-80-N8500-010-1	
2	SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
3	(PRE-PROCESS) TOP CASE MODULE (W/FP) FOR TP P950HR	6-78-P950HR02-010	
3	(PRE-PROCESS) TOP CASE MODULE (W/FP) FOR TP P957HR	6-78-P957HR02-010	
3	(PRE-PROCESS) TOP CASE MODULE (W/FP) FOR TP P957HRH	6-78-P957HRH2-010	
4	SPRING-CABLE MAIN RAIL P.70MM L.133MM 2V 40P (OUTLET) P950HR V30	6-23-5P950-0S3	
5	SCREW M2*3L KT BZ ICT NY (DD=#4.5,DT=0.4)	6-35-B6120-3RD	
6	FFC CABLE LED TO MB L=141MM 5V 12P (OX) P950HP6	6-43-P9500-051	
7	USB3.0 BOARD V2.0 (W/ RE-DRIVER IC) P950HP6	6-77-P9503-D02	
8	SCREW M2*4L KT NI ICT NY (DD=#4.5,DT=0.4)	6-35-B1120-4RE	
9	W/HDD ASS'Y P950HR	6-79-P950HROJ-010	
9	W/O HDD ASS'Y P950HR	6-79-P950HROJ-020	
10	FFC CABLE USB TO MB L=104.5MM 5V 30P (OX) P950HP6	6-43-P9500-031	
11	FRONT LED BOARD V2.0 P950HP6	6-77-P9504-D02	
12	TOP TP MYLAR PET P775DM2	6-40-P7752-211	
13	W/FLUORESCENT/5MM 1PZ EP 30V/200MA P/LED SCREWS/PSMA LENS COVER	6-87-P950S-52B01	
13	W/FLUORESCENT/5MM 1PZ EP 30V/200MA P/LED SCREWS/PSMA LENS COVER	6-87-P950S-51E01	
14	HDD CONDUCTIVE-DOO-PCB-W/CABLE FFC CABLE 50MM P950HP6	6-23-FP950-010	
15	SCREW M2*2L K1 BK/2 ICT NY(Ø0.7=0.6)	6-35-B6120-2RE	
16	CLICK BOARD V2.0 P950HP6	6-77-P9502-D02	
17	DAT. 20MM 3V 220MAH W/CABLE 55MM DC32023655MM03 (ROUND)	6-23-22015-TE0	
18	HDD HOLDER MODULE P950HP6	6-42-P9502-101	
19	FUNCTION KEY FOR CLICK BUTTON MODULE W/O FINGER P65066	6-23-KP65R-022	
20	FFC CABLE CLICK TO MB L=35MM 5V 6P (OX) P950HP6	6-43-P9500-020	
21	FFC CABLE CLICK TO TP L=60MM 5V 6P (OX) P950HP6	6-43-P9502-010	
22	SCREW M2*3L Ø0.25 D=5 D=50 STEEL ICT NY FOR NPT (CARC/CH/ND)	6-35-ZA120-2R5-1	
23	FFC CABLE FINGER TO MB L=126MM 5V 6P (OX) P950HP6	6-43-P9500-040	
24	TOP CASE SPONGE (5*5*4) CR4382 P950HP6	6-47-0019A-05K	ONLY FOR P950HR/HP6



Bottom

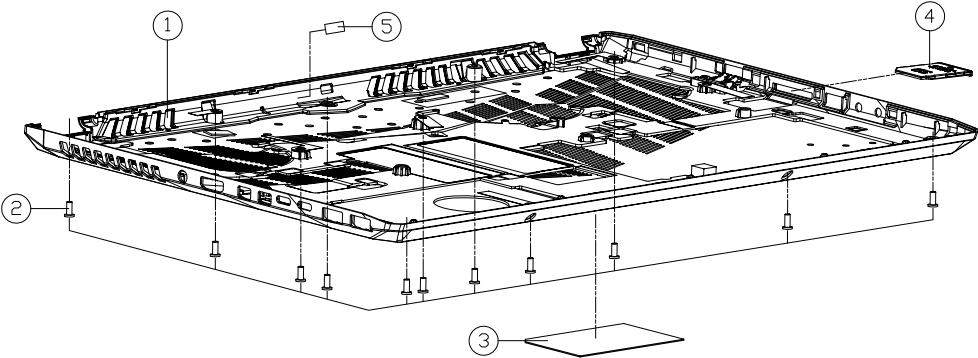

ITEM	PART NAME	PART NO	REMARK
1	BOTTOM CASE MODULE P950HP6	6-39-P9503-012	For P950XX
1	BOTTOM CASE MODULE P957HR	6-39-P9573-012	For P957XX
2	SCREW M2.5*6L K BZ ICT NY	6-35-B2125-6RA	
3	PRODUCT LABEL FOR P950HR(CHARGE RATING)	6-45-P950HR03-011	
3	PRODUCT LABEL FOR P950HP6(CHARGE RATING)	6-45-P950HP63-011	
3	PRODUCT LABEL FOR P950HP3(CHARGE RATING)	6-45-P950HP33-011	
3	PRODUCT LABEL FOR P957HR	6-45-P957HR03-010	
3	PRODUCT LABEL FOR P957HP6	6-45-P957HP63-010	
3	PRODUCT LABEL FOR P957HP3	6-45-P957HP33-010	
3	PRODUCT LABEL FOR P957HR-H	6-45-P957HRH3-010	
3	PRODUCT LABEL FOR P957HP6-H	6-45-P957HP6H-010	
3	PRODUCT LABEL FOR P957HP3-H	6-45-P957HP3H-010	
4	DUMMY PIN NON PUSH TYPE PC-ABS CT23P-7002(CHARGE) V9700V	6-42-W9708-011	
5	BOTTOM CASE WYLAR (PET+SDNY G400) P950HP6	6-40-P9503-040	For P950XX

Figure A - 3
Bottom

HDD

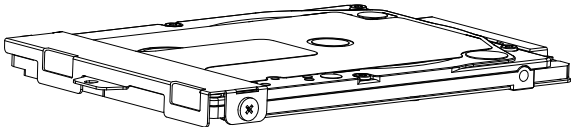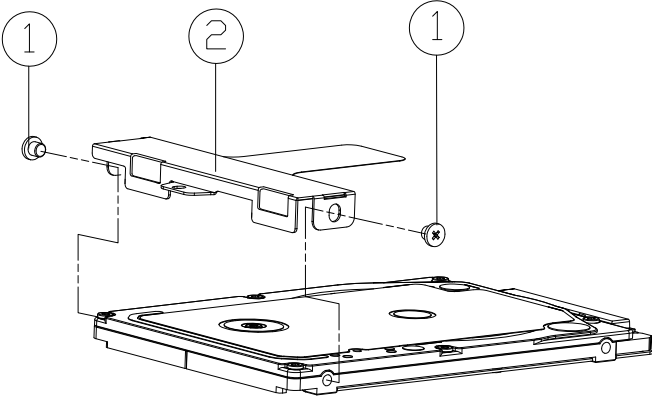

ITEM	PART NAME	PART NO	REMARK
1	SCREW M3*2.5L KI NI ICT NY	6-35-B1130-2R5	
2	HDD BKT 7MM SECC T=0.5 N250LU	6-33-N250J-011	

Figure A - 5
HDD

LCD

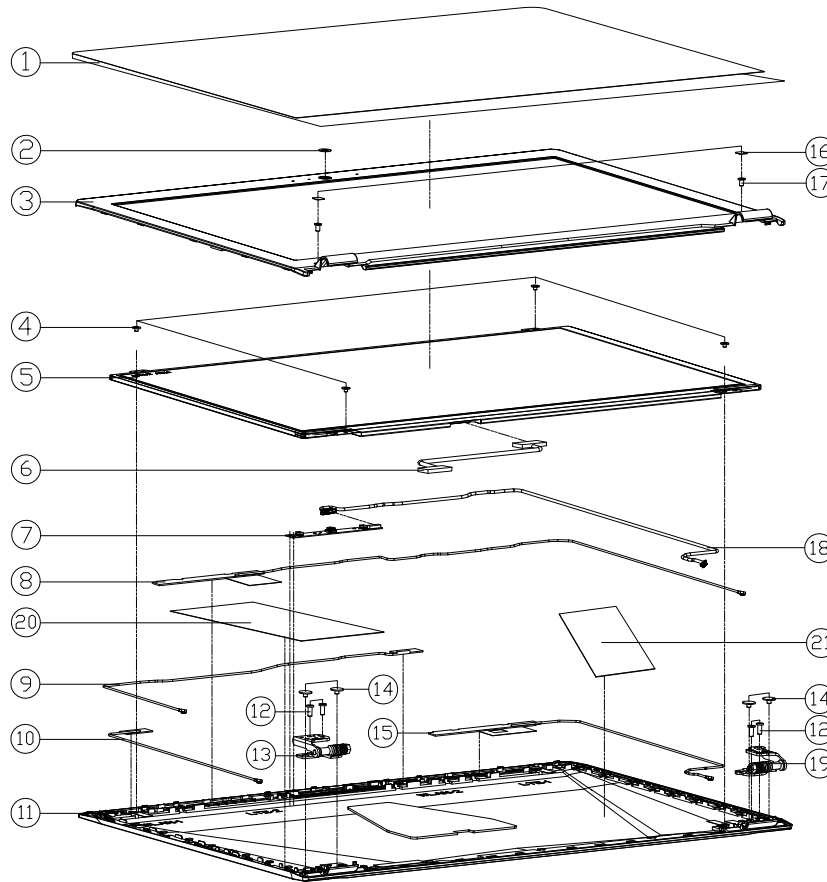


Figure A - 6
LCD

ITEM	PART NAME	PART NO	REMARK
1	LCD PROTECT MYLAR BOPP N650DU	6-40-N6508-040	
2	CCD LENS PC P950HP6	6-42-P9501-020	
3	LCD FRONT COVER MODULE P950HP6	6-39-P9501-012	
4	SCREW M2*2L KI NI ICT NY (DD=05 ,T=0.5)	6-35-B1120-2R0	
5	LCD 15.6" FHD/IPS/EDP LG LP156WF6-SPK3 (N4) (LED) 32MM	6-50-LB232-L08	
5	LCD 15.6" FHD/IPS/EDP LG LP156WF6-SPK (N7) (LED) SUPPORT SW G-SYNC * 32MM	6-50-LB232-L04	
5	LCD 15.6" UHD (IPSXEDP) LG LP156U01-SPB1 (LED) 2.6MM	6-50-L1226-L00	
5	LCD 15.6" FHD/20HZ/ANVR G-SYNC/N7/EDP AU BISEHTN052 (LED)32MM	6-50-LB232-G17	
6	WIRE CABLE FOR EDP 300MM (D) 19V 30PIN (HT/LW CONDUCTOR)60*40 P950HP6	6-43-P9501-010-2N	
6	WIRE CABLE FOR EDP 300MM (D) 19V 40PIN (HT/LW CONDUCTOR)60*40 P950HP6	6-43-P9501-020-1N	
7	IOC CAMERA CHIMON FIX D1472R02000020 28 FHD D1472M W530C F1630N WHITE-LED V12P-MC	6-88-W65DC-5100	OPTION
7	IOC CAMERA BISON FIX D1472R02000020 28 FHD D1472M W530C F1630N WHITE-LED V12P-MC	6-88-P775C-4901	OPTION
8	ANTENNA PEBA 3416 JEM L1E-2 PCB BR 010/06/05/05/05/26/26/26/26 L-100M PATTERN P950HP6	6-23-7P950-021	
9	ANTENNA IPEXA WLAN JEM WL2 PCB DL 24G/5GHz WL2-050MM	6-23-7P950-041	
10	ANTENNA IPEXA WLAN JEM WL1 PCB DL 24G/5GHz WL1-050MM COPPER FOL P950HP6	6-23-7P950-031	
11	BACK COVER MODULE P957HR-H	6-39-P9571-H22	
12	.SCREW M2.5*6L K BZ ICT NY	6-35-82125-6RA	
13	LCD HINGE L (SK7) SNR P950HP6	6-33-P9501-1L1-1	
14	SCREW M2.5*2.5L KI BK/Z ICT NY(08,T=0.6)	6-35-B6125-2R5	
15	ANTENNA PEBA 3416 JEM L1E-1 PCB BR 010/06/05/05/05/26/26/26/26 L-100M FOL COPPER FOL	6-23-7P950-013	
16	FRONT COVER SCREW MYLAR PC P750ZM	6-40-P7508-030	
17	.SCREW M2.5*4L KI NI ICT NY	6-35-21125-4R0	
18	WIRE CABLE CCD+MIC TO MB 8PIN W840SU-T (HL)	6-43-W840T-012	
19	LCD HINGE R (SK7) SNR P950HP6	6-33-P9501-1R1-1	
20	LCD WATERPROOF MYLAR L P957HR-H	6-40-P9571-H20	
21	LCD WATERPROOF MYLAR P957HR-H	6-40-P9571-H10	

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *P957HP6* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page	Diagram - Page
System Block Diagram - Page B - 2	Frame Buffer Partition C_D - Page B - 23	3D AMP Headphone - Page B - 44	NVVDD 1 - Page B - 65
Processor 1/7 - Page B - 3	GPU Decoupling 1 - Page B - 24	ASM2142 1/3 - Page B - 45	NVVDD 2 - Page B - 66
Processor 2/7 - Page B - 4	GPU Decoupling 2 - Page B - 25	ASM2142 2/3 - Page B - 46	FBVDDQ - Page B - 67
Processor 3/7 - Page B - 5	Straps and XTAL - Page B - 26	ASM2142 3/3 - Page B - 47	LAN Board - Page B - 68
Processor 4/7 - Page B - 6	IFP I/O Interface - Page B - 27	M.2 3G/LTE - Page B - 48	Reader Board - Page B - 69
Processor 5/7 - Page B - 7	Misc - GPIO, I2C and ROM - Page B - 28	M.2 WLAN+BT, PCIE4X SSD - Page B - 49	USB Board - Page B - 70
Processor 6/7 - Page B - 8	GPU NVVDD, FBVDDQ - Page B - 29	TPM, TP - Page B - 50	LED Board - Page B - 71
Processor 7/7 - Page B - 9	GPU GND & Sequence - Page B - 30	Connector - Page B - 51	Click Board - Page B - 72
DDR4 CHA SO-DIMM_0 - Page B - 10	PCH 1/9 - Page B - 31	Fan, LID, KB LED - Page B - 52	Power Board - Page B - 73
DDR4 CHB SO-DIMM_0 - Page B - 11	PCH 2/9 - Page B - 32	5V, 5VS, 3.3V, 3.3VS, 3.3VA - Page B - 53	Power Sequence - Page B - 74
Panel, Inverter - Page B - 12	PCH 3/9 - Page B - 33	I.0DX_VCCSTG/VCCSFR_OC/2.5V - Page B - 54	USB Board - Page B - 75
Mini DP Port - Page B - 13	PCH 4/9 - Page B - 34	IV8_RUN/AON, NV3V3 - Page B - 55	
HDMI Connector - Page B - 14	PCH 5/9 - Page B - 35	PEX_VDD - Page B - 56	
VGA PCI Express - Page B - 15	PCH 6/9 - Page B - 36	VDD3, VDD5 - Page B - 57	
GPU Frame Buffer Partition - Page B - 16	PCH 7/9 - Page B - 37	DDR 1.2V / 0.6VS - Page B - 58	
Frame Buffer Partition A - Page B - 17	PCH 8/9 - Page B - 38	Power 1.0V, VCCIO - Page B - 59	
Frame Buffer Partition B - Page B - 18	PCH 9/9 - Page B - 39	VCore & VCCGT Output 1 - Page B - 60	
Frame Buffer Partition A_B - Page B - 19	KBC IT8587 - Page B - 40	VCore & VCCGT Output 2 - Page B - 61	
GPU Frame Buffer Partition - Page B - 20	Backlight KB - Page B - 41	VCCSA - Page B - 62	
Frame Buffer Partition C - Page B - 21	Realtek ALC1220 - Page B - 42	AC_In, Charger - Page B - 63	
Frame Buffer Partition D - Page B - 22	Smart AMP ALC1305 - Page B - 43	NVVDDS - Page B - 64	


Table B - 1
SCHEMATIC
DIAGRAMS



Version Note


The schematic diagrams in this chapter are based upon version 6-7P-P65P9-002. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

System Block Diagram

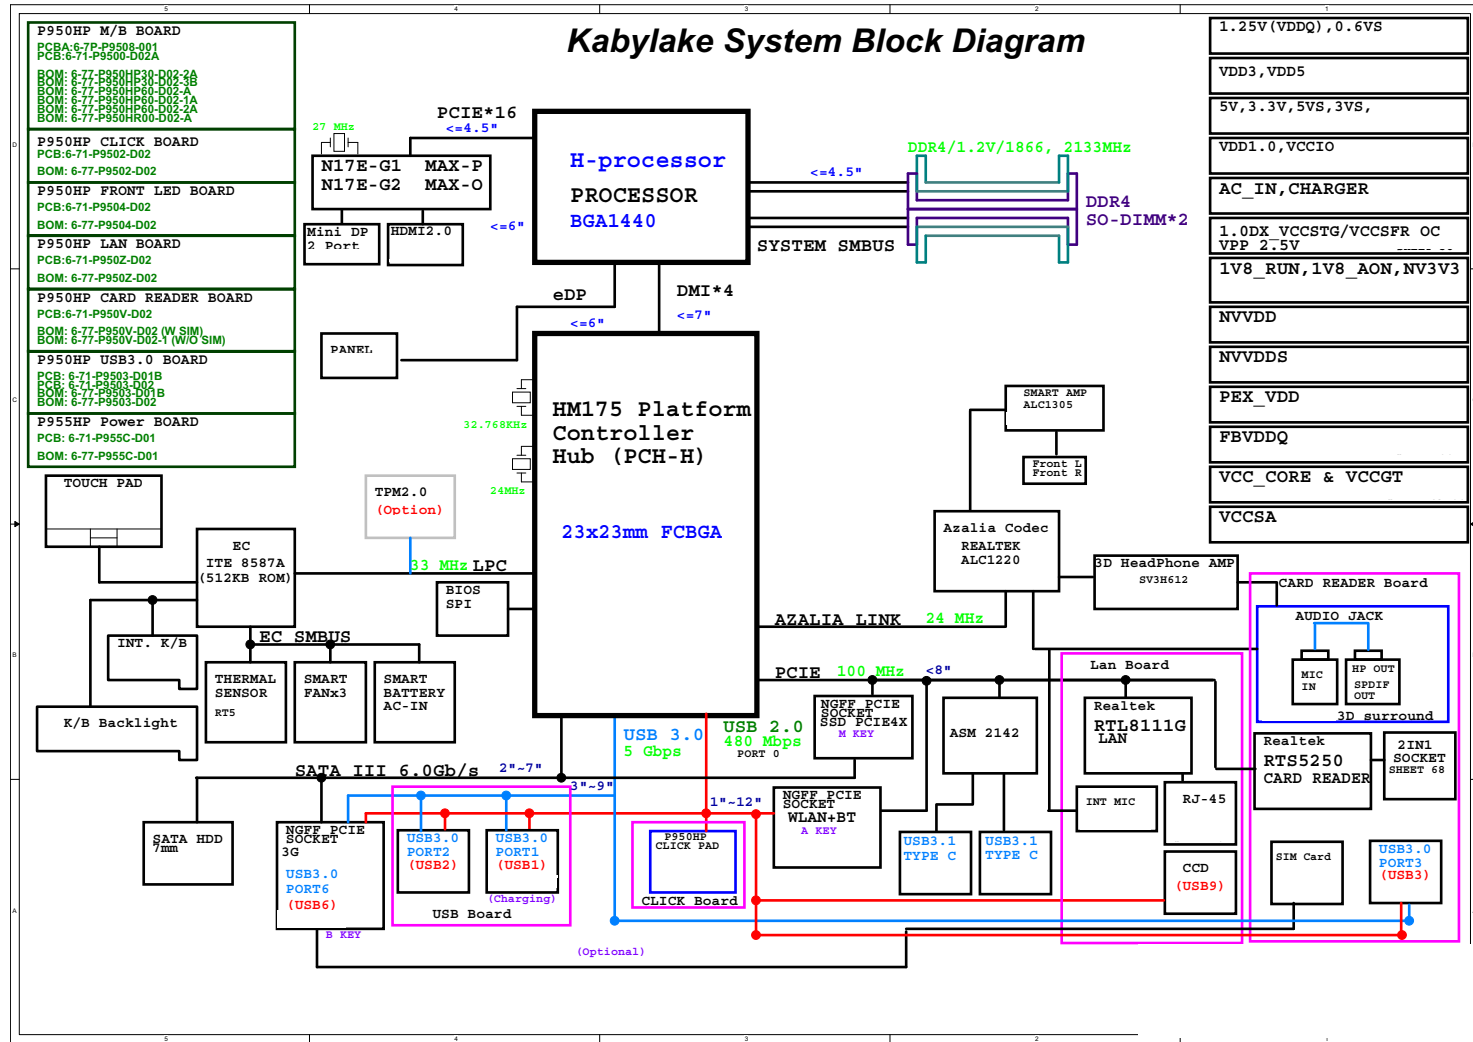


Sheet 1 of 74
System Block
Diagram

Processor 1/7

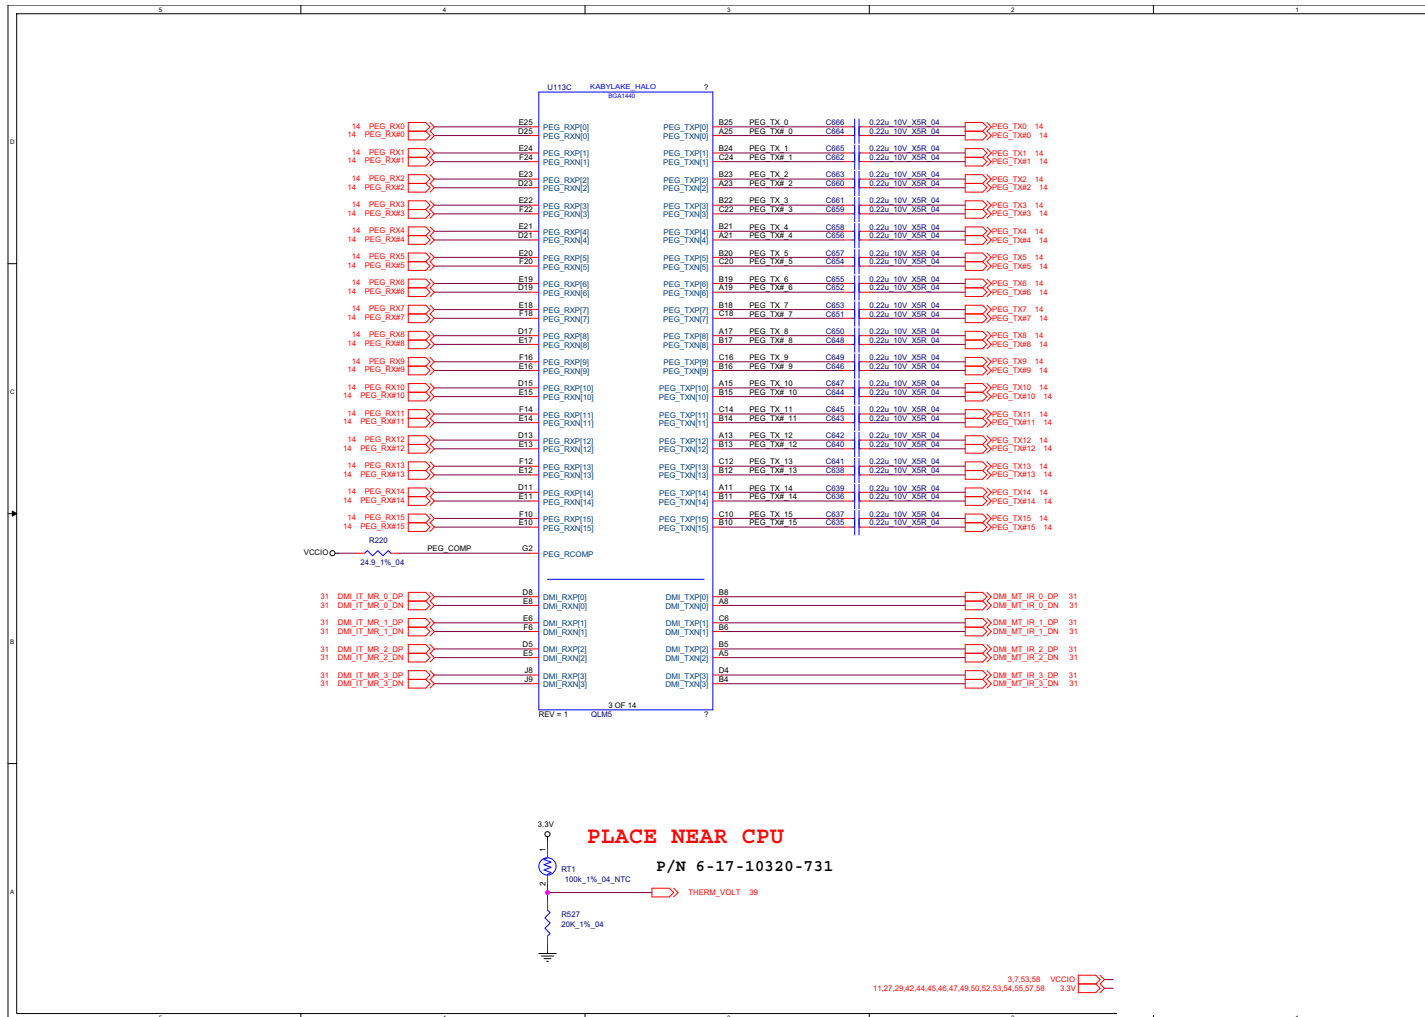

Sheet 2 of 74
Processor 1/7


Processor 2/7

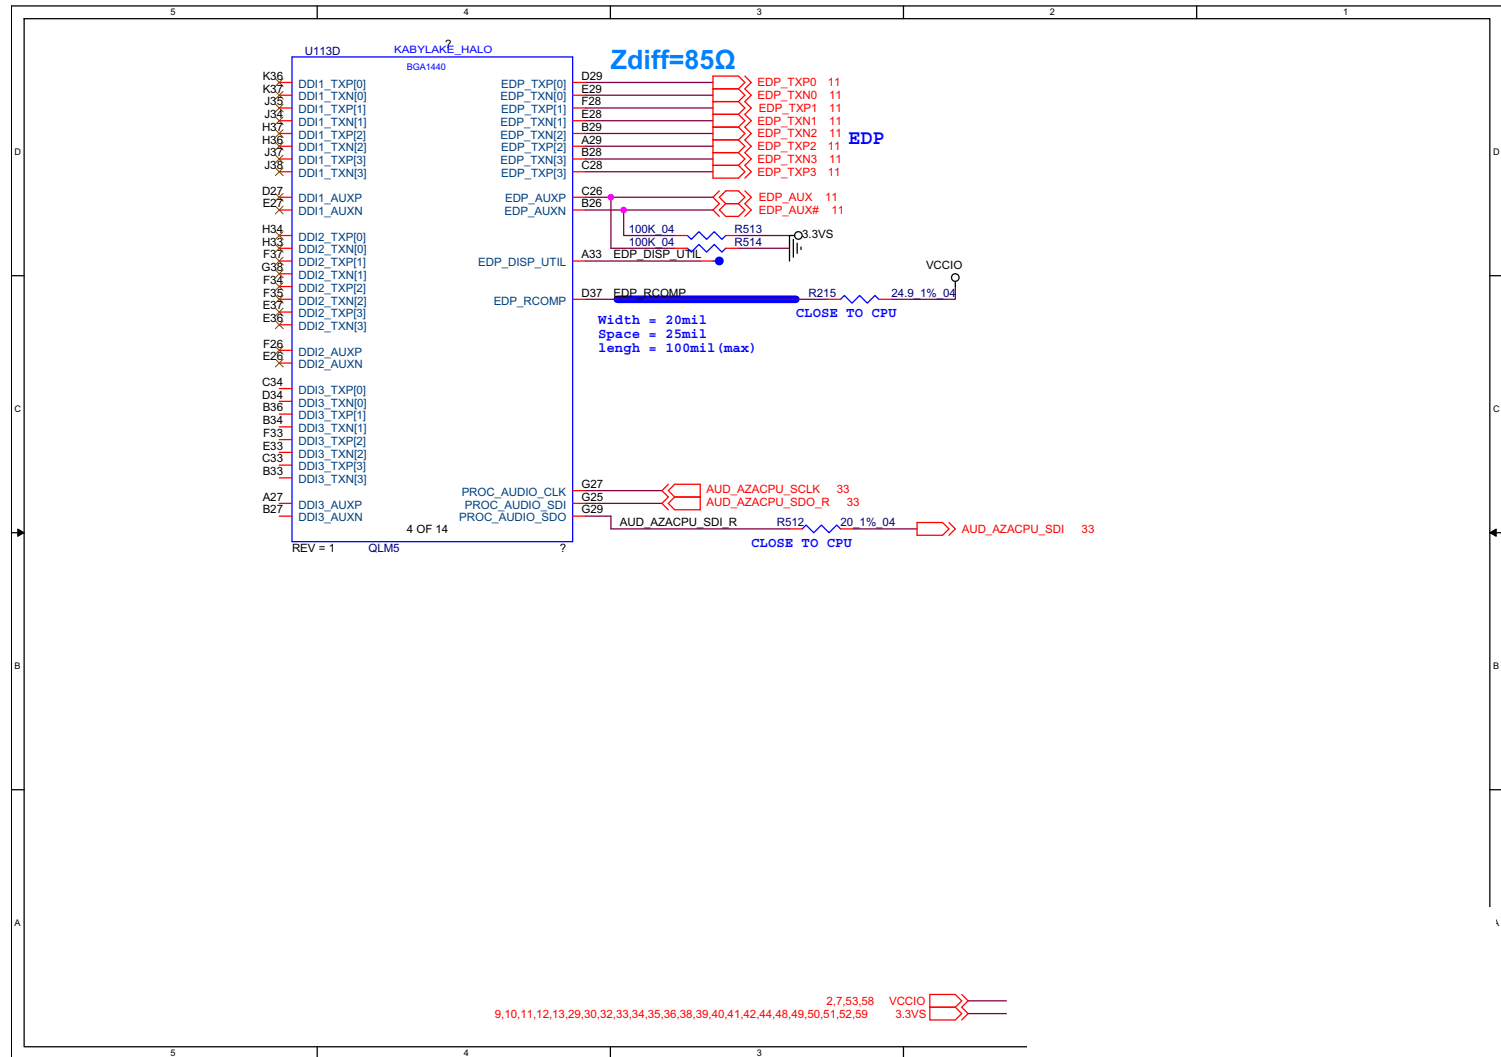


Sheet 3 of 74
 Processor 2/7

Processor 4/7

Sheet 5 of 74
Processor 4/7

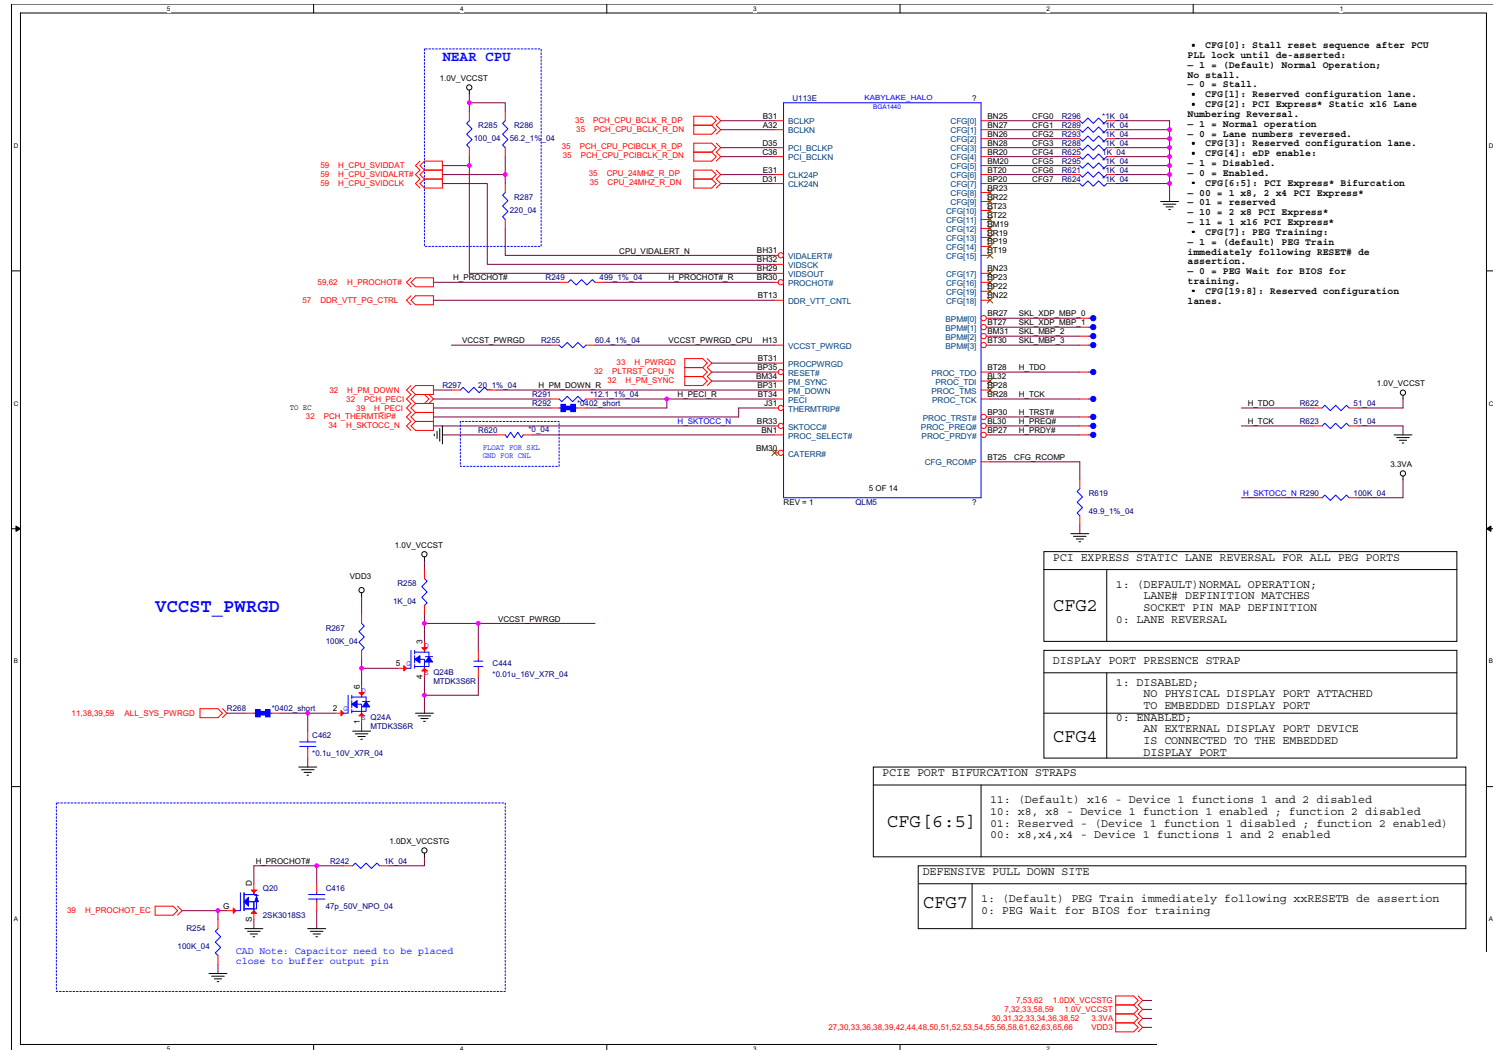


Processor 5/7

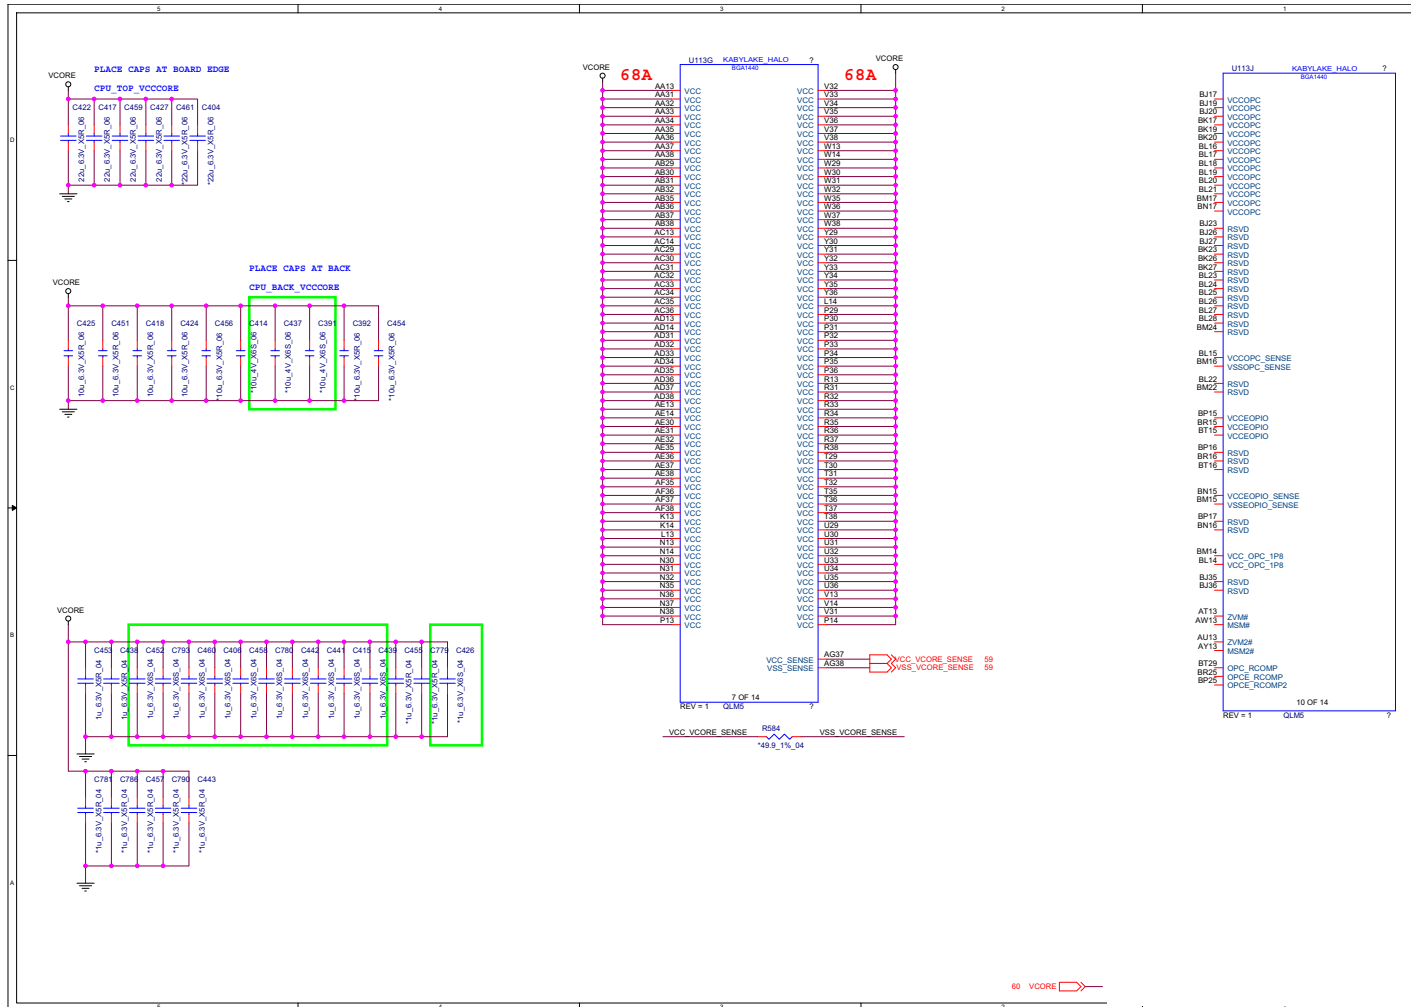


Sheet 6 of 74
Processor 5/7

Processor 6/7

Sheet 7 of 74
Processor 6/

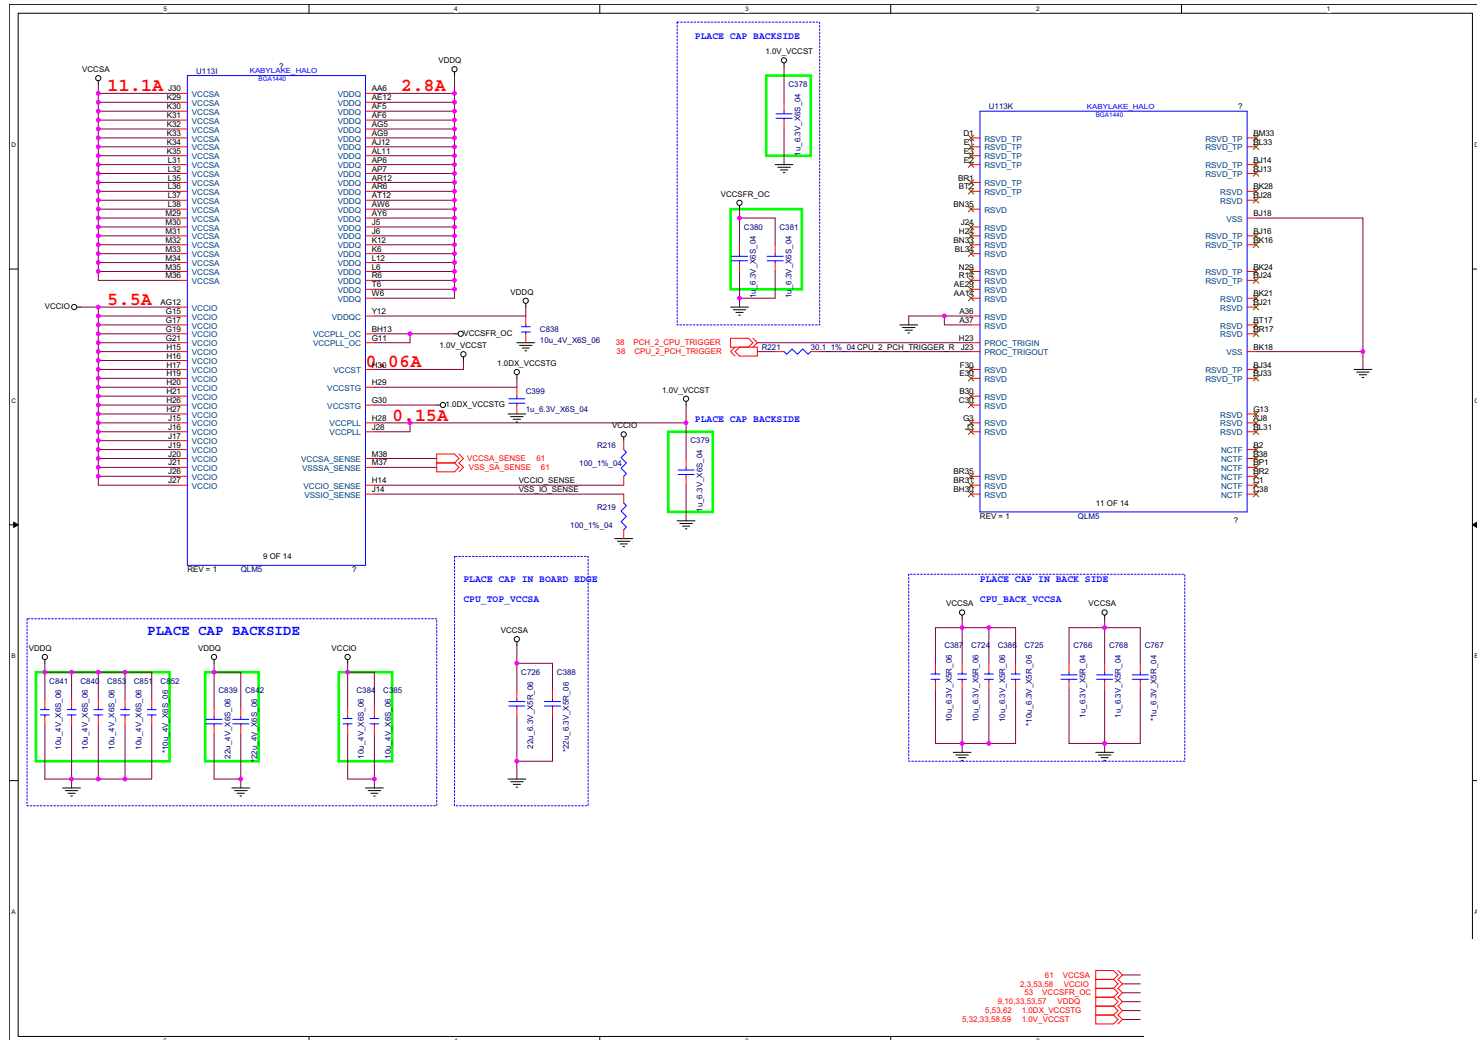

DDR4 CHB SO-DIMM_0

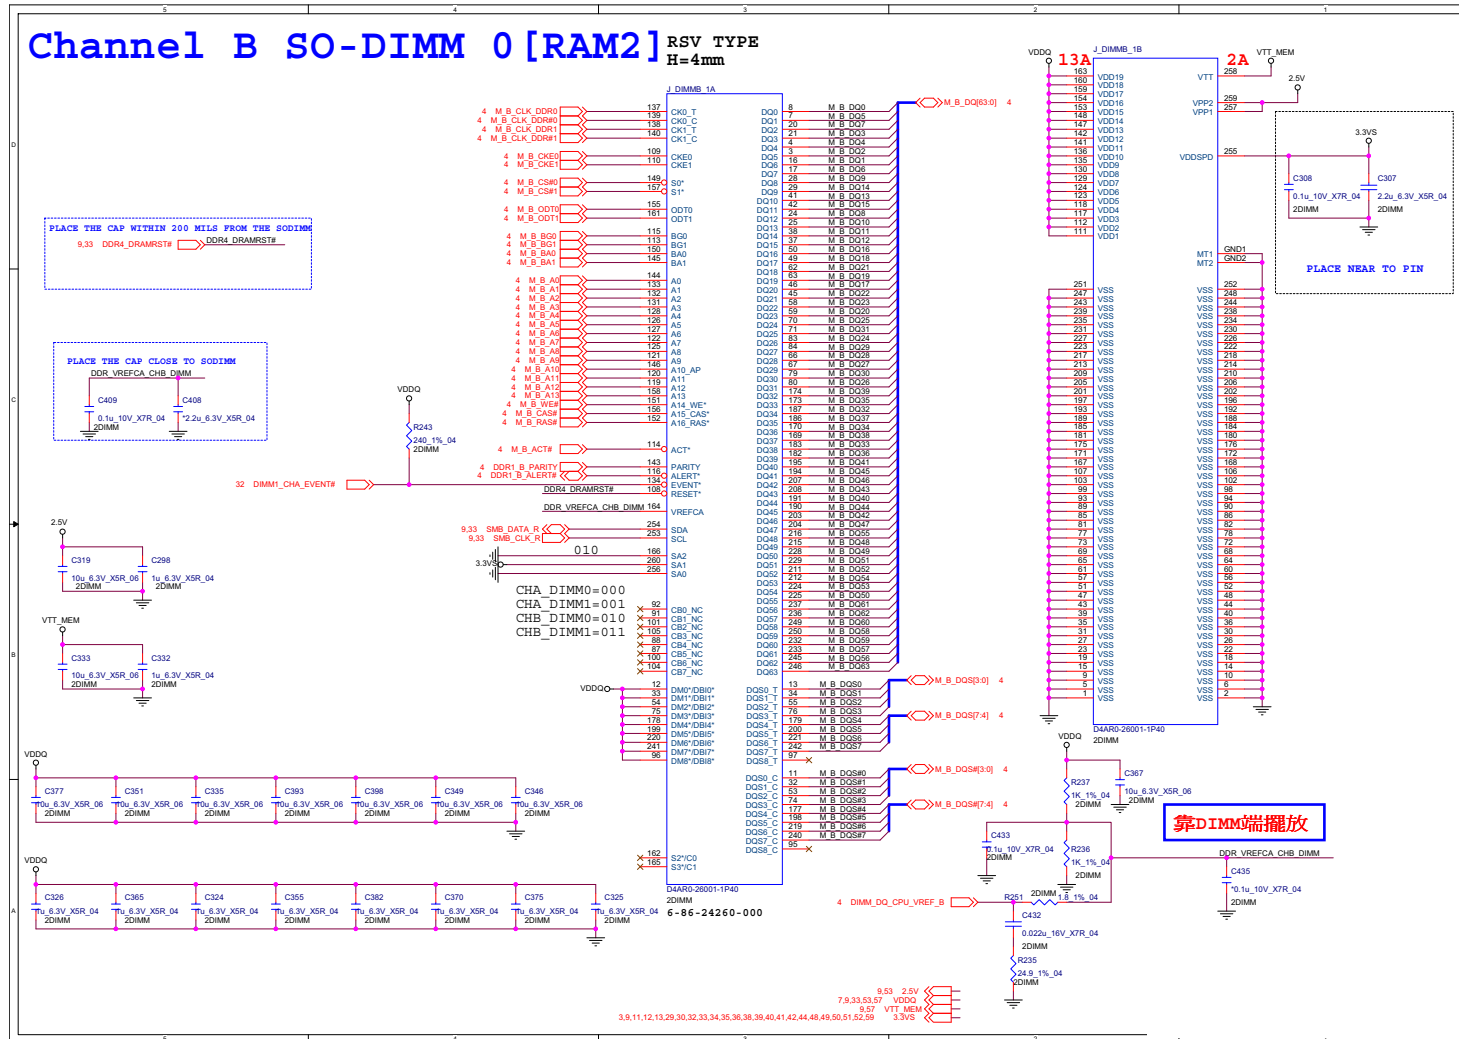


Sheet 10 of 74
DDR4 CHB SO-DIMM_0


B.Schematic Diagrams

Panel, Inverter

Sheet 11 of 74
Panel, Inverter

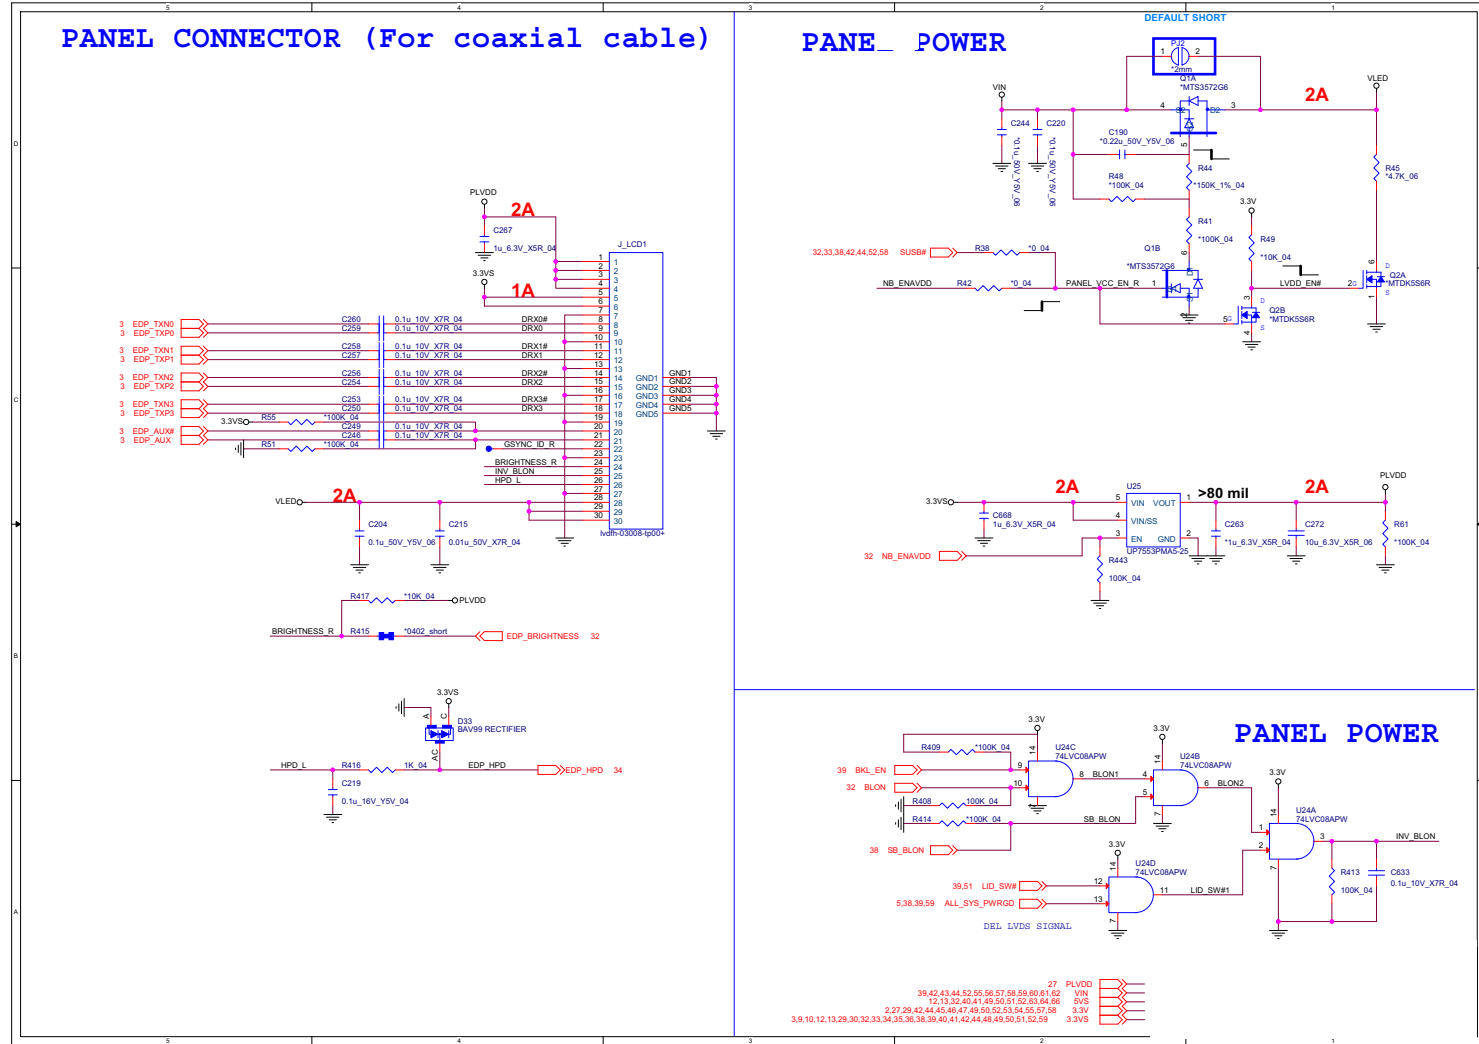


HDMI Connector

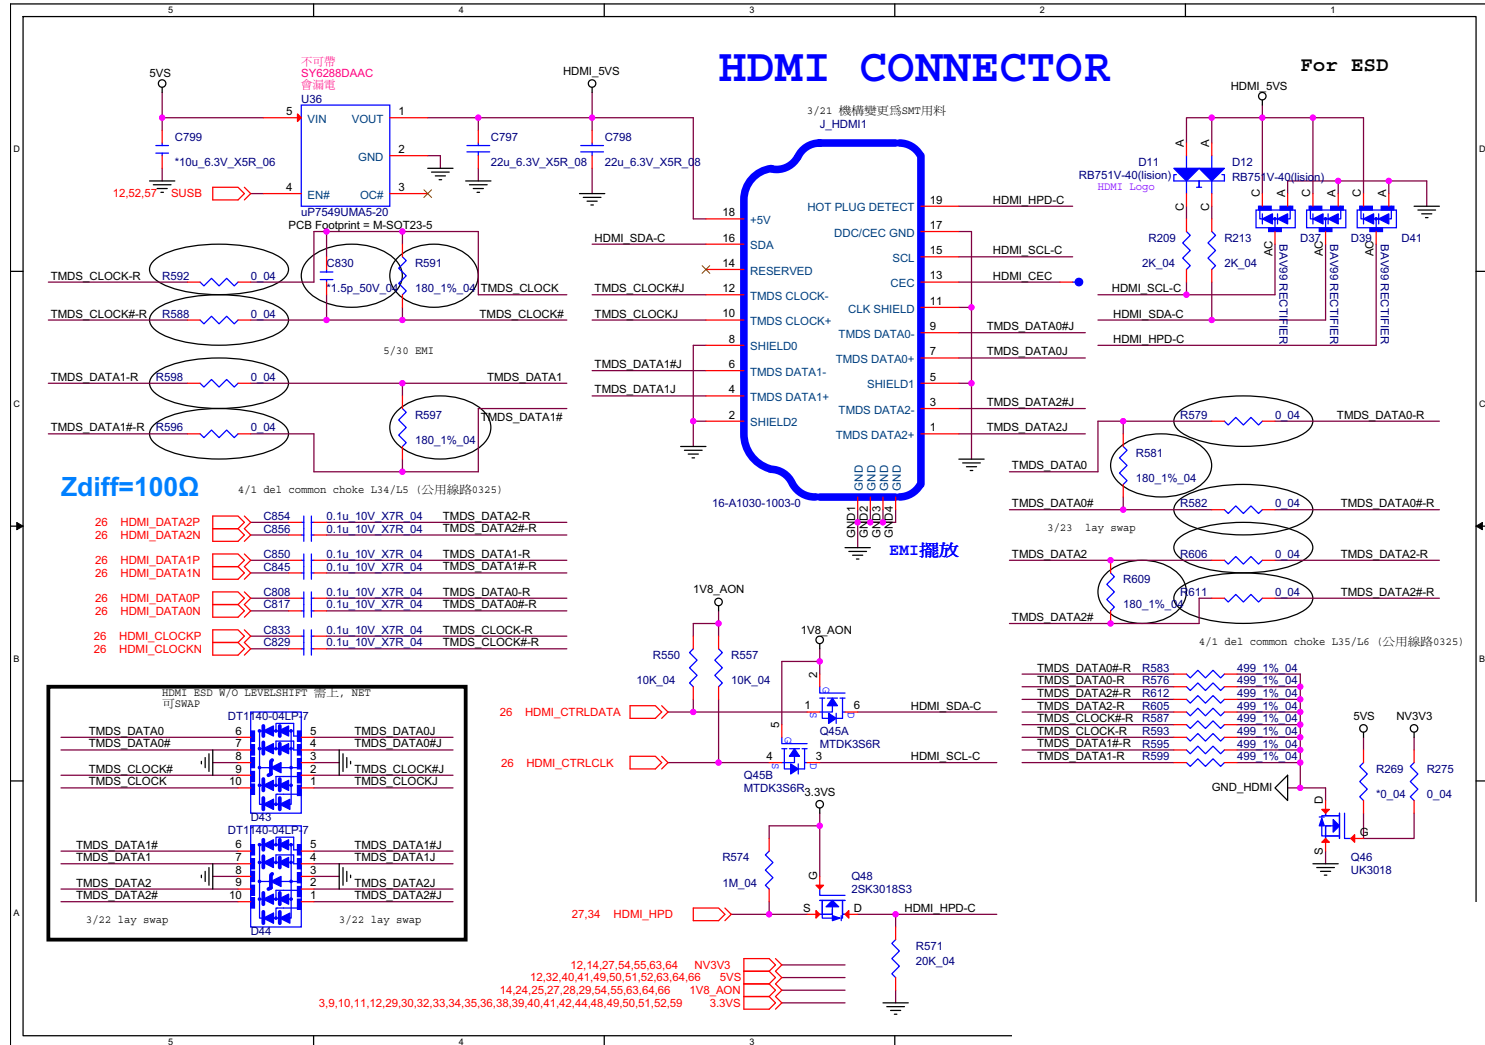

Sheet 13 of 74
HDMI Connector

B.Schematic Diagrams

VGA PCI Express

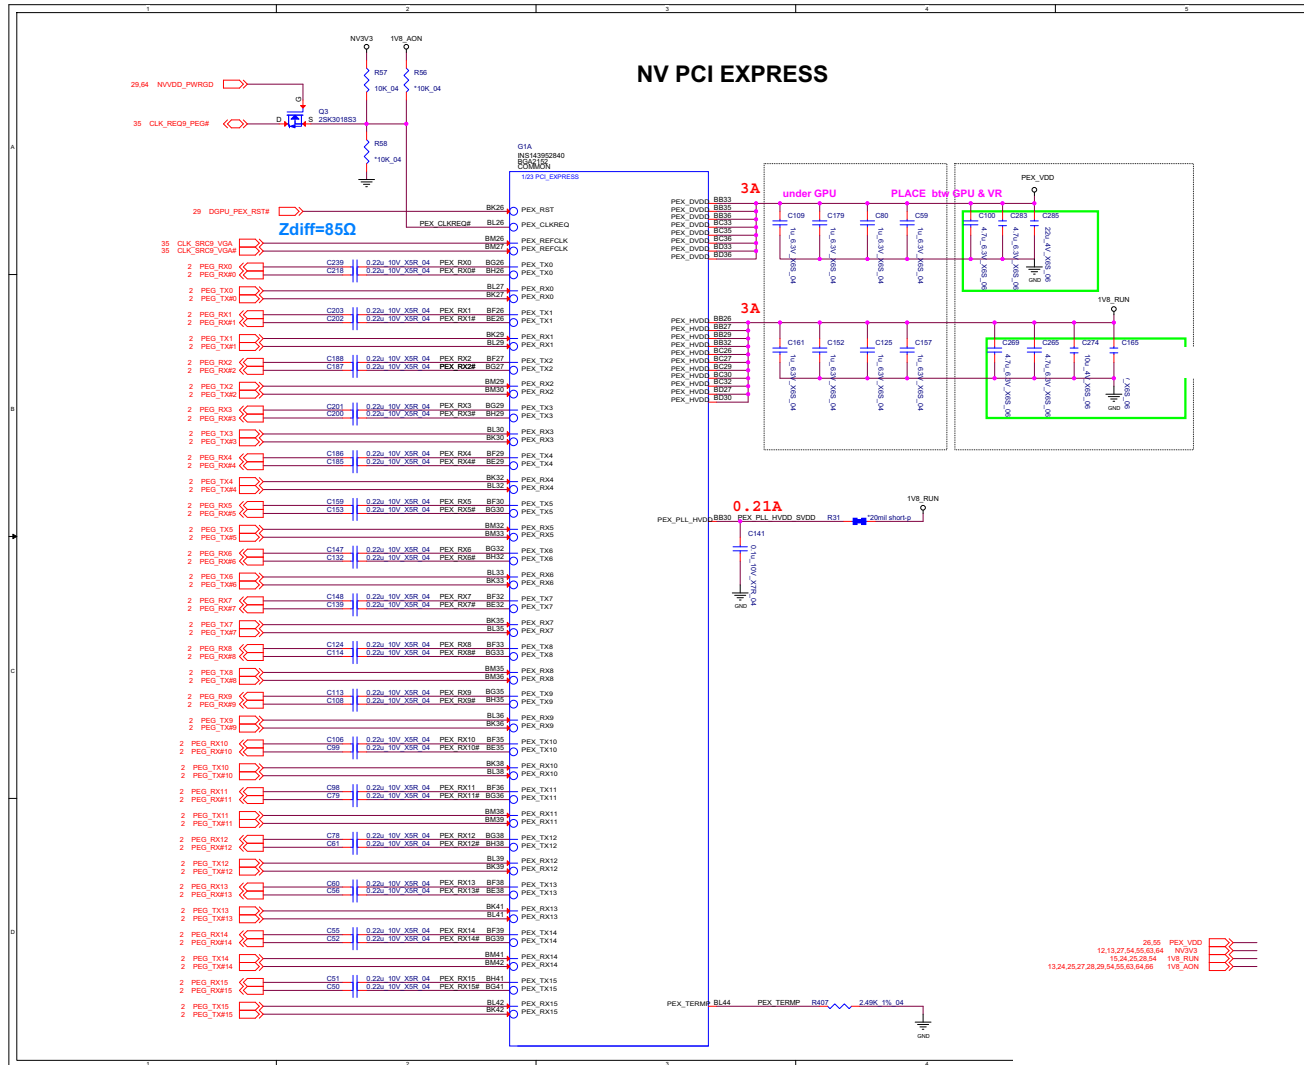


Sheet 14 of 74
 VGA PCI Express


B.Schematic Diagrams

GPU Frame Buffer Partition

Sheet 15 of 74
GPU Frame Buffer
Partition

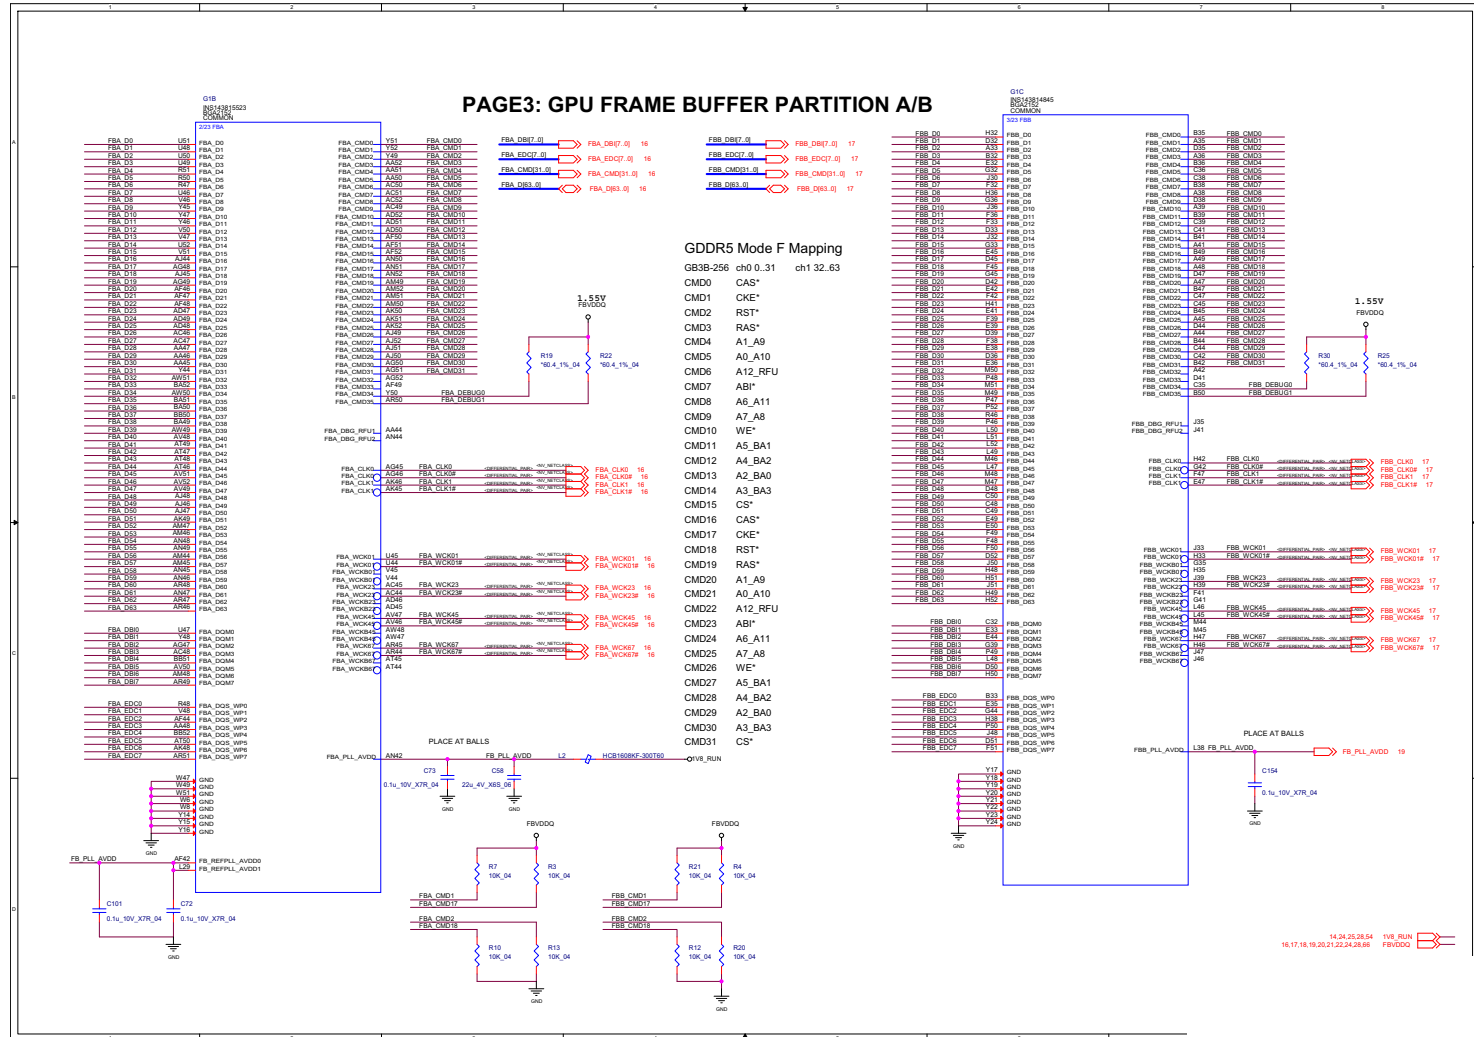

Frame Buffer Partition A

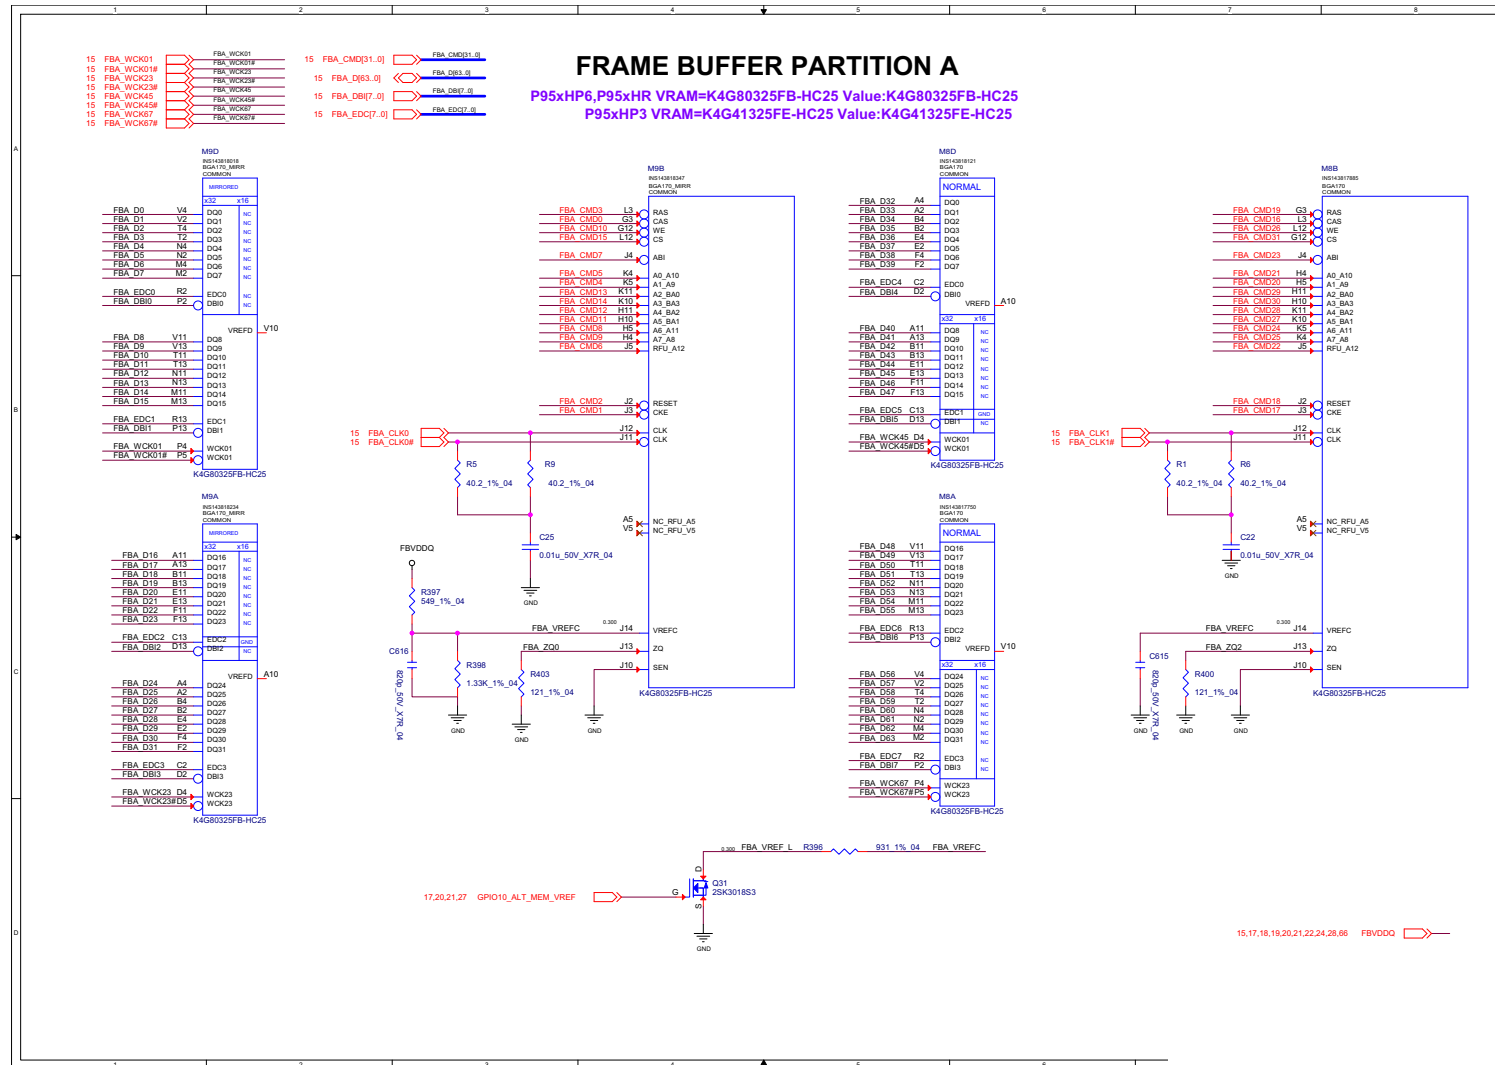


Sheet 16 of 74
 Frame Buffer
 Partition A


B.Schematic Diagrams

Frame Buffer Partition B

Sheet 17 of 74
Frame Buffer
Partition B

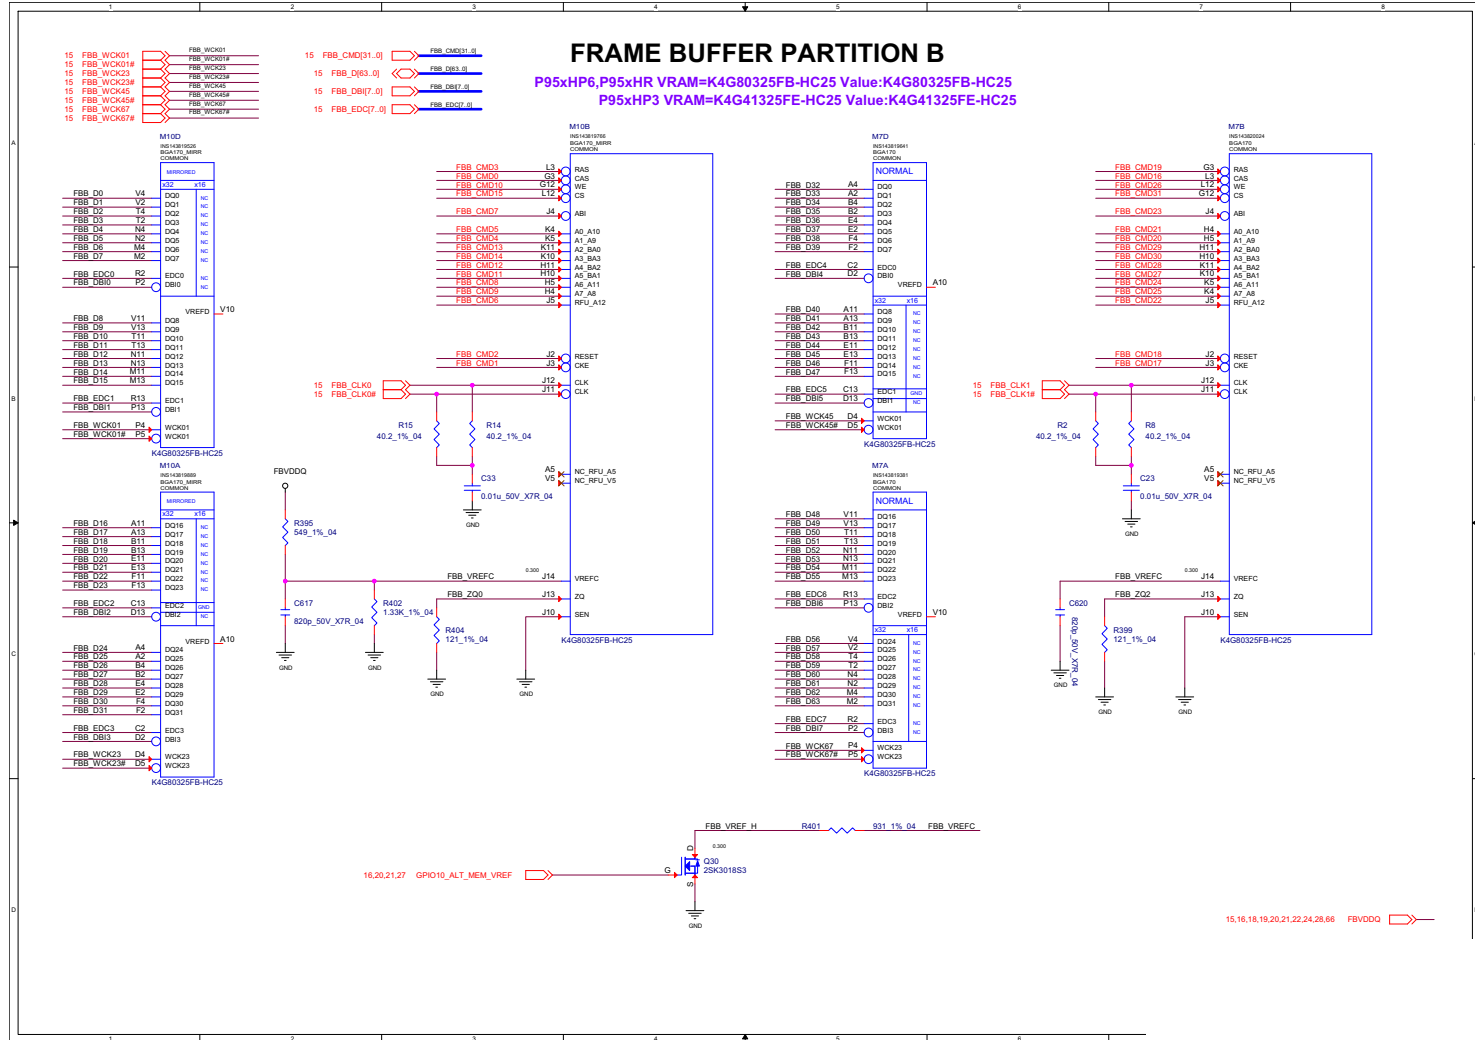

Frame Buffer Partition A_B

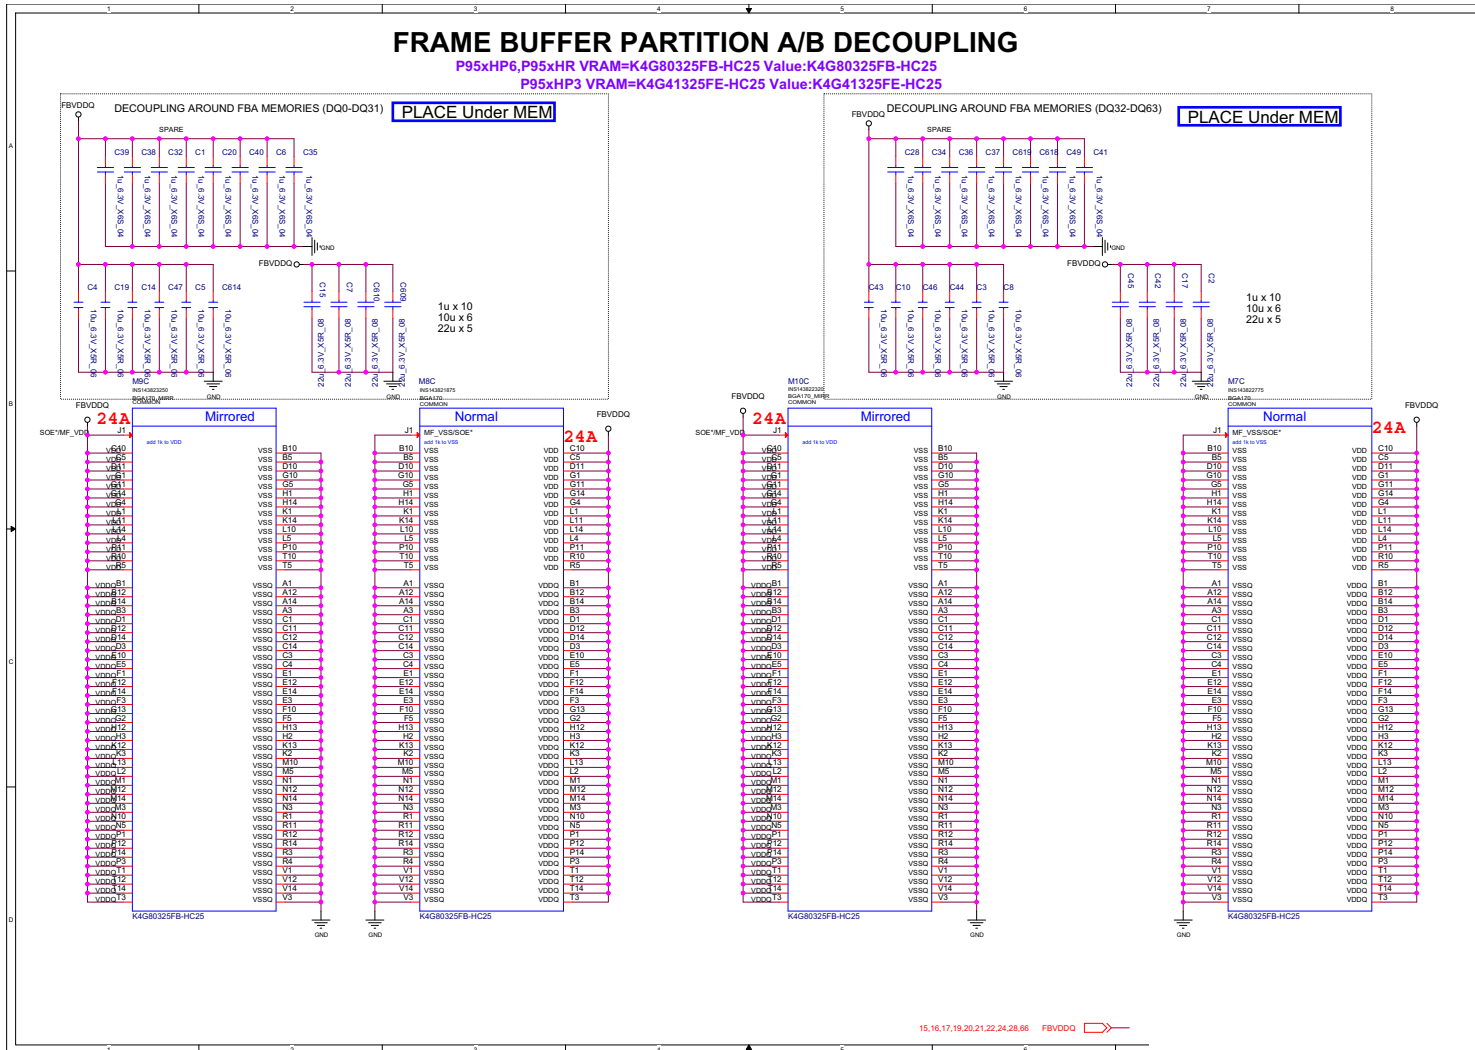


Sheet 18 of 74
 Frame Buffer
 Partition A_B


B.Schematic Diagrams

GPU Frame Buffer Partition

Sheet 19 of 74
GPU Frame Buffer Partition

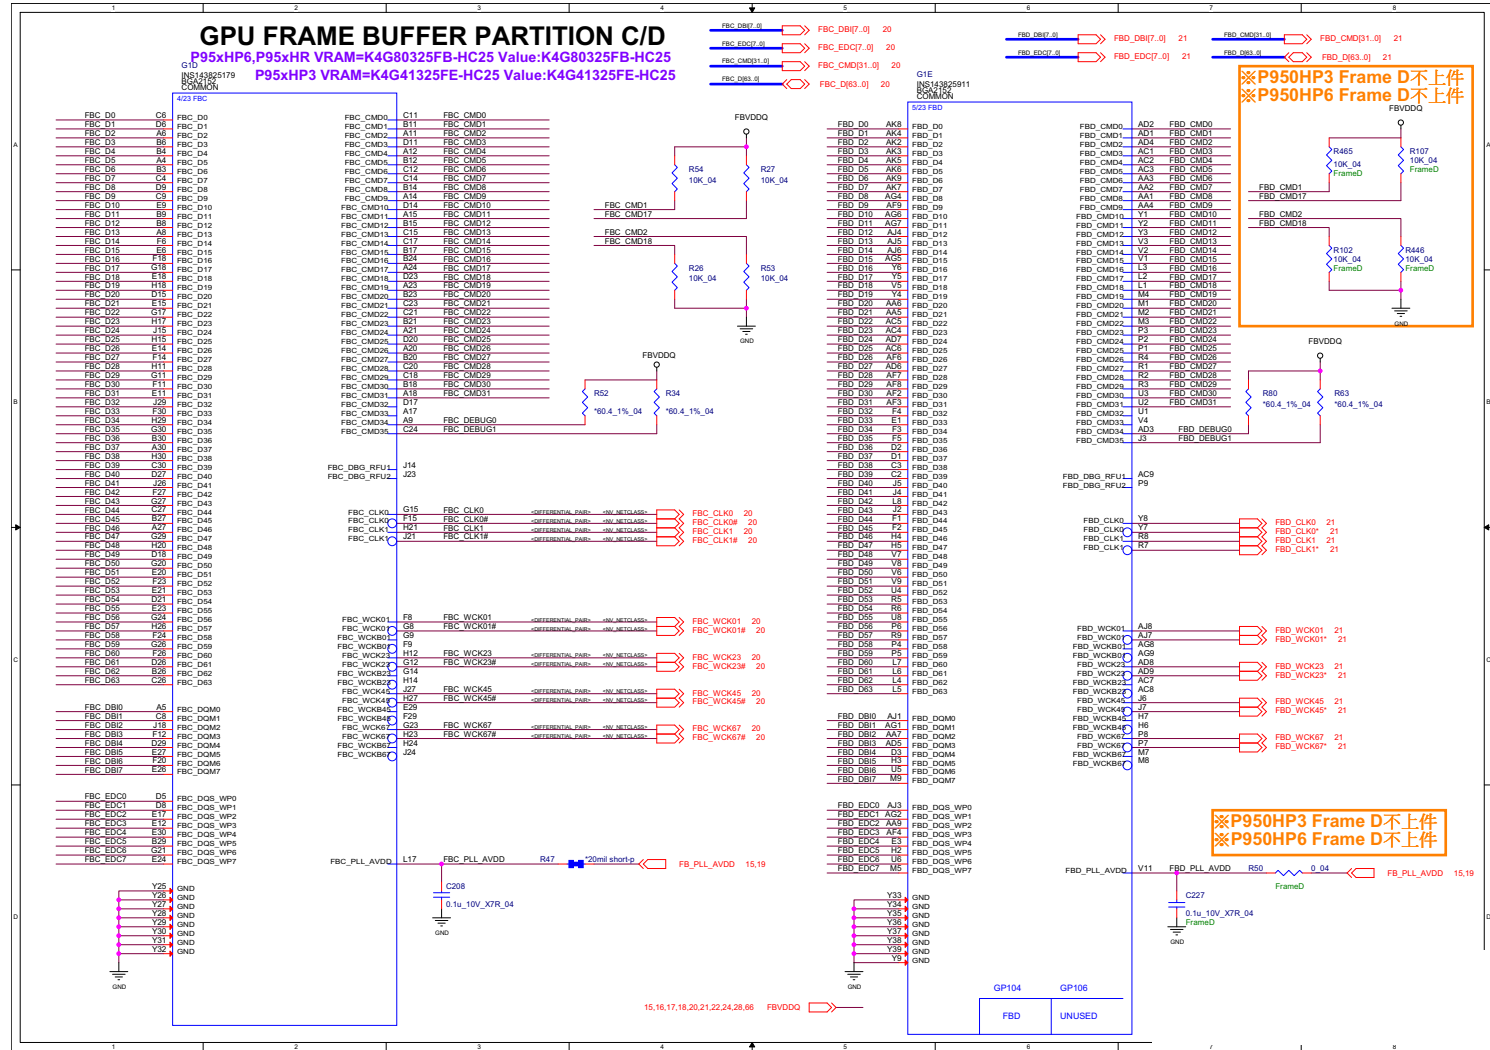

Frame Buffer Partition C

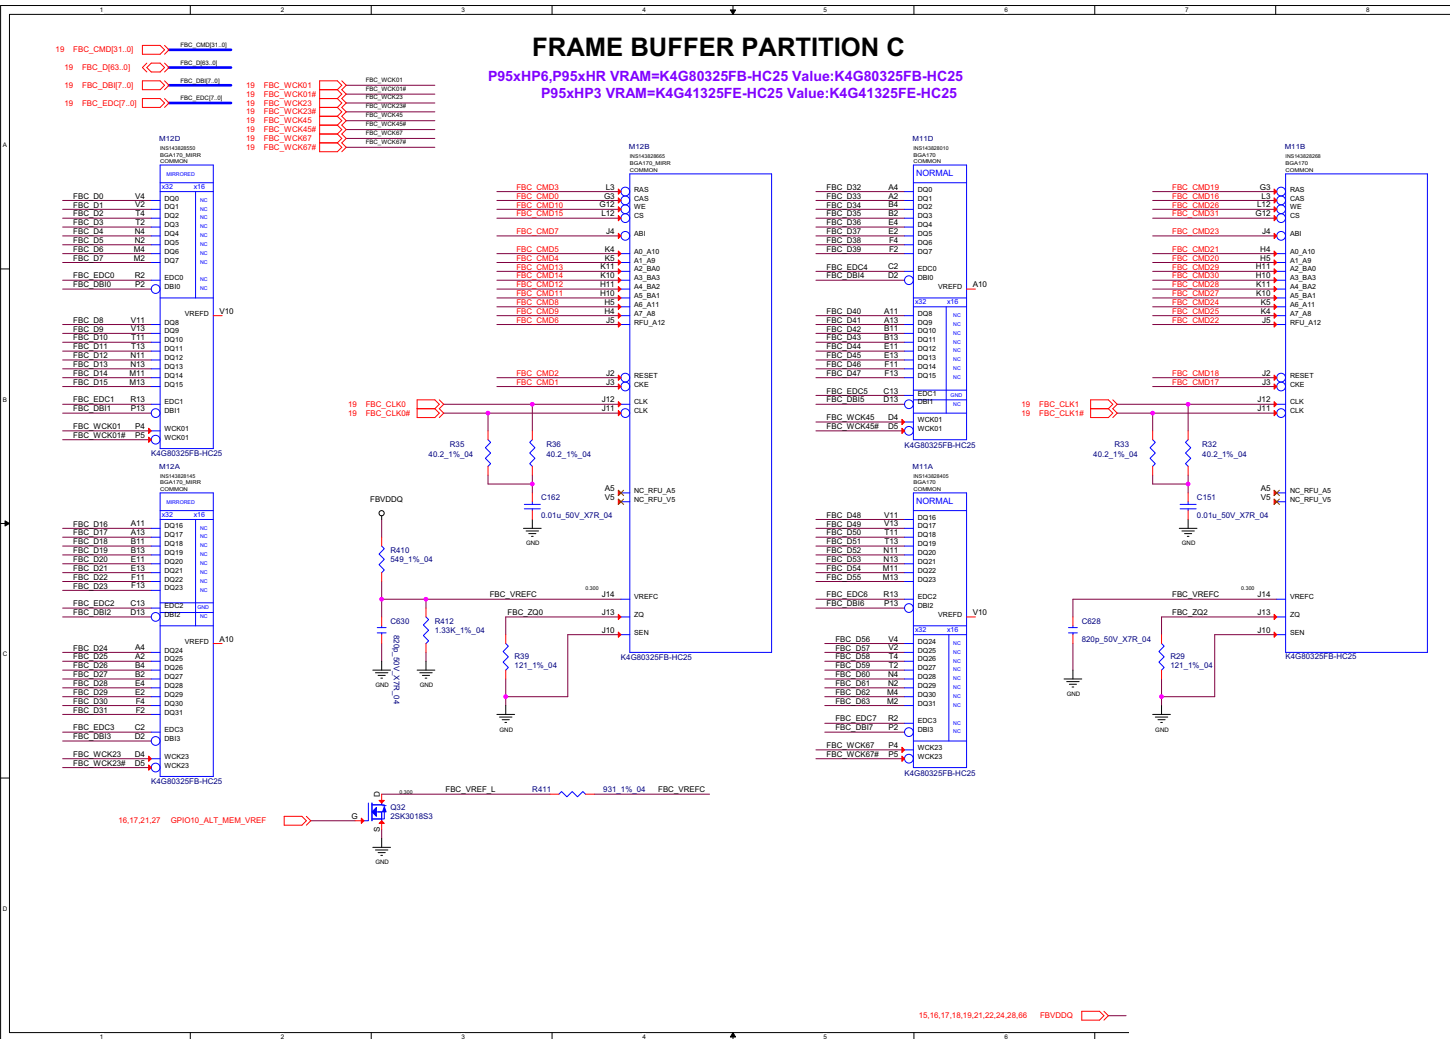


Sheet 20 of 74
Frame Buffer
Partition C


B. Schematic Diagrams

Frame Buffer Partition D

Sheet 21 of 74
Frame Buffer
Partition D

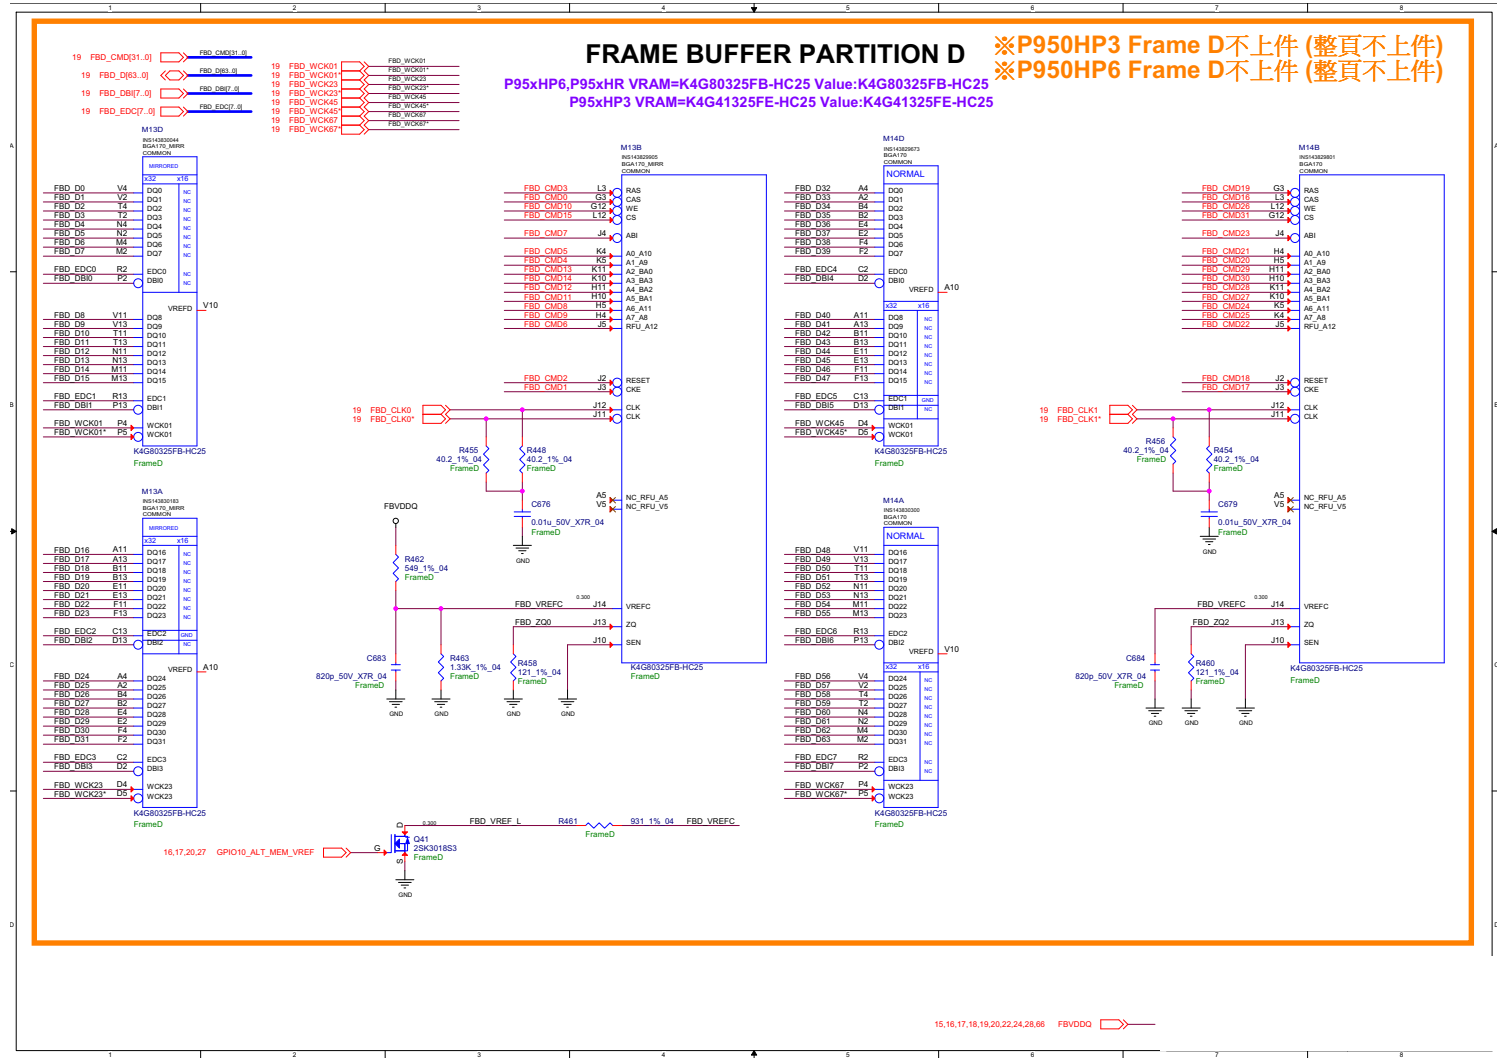

Frame Buffer Partition C_D

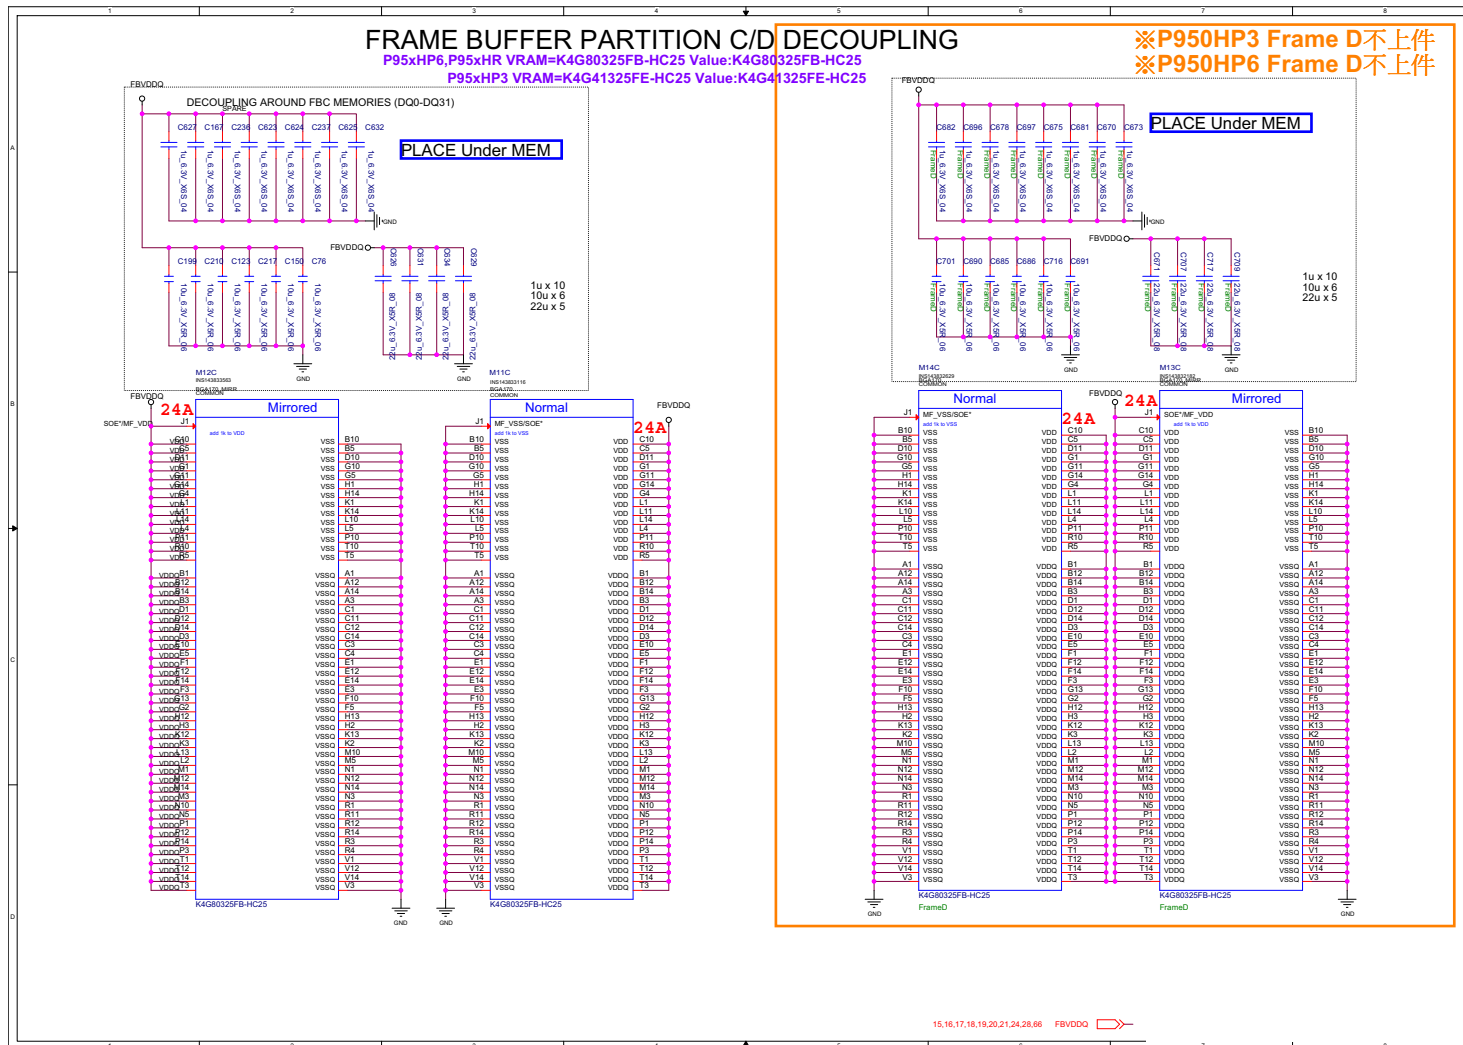


Sheet 22 of 74
 Frame Buffer
 Partition C_D


B.Schematic Diagrams

GPU Decoupling 1

Sheet 23 of 74
GPU Decoupling 1

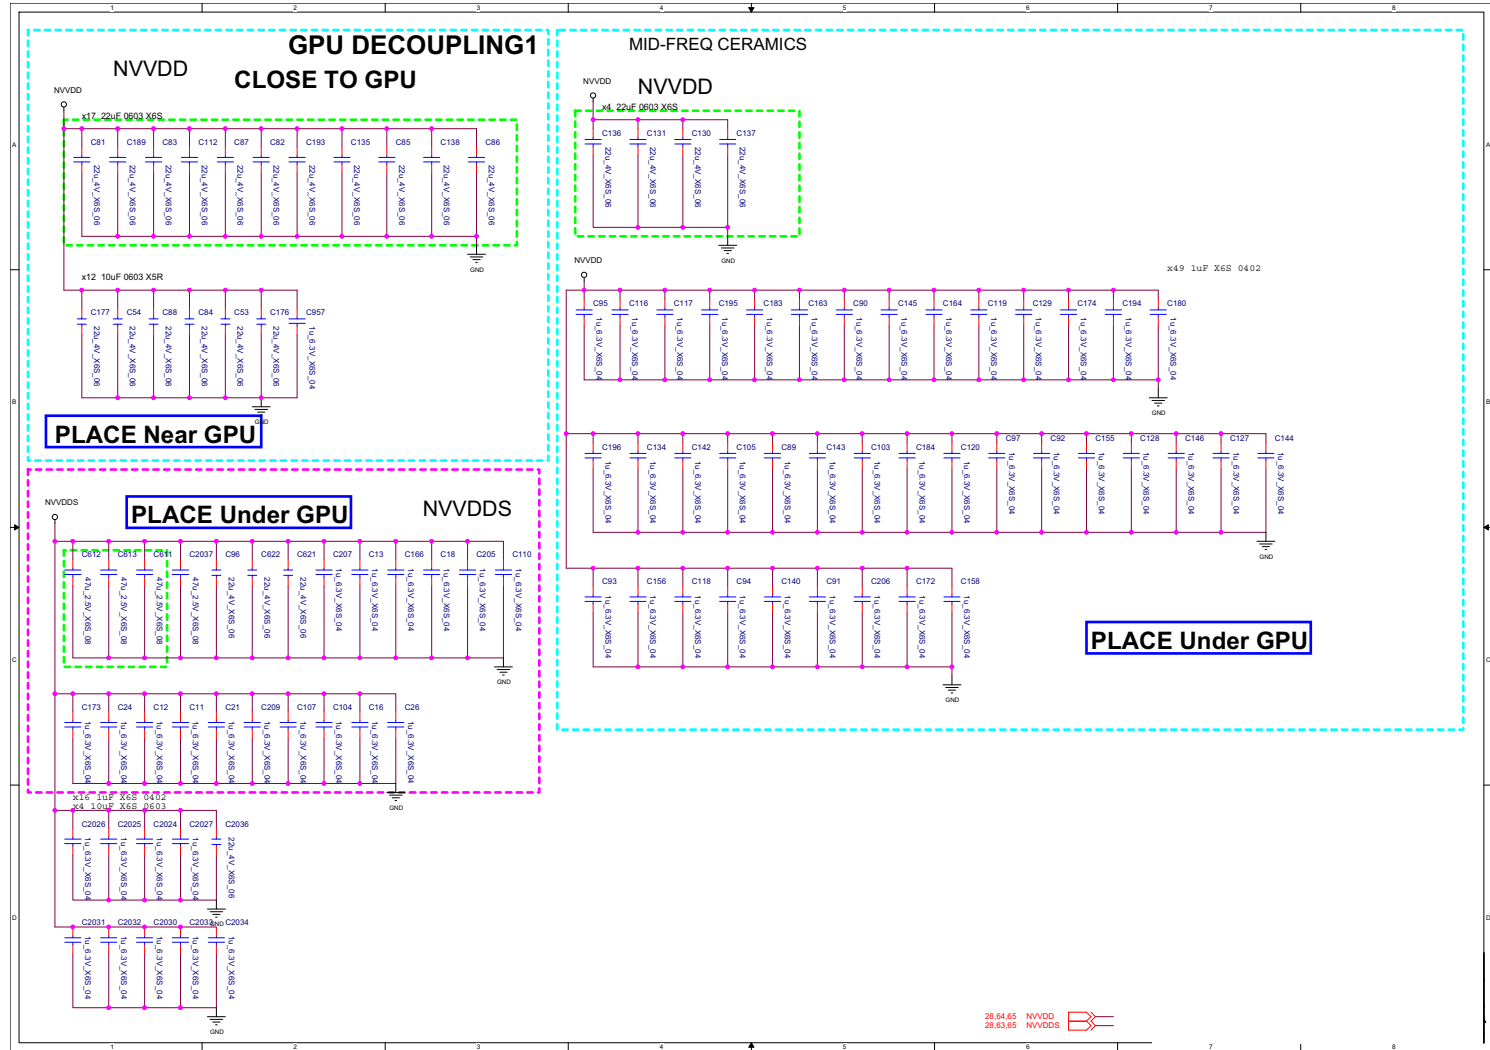


GPU Decoupling 2

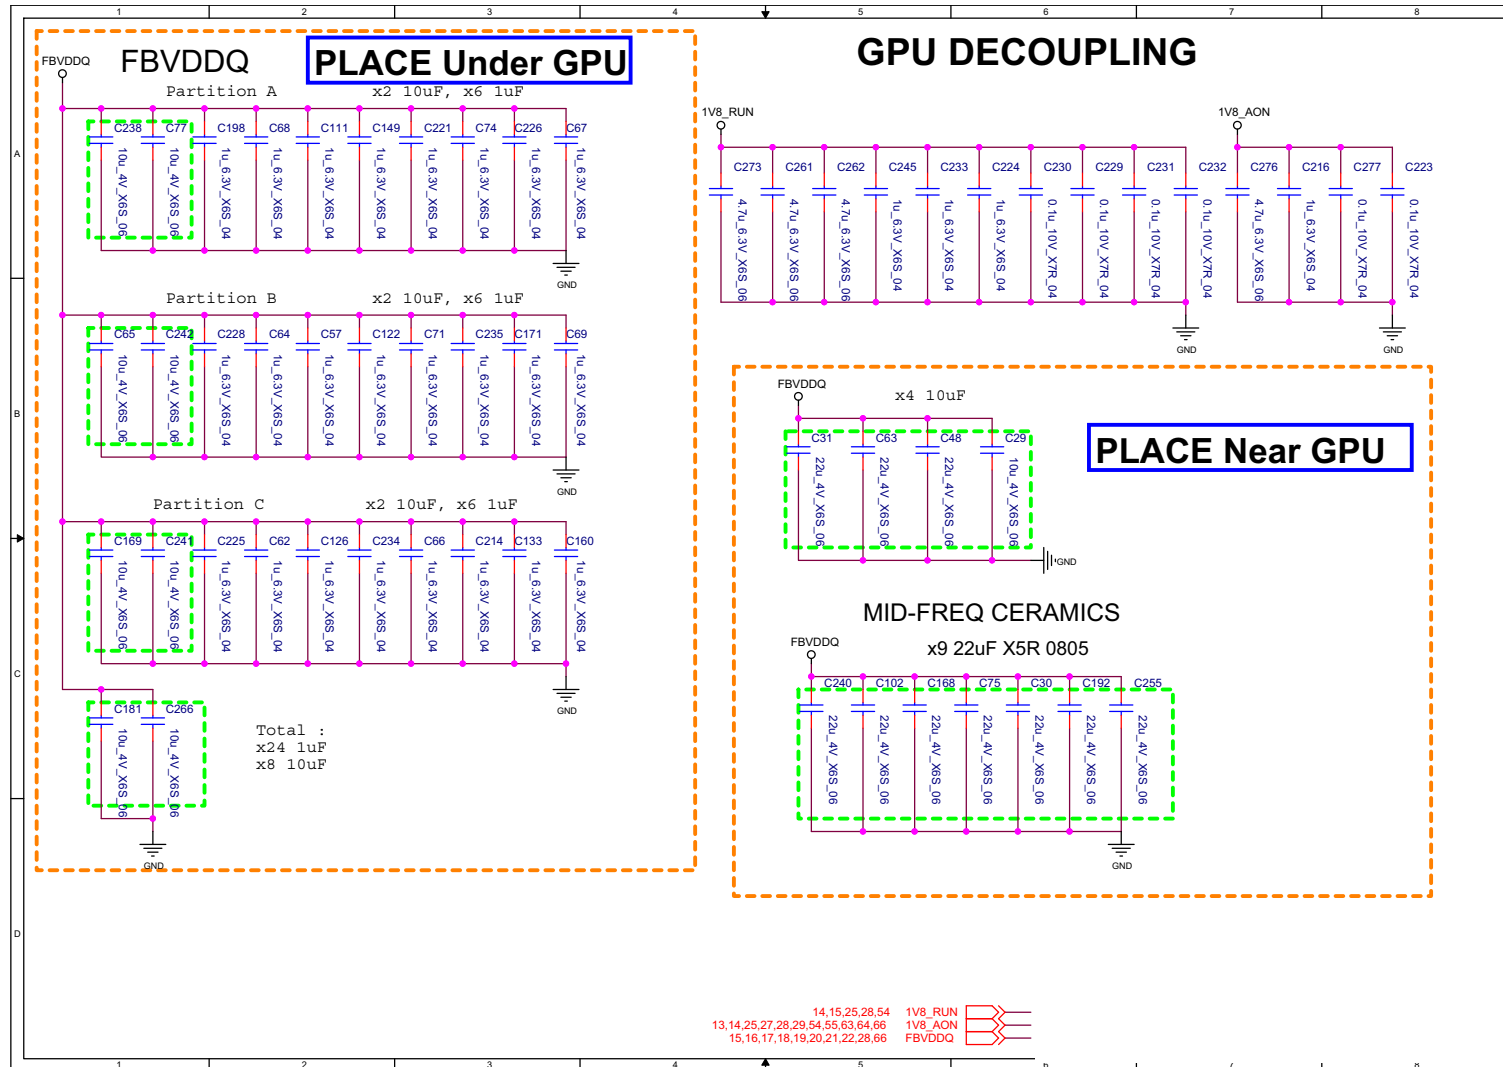

Sheet 24 of 74
GPU Decoupling 2


GPU NVWDD, FBVDDQ

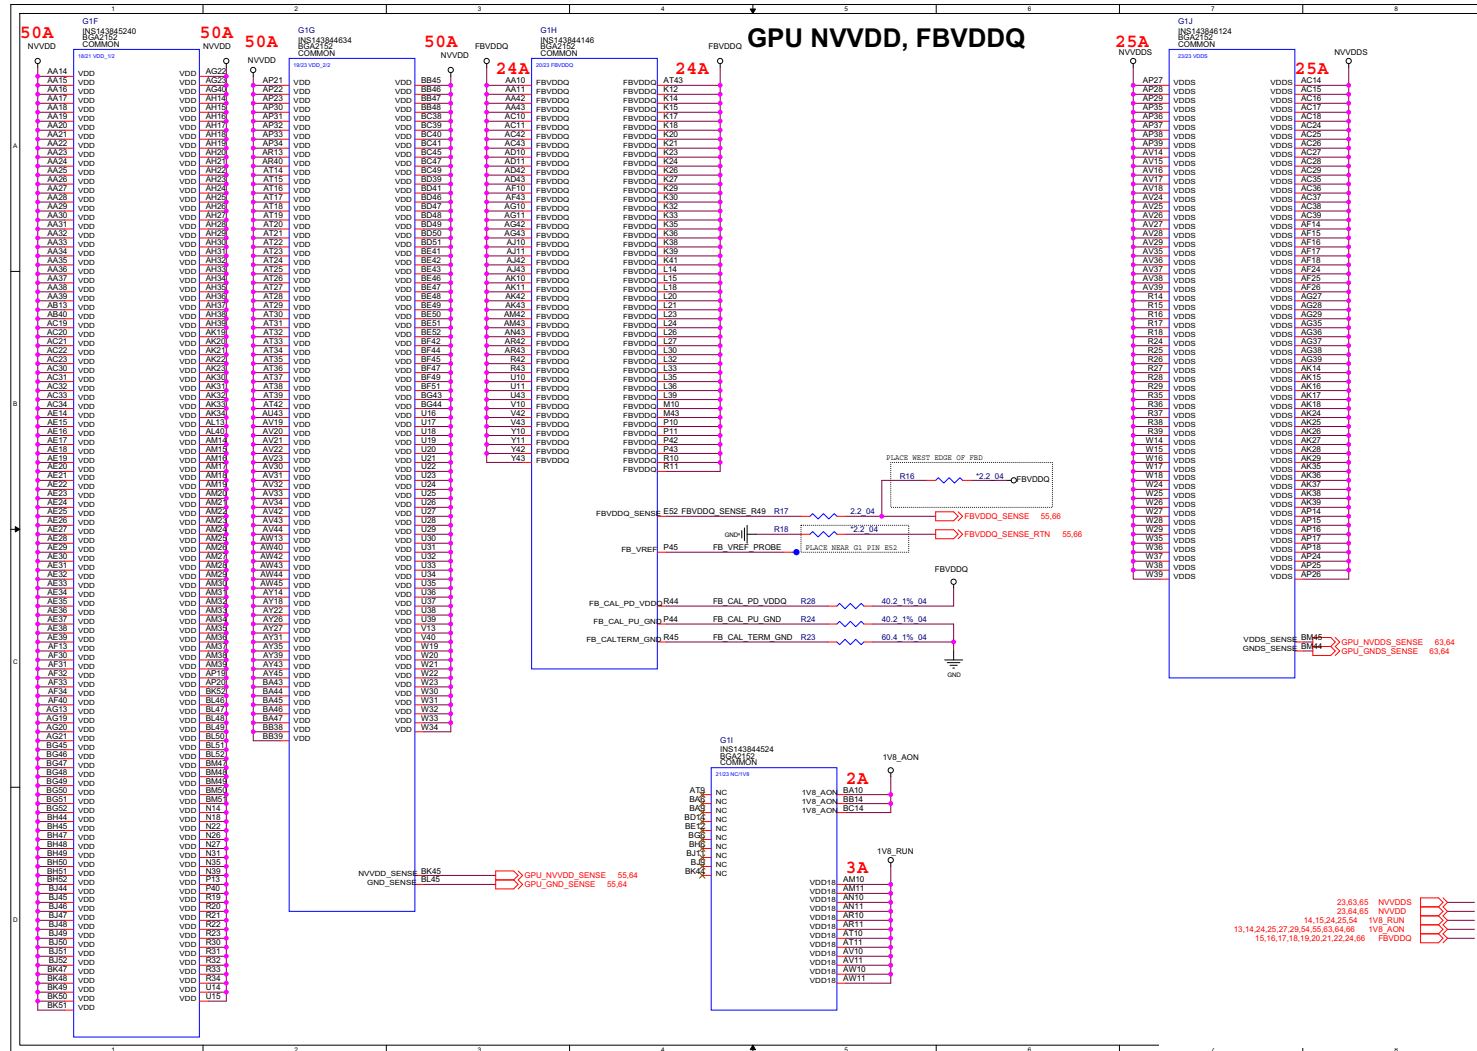

Sheet 28 of 74
GPU NVWDD,
FBVDDQ

B.Schematic Diagrams

PCH 1/9

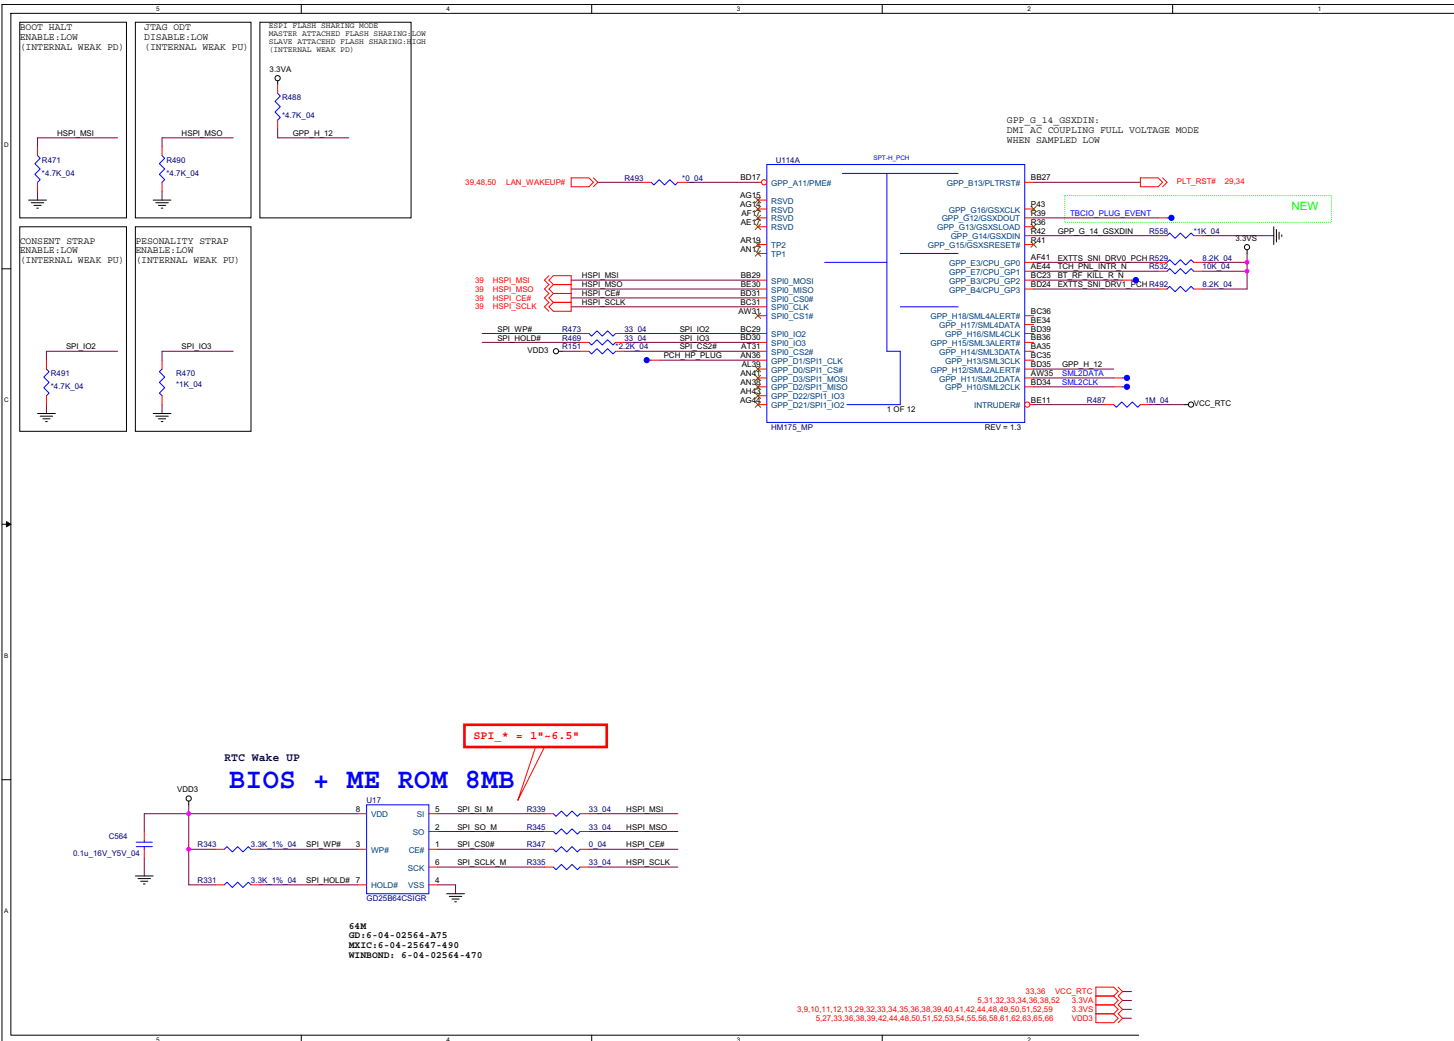


Sheet 30 of 74
 PCH 1/9

B. Schematic Diagrams


PCH 2/9

B.Schematic Diagrams

Sheet 31 of 74
PCH 2/9

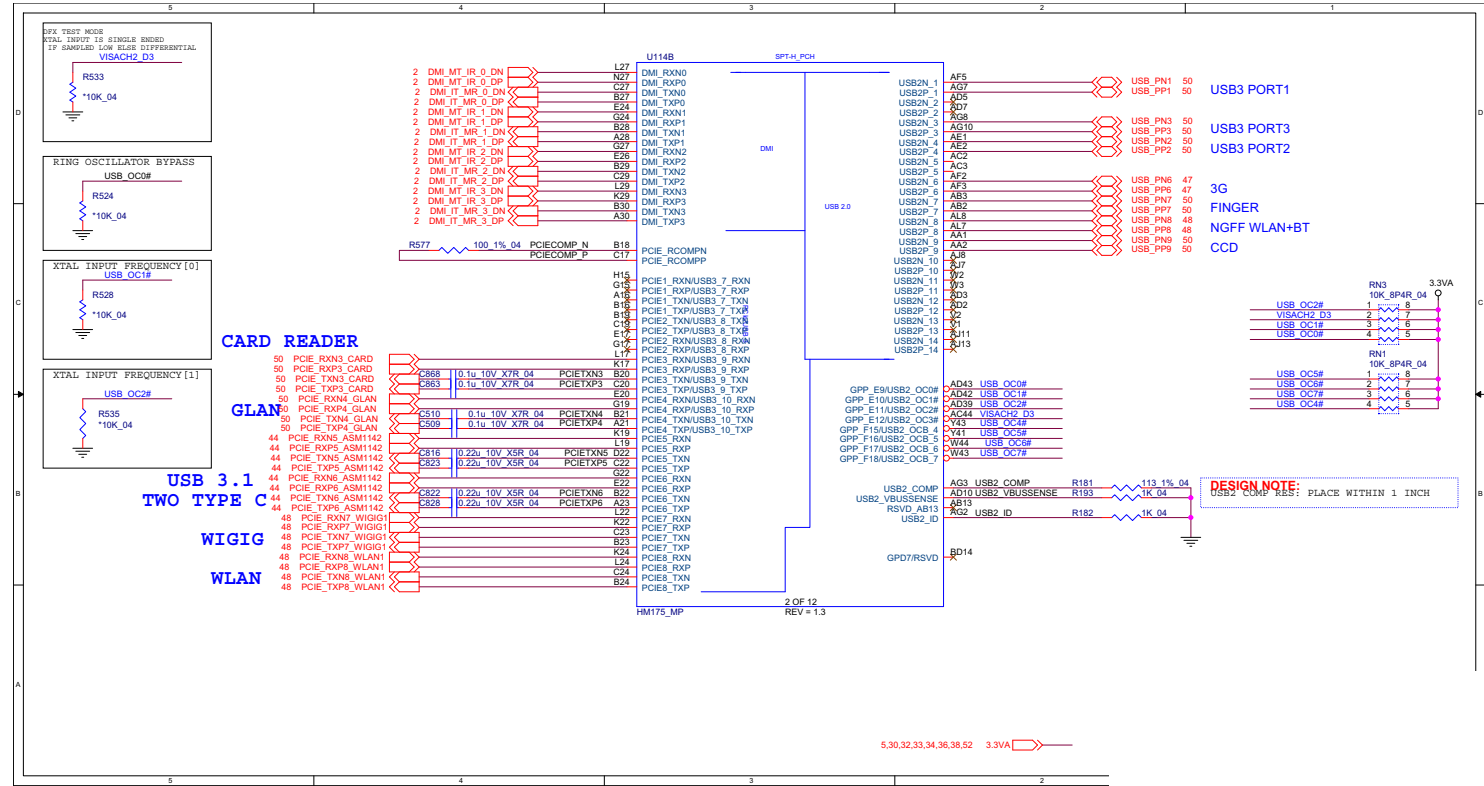

PCH 3/9

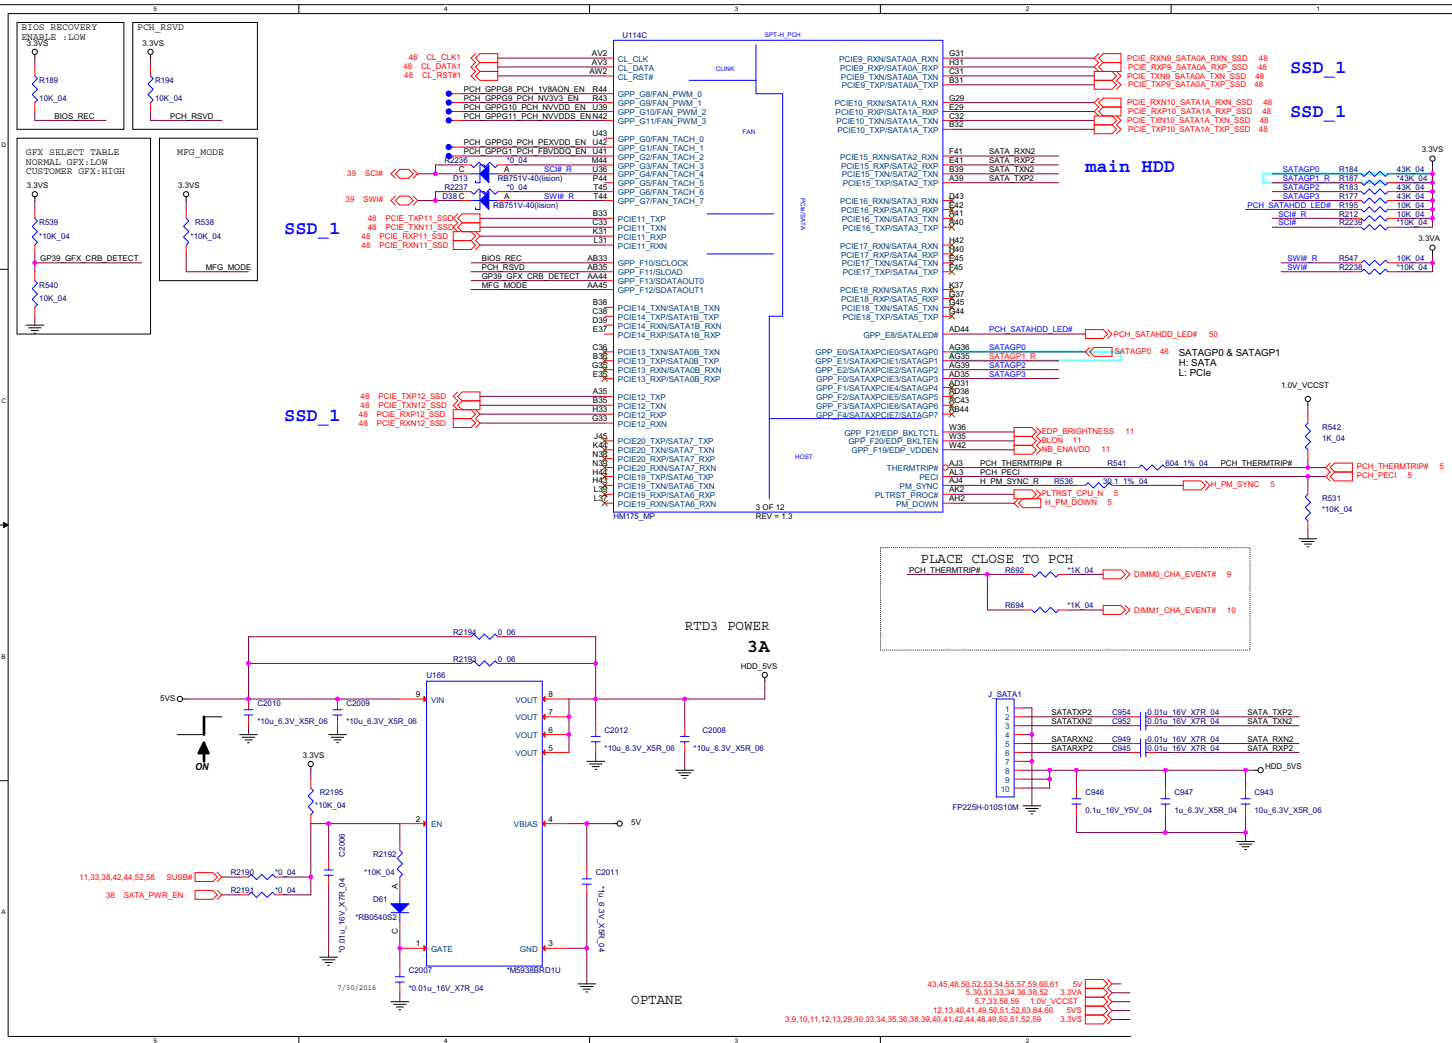


Sheet 32 of 74
PCH 3/9


B.Schematic Diagrams

PCH 4/9

Sheet 33 of 74
PCH 4/9

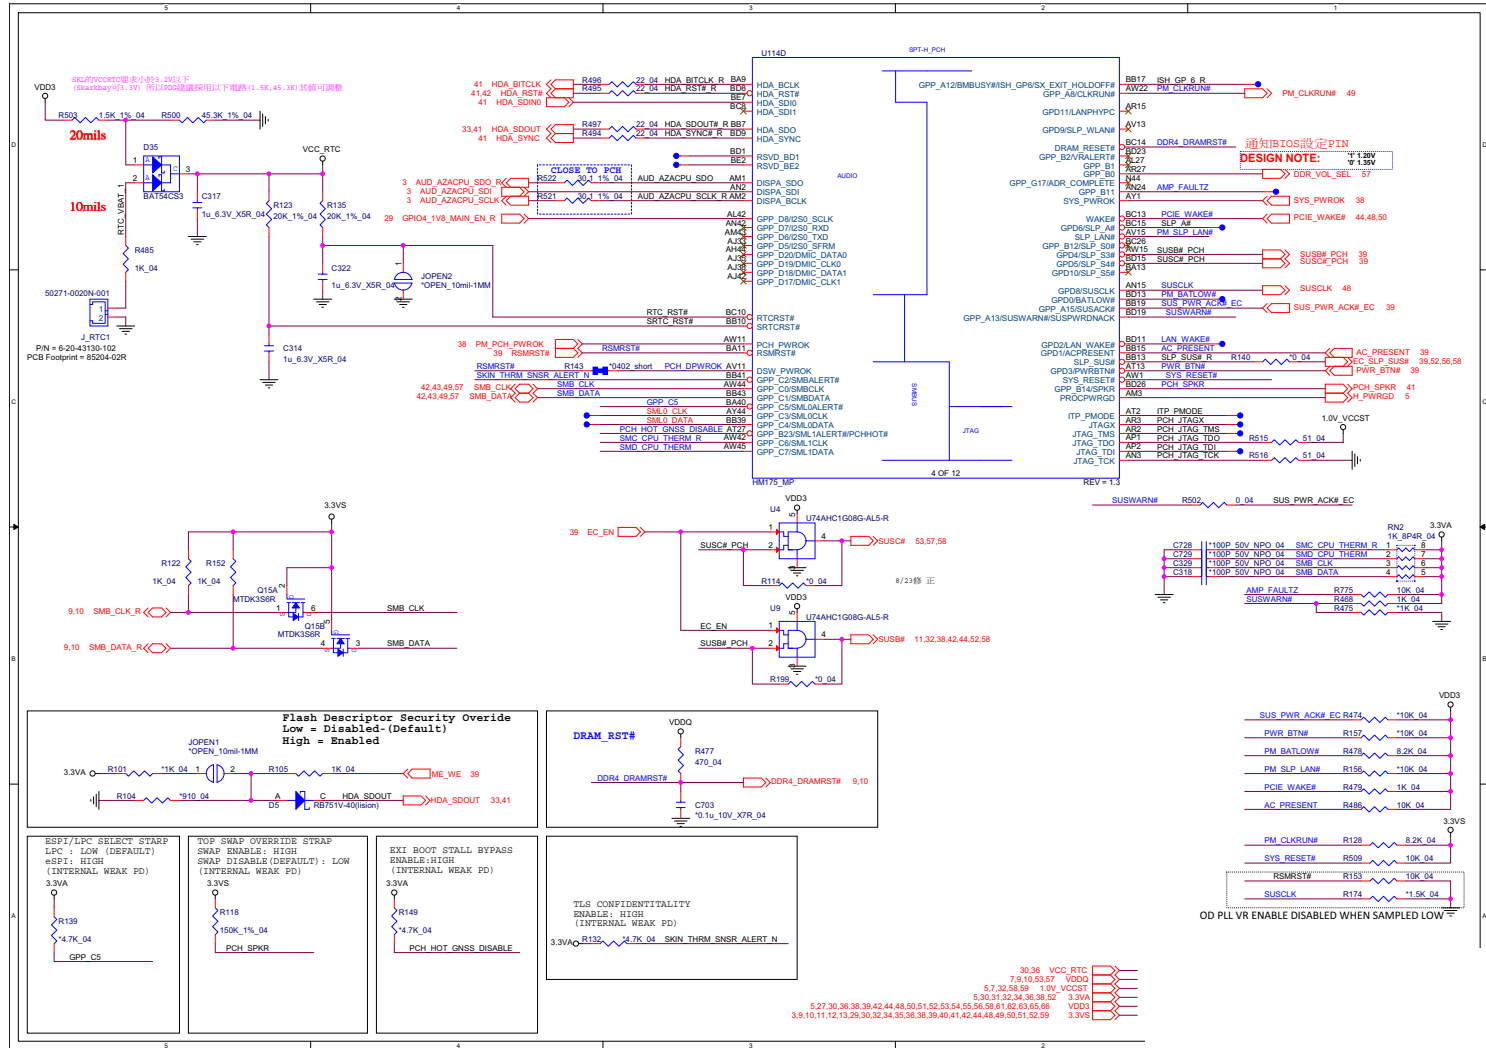


PCH 5/9

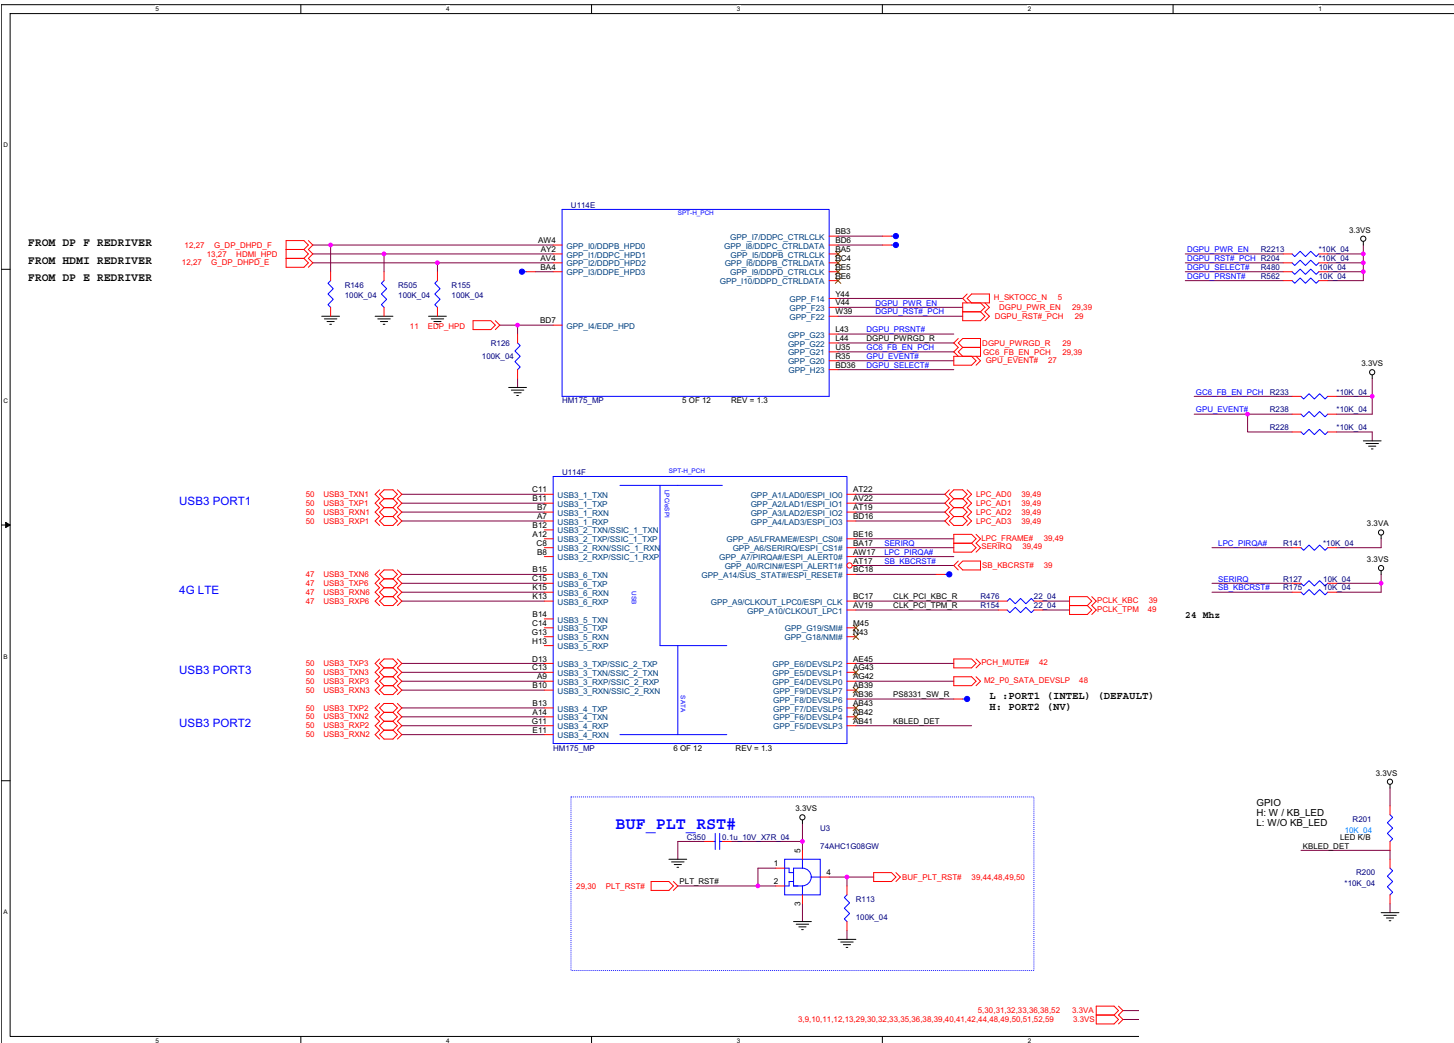


Sheet 34 of 74
PCH 5/9

PCH 6/9

Sheet 35 of 74
PCH 6/9

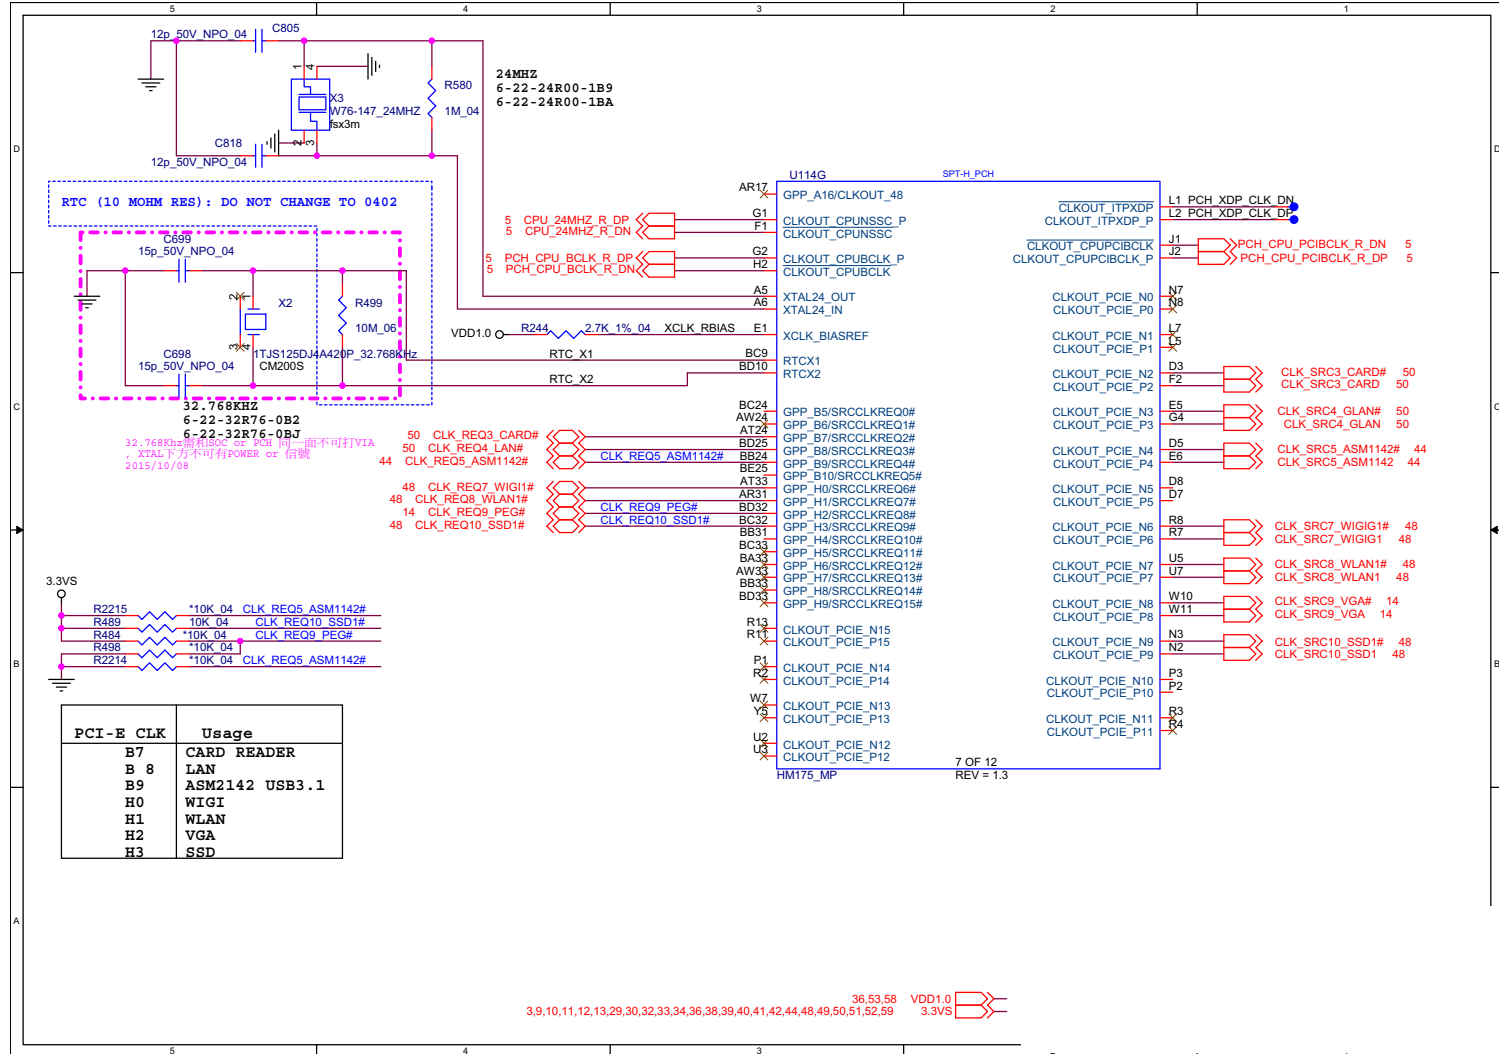

PCH 7/9

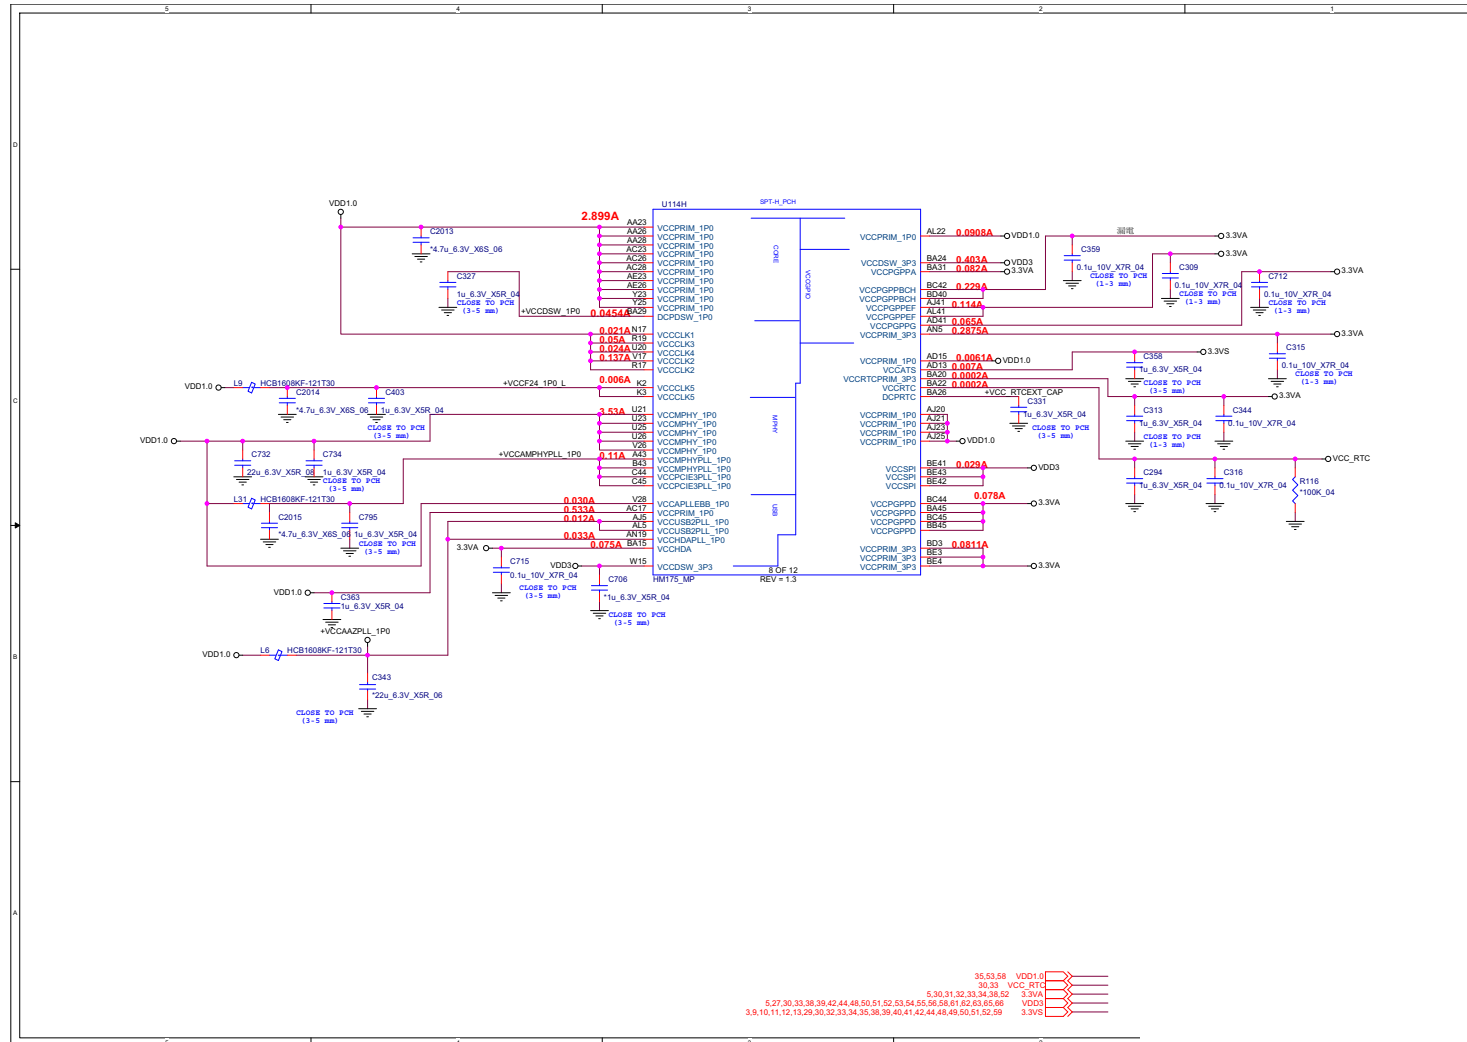


Sheet 36 of 74
PCH 7/9


B.Schematic Diagrams

PCH 8/9

Sheet 37 of 74
PCH 8/9

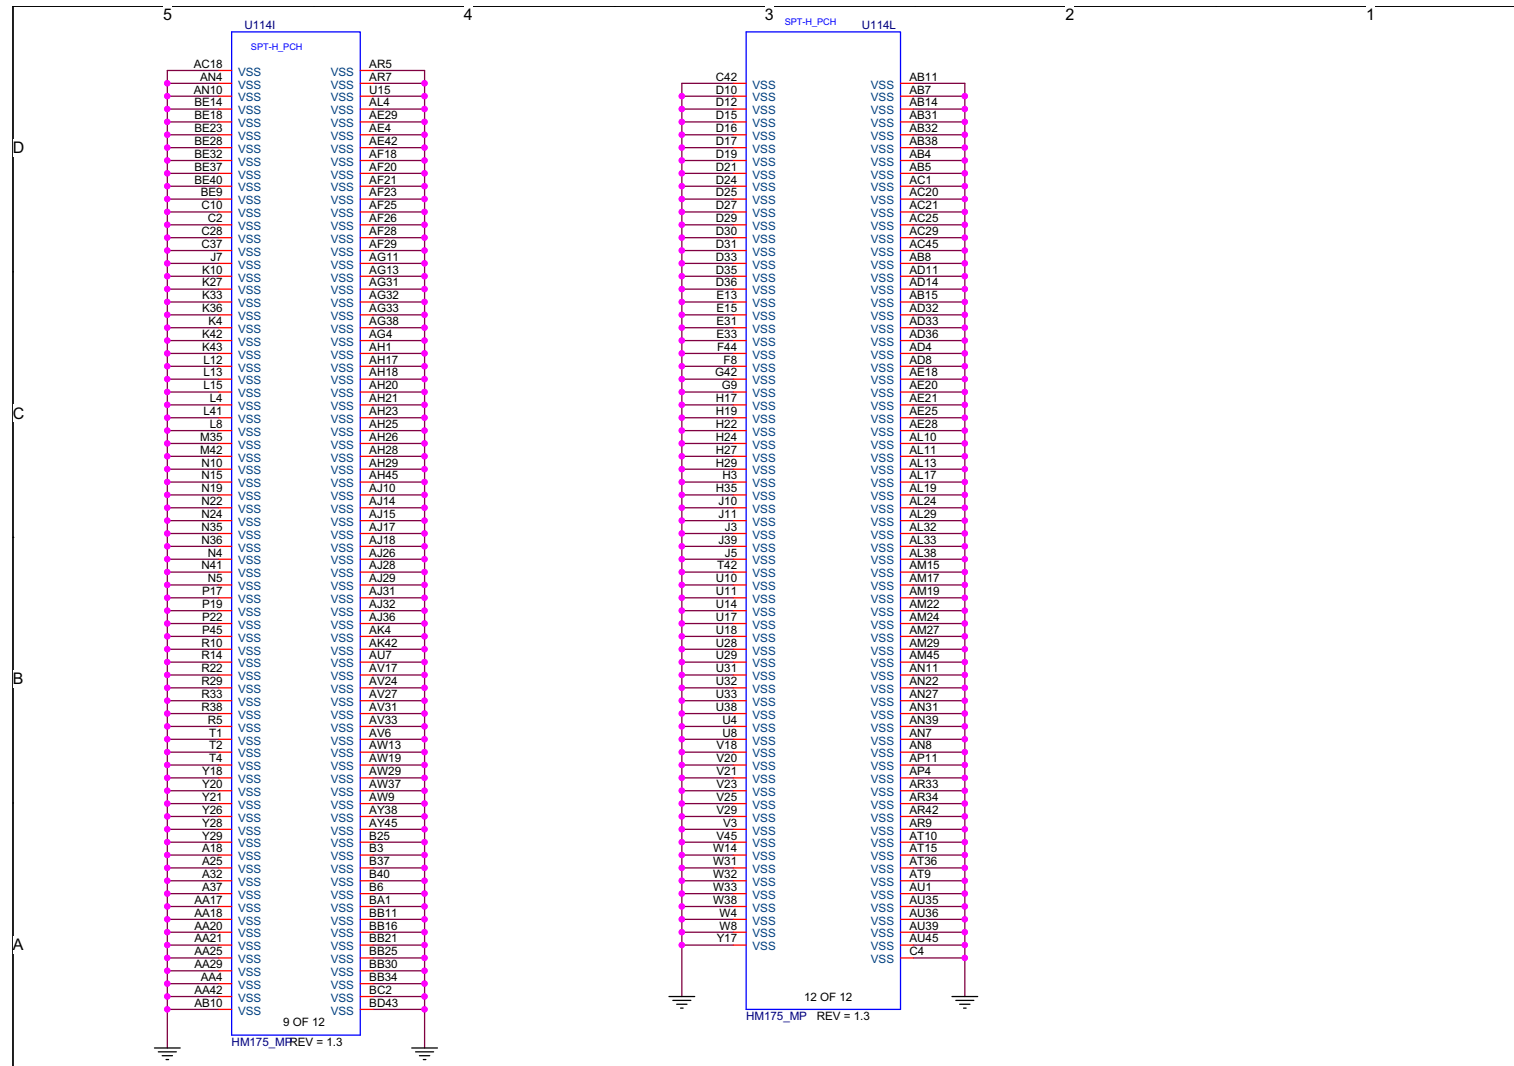


PCH 9/9

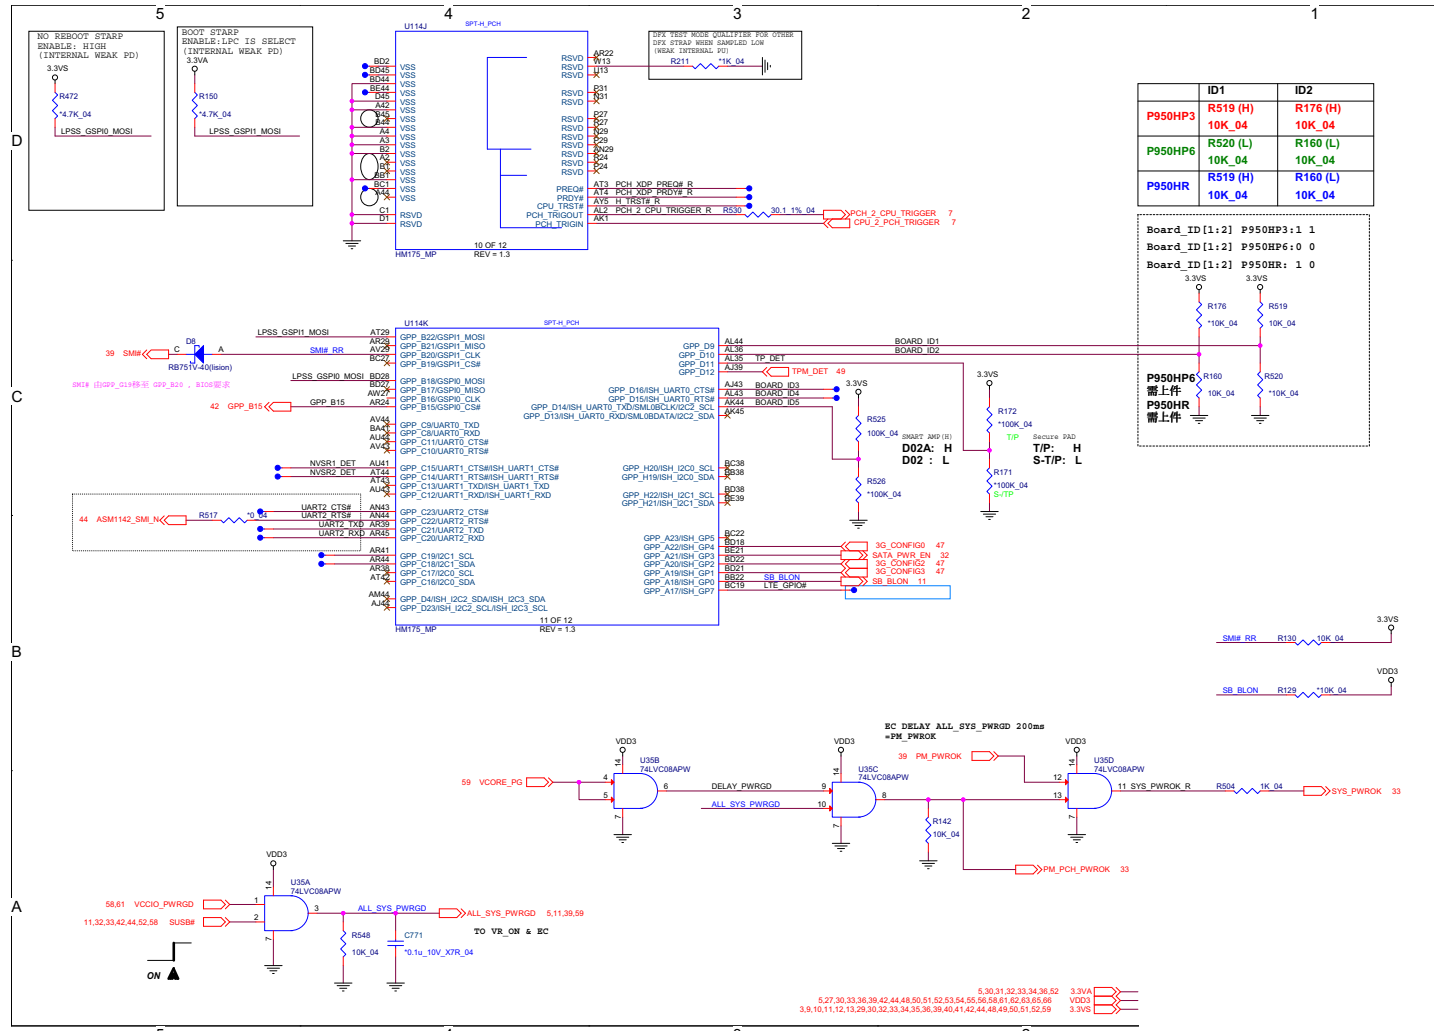

B.Schematic Diagrams


Sheet 38 of 74
PCH 9/9

Backlight KB

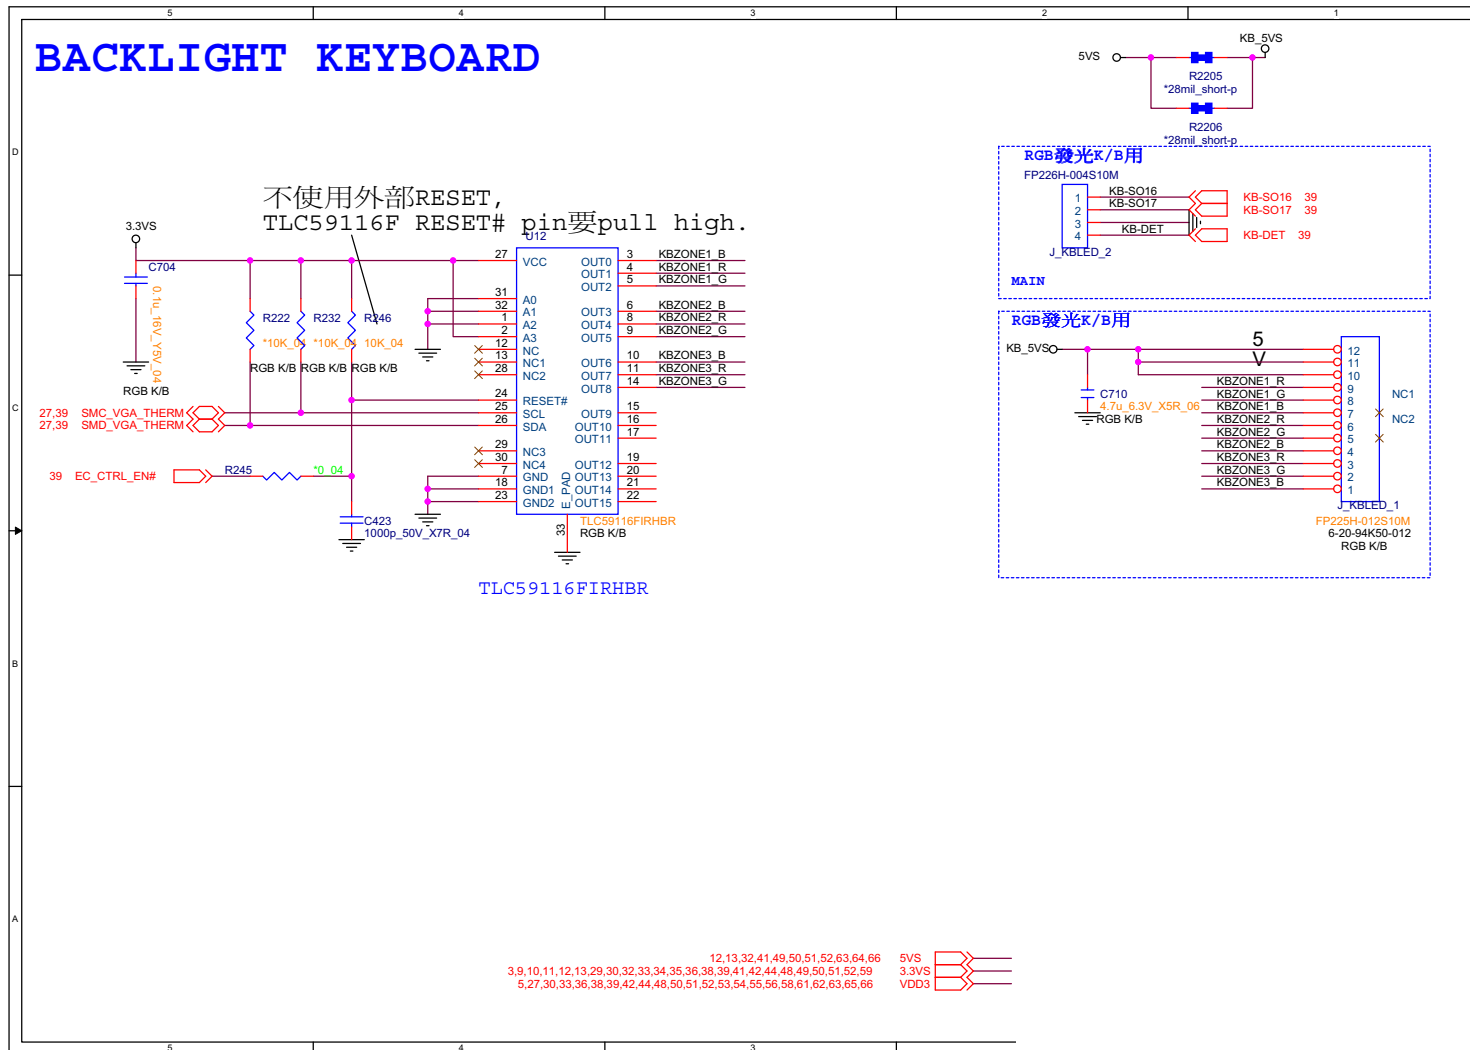

Sheet 40 of 74
Backlight KB

Smart AMP ALC1305

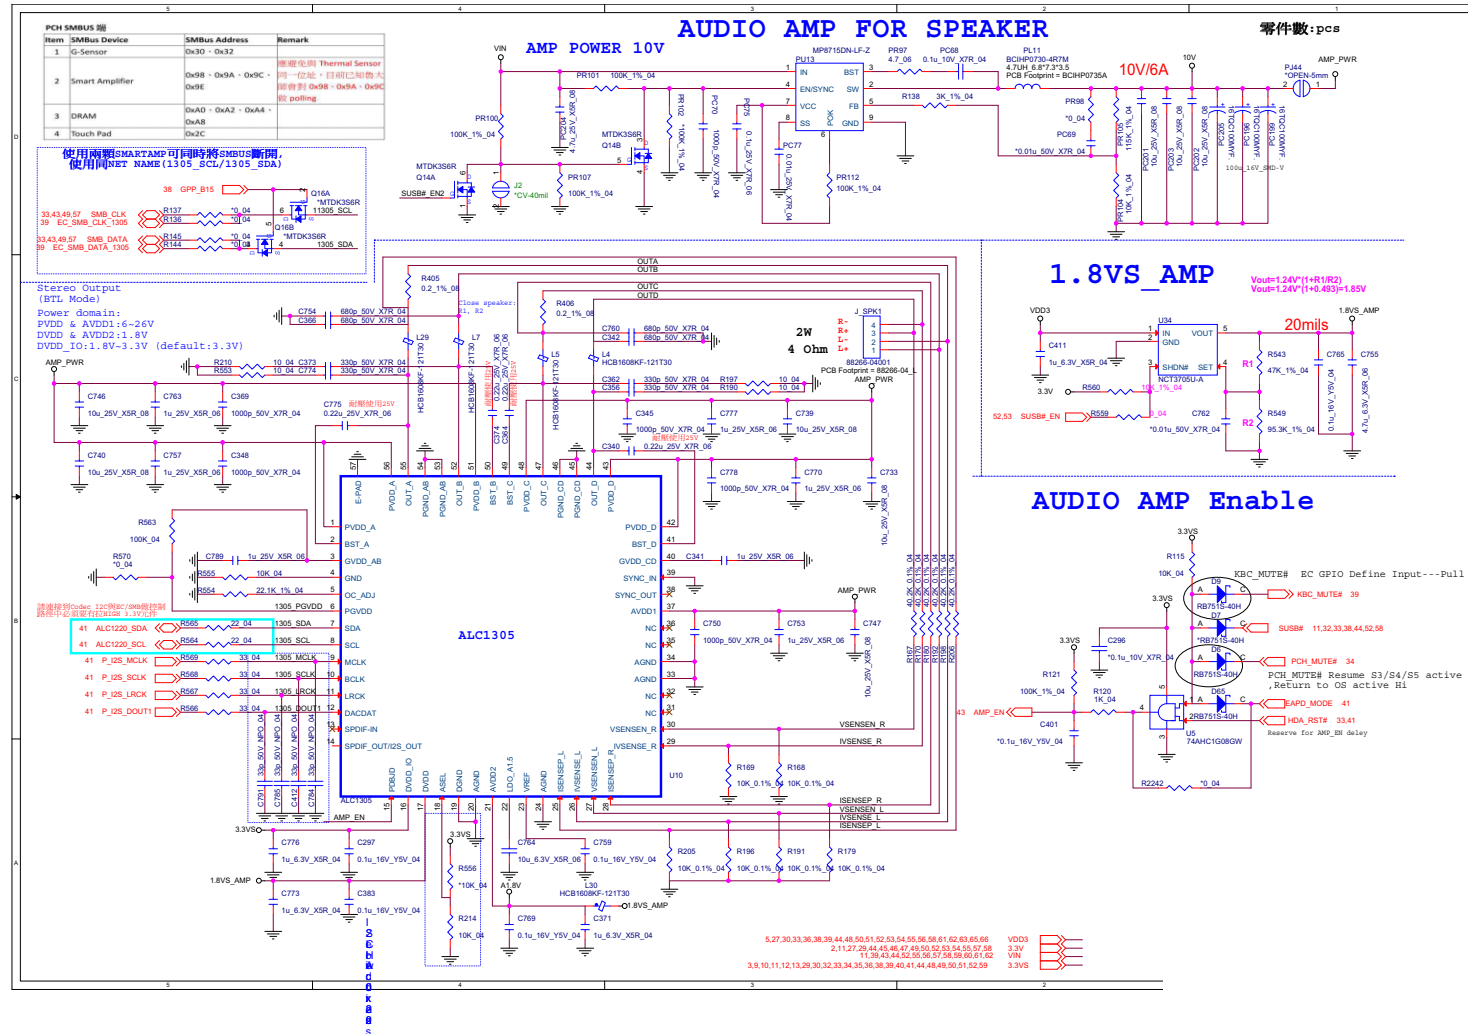


Sheet 42 of 74
Smart AMP
ALC1305


B.Schematic Diagrams

3D AMP Headphone

Sheet 43 of 74
3D AMP
Headphone

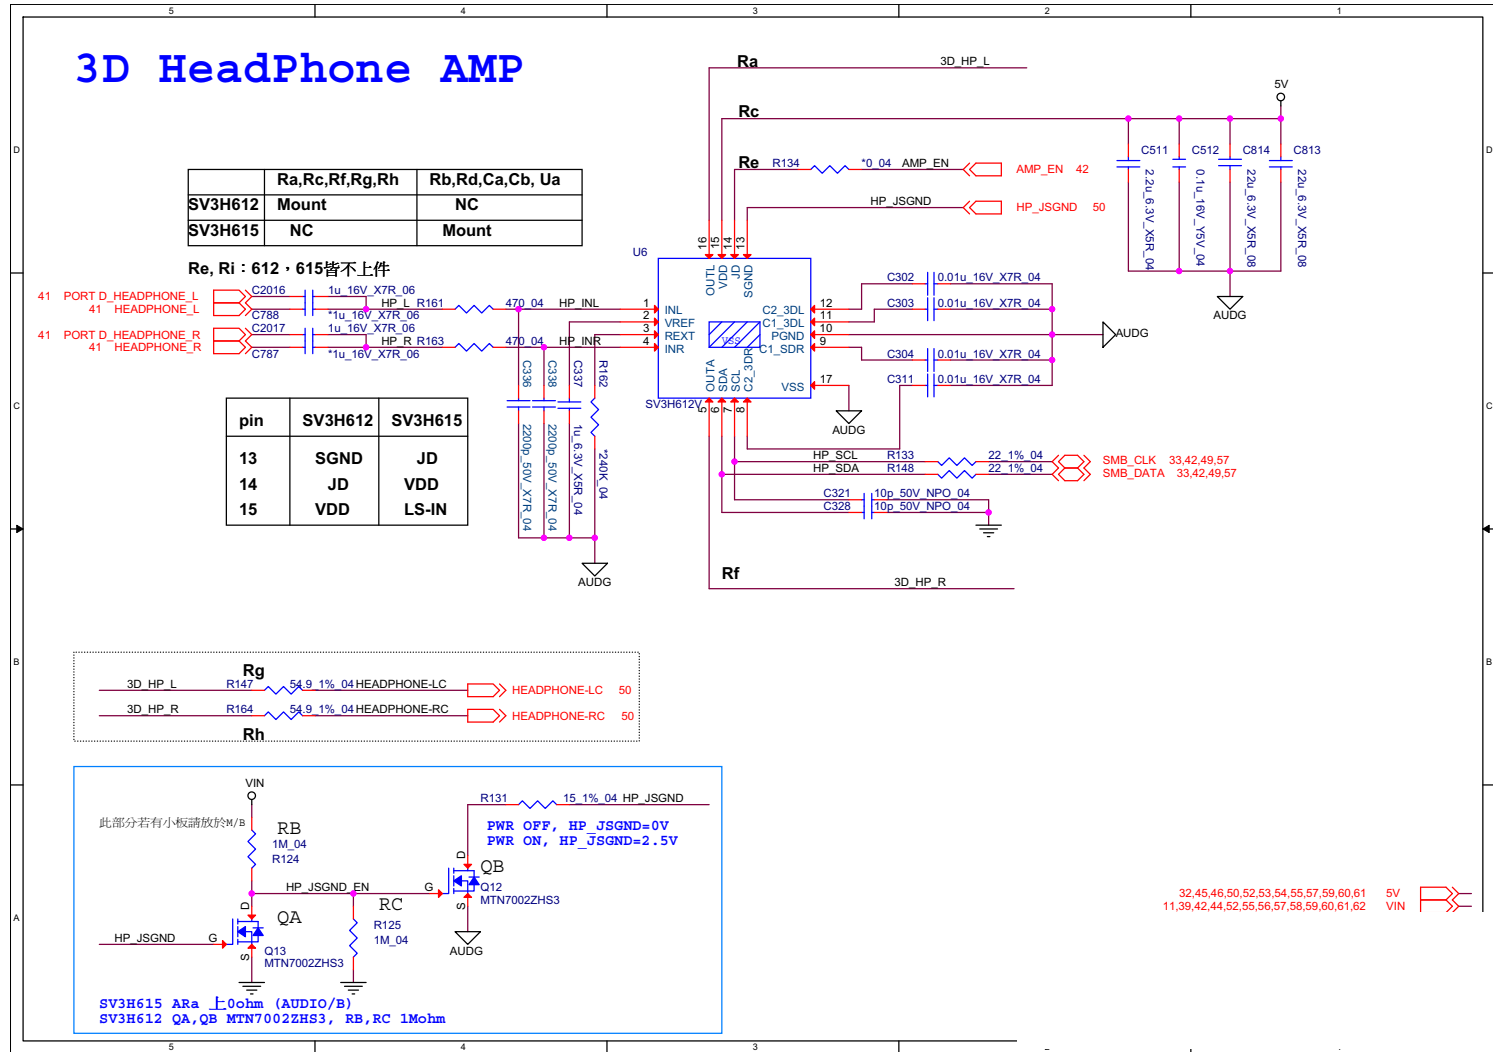

ASM2142 1/3

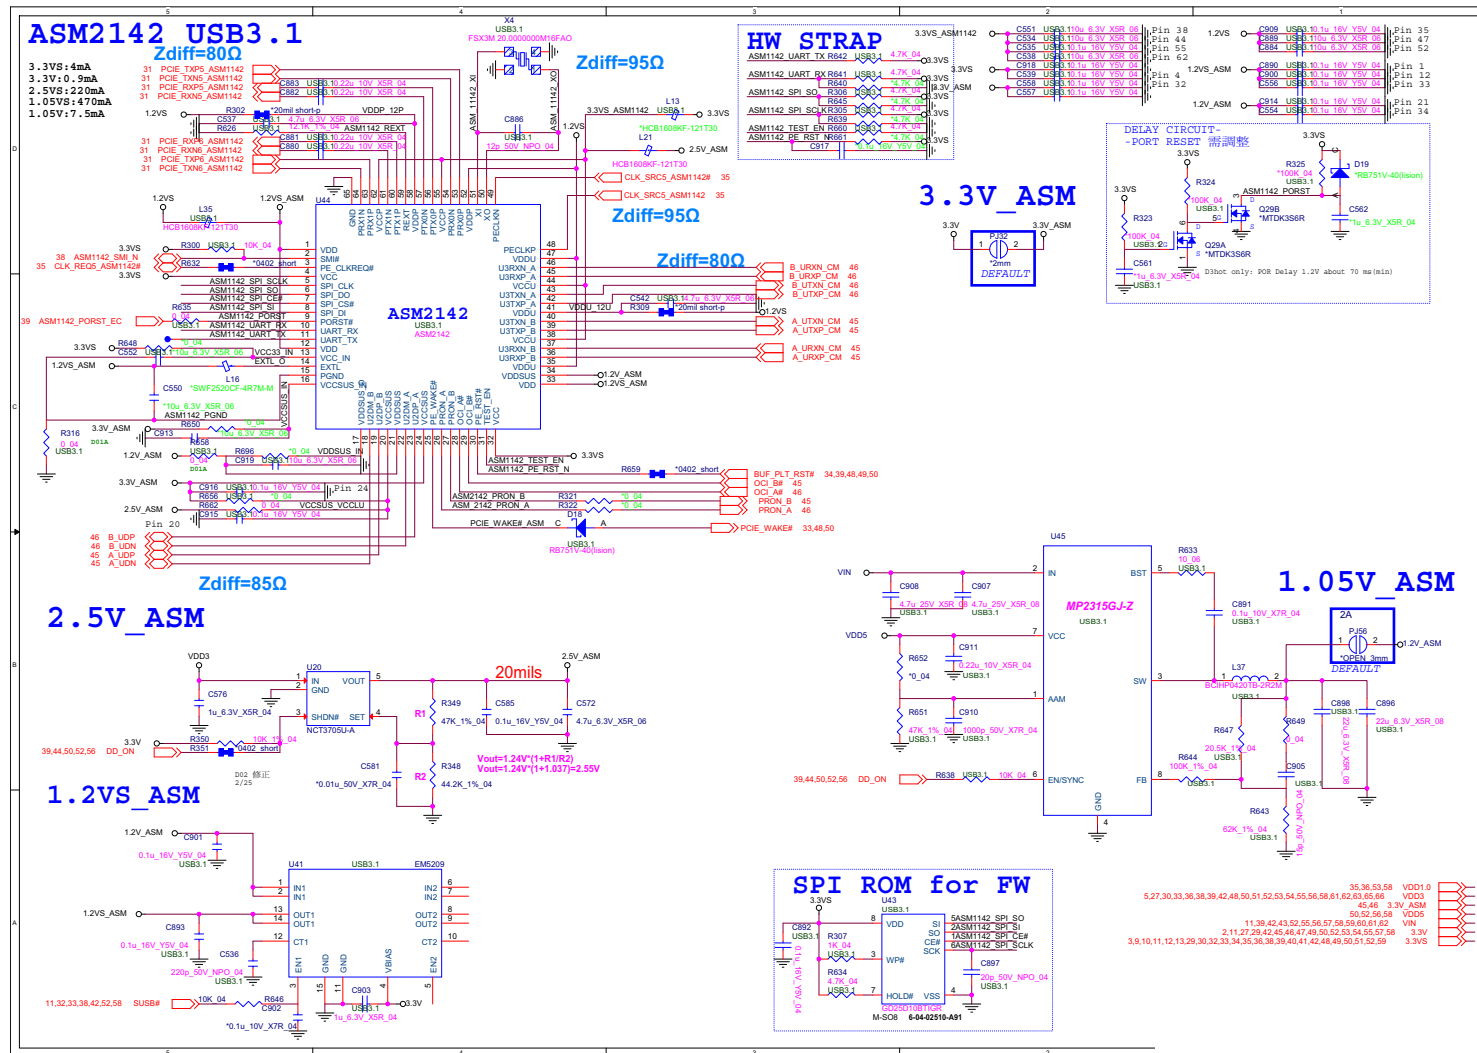


Sheet 44 of 74
ASM2142 1/3

B.Schematic Diagrams


ASM2142 2/3

B.Schematic Diagrams

Sheet 45 of 74
ASM2142 2/3

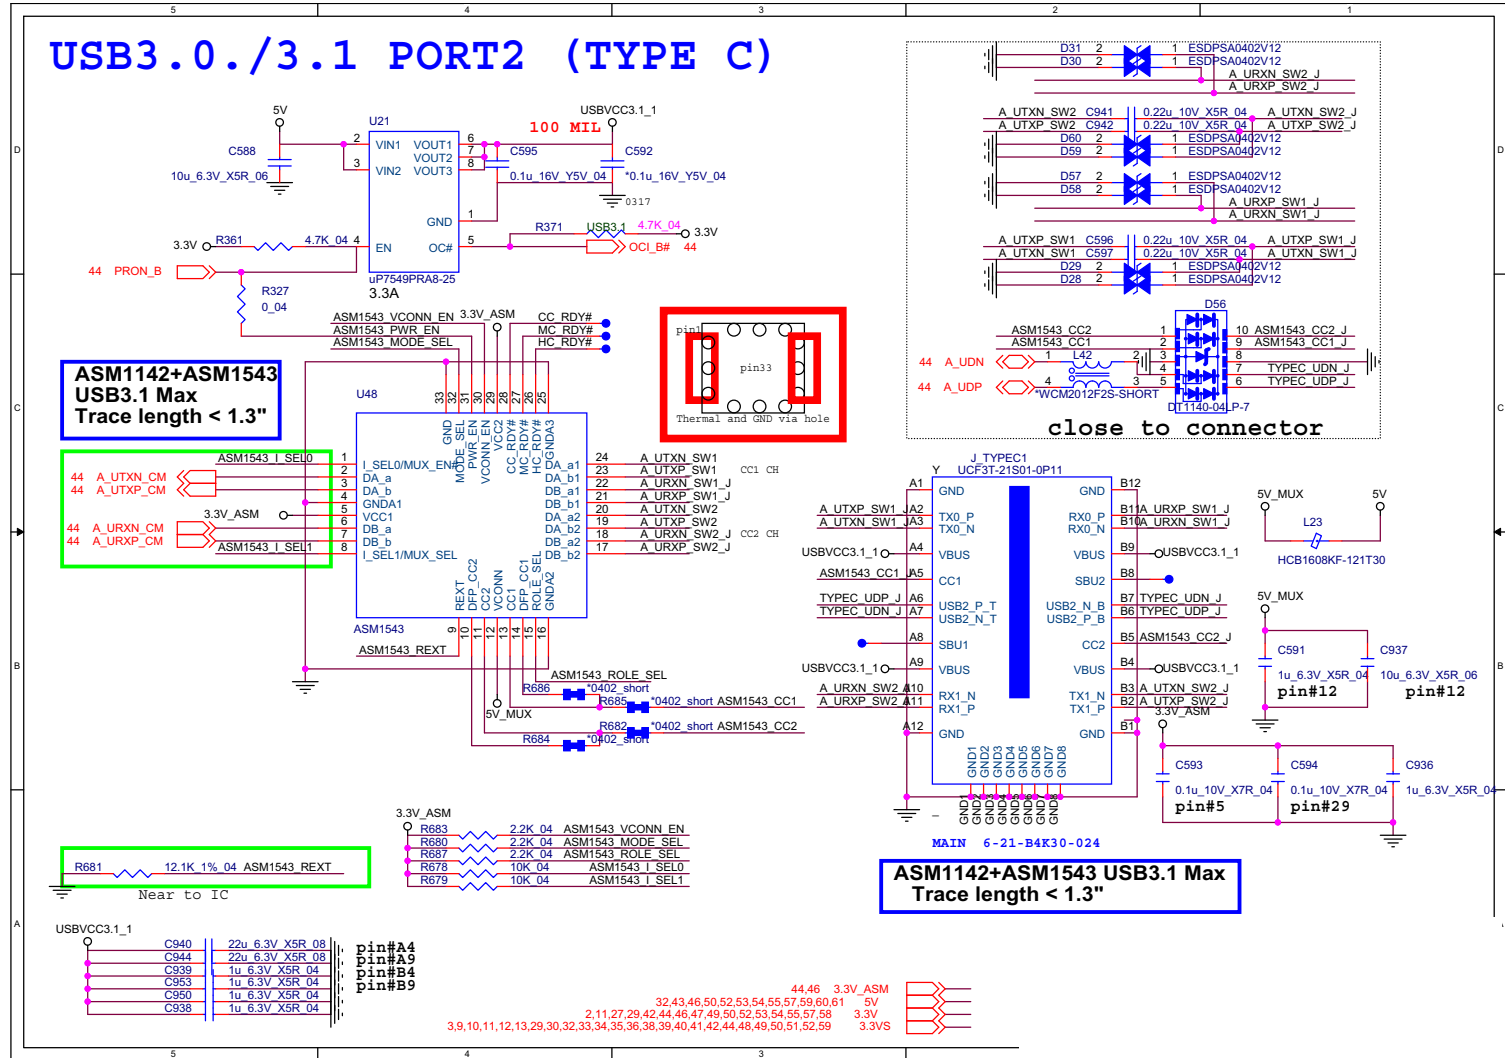

ASM2142 3/3

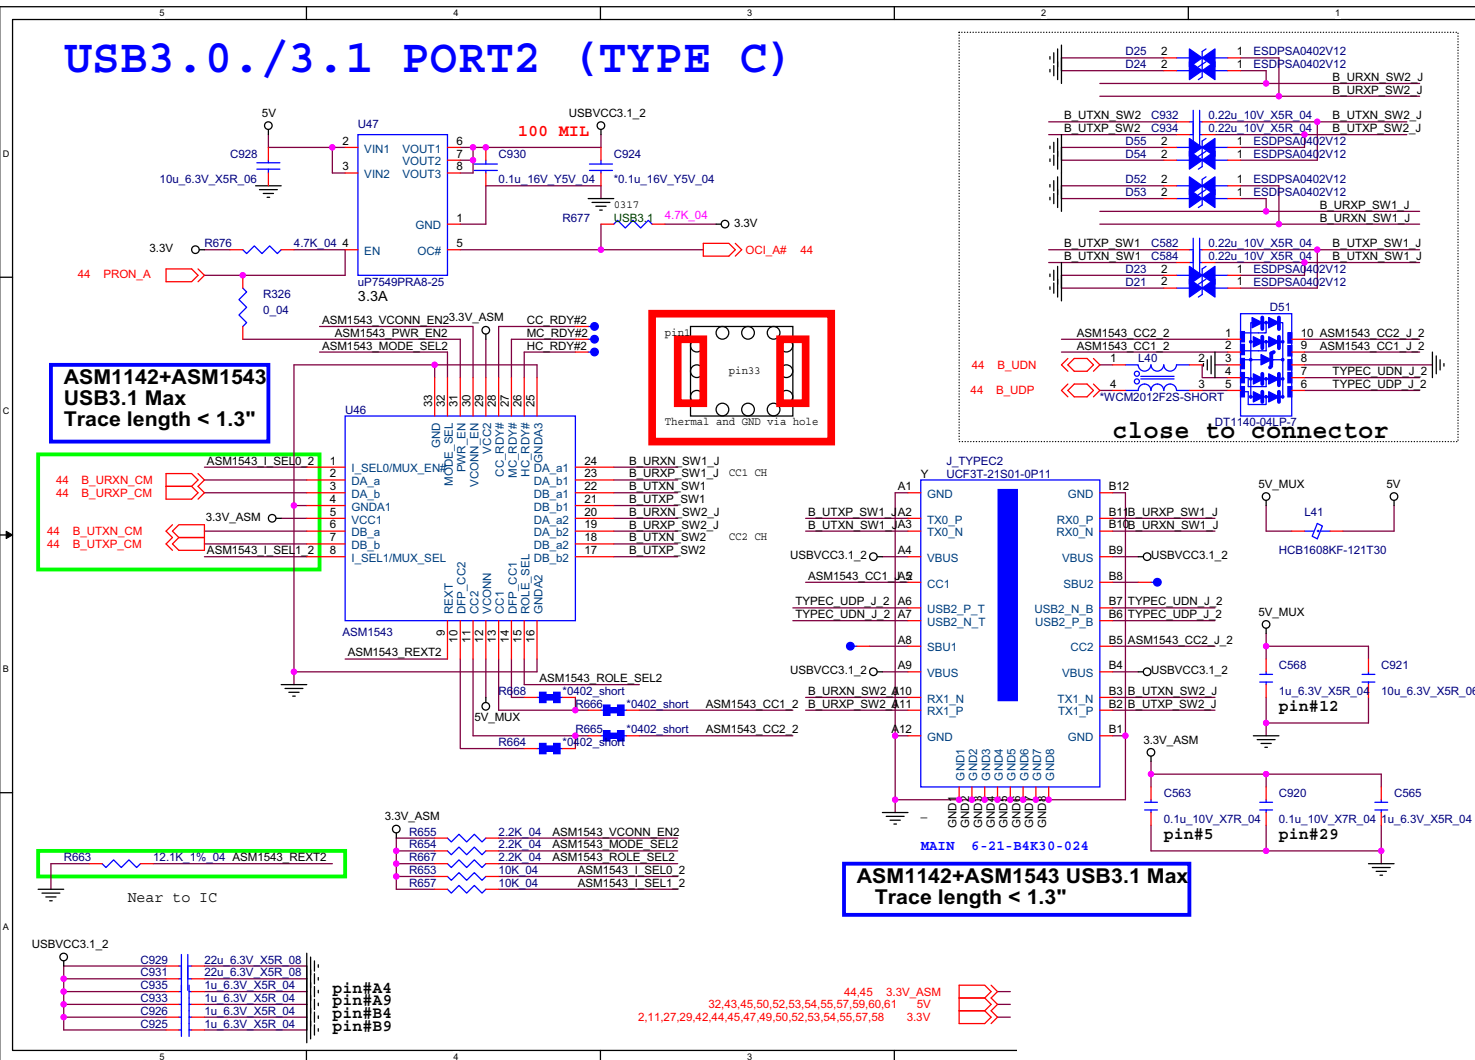


M.2 3G/LTE


Sheet 47 of 74
M.2 3G/LTE

Only P670RS 3G不上件

3G /LTE CARD USB3.0

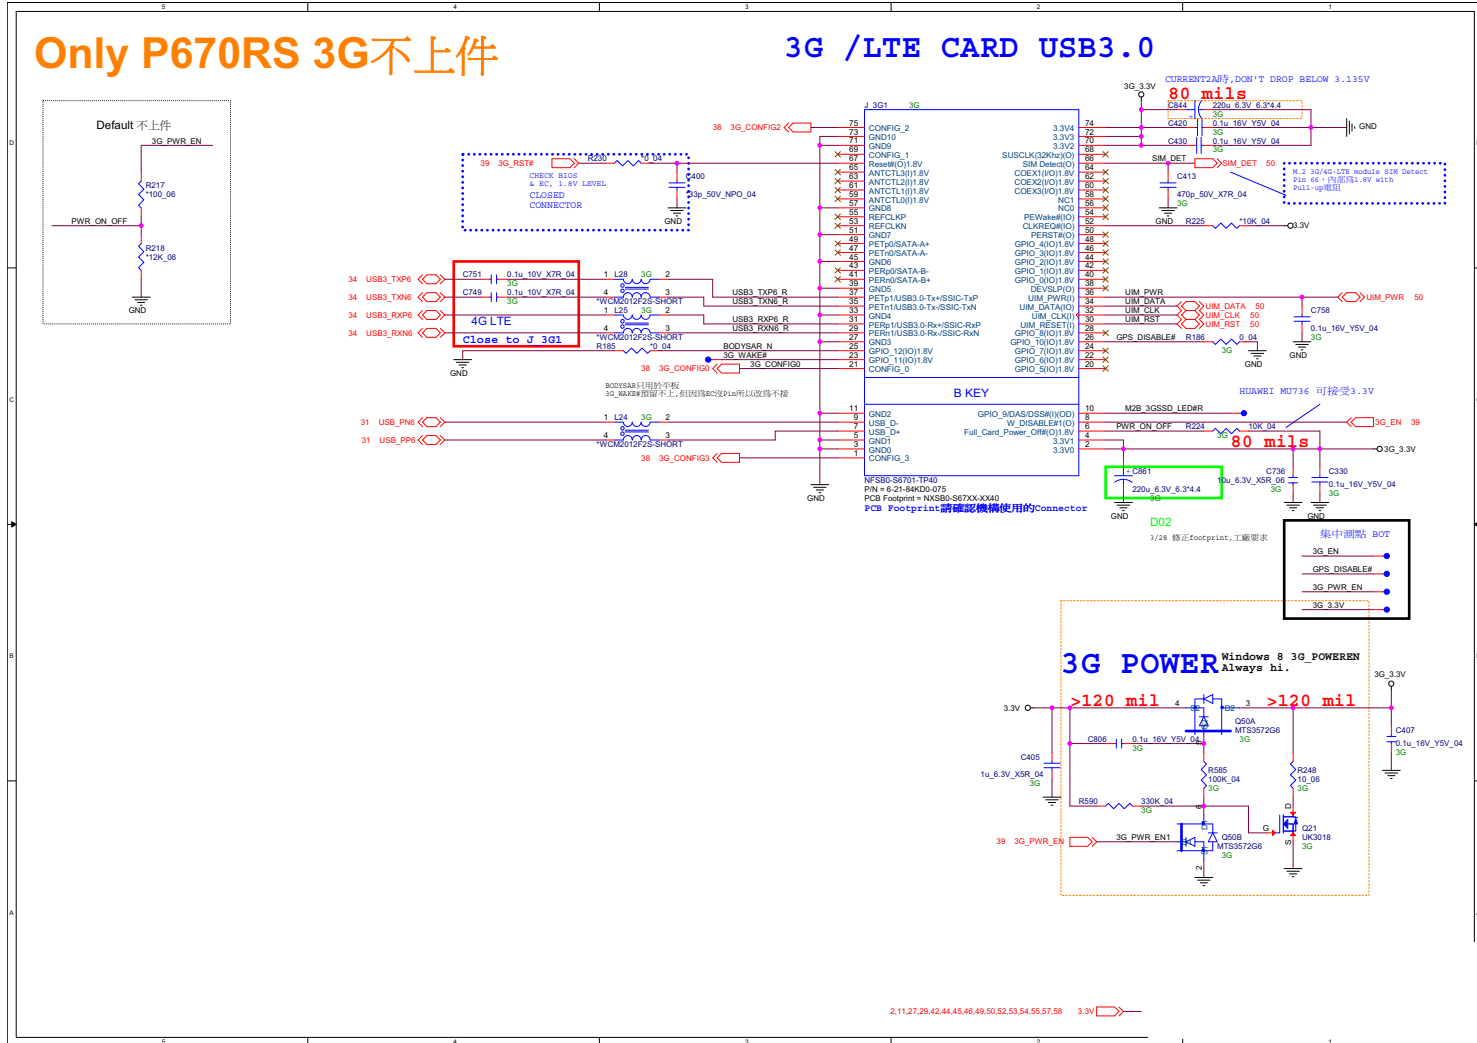


M.2 WLAN+BT, PCIE4X SSD

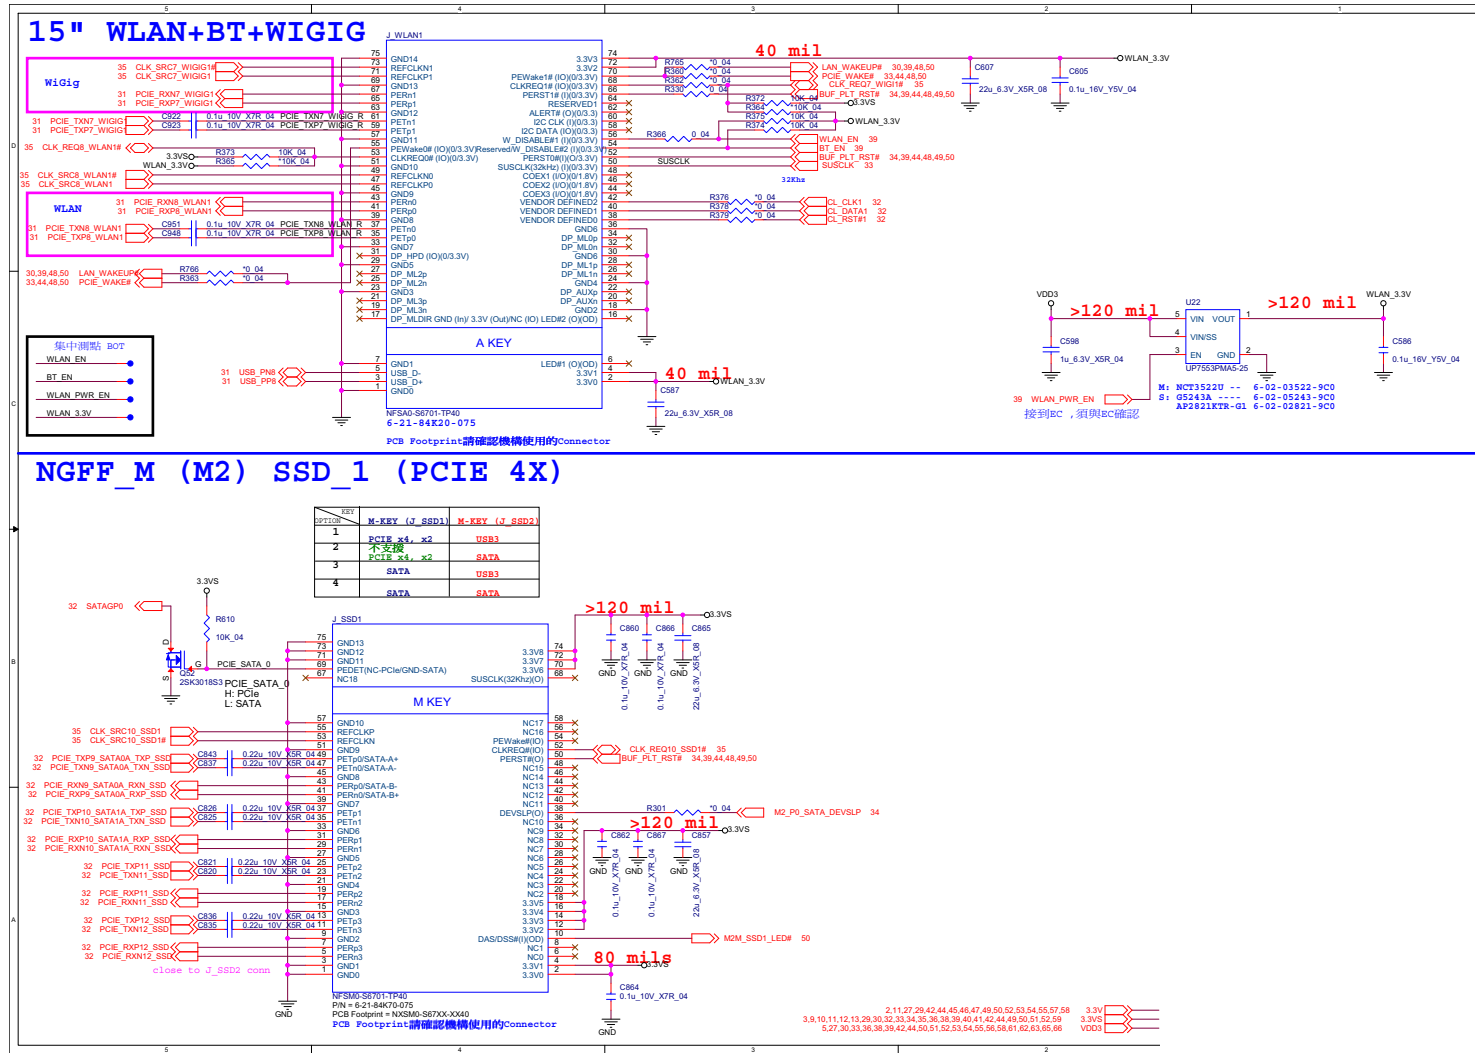


Sheet 48 of 74
M.2 WLAN+BT,
PCIE4X SSD

B.Schematic Diagrams

TPM, TP

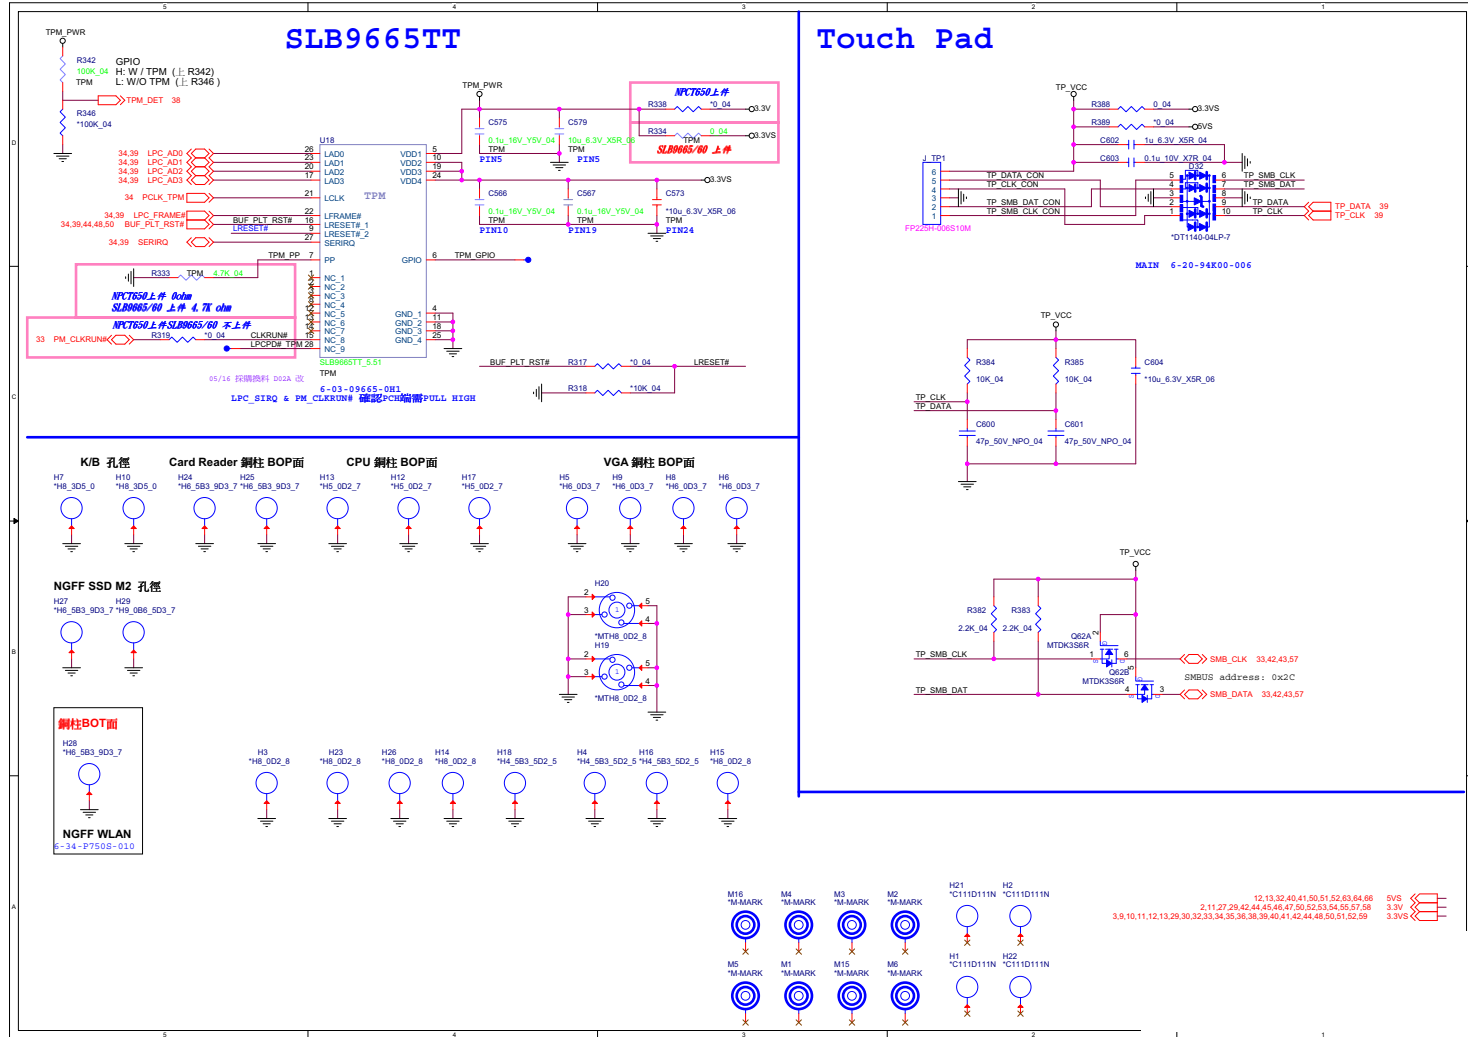

Connector

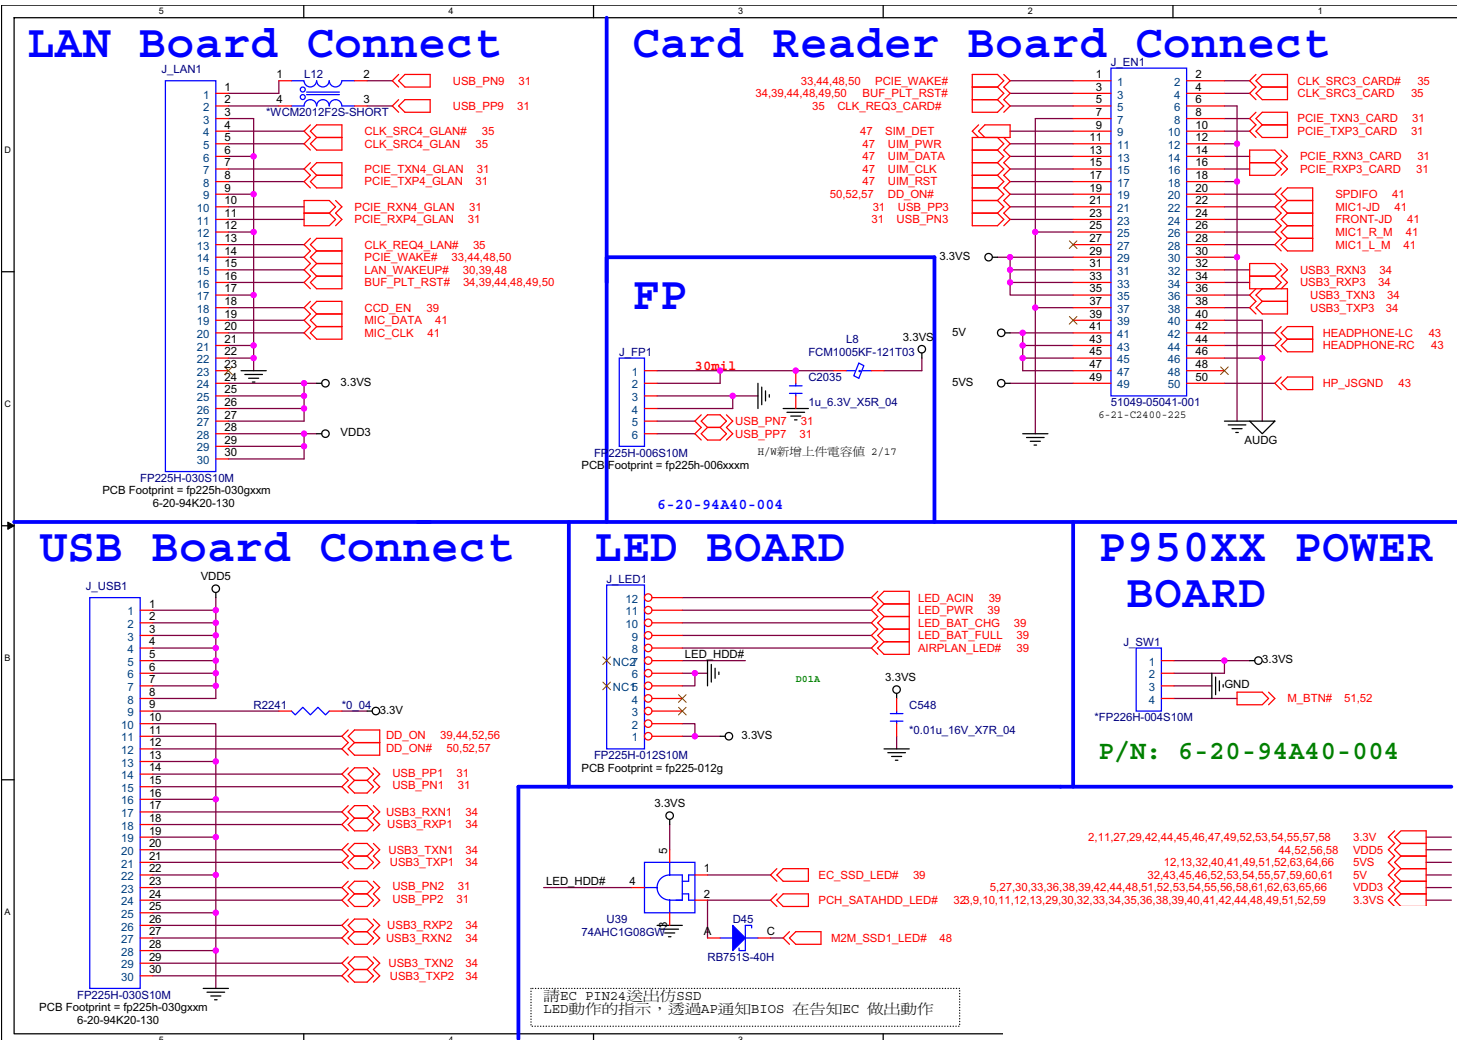


Sheet 50 of 74
Connector


B.Schematic Diagrams

Fan, LID, KB LED

Sheet 51 of 74
Fan, LID, KB LED

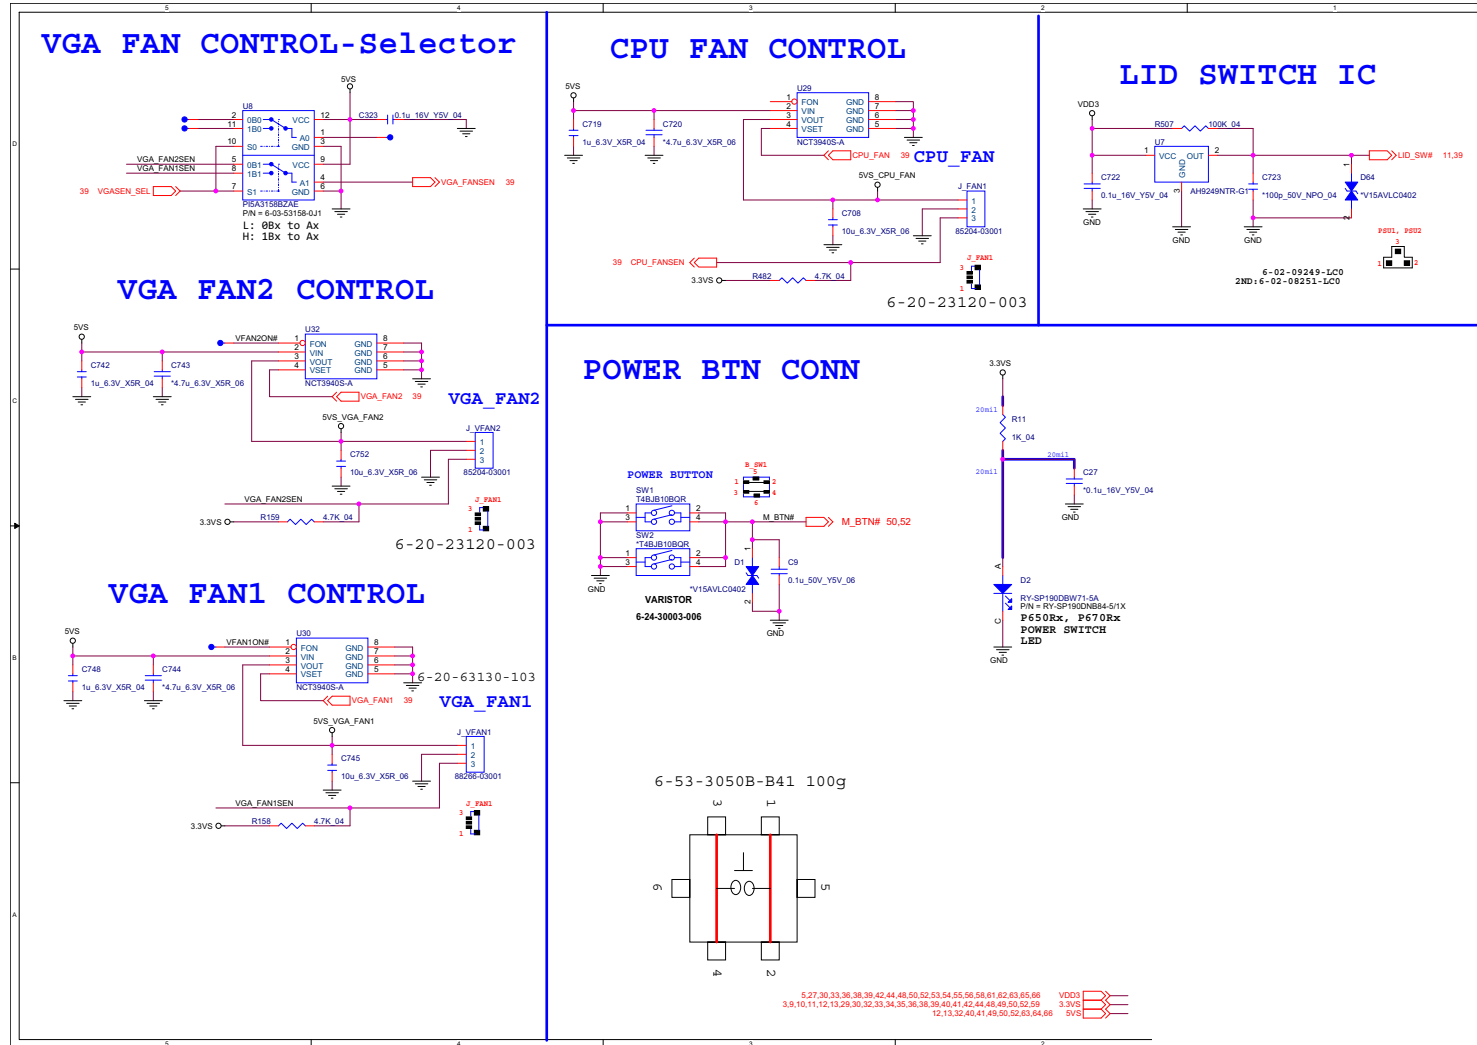


5V, 5VS, 3.3V, 3.3VS, 3.3VA

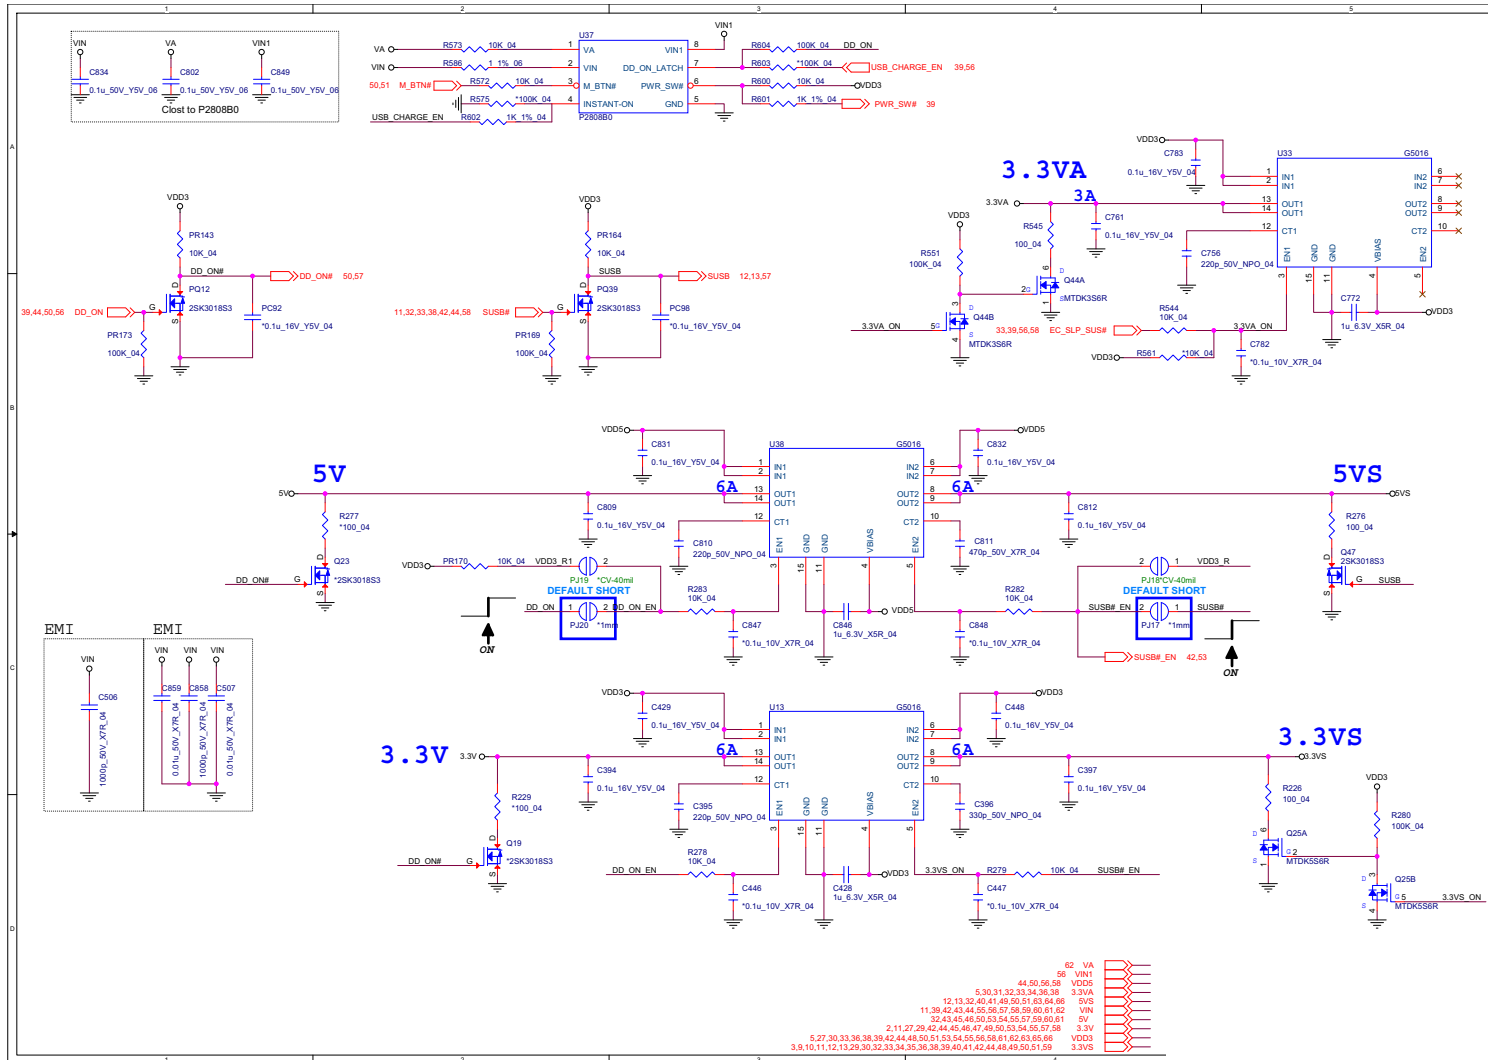

Sheet 52 of 74
5V, 5VS, 3.3V,
3.3VS, 3.3VA

Schematic Diagrams


1.0DX_VCCSTG/VCCSFR_OC/2.5V

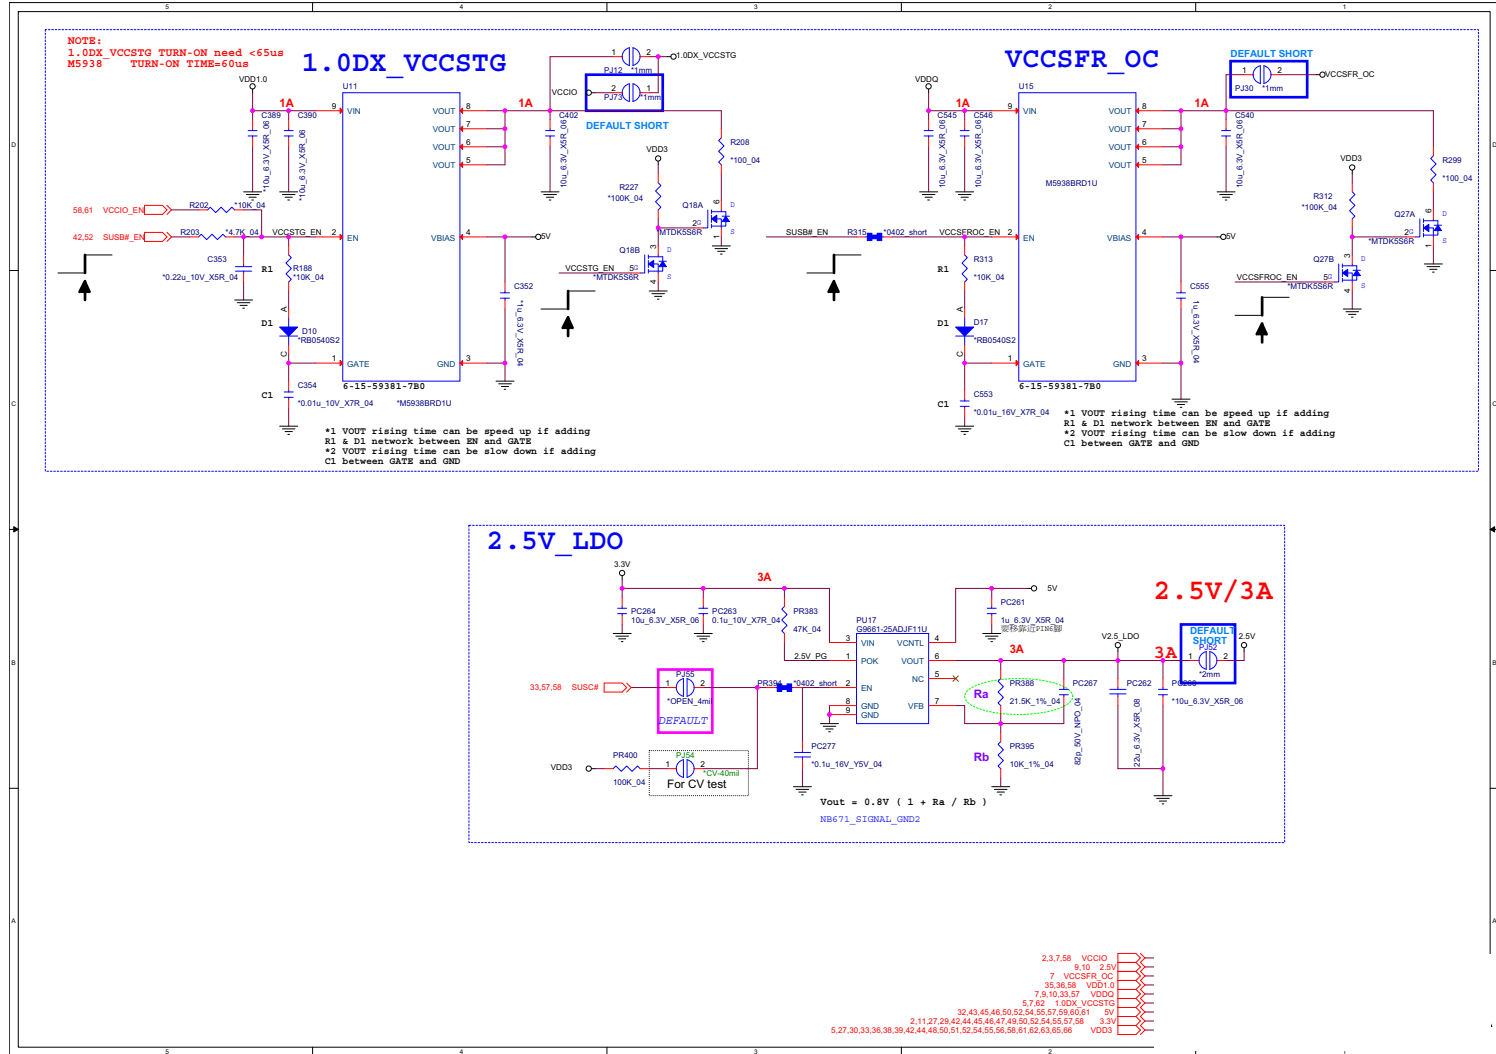

B.Schematic Diagrams

Sheet 53 of 74
 1.0DX_VCCSTG/
 VCCSFR_OC/2.5V


1V8_RUN/AON, NV3V3

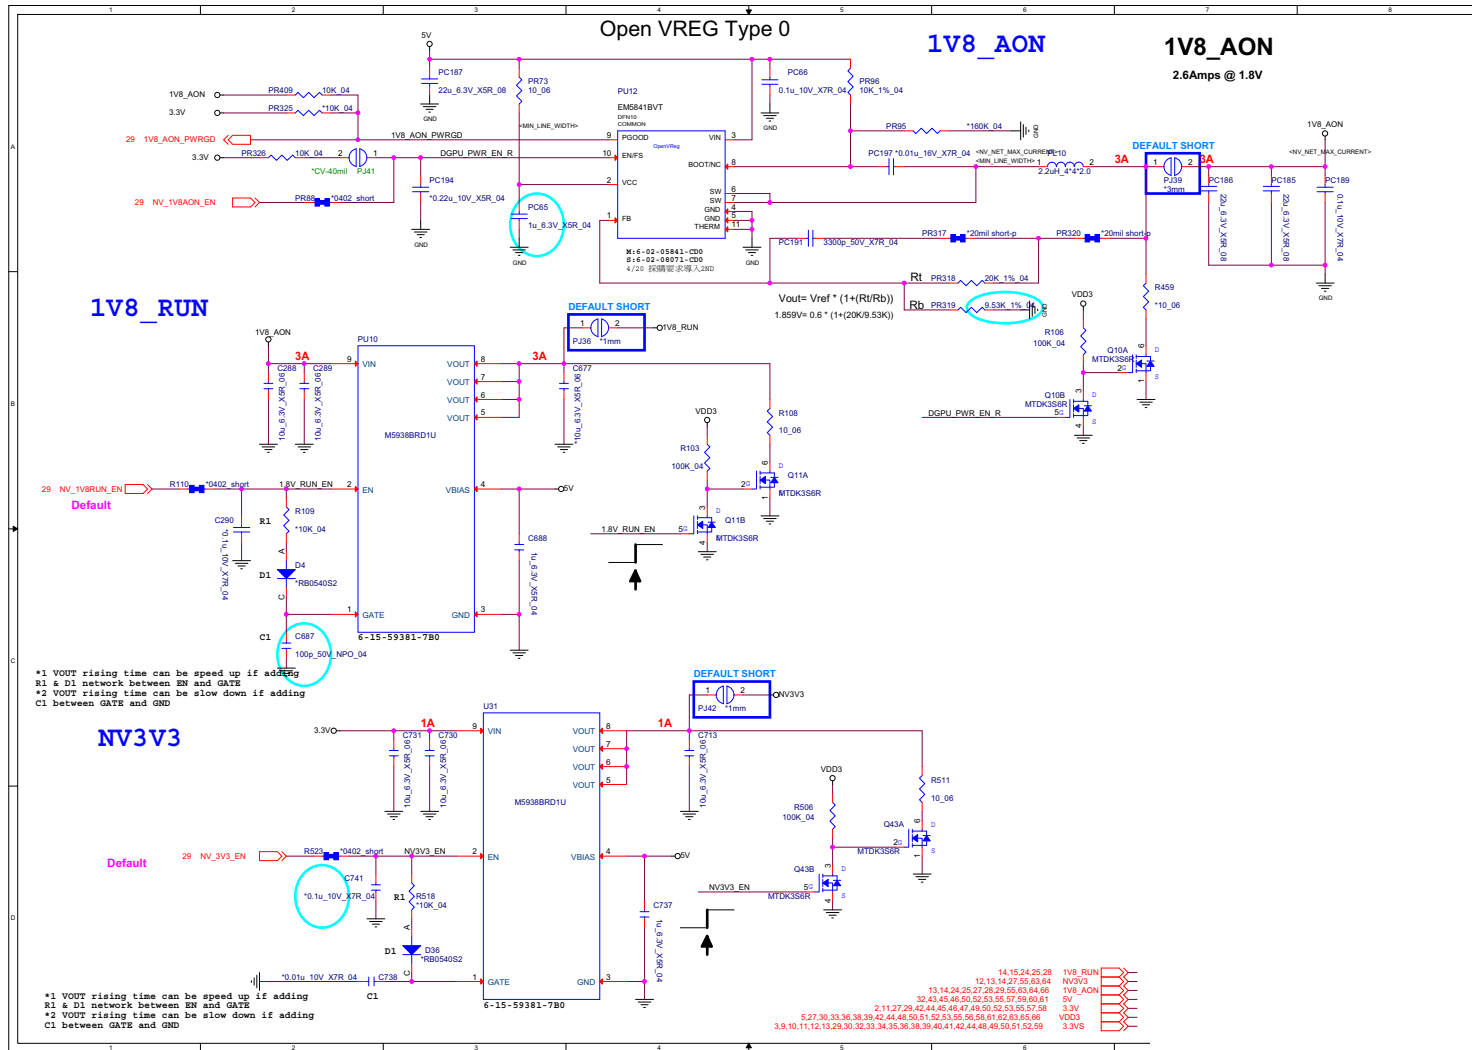


Sheet 54 of 74
1V8_RUN/AON,
NV3V3

PEX_VDD

Sheet 55 of 74
PEX_VDD

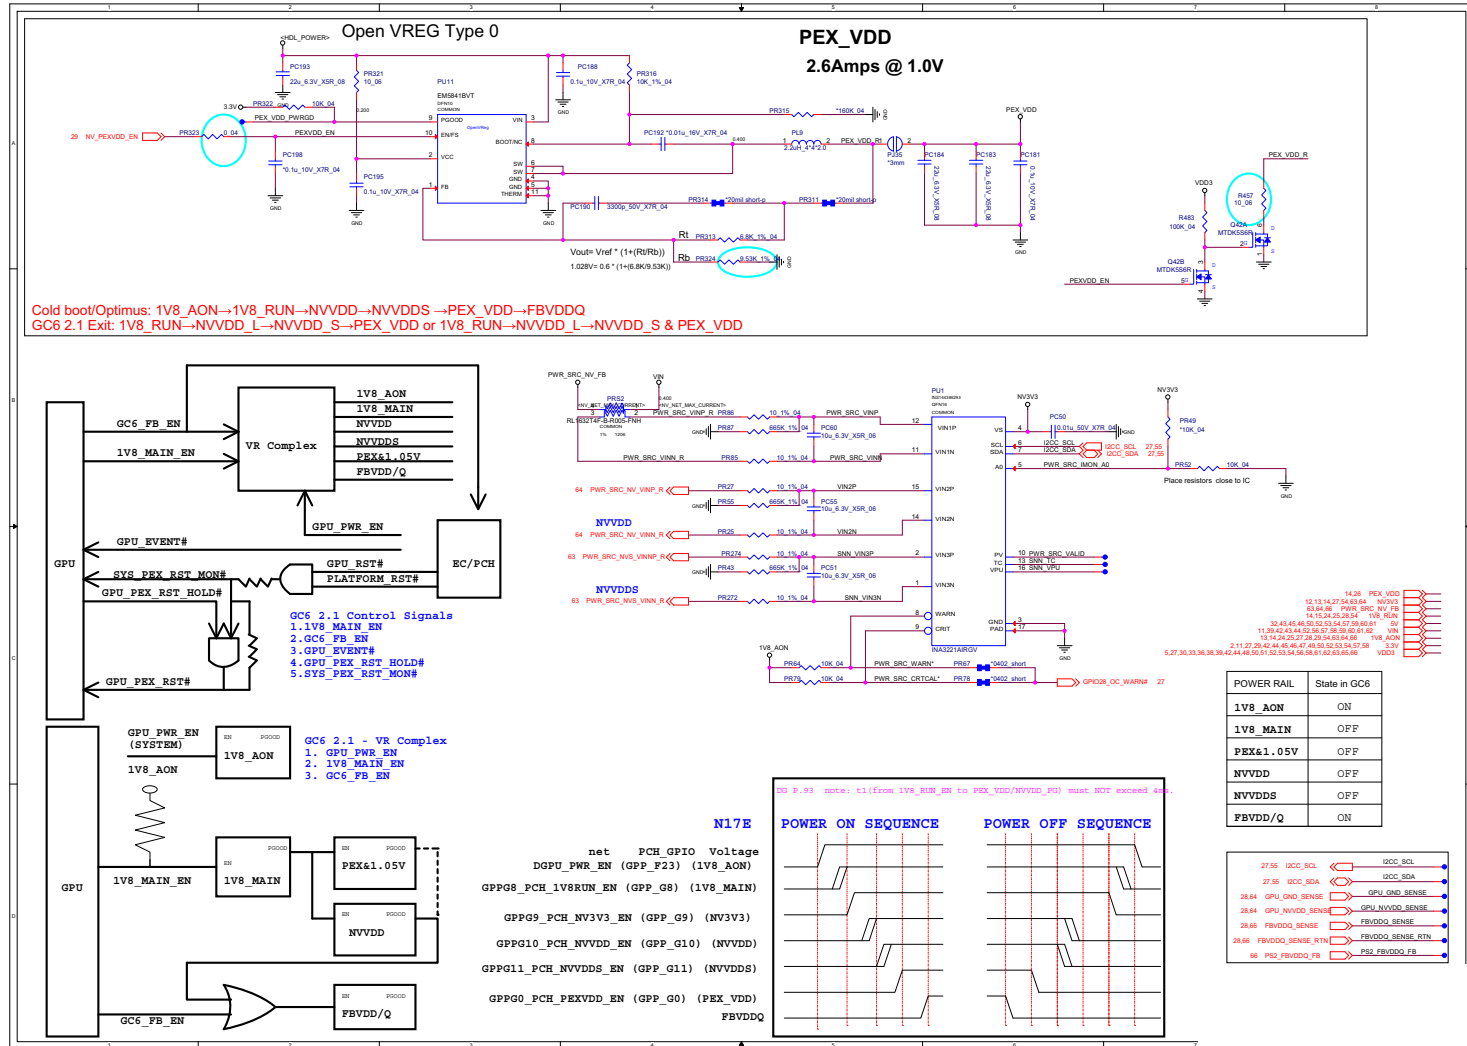


VDD3, VDD5

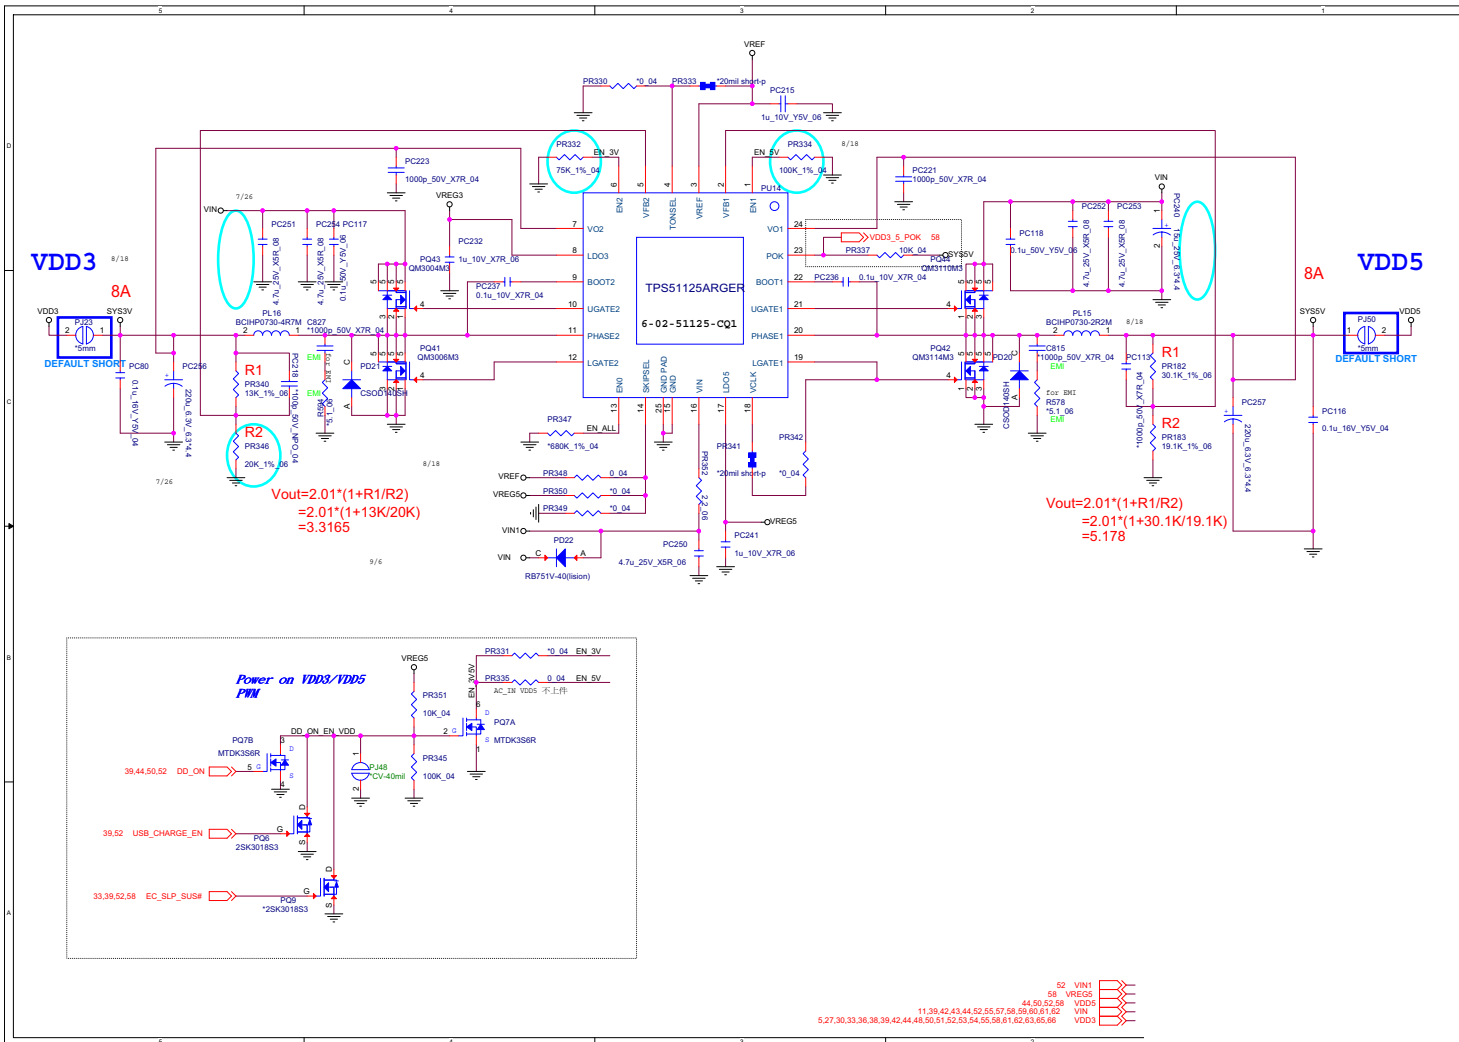


Sheet 56 of 74
VDD3, VDD5

DDR 1.2V / 0.6VS

Sheet 57 of 74
DDR 1.2V / 0.6VS

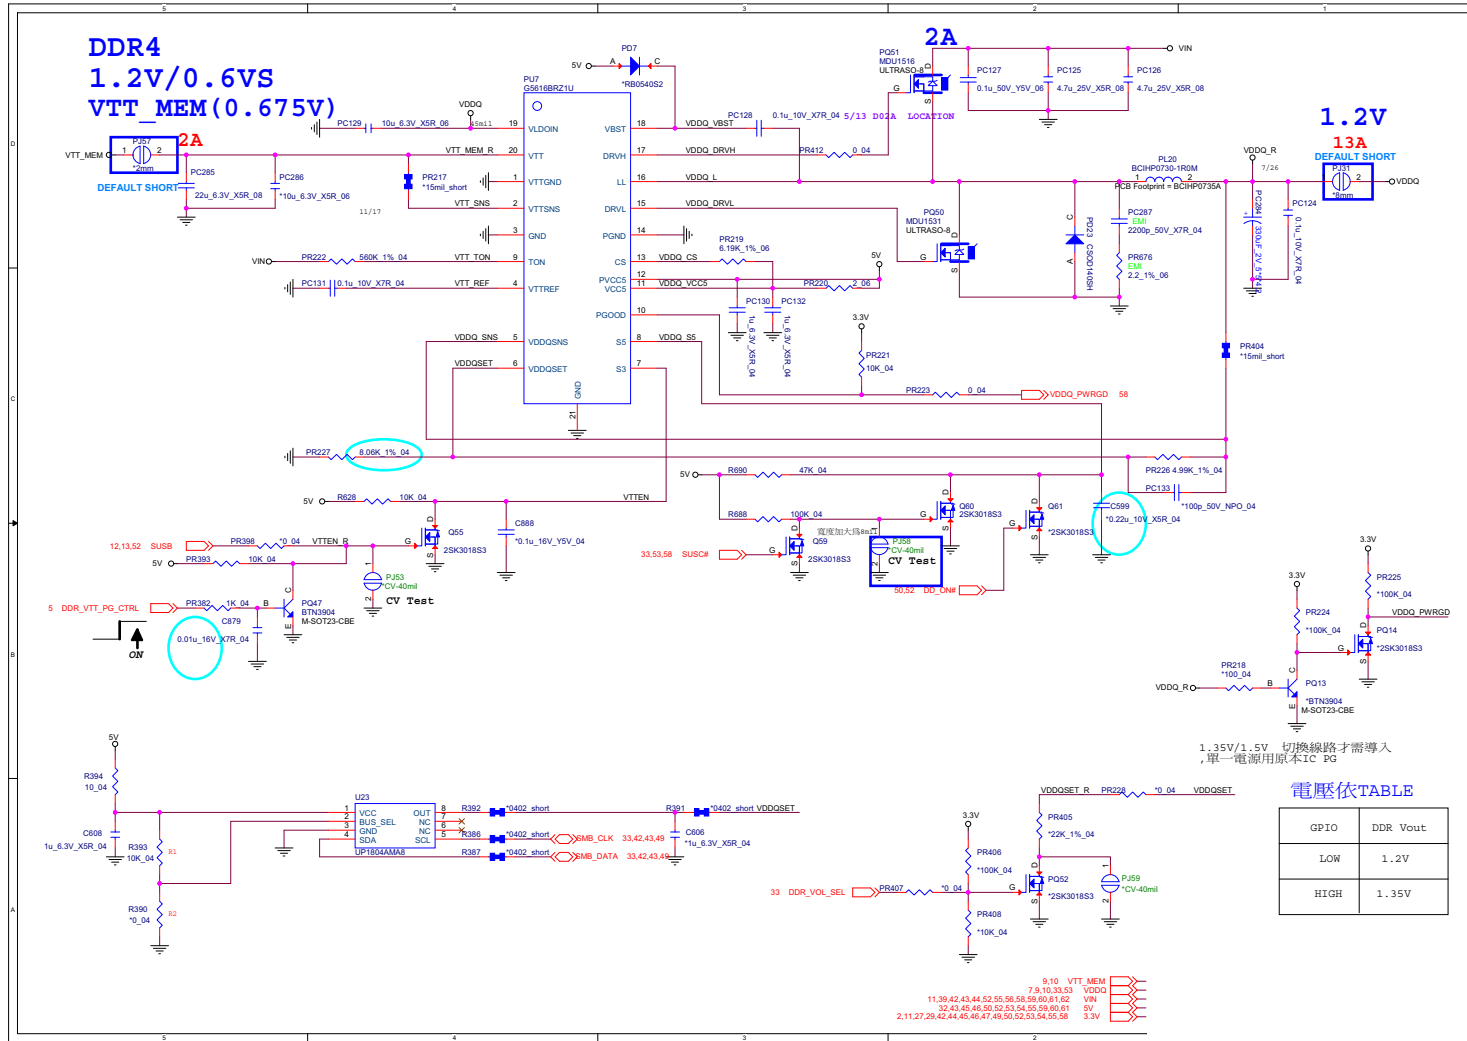


Power 1.0V, VCCIO

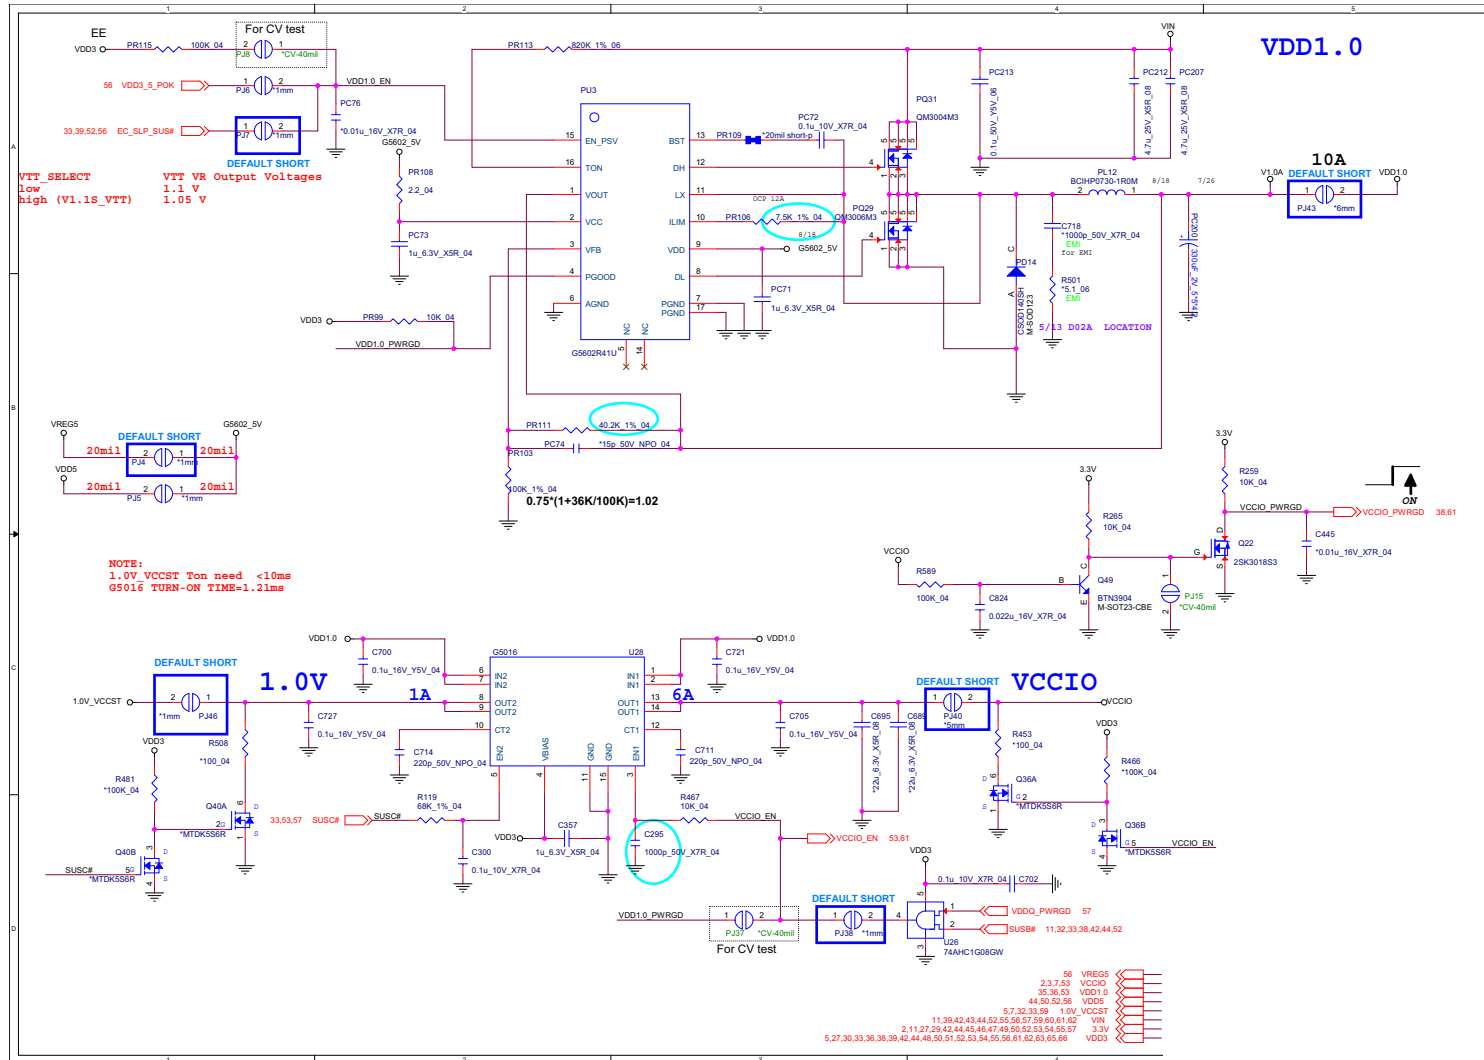


Sheet 58 of 74
Power 1.0V, VCCIO

VCore & VCCGT Output 1

Sheet 59 of 74
VCore & VCCGT
Output 1

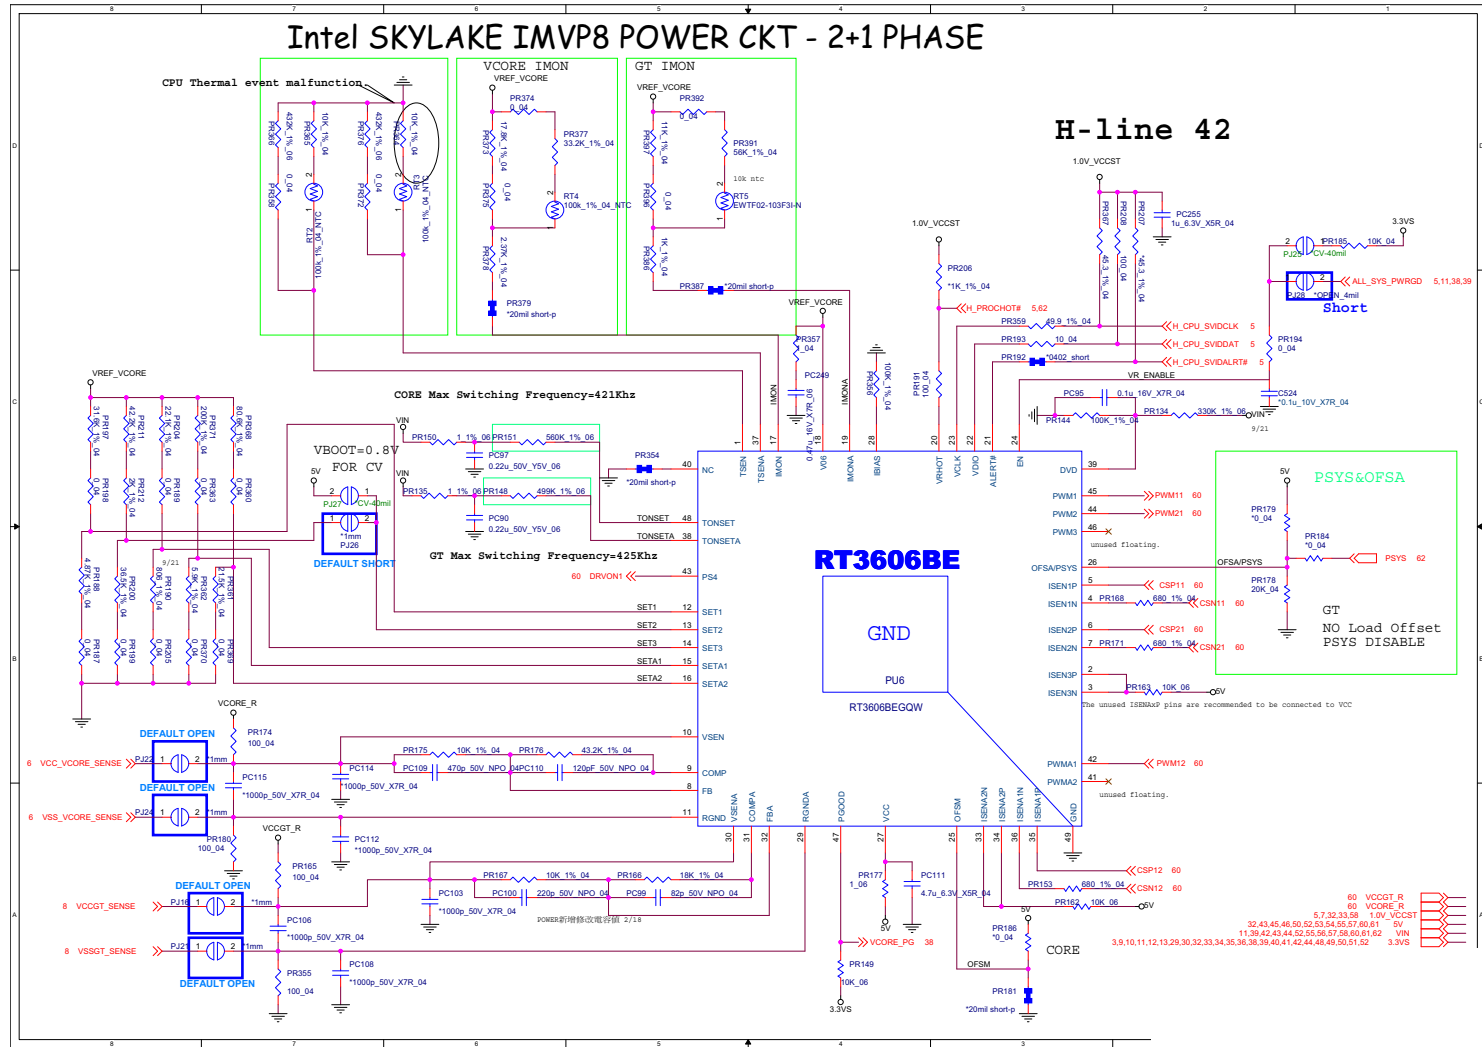

VCore & VCCGT Output 2

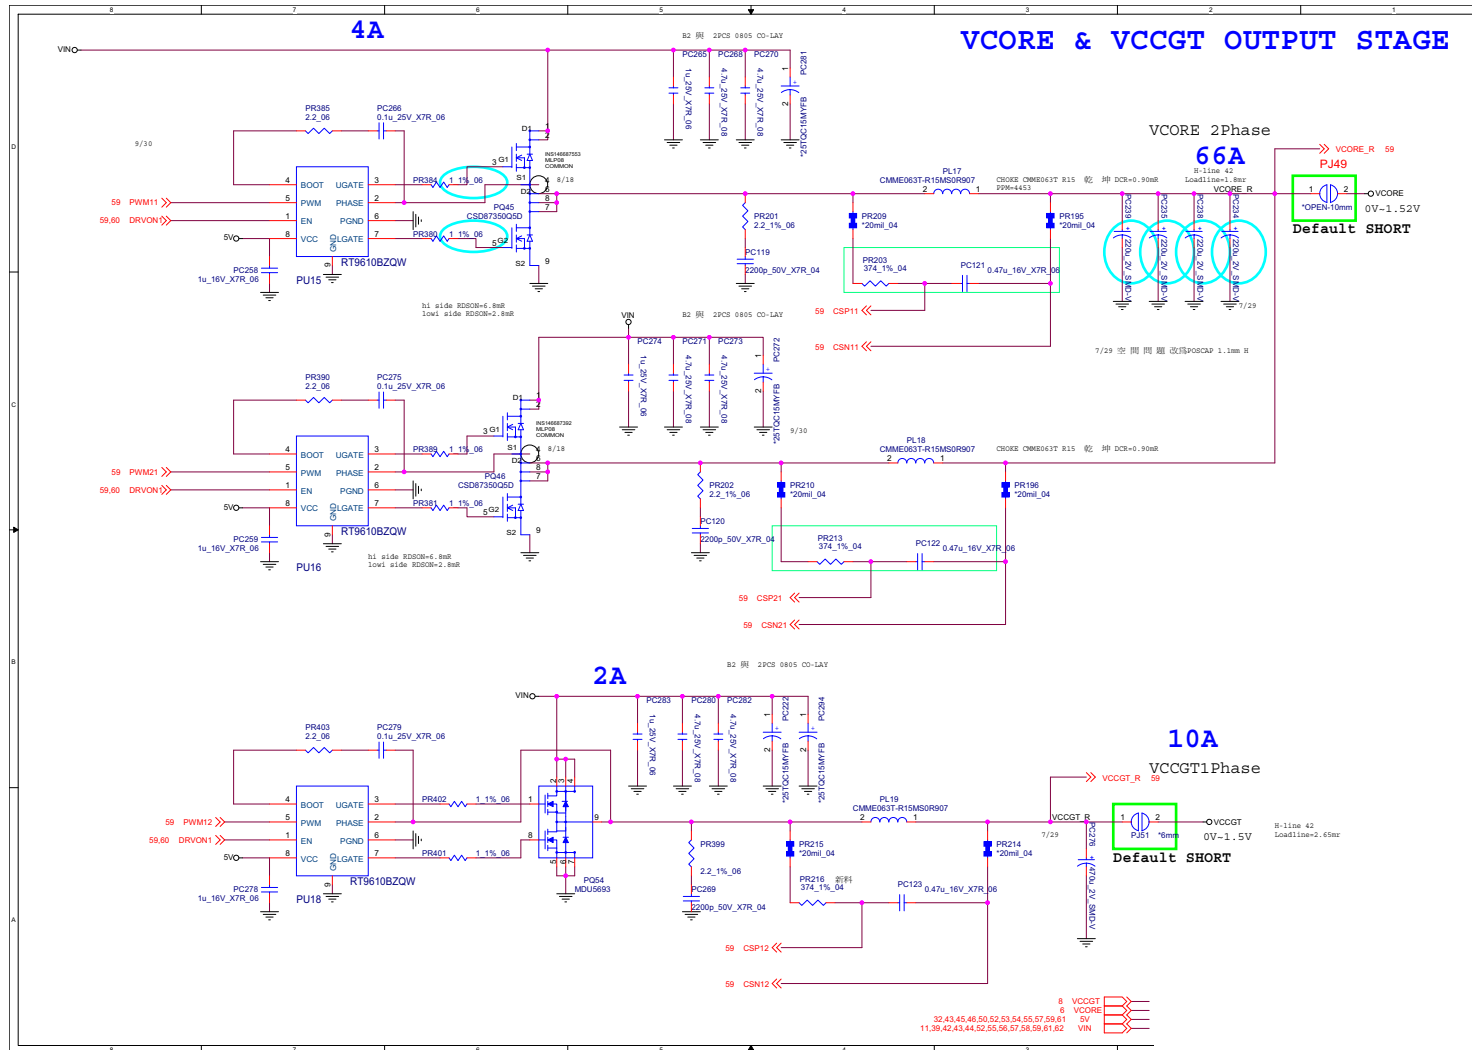


Sheet 60 of 74
VCore & VCCGT
Output 2

B.Schematic Diagrams


Schematic Diagrams

VCCSA

Sheet 61 of 74
VCCSA

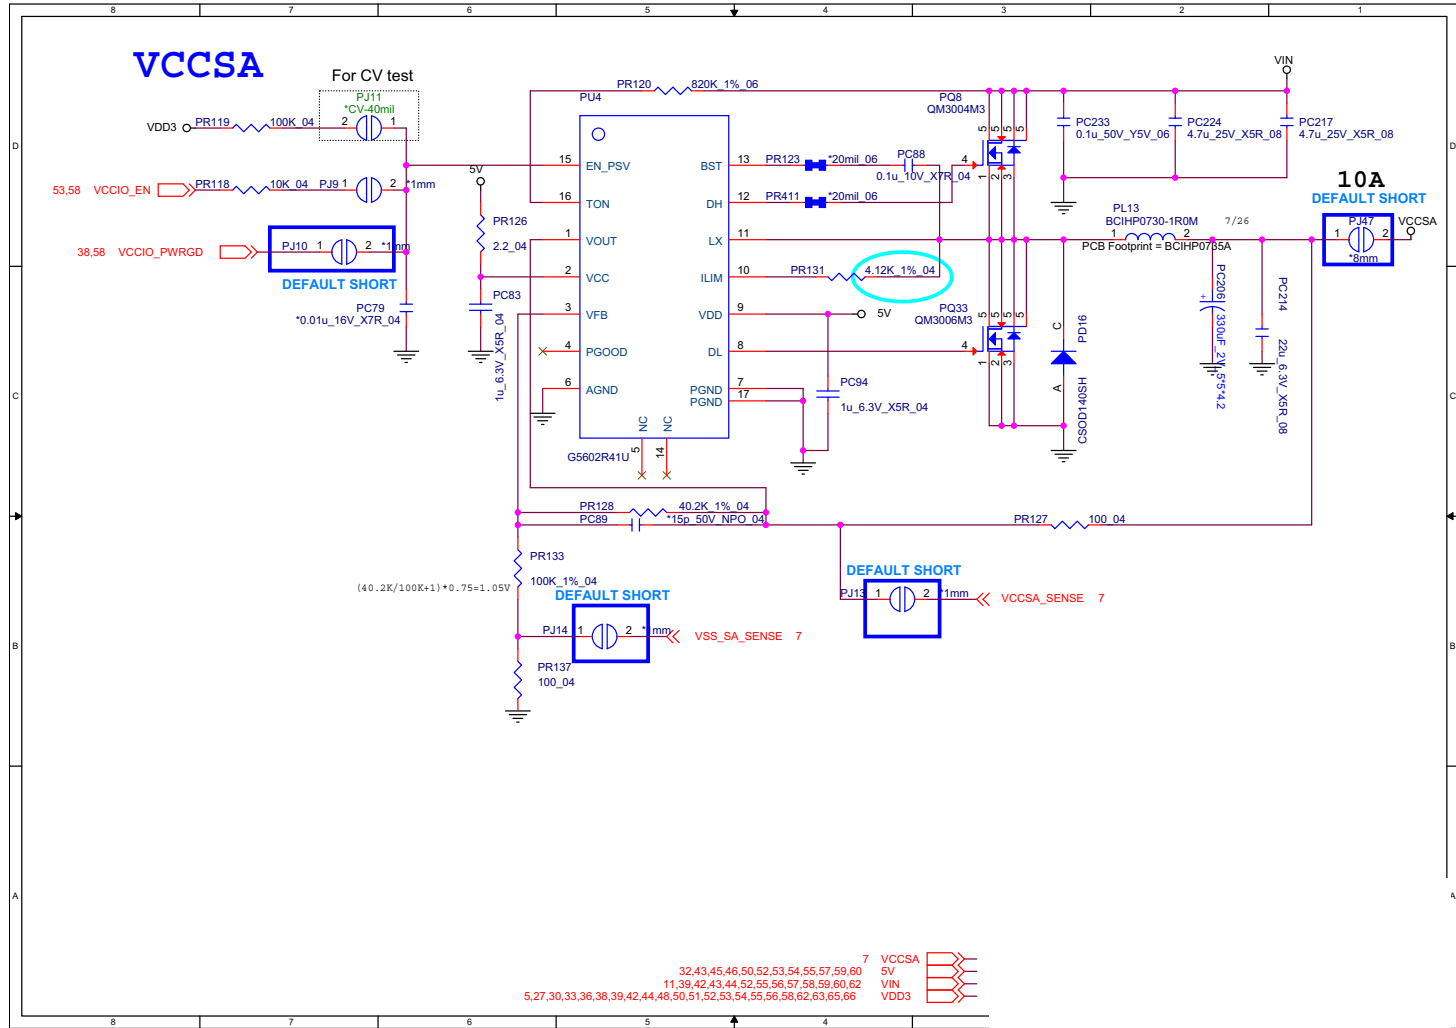


AC_In, Charger

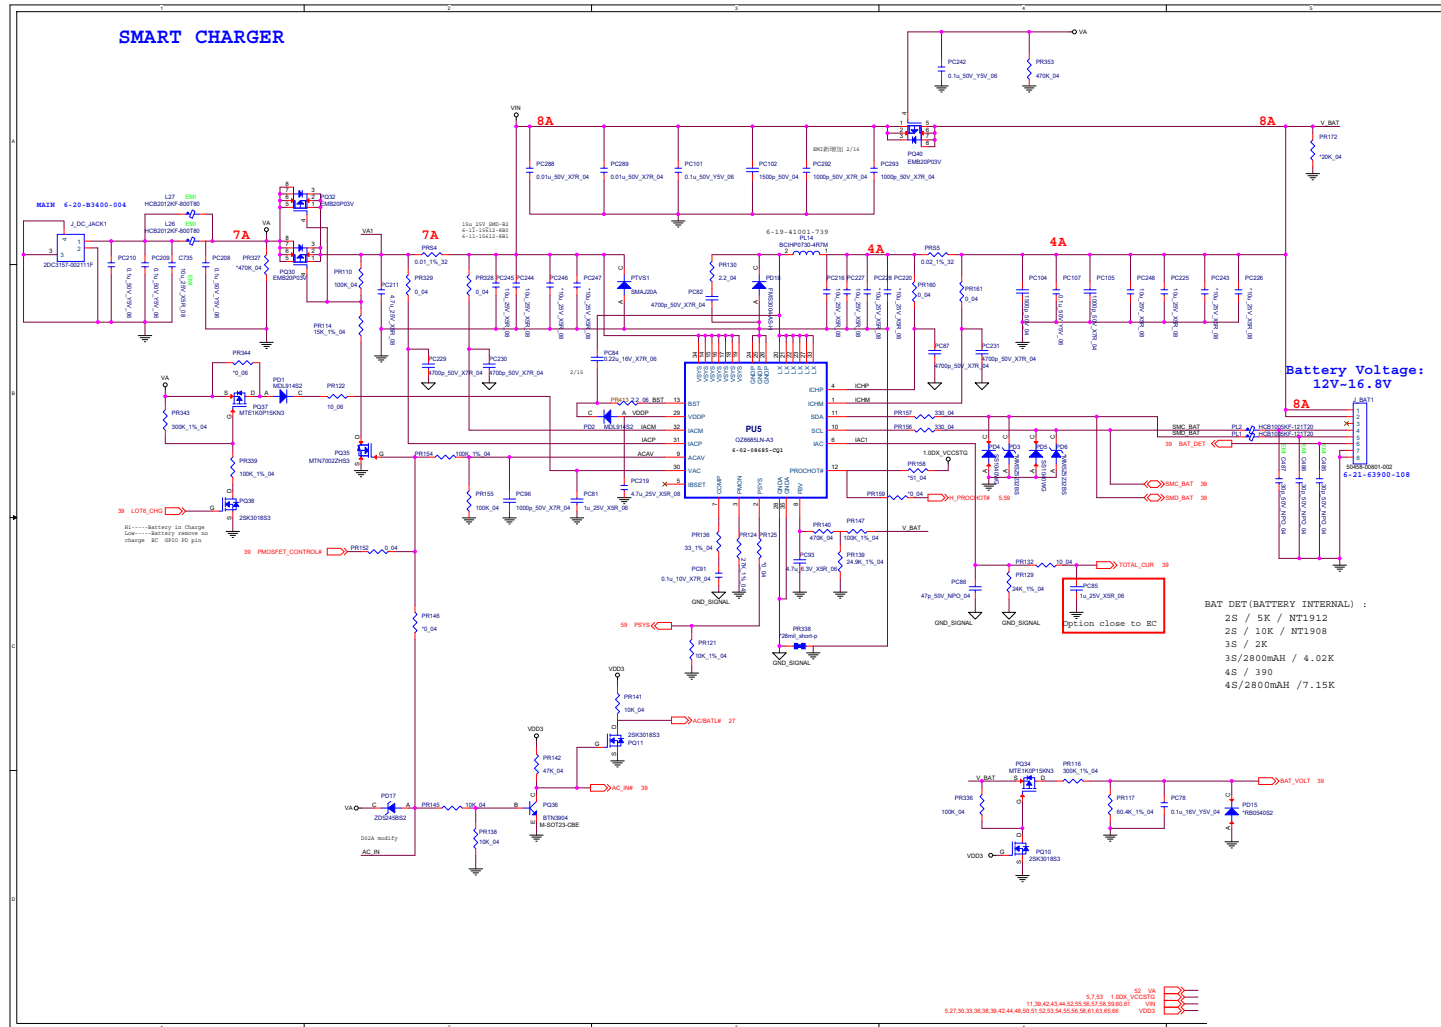

B. Schematic Diagrams


Sheet 62 of 74
AC_In, Charger

NVVDOS

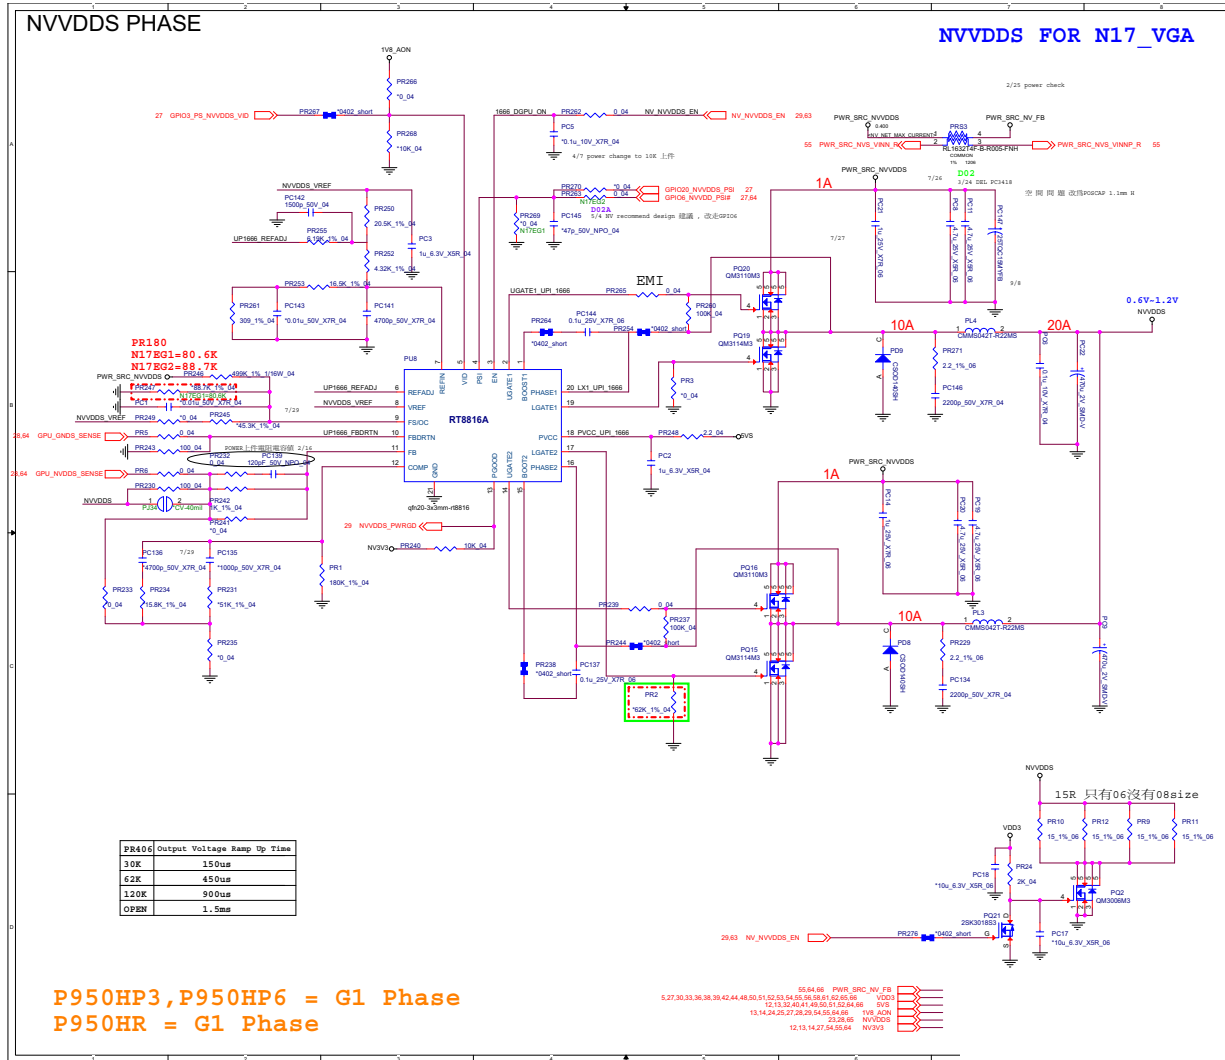

Sheet 63 of 74
NVVDOS

NVVDD 1

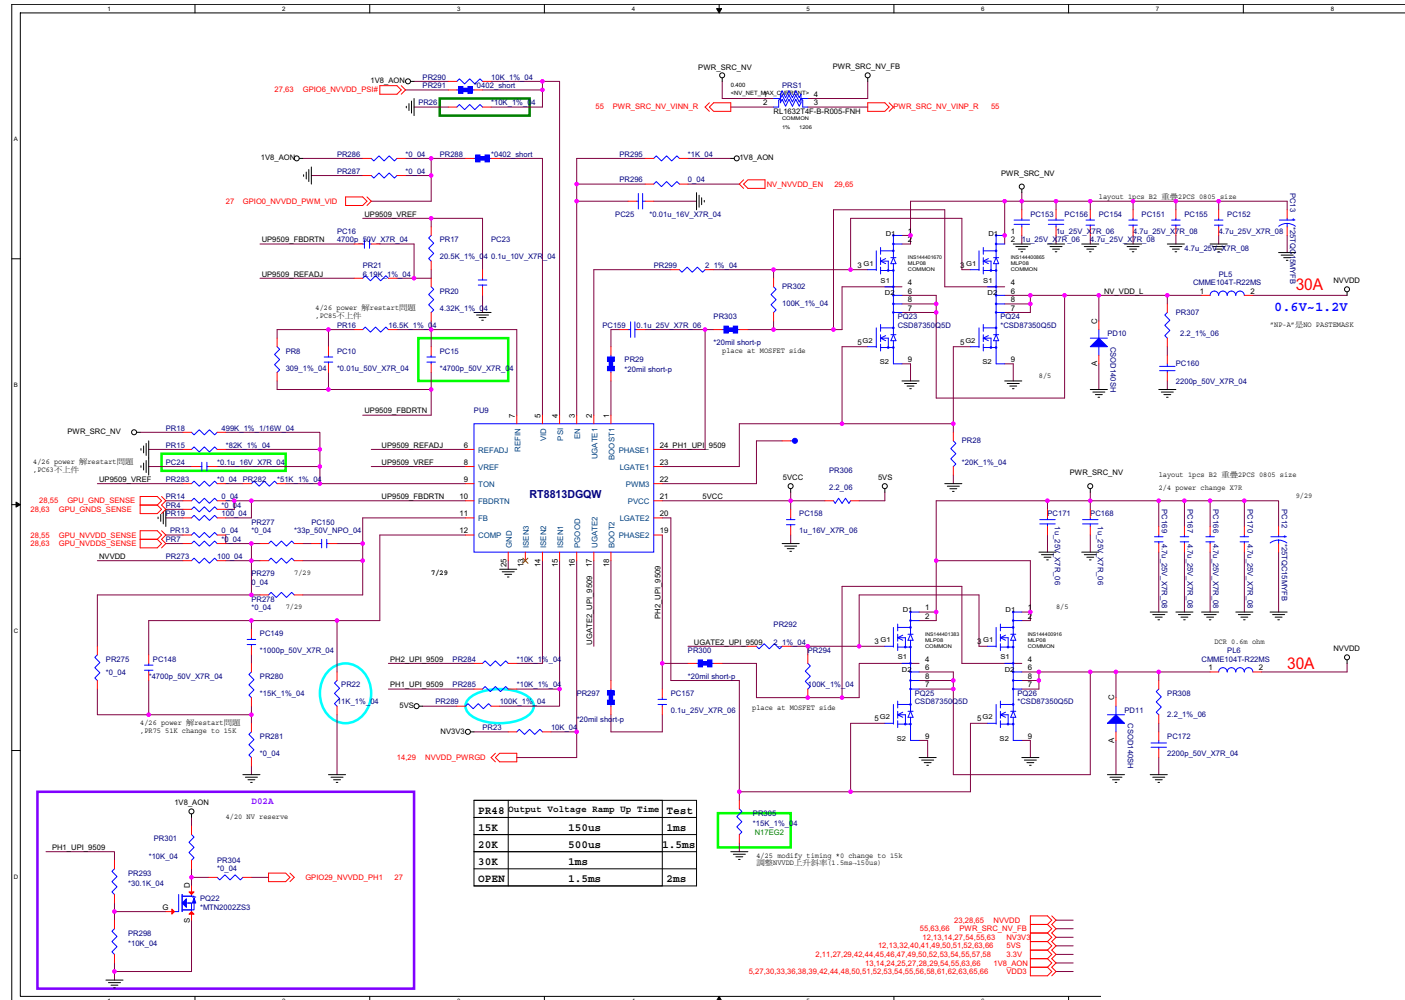


Sheet 64 of 74
NVVDD 1


B.Schematic Diagrams

NVDD 2

Sheet 65 of 74
NVDD 2

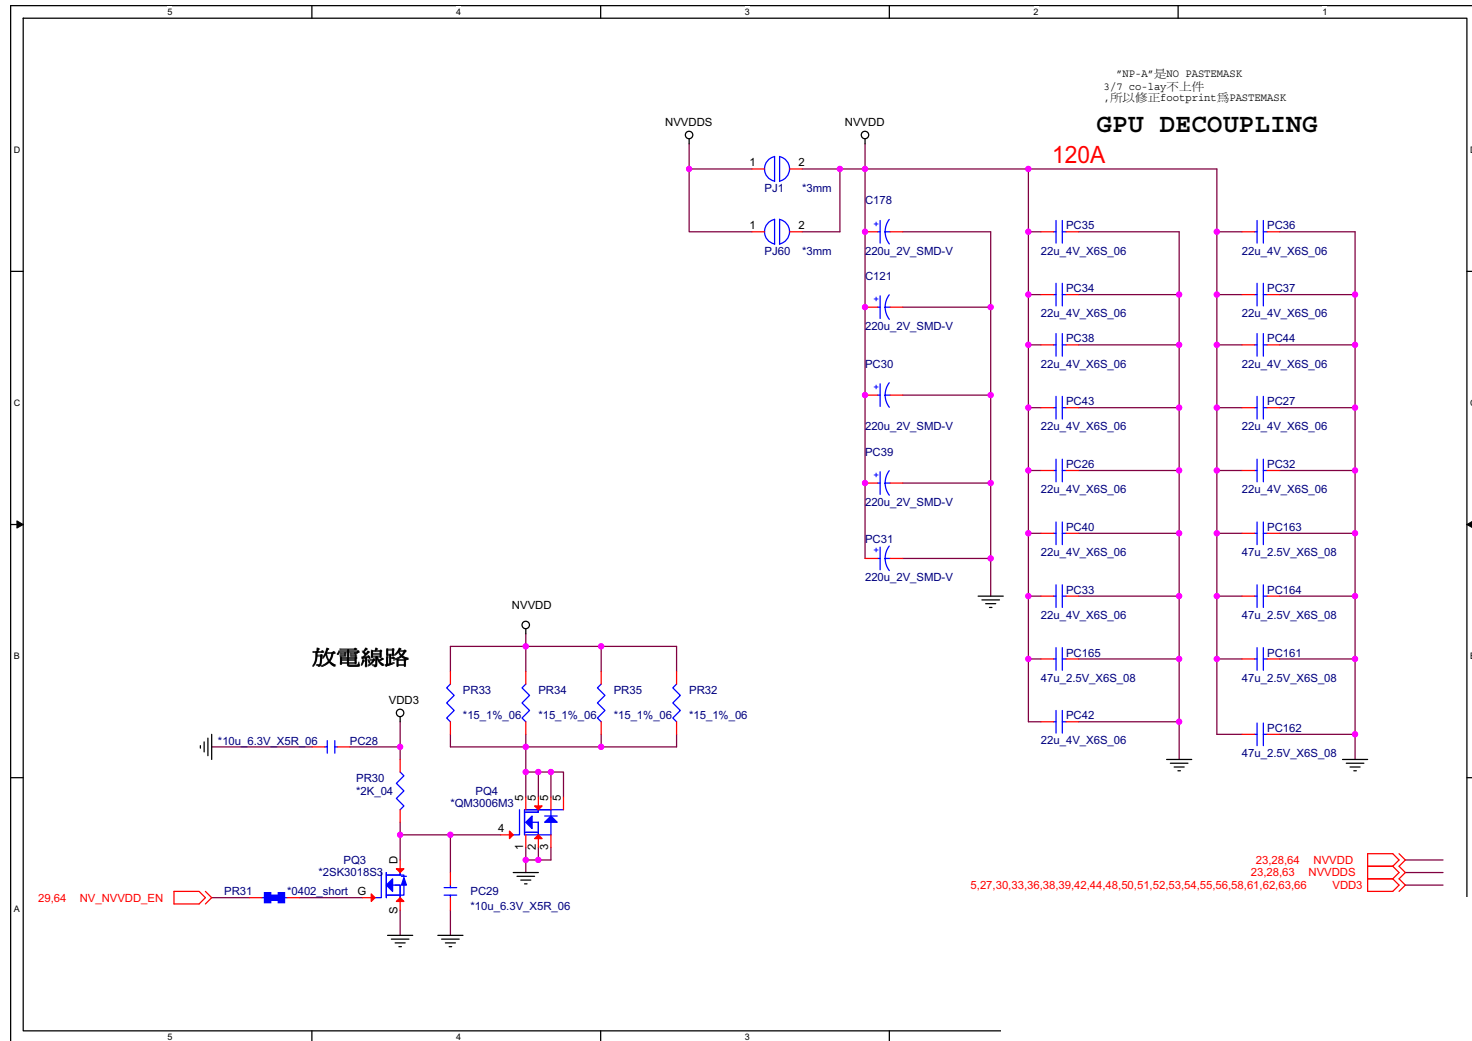


FBVDDQ

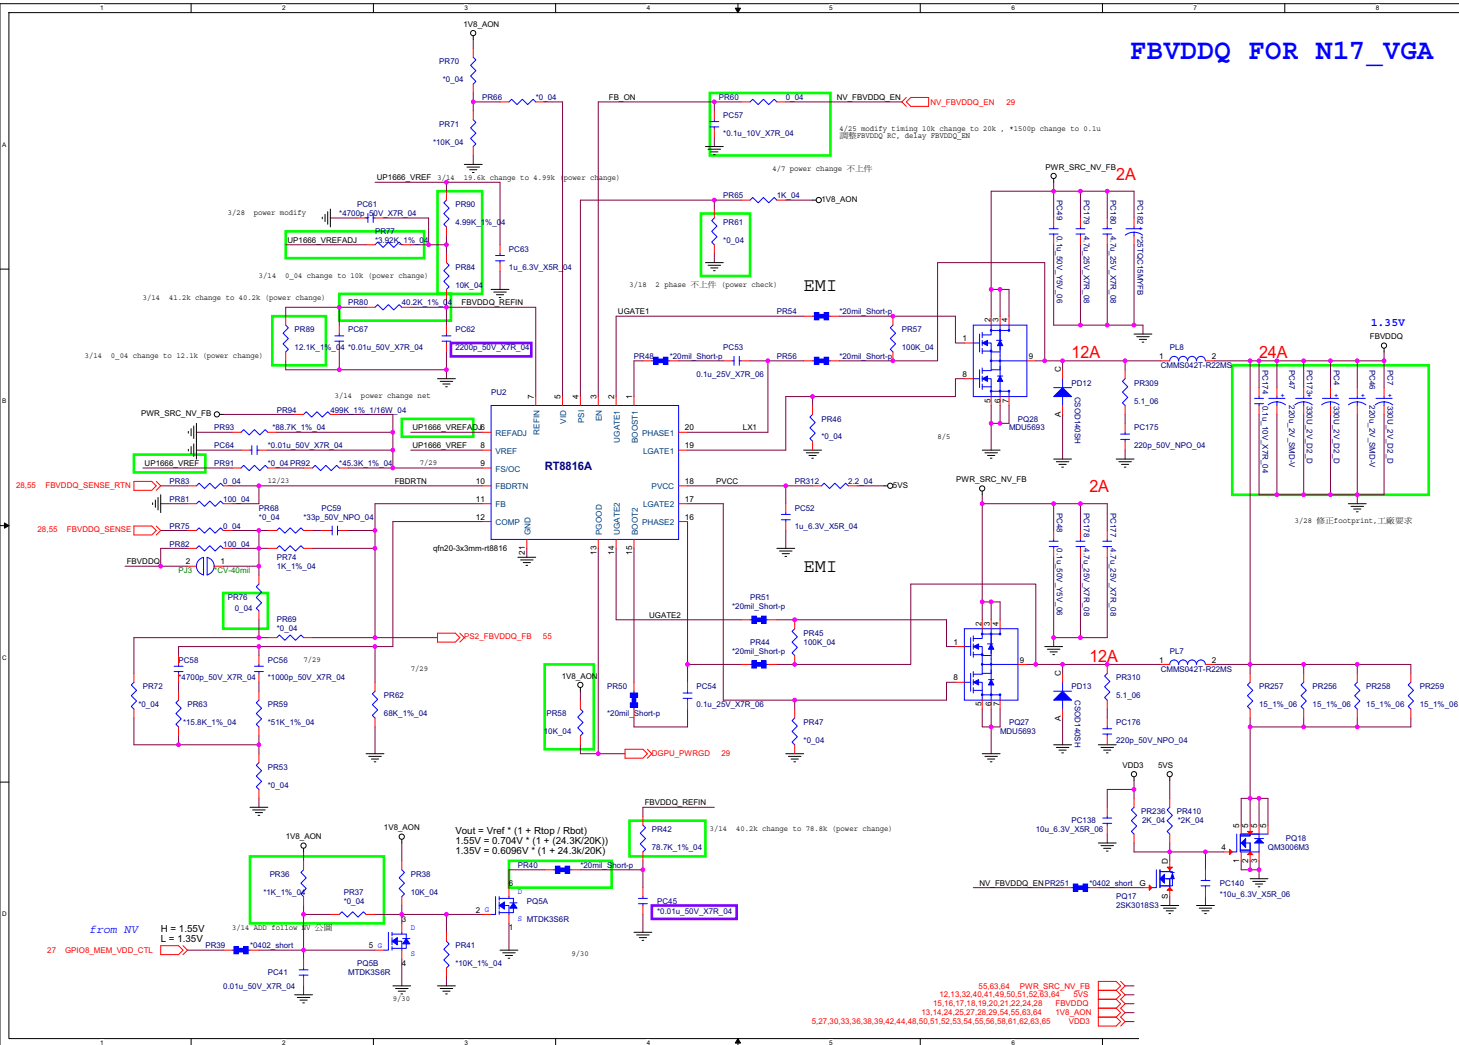

Sheet 66 of 74
FBVDDQ

B.Schematic Diagrams

Reader Board

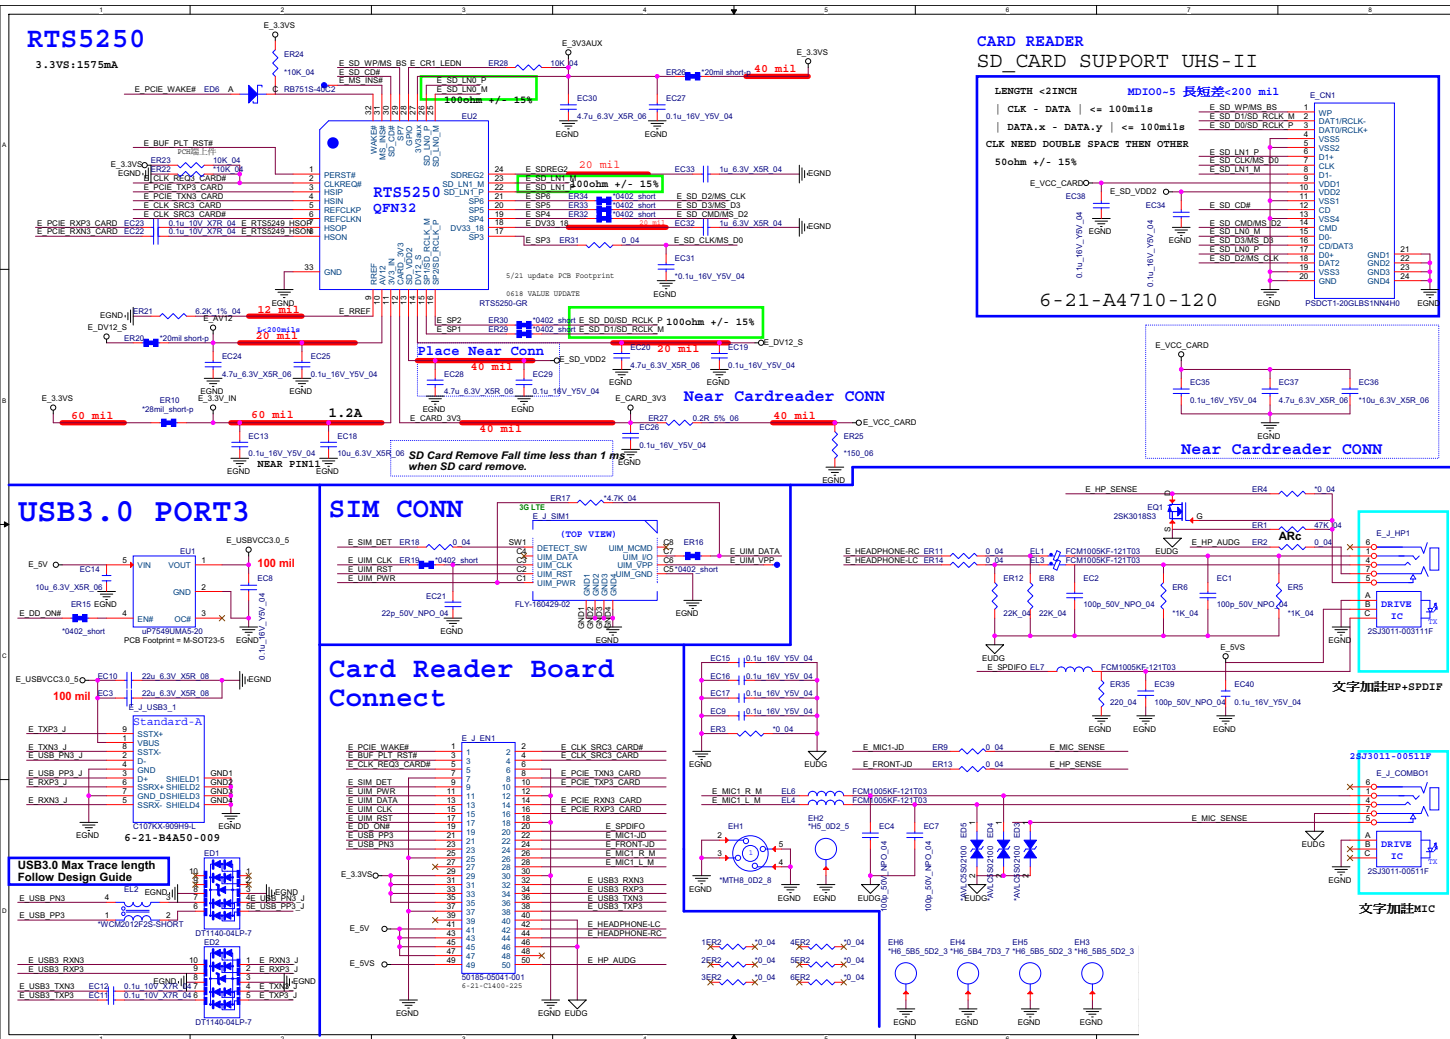


Sheet 68 of 74
Reader Board

B.Schematic Diagrams


Schematic Diagrams

USB Board

Sheet 69 of 74
USB Board

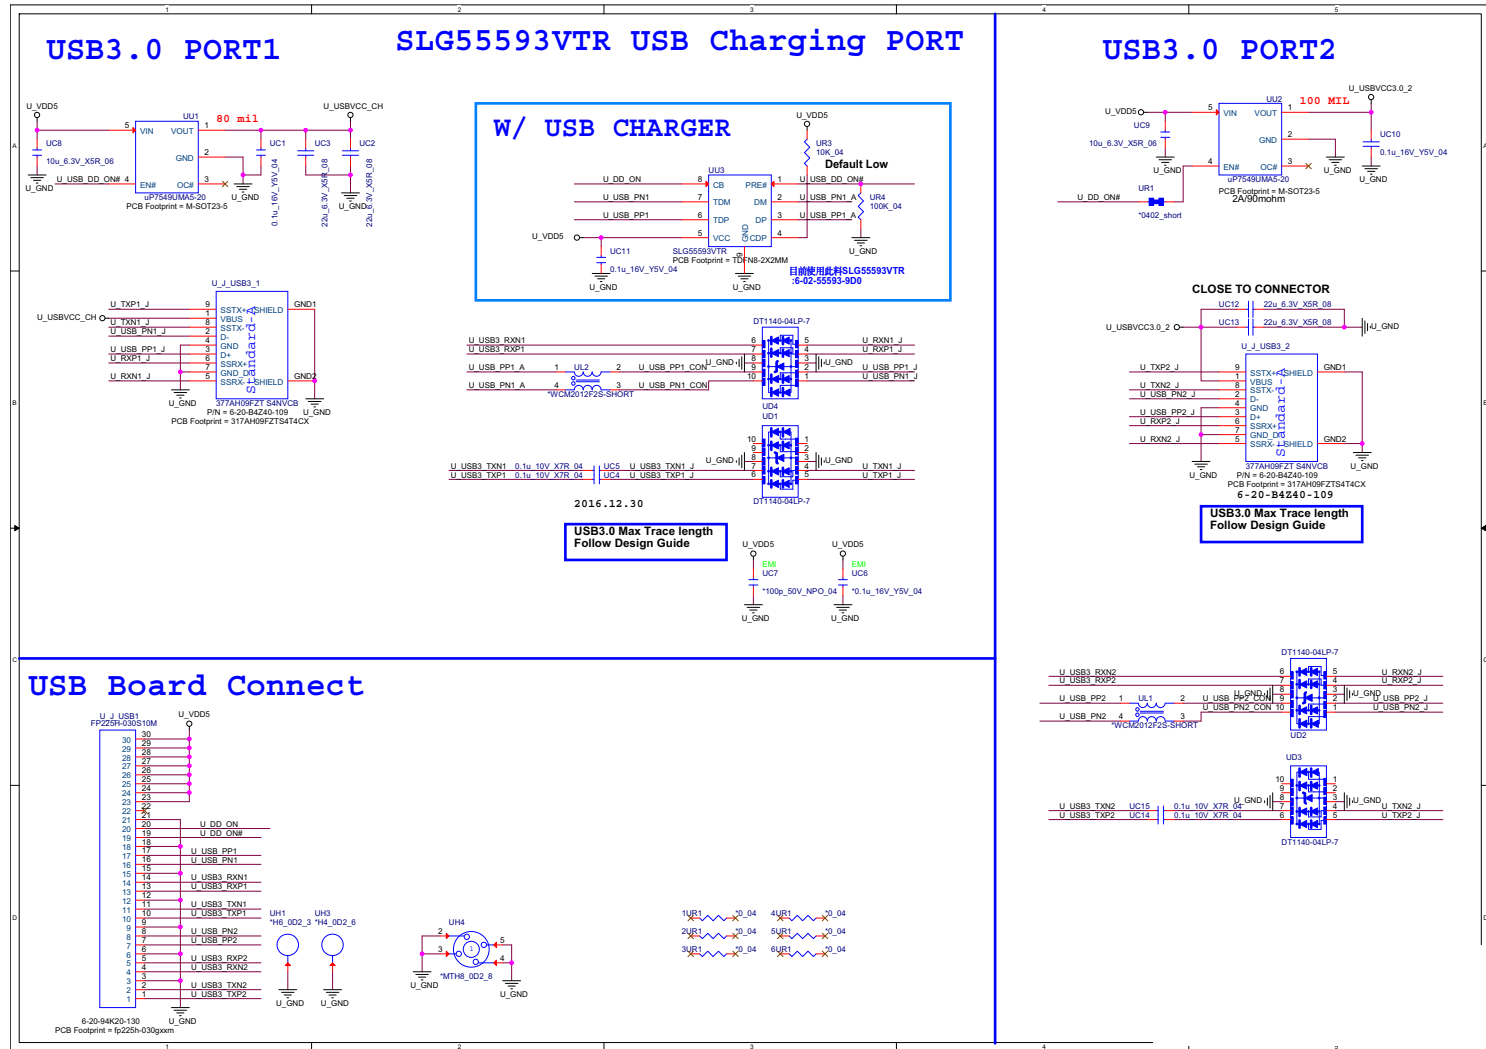

LED Board

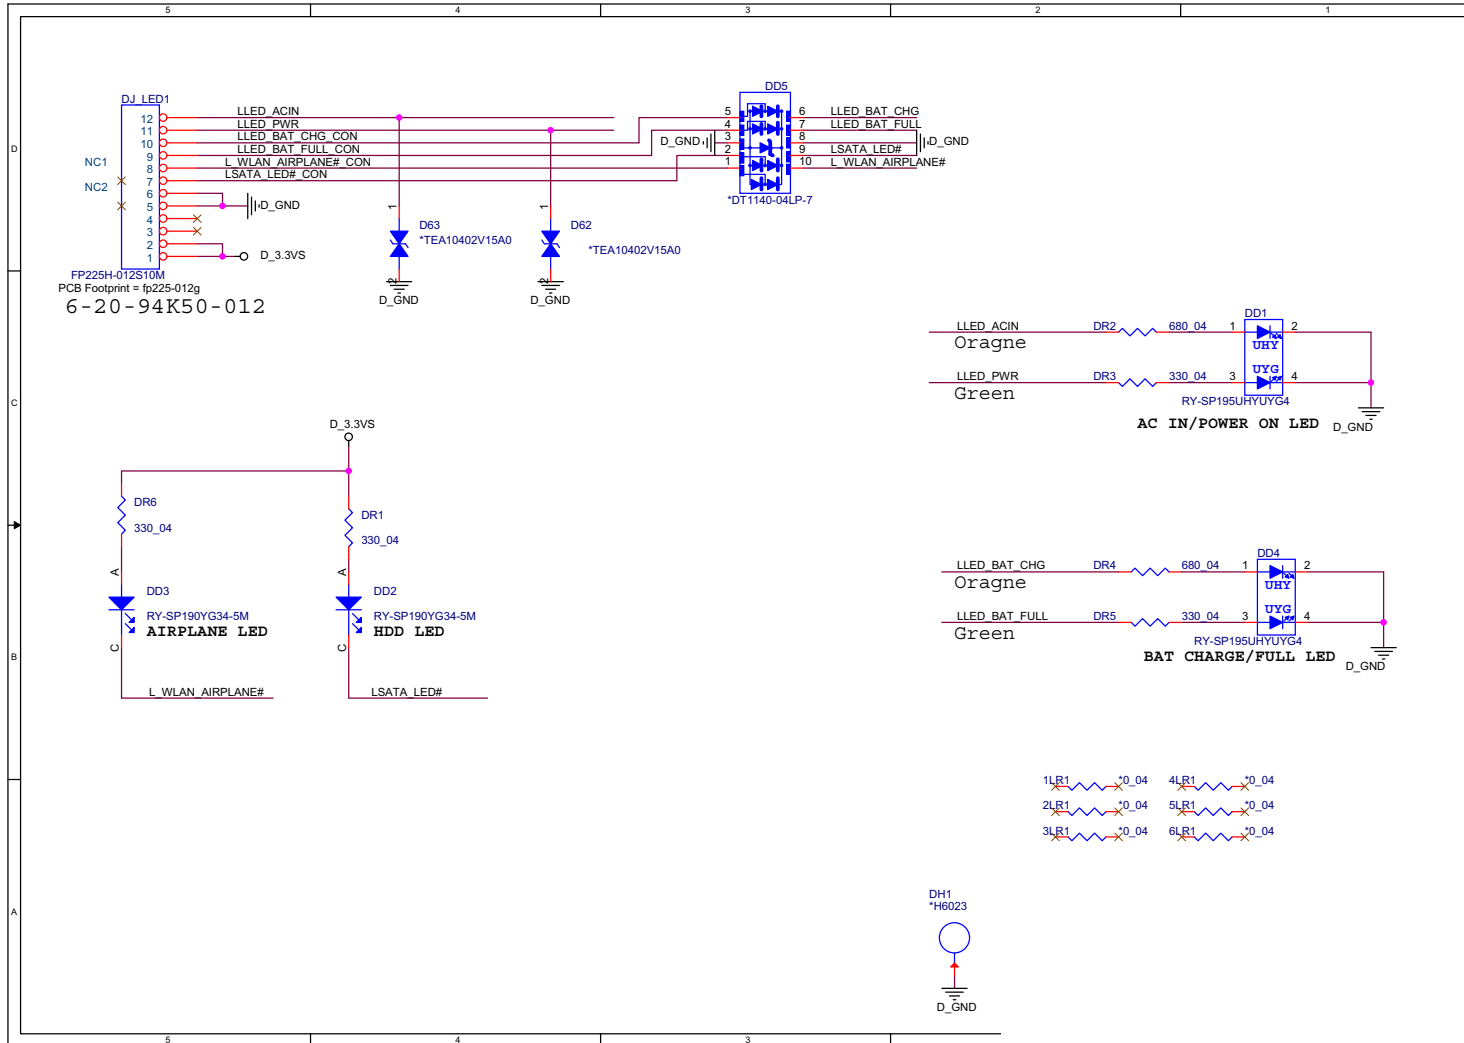


Sheet 70 of 74
LED Board


B.Schematic Diagrams

Click Board

Sheet 71 of 74
Click Board

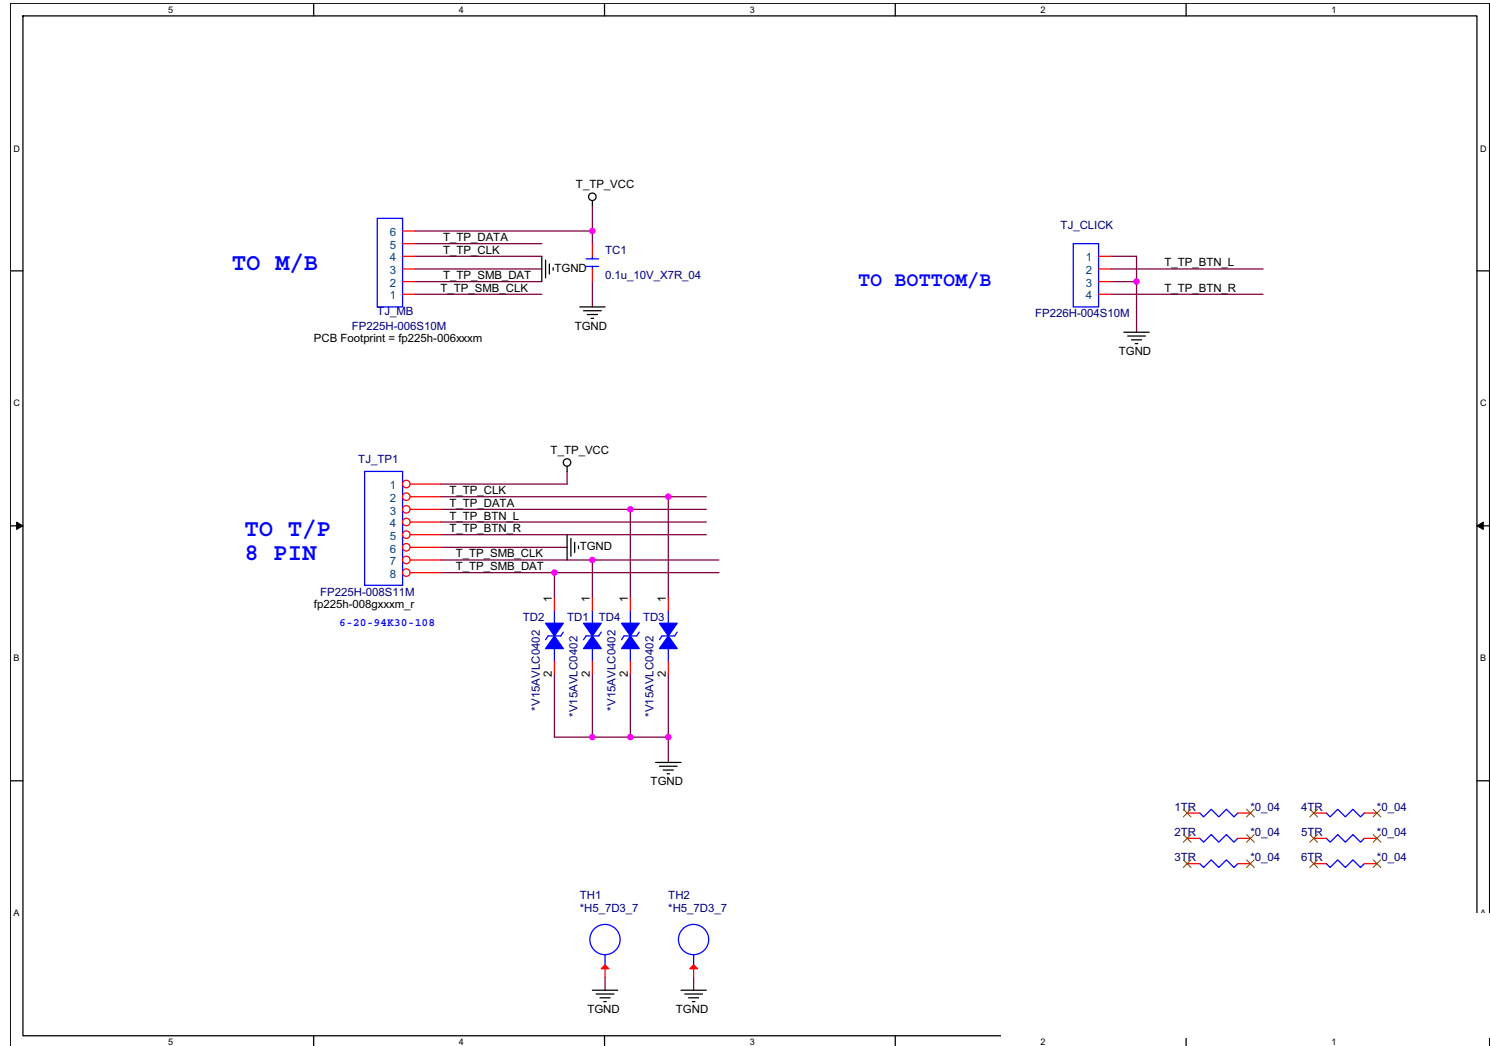


Power Board

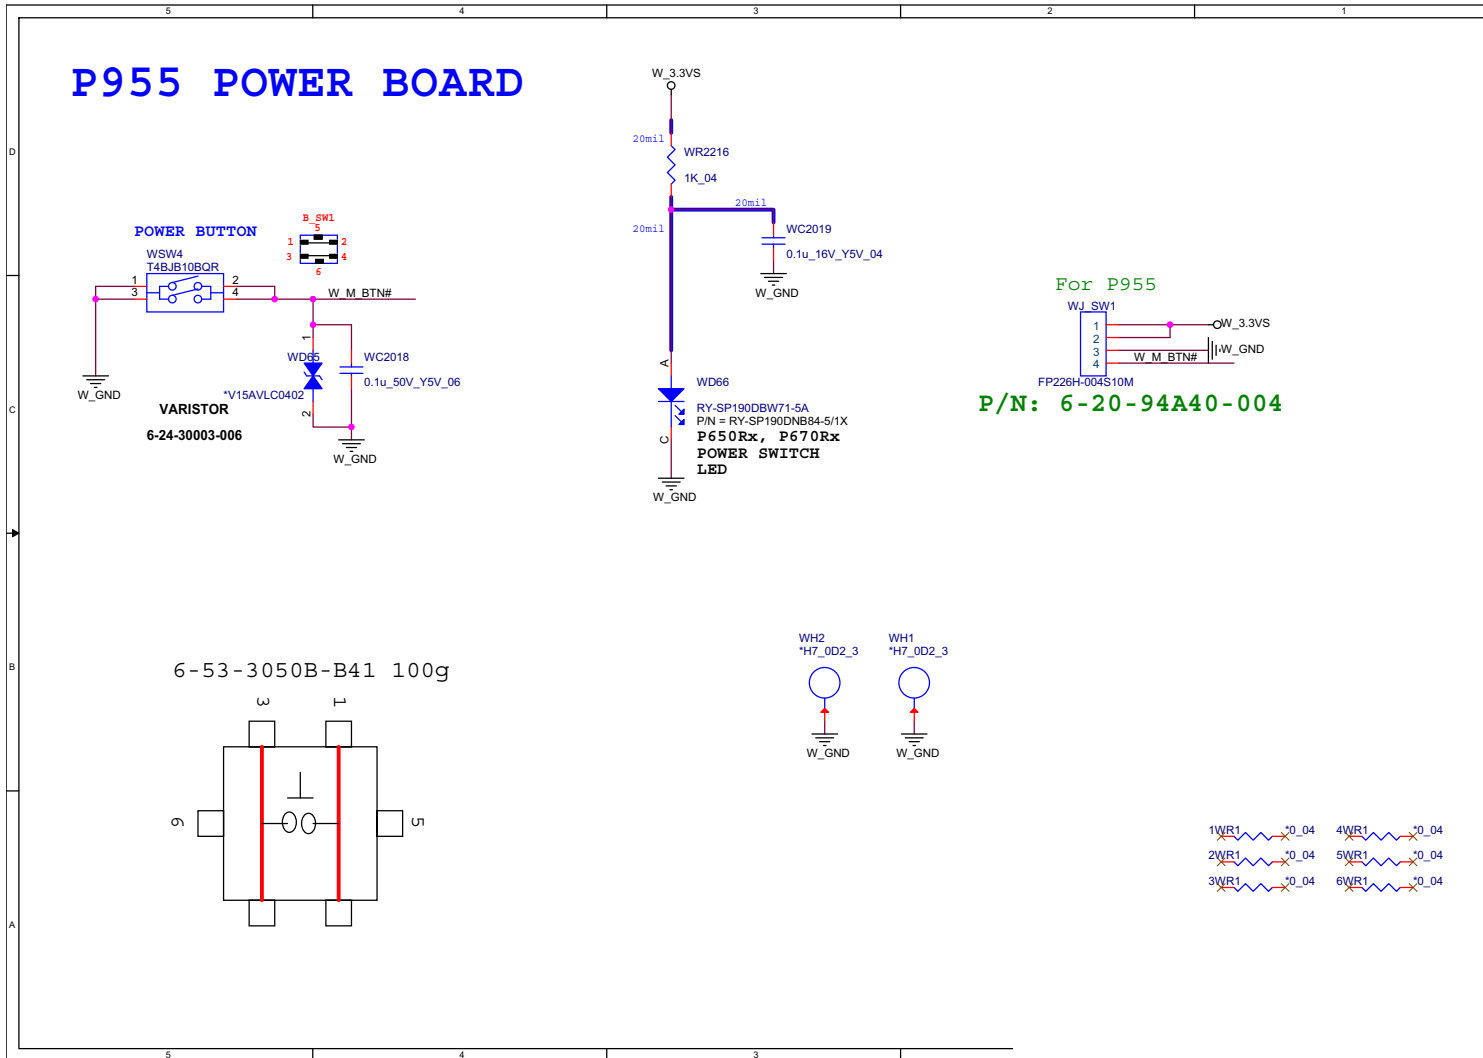

Sheet 72 of 74
 Power Board


B.Schematic Diagrams

Power Sequence

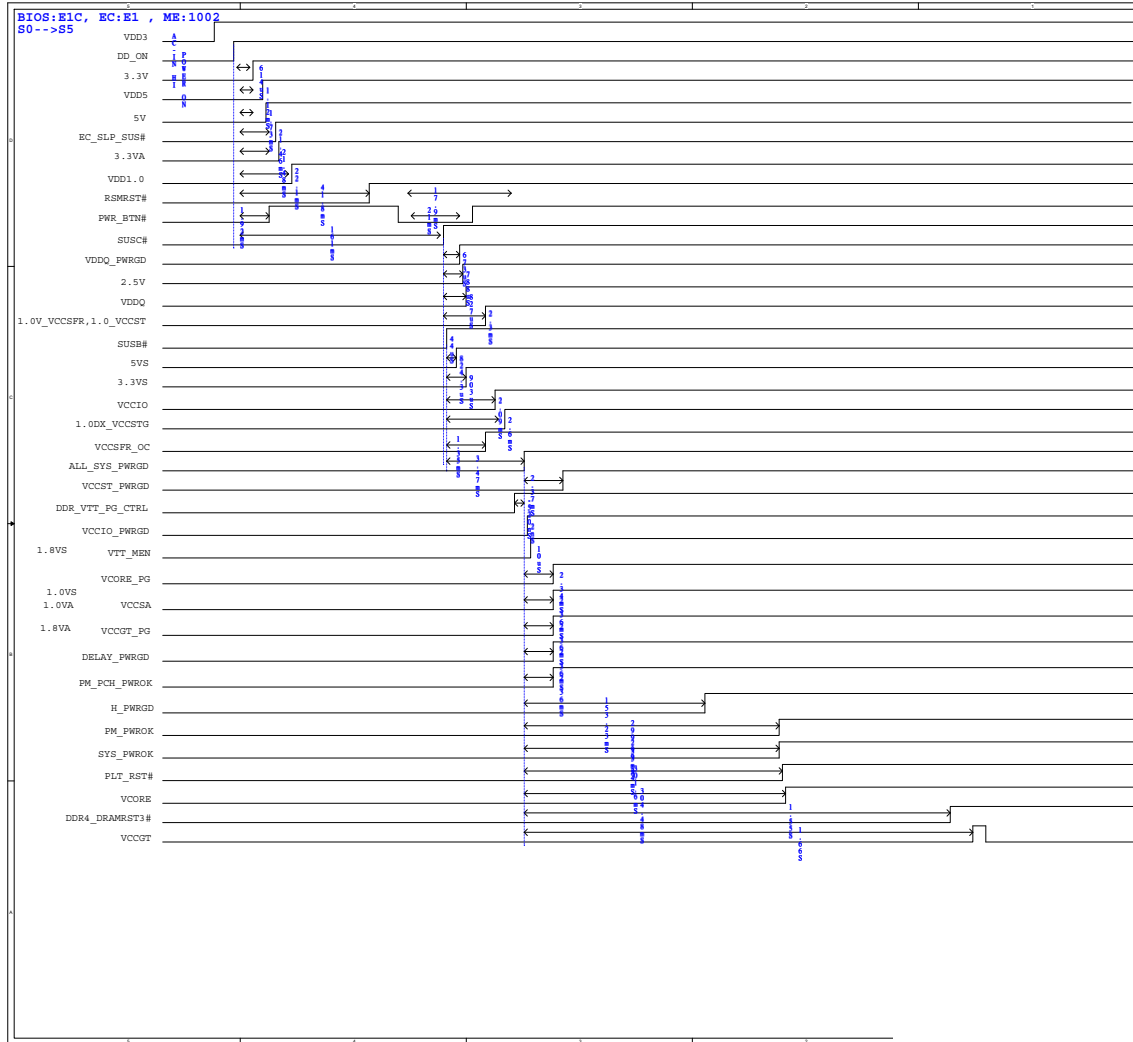

Sheet 73 of 74
Power Sequence

USB Board

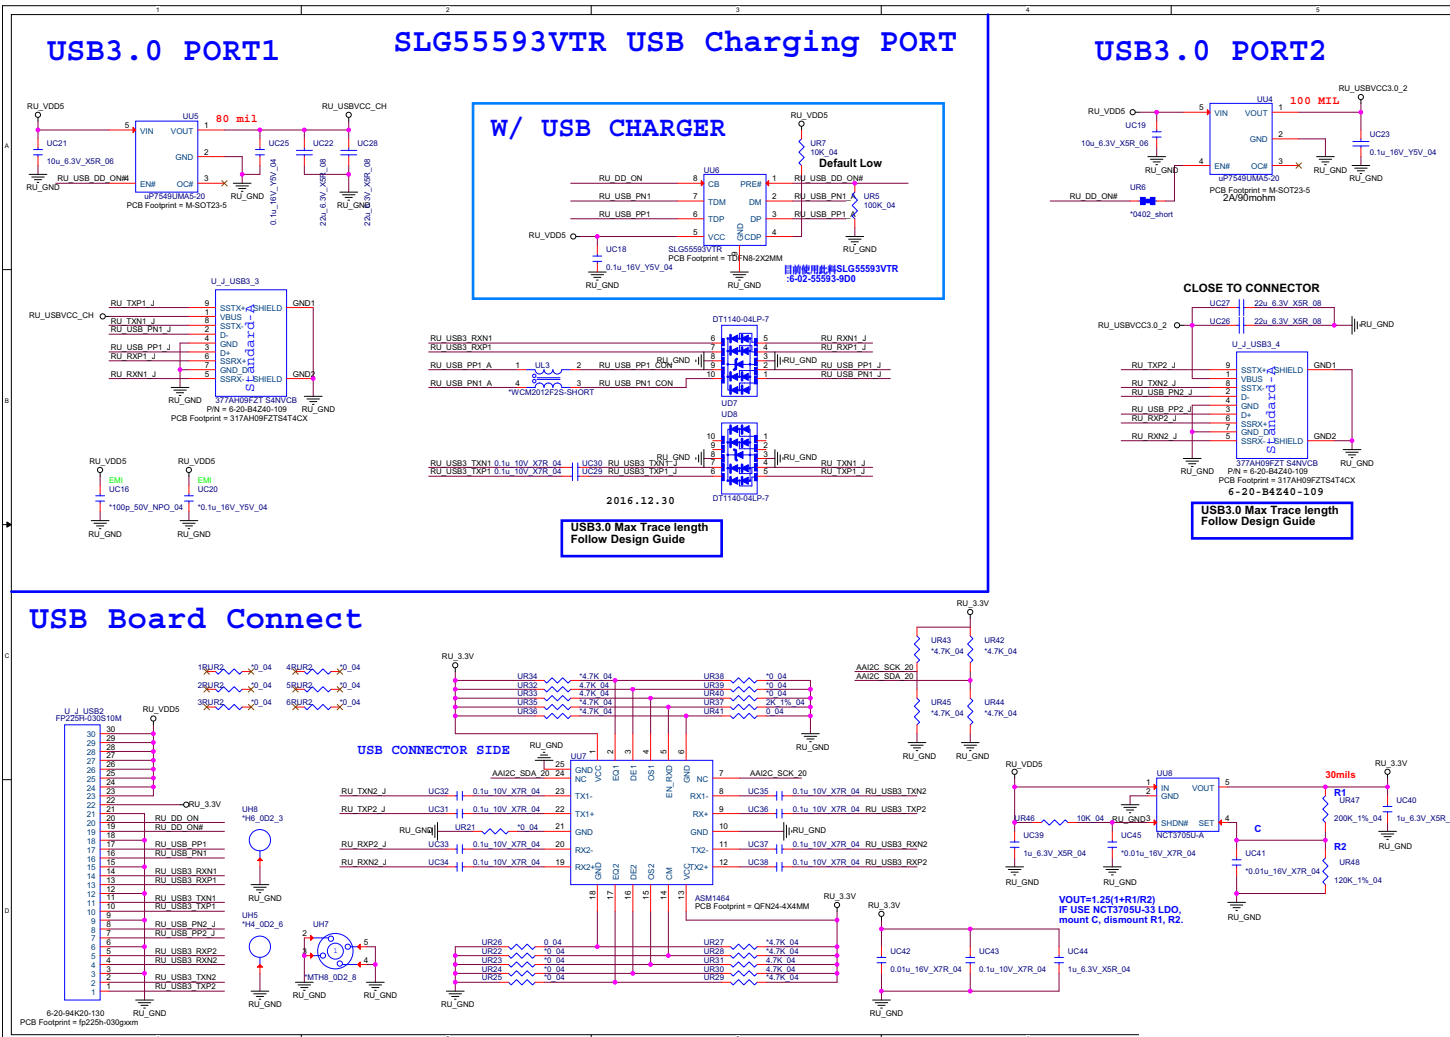

Sheet 74 of 74
USB Board

B.Schematic Diagrams

Schematic Diagrams

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are V1.0X.XX or higher as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore you may not downgrade your BIOS to an older version after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.0X.05, you **MAY NOT** then go back and flash the BIOS to ver 1.0X.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**EFI Shell**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by EFI Shell. Choose “**N**” for any memory management programs.
2. You should now see **DISK fsX:\>** (X is the designated drive number for the CD/DVD drive/USB flash drive).
3. **Type the following command:**

fsX:\> Flash.nsh

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.